



Installing Regulator Gauge Assembly #7013517 or #7013587 on a 1-Liter Tank

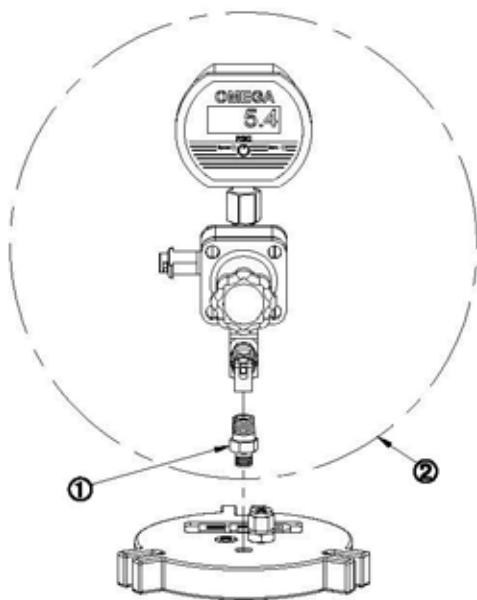

1. Follow Pressure Relief Procedure to remove tank cover (pages 10 & 11 of manual).
2. Remove existing regulator-gauge assembly from cover.
3. Refer to figure 3 (page 13 of manual). Install 1/4" NPT to 1/8" NPT reducing hex nipple ① onto 7013517 or 7013587.
4. Install 7013517 or 7013587 ② into exposed hole on tank cover.
5. Refer to page 12 of manual for instructions on operating the digital gauge.

www.efd-inc.com info@efd-inc.com USA 800-556-3484 Europe +44 (0) 1582 666334
Asia: +86 (21) 3866 9166 Sales and service of EFD® dispensing systems are available worldwide.

Installing Regulator Gauge Assembly #7013517 or #7013587 on a 5-Liter Tank

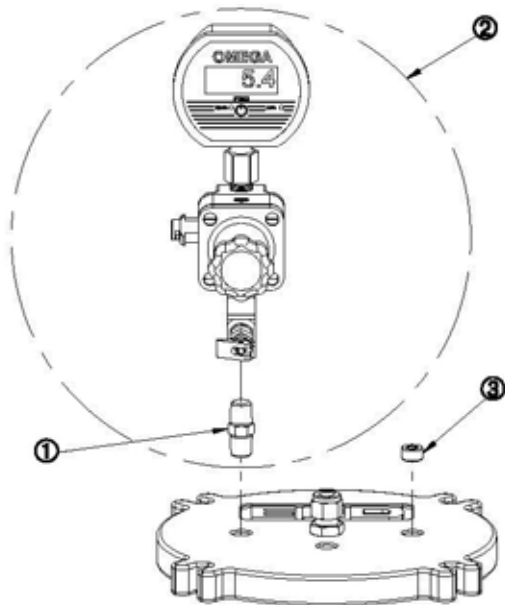

1. Follow Pressure Relief Procedure to remove tank cover (pages 10 & 11 of manual).
2. Remove existing regulator-gauge assembly and pressure relief valve from cover.
3. Refer to figure 3 (page 13 of manual). Turn 1/4" NPT hex nipple ① onto 7013517 or 7013587.
4. Install 7013517 or 7013587 ② into the hole the original tank-regulator assembly was in on the tank cover.
5. Turn 1/4" NPT hex plug ③ into hole the pressure relief valve was in.
6. Refer to page 12 of manual for instructions on operating the digital gauge.