


# 741MD Series MicroDot Valve

## Installation Guide

### Introduction

The 741MD Series valve is simple to use and will operate many millions of cycles without maintenance.

The 741MD valve is a pneumatically operated, adjustable needle valve designed to apply precise microdeposits of low- to high-viscosity fluids down to fractions of a microliter. It is ideal for automated assembly processes that require small dispensing tips (from 22 to 33 gauge). The 741MD valve provides exceptional control and the absolute minimum dead fluid volume.

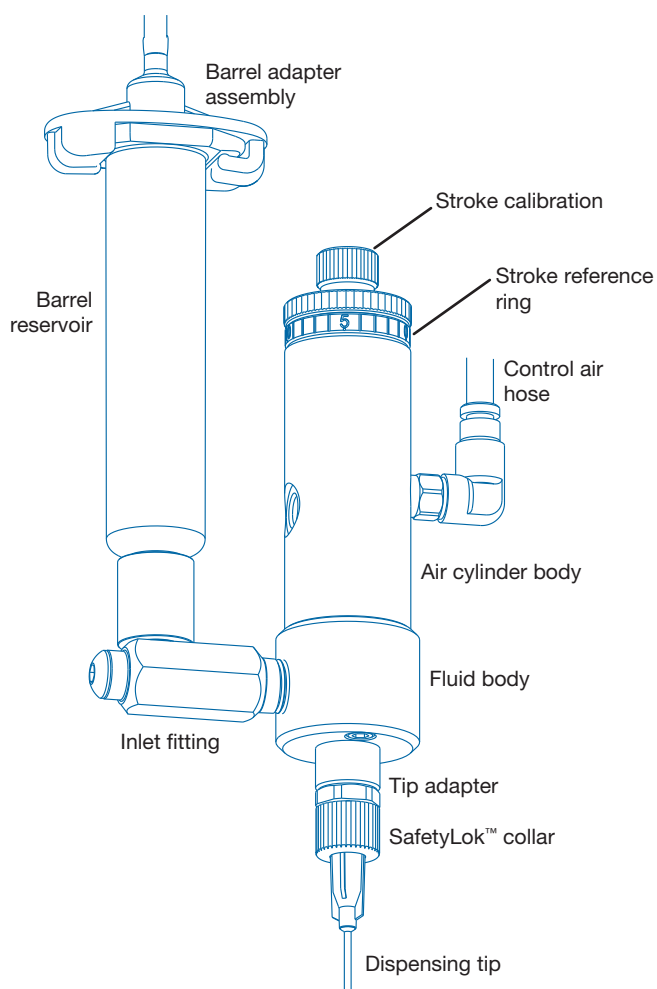

### Valve Part Numbers

Part #	Model	Description
7021233	741MD-SS	Fluid body is passivated 303 stainless steel. Air cylinder body assembly is hard-coated anodized aluminum. Includes fluid inlet fittings #7021499 and #7007038.
7015585	741MD-SS-BP	Fluid body is passivated 303 stainless steel. Air cylinder body assembly is hard-coated anodized aluminum. Includes fluid inlet fittings and BackPack™ valve actuator.

# Installation

Prior to installing this valve, read the associated reservoir and valve controller operating instructions to become familiar with the operation of all components of the dispensing system.

1. Connect the valve control air hose to the ValveMate™ 8000 (solenoid pack) used to control valve open time.
2. Connect the white male quick-connect on the flexible air line to the white female quick-connect at the air pressure regulator.
3. Install the barrel reservoir on the fluid inlet fitting (installed for use with Optimum® barrel reservoirs). For low viscosity fluids, fill the reservoir after installing it on the fluid-inlet fitting. High


viscosity materials can be loaded into the reservoir before installing on the inlet fitting.

**NOTE:** Fill barrels no more than 2/3 full. Always use a SmoothFlow™ piston when dispensing medium-to-high viscosity materials (see setup illustration).

4. Attach the barrel adapter head to the barrel reservoir using the air interconnect coupler to connect the barrel adapter assembly to the flexible air line.
5. Install the appropriate size EFD SafetyLok dispensing tip on the tip adapter. Tighten the tip retaining nut fully to position the needle hub against the shoulder of the tip adapter.

6. Open the stroke adjustment knob to the desired position (1/2 turn open is the recommended starting point). Refer to the back page for instructions on calibrating the needle stroke.
7. Open the valve with an air pulse long enough to fill the valve and start fluid flow. Test the dispensed amount with a normal time setting.
8. Set the reservoir pressure to low for thin fluids and higher for thick fluids. Use the in-line air shut-off valve to pressurize or depressurize barrel reservoir.



**NOTE:** Set the desired deposit size by adjusting the valve open time. Refer to the valve controller operating manual.

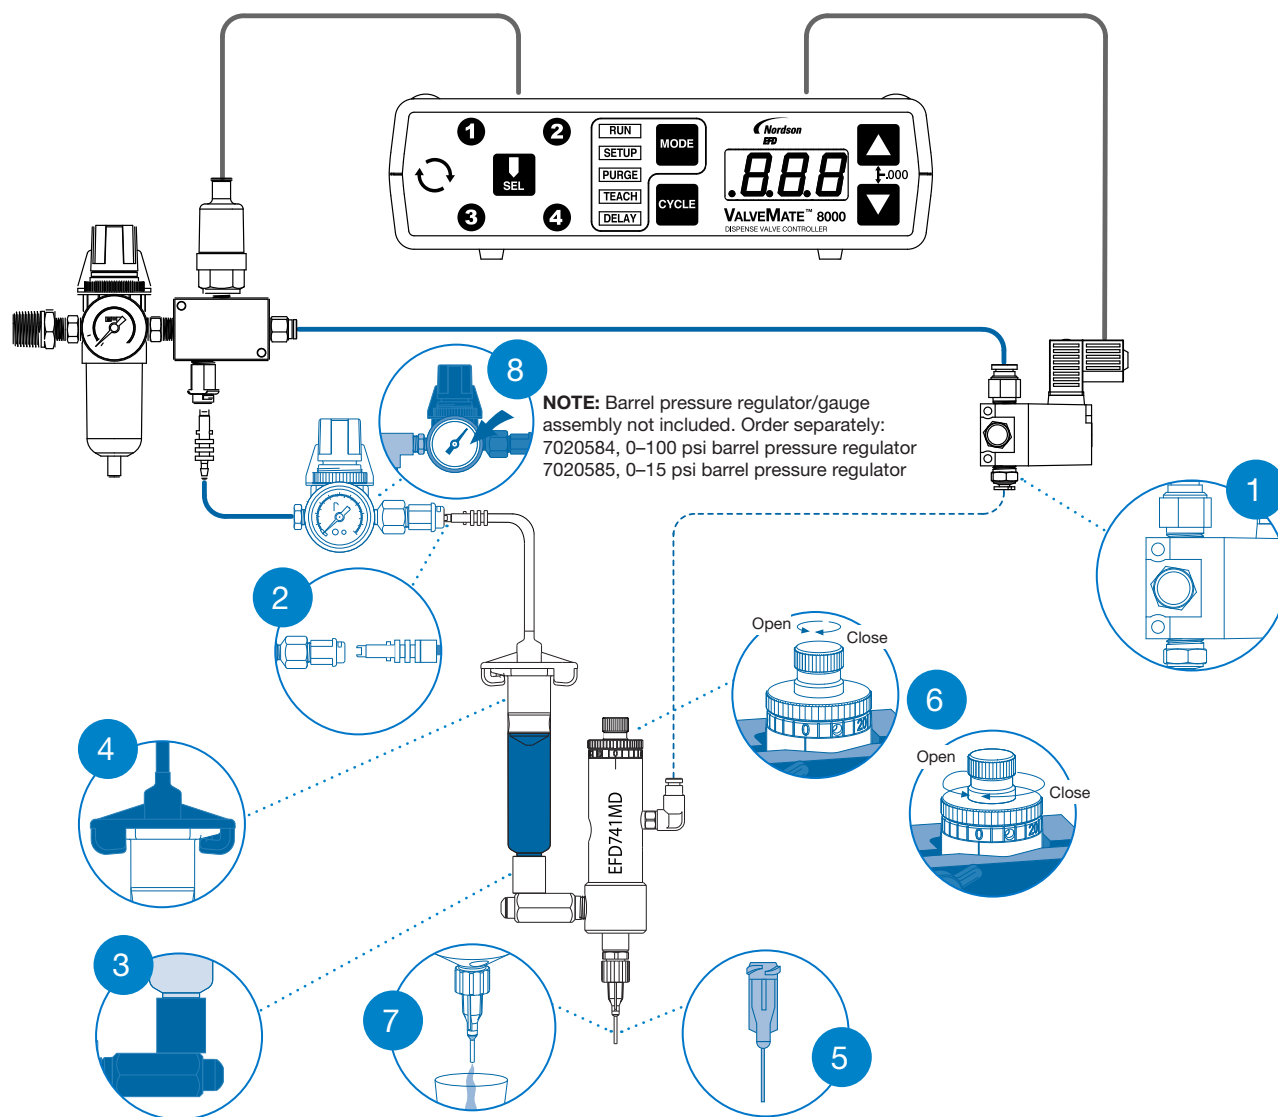

## How the Valve Operates

Input air pressure at 4.8 bar (70 psi) retracts the piston and needle from the needle seat in the dispensing tip ①, permitting fluid flow through the dispensing tip ②. Once the cycle is complete, air pressure is exhausted, causing the piston spring ③ to return the needle back to its position in the dispensing tip, stopping fluid flow. When the dispensing tip is removed, the needle seats into a secondary PTFE seat ④, stopping fluid flow during tip replacement.


The amount of fluid dispensed will depend on the time the valve is open, fluid reservoir pressure, dispensing tip size, needle stroke, and fluid viscosity.

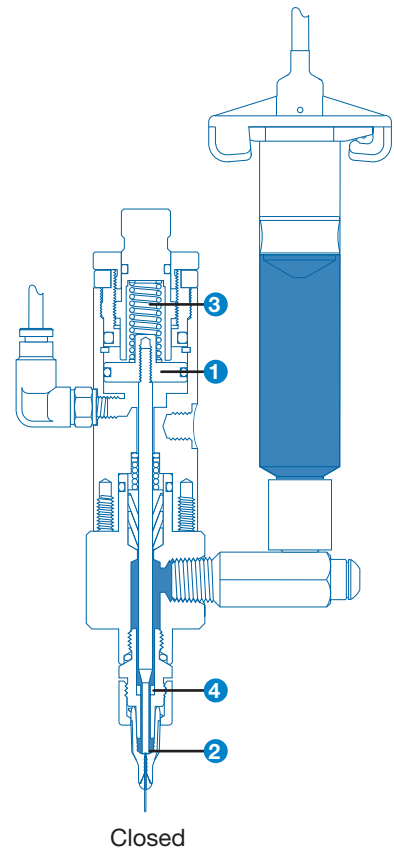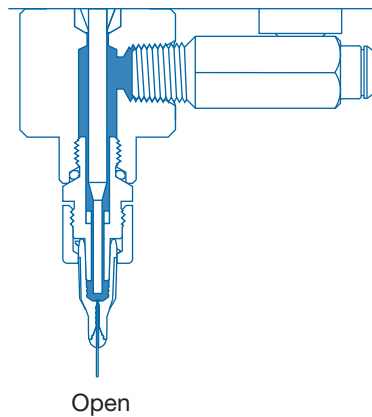

## ValveMate Concept

The ValveMate 8000 controller provides easy adjustment of valve output for maximum end-user convenience and efficiency. Valve open time is the primary control of deposit. The 8000 puts push-button adjustment of valve open time where it needs to be — at the valve.

The ValveMate 8000 controller features micro-processor circuitry for extremely precise control of deposit size. Feed lines can be purged, initial deposit sizes set, and adjustments made quickly and easily at the dispensing station, without stopping the production line.

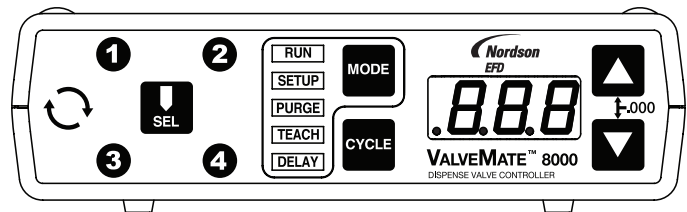

**Important Note:** Order your 1-, 2-, 3- or 4-solenoid manifold block assembly separately. Consult EFD for recommendations.

For consistent dispense valve operation and easy adjustment of valve output, Nordson EFD recommends using the ValveMate 8000 controller on all automatic, semi-automatic, and benchtop applications.

Nordson EFD automated dispensing systems integrate with ValveMate controllers for operating all pneumatic and BackPack dispense valves.

Contact Nordson EFD for details.

## Calibration Feature

The stroke control reference ring of each 741MD valve is factory calibrated to the zero position. Slight internal variations in dispensing tips may require the stroke control to be recalibrated when tips are changed. To do so:

1. Make a note of the current stroke setting number.
2. Turn the calibration knob (inner) counterclockwise one full turn.
3. Install the new dispensing tip and ensure that the retaining nut is tightened fully.
4. Turn the stroke adjustment knob (outer) clockwise until it stops at the zero position.
5. Turn the calibration knob clockwise until it stops. The stroke adjustment is now calibrated to zero.
6. Reset stroke to the required position noted in step 1.

In the event that the stroke reference ring must be repositioned or reset to the zero mark, use the following procedure:

- A. Remove the dispensing tip, if installed.
- B. Turn the small knob counterclockwise one full turn.
- C. Turn the large knob clockwise until it stops.

If the zero on the reference ring does not line up with the index mark, continue with the following steps:

- D. Loosen the small set-screw located on the reference ring.
- E. Rotate reference ring until it aligns with the reference line on the air cylinder body.
- F. Tighten the small set-screw to lock the reference ring into position.
- G. Install a dispensing tip and follow calibration procedure steps 3 to 5.

## Specifications

**NOTE:** Specifications and technical details are subject to change without prior notification.

Item	Specification
Size	127.5L x 26.9DIA mm (5.02L x 1.06DIA")
Weight	251.0 g (9.0 oz)
Actuating air pressure required	4.8–6.2 bar (70–90 psi)
Maximum fluid pressure	7.0 bar (100 psi)
Fluid inlet	1/8 NPT female
Fluid outlet	Luer taper with retaining nut
Mounting	1/4-28 UNF tapped hole
Cycle rate	Exceeds 400 per minute
Air cylinder body	Hard-coated anodized aluminum
Fluid body	303 stainless steel
Piston	303 stainless steel
Needle and nozzle	303 stainless steel
Tip adapter	303 stainless steel
SafetyLok collar	Hard-coated anodized aluminum
Maximum operating temperature	43° C (110° F)
All stainless steel parts are passivated.	



For Nordson EFD sales and service in over 40 countries, contact Nordson EFD or go to [www.nordsonefd.com](http://www.nordsonefd.com).

### Global

800-556-3484; +1-401-431-7000  
[info@nordsonefd.com](mailto:info@nordsonefd.com)

### Europe

00800 7001 7001  
[infoefd.europe@nordsonefd.com](mailto:infoefd.europe@nordsonefd.com)

### Asia

China: +86 (21) 3866 9006; [china@nordsonefd.com](mailto:china@nordsonefd.com)  
 India: +91 80 4021 3600; [india@nordsonefd.com](mailto:india@nordsonefd.com)  
 Japan: +81 03 5762 2760; [japan@nordsonefd.com](mailto:japan@nordsonefd.com)  
 Korea: +82-31-736-8321; [korea@nordsonefd.com](mailto:korea@nordsonefd.com)  
 SEAsia: +65 6796 9522; [sin-mal@nordsonefd.com](mailto:sin-mal@nordsonefd.com)