

PICO Touch Series Controllers

Operating Manual

Models Included:

- PICO Touch
- PICO Touch-XP



You have selected a reliable, high-quality dispensing system from Nordson EFD, the world leader in fluid dispensing. Nordson EFD dispensing systems are designed specifically for industrial dispensing and will provide you with years of trouble-free, productive service.

This manual will help you maximize the usefulness of your dispensing system.

Please spend a few minutes to become familiar with the controls and features. Follow our recommended testing procedures. Review the helpful information we have included, which is based on more than 50 years of industrial dispensing experience.

Most questions you will have are answered in this manual. However, if you need assistance, please do not hesitate to contact EFD or your authorized EFD distributor. Detailed contact information is provided on the last page of this document.

The Nordson EFD Pledge

Thank You!

You have just purchased the world's finest precision dispensing equipment.

I want you to know that all of us at Nordson EFD value your business and will do everything in our power to make you a satisfied customer.

If at any time you are not fully satisfied with our equipment or the support provided by your Nordson EFD Product Application Specialist, please contact me personally at 800.556.3484 (US), 401.431.7000 (outside US), or Ferran.Ayala@nordsonefd.com.

I guarantee that we will resolve any problems to your satisfaction.

Thanks again for choosing Nordson EFD.

A stylized, handwritten-style signature of the name "Ferran" in black ink.

Ferran Ayala, Vice President

Contents

Contents	3
Introduction	5
Nordson EFD Product Safety Statement	6
Halogenated Hydrocarbon Solvent Hazards	7
High Pressure Fluids	7
Qualified Personnel	7
Intended Use	8
Regulations and Approvals	8
Personal Safety	8
Fire Safety	9
Preventive Maintenance	9
Important Disposable Component Safety Information	10
Action in the Event of a Malfunction	10
Disposal	10
Equipment-Specific Safety Information	11
Specifications	12
Operating Features	13
Front Panel	13
Back Panel	13
Installation	14
Unpack the System Components	14
Install the Valve and Controller	15
User Interface	19
Navigation and Screen Structure	19
Alarm Indication	19
Buttons and Icons	20
System Refresh	20
Entering Values	21
Flowchart of Menu Structure	22
HOME Screen	23
VALVE Screen (Standard <i>Touch</i> Controller)	24
HEATERS Screen	26
WAVE PROFILE Screen	27
WAVE PARAMETERS Screen (Standard <i>Touch</i> Controller)	28
SETTINGS Screen	29
LCD SET Screen	30
FUNCTION LOCKOUT Screen	31
SYSTEM Screens	32
Setup and Programming Procedures	33
Connecting a Valve Initiate Signal	33
Changing the System (VALVE) Operating Mode	33
Adjusting the Valve Operating Parameters (PULSE, CYCLE, or COUNT)	34
Switching Valve Power On or Off	34
Switching the Heater Control (MODE) to On, Off, or Remote	35
Viewing or Changing the Valve Heater Temperature / Temperature Setpoint	35
Connecting a Controller Status Monitoring Signal	36
Managing the Wave Profile	37
Selecting a Wave Profile	37
Adjusting a Wave Profile (Standard <i>Touch</i> Controller)	38
Viewing or Changing System Settings	39
Restoring the System to the Factory Default Settings	39
Managing Password Protection	40
Changing a SYSTEM or LOCKOUT Password	40
Resetting the SYSTEM and LOCKOUT Passwords	40
Managing Lockouts	41
Adjusting the LCD and Beep Settings	42
Calibrating the LCD	42
Setting the Language	43
Viewing the Controller and Valve Information	43

Continued on next page

Contents (continued)

Operation.....	44
Routine Startup.....	44
Purging the System	45
Clearing Alarms	46
Routine Shutdown	46
Standard <i>Touch</i> Controller Part Number	47
Valve Extension Cables (Standard <i>Touch</i> Controller)	47
Troubleshooting	48
General Troubleshooting	48
Alarm Code Troubleshooting.....	49
Technical Data.....	52
Input / Output Port Pin Descriptions	52
I/O 1 15-Position D-Sub.....	52
I/O 2 25-Position D-Sub.....	54
Wiring Diagrams	56
PICO <i>Touch</i> Controller Inputs.....	56
PICO <i>Touch</i> Controller Outputs.....	57
PICO <i>Touch</i> Controller and PICO Controller 2+2-XCH-V3	58
Appendix A, Remotely Operating the Controller.....	59
Appendix B, <i>Touch</i> XP Controller	66
<i>Touch</i> XP Operating Features	67
<i>Touch</i> XP Front Panel	67
<i>Touch</i> XP Back Panel.....	67
<i>Touch</i> XP VALVE Screen	68
<i>Touch</i> XP WAVE PARAMETERS Screen	69
Routine Startup for a <i>Touch</i> XP and <i>Pulse</i> XP System	70
Adjusting a Wave Profile on the <i>Touch</i> XP Controller	71
Alarm Code Troubleshooting on the <i>Touch</i> XP Controller	72
<i>Touch</i> XP Controller Part Number	74
<i>Touch</i> XP Valve Extension Cables.....	74

Introduction


This manual provides installation, setup, programming, operation, and service information for Nordson EFD PICO® *Touch*™ Series controllers. *Touch* controllers control the operation of the Nordson EFD PICO *Pulse*® or PICO *Pulse* XP valve. Refer to the *Pulse* valve operating manual for detailed information on the valve.

NOTE: Nordson EFD also offers the PICO *Touch* XP (Extreme Precision) controller, for use with the PICO *Pulse* XP valve. This jetting system is designed for applications that require extremely precise, repeatable micro-deposits where strict tolerances or deposit definition must be met. For all information pertaining to the *Touch* XP controller, refer to “Appendix B, *Touch* XP Controller” on page 66.

The *Touch* controller provides an intuitive touchscreen interface for easy set up and operation of the *Pulse* valve. Through the touchscreen interface, you can:

- Control the operation of the valve, including open and close parameters and stroke control.
- Set the valve operating temperature.
- Fine-tune the dispensing performance by selecting preset ramp profiles or using custom profiles.
- View or change all controller settings.

The PICO *Touch* controller also allows external control of all parameters through a personal computer (PC).

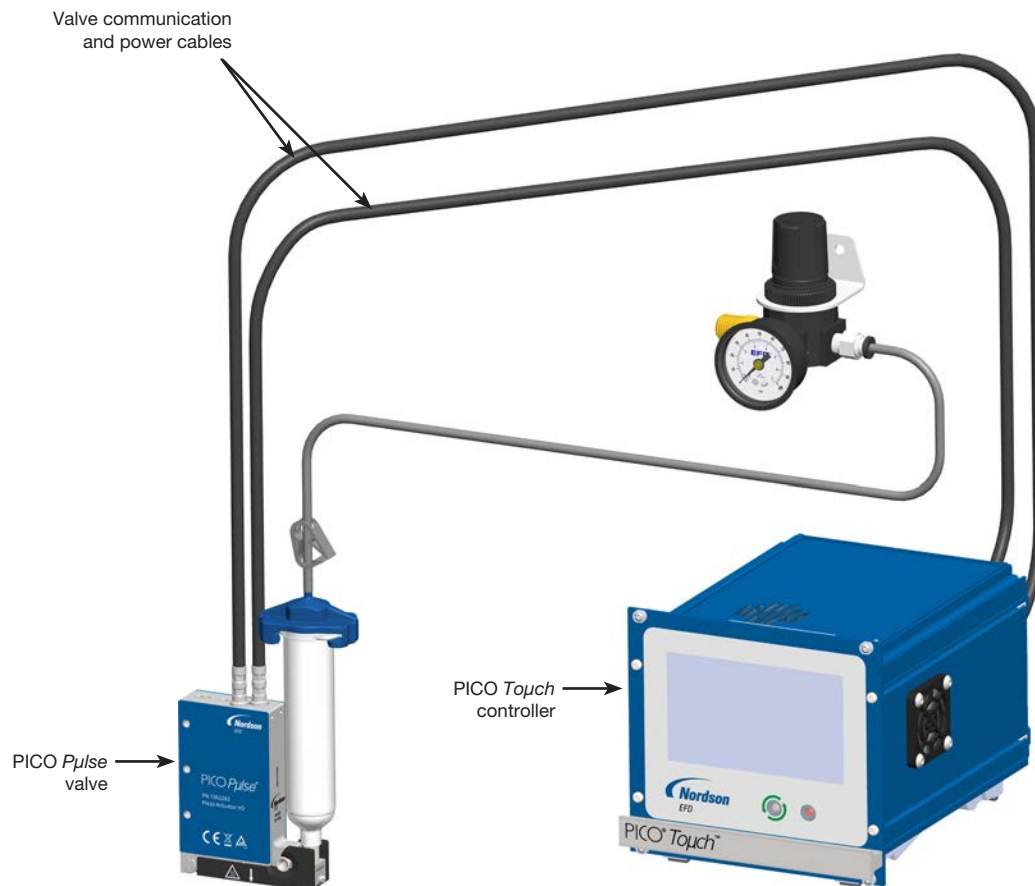

Typical PICO Touch controller and Pulse valve system setup

Nordson EFD Product Safety Statement

WARNING

The safety message that follows has a WARNING level hazard.
Failure to comply could result in death or serious injury.



ELECTRIC SHOCK

Risk of electric shock. Disconnect power before removing covers and/or disconnect, lock out, and tag switches before servicing electrical equipment. If you receive even a slight electrical shock, shut down all equipment immediately. Do not restart the equipment until the problem has been identified and corrected.

CAUTION

The safety messages that follow have a CAUTION level hazard.
Failure to comply may result in minor or moderate injury.



READ MANUAL

Read manual for proper use of this equipment. Follow all safety instructions. Task- and equipment-specific warnings, cautions, and instructions are included in equipment documentation where appropriate. Make sure these instructions and all other equipment documents are accessible to persons operating or servicing equipment.



MAXIMUM AIR PRESSURE

Unless otherwise noted in the product manual, the maximum air input pressure is 7.0 bar (100 psi). Excessive air input pressure may damage the equipment. Air input pressure is intended to be applied through an external air pressure regulator rated for 0 to 7.0 bar (0 to 100 psi).



RELEASE PRESSURE

Release hydraulic and pneumatic pressure before opening, adjusting, or servicing pressurized systems or components.



BURNS

Hot surfaces! Avoid contact with the hot metal surfaces of heated components. If contact can not be avoided, wear heat-protective gloves and clothing when working around heated equipment. Failure to avoid contact with hot metal surfaces can result in personal injury.

Nordson EFD Product Safety Statement (continued)

Halogenated Hydrocarbon Solvent Hazards

Do not use halogenated hydrocarbon solvents in a pressurized system that contains aluminum components. Under pressure, these solvents can react with aluminum and explode, causing injury, death, or property damage. Halogenated hydrocarbon solvents contain one or more of the following elements.

Element	Symbol	Prefix
Fluorine	F	"Fluoro-"
Chlorine	Cl	"Chloro-"
Bromine	Br	"Bromo-"
Iodine	I	"Iodo-"

Check the Safety Data Sheet (SDS) or contact your material supplier for more information. If you must use halogenated hydrocarbon solvents, contact your EFD representative for compatible EFD components.

High Pressure Fluids

High pressure fluids, unless they are safely contained, are extremely hazardous. Always release fluid pressure before adjusting or servicing high pressure equipment. A jet of high pressure fluid can cut like a knife and cause serious bodily injury, amputation, or death. Fluids penetrating the skin can also cause toxic poisoning.

WARNING

Any injury caused by high pressure liquid can be serious. If you are injured or even suspect an injury:

- Go to an emergency room immediately.
- Tell the doctor that you suspect an injection injury.
- Show the doctor the following note.
- Tell the doctor what kind of material you were dispensing.

Medical Alert — Airless Spray Wounds: Note to Physician

Injection in the skin is a serious traumatic injury. It is important to treat the injury surgically as soon as possible. Do not delay treatment to research toxicity. Toxicity is a concern with some exotic coatings injected directly into the bloodstream.

Qualified Personnel

Equipment owners are responsible for making sure that EFD equipment is installed, operated, and serviced by qualified personnel. Qualified personnel are those employees or contractors who are trained to safely perform their assigned tasks. They are familiar with all relevant safety rules and regulations and are physically capable of performing their assigned tasks.

Nordson EFD Product Safety Statement (continued)

Intended Use

Use of EFD equipment in ways other than those described in the documentation supplied with the equipment may result in injury to persons or damage to property. Some examples of unintended use of equipment include:

- Using incompatible materials.
- Making unauthorized modifications.
- Removing or bypassing safety guards or interlocks.
- Using incompatible or damaged parts.
- Using unapproved auxiliary equipment.
- Operating equipment in excess of maximum ratings.
- Operating equipment in an explosive atmosphere.

Regulations and Approvals

Make sure all equipment is rated and approved for the environment in which it is used. Any approvals obtained for Nordson EFD equipment will be voided if instructions for installation, operation, and service are not followed. If the equipment is used in a manner not specified by Nordson EFD, the protection provided by the equipment may be impaired.

Personal Safety

To prevent injury, follow these instructions:

- Do not operate or service equipment unless you are qualified.
- Do not operate equipment unless safety guards, doors, and covers are intact and automatic interlocks are operating properly. Do not bypass or disarm any safety devices.
- Keep clear of moving equipment. Before adjusting or servicing moving equipment, shut off the power supply and wait until the equipment comes to a complete stop. Lock out power and secure the equipment to prevent unexpected movement.
- Make sure spray areas and other work areas are adequately ventilated.
- When using a syringe barrel, always keep the dispensing end of the tip pointing towards the work and away from the body or face. Store syringe barrels with the tip pointing down when they are not in use.
- Obtain and read the Safety Data Sheet (SDS) for all materials used. Follow the manufacturer's instructions for safe handling and use of materials and use recommended personal protection devices.
- Be aware of less-obvious dangers in the workplace that often cannot be completely eliminated, such as hot surfaces, sharp edges, energized electrical circuits, and moving parts that cannot be enclosed or otherwise guarded for practical reasons.
- Know where emergency stop buttons, shutoff valves, and fire extinguishers are located.
- Wear hearing protection to protect against hearing loss that can be caused by exposure to vacuum exhaust port noise over long periods of time.

Nordson EFD Product Safety Statement (continued)

Fire Safety

To prevent a fire or explosion, follow these instructions:

- Shut down all equipment immediately if you notice static sparking or arcing. Do not restart the equipment until the cause has been identified and corrected.
- Do not smoke, weld, grind, or use open flames where flammable materials are being used or stored.
- Do not heat materials to temperatures above those recommended by the manufacturer. Make sure heat monitoring and limiting devices are working properly.
- Provide adequate ventilation to prevent dangerous concentrations of volatile particles or vapors. Refer to local codes or the SDS for guidance.
- Do not disconnect live electrical circuits when working with flammable materials. Shut off power at a disconnect switch first to prevent sparking.
- Know where emergency stop buttons, shutoff valves, and fire extinguishers are located.

Preventive Maintenance

As part of maintaining continuous trouble-free use of this product, Nordson EFD recommends the following simple preventive maintenance checks:

- Periodically inspect tube-to-fitting connections for proper fit. Secure as necessary.
- Check tubing for cracks and contamination. Replace tubing as necessary.
- Check all wiring connections for looseness. Tighten as necessary.
- Clean: If a front panel requires cleaning, use a clean, soft, damp rag with a mild detergent cleaner. DO NOT USE strong solvents (MEK, acetone, THF, etc.) as they will damage the front panel material.
- Maintain: Use only a clean, dry air supply to the unit. The equipment does not require any other regular maintenance.
- Test: Verify the operation of features and the performance of equipment using the appropriate sections of this manual. Return faulty or defective units to Nordson EFD for replacement.
- Use only replacement parts that are designed for use with the original equipment. Contact your Nordson EFD representative for information and advice.

Nordson EFD Product Safety Statement (continued)

Important Disposable Component Safety Information

All Nordson EFD disposable components, including syringe barrels, cartridges, pistons, tip caps, end caps, and dispense tips, are precision engineered for one-time use. Attempting to clean and re-use components will compromise dispensing accuracy and may increase the risk of personal injury.

Always wear appropriate protective equipment and clothing suitable for your dispensing application and adhere to the following guidelines:

- Do not heat syringe barrels or cartridges to a temperature greater than 38° C (100° F).
- Dispose of components according to local regulations after one-time use.
- Do not clean components with strong solvents (MEK, acetone, THF, etc.).
- Clean cartridge retainer systems and barrel loaders with mild detergents only.
- To prevent fluid waste, use Nordson EFD SmoothFlow™ pistons.

Action in the Event of a Malfunction

If a system or any equipment in a system malfunctions, shut off the system immediately and perform the following steps:

1. Disconnect and lock out system electrical power. If using hydraulic and pneumatic shutoff valves, close and relieve pressure.
2. For Nordson EFD air-powered dispensers, remove the syringe barrel from the adapter assembly. For Nordson EFD electro-mechanical dispensers, slowly unscrew the barrel retainer and remove the barrel from the actuator.
3. Identify the reason for the malfunction and correct it before restarting the system.

Disposal

Dispose of equipment and materials used in operation and servicing according to local codes.

Nordson EFD Product Safety Statement (continued)

Equipment-Specific Safety Information

The following safety information is specific to the Nordson EFD *Touch* controller.

Intended Use

- This equipment is for indoor use only.
- Use the *Touch* controller only in conjunction with its associated power cable and, if needed, its associated extension cable.
- Do not open the *Touch* controller.

Unintended Fluid Release

- Prior to initial operation, check to see if fluid flows out of a valve that is turned off even when no fluid pressure is being applied. If this occurs, it may be because the fluid reservoir is positioned higher than the valve, in which case hydrostatic pressure causes the fluid to flow out of a valve that is not closed. Position the fluid reservoir low enough such that no fluid leaks from the valve when the valve is shut off.
- In the case of damage to the piezo actuator or the *Touch* controller, the valve may transition from a CLOSED to an OPEN condition, which can cause fluid release. Nordson EFD recommends continually monitoring the status signal of the *Touch* controller and immediately and automatically bleeding the fluid reservoir if these signals indicate an error.
- Before connecting or disconnecting a valve cable, release fluid pressure and disconnect and lock out power to the *Touch* controller.

Specifications

NOTE: Specifications and technical details are subject to engineering change without prior notification.

Item	Specification
Cabinet size	14.2W x 13.3H x 16.8D cm (28 Hp x 3U) 5.59W x 5.25H x 6.61D"
Weight	2.6 kg (5.5 lb)
Cycle rate	Valve-dependent
Time range	100 μ s to 9.9999 s (depending on the open profile time)*
Input AC (to power supply)	100–240 VAC \pm 10%, 50/60 Hz, 2 A
Output DC (from power supply)	24 VDC, 6.25 A
Internal voltage	150 VDC, 24 VDC, 5 VDC, and 3.3 VDC
Heater output voltage	24 VDC, 30 W maximum
Feedback circuit	0–24 VDC
Cycle initiate	15–24 VDC (must be a clean, bounce-free signal)
Heater outputs	Setpoint range: 0–100° C; 0.1° C increments Temperature input type at valve: RTD Indication accuracy: \pm 1° C* Sample rate: 60 per second Control method: PID NOTE: No valve cooling is possible.
Material	Aluminum / steel
Valve cable minimum bend radius	44.45 mm (1.75")
Ambient operating conditions	Temperature: 5–45° C (41–113° F) Humidity: 85% RH at 30° C, 40% at 45° C non-condensing Height above sea level: 2,000 meters max (6,562 feet)
Product classification	Installation category II Pollution degree 2
Approvals	CE, UKCA, TUV, RoHS, WEEE, China ROHS

*Each PICO Touch and Pulse system is tested to meet specifications prior to leaving the manufacturing facility. There are no procedures to calibrate the system externally. The dispense timing is accurate and tested before leaving the manufacturing facility. The indication accuracy of the temperature system is \pm 1° C.

RoHS标准相关声明 (China RoHS Hazardous Material Declaration)

产品名称 Part Name	有害物质及元素 Toxic or Hazardous Substances and Elements					
	铅 Lead (Pb)	汞 Mercury (Hg)	镉 Cadmium (Cd)	六价铬 Hexavalent Chromium (Cr6)	多溴联苯 Polybrominated Biphenyls (PBB)	多溴联苯醚 Polybrominated Diphenyl Ethers (PBDE)
外部接口 External Electrical Connectors	X	0	0	0	0	0
<p>0: 表示该产品所含有的危险成分或有害物质含量依照EIP-A, EIP-B, EIP-C的标准低于SJ/T11363-2006 限定要求。 Indicates that this toxic or hazardous substance contained in all the homogeneous materials for this part, according to EIP-A, EIP-B, EIP-C is below the limit requirement in SJ/T11363-2006.</p> <p>X: 表示该产品所含有的危险成分或有害物质含量依照EIP-A, EIP-B, EIP-C的标准高于SJ/T11363-2006 限定要求。 Indicates that this toxic or hazardous substance contained in all the homogeneous materials for this part, according to EIP-A, EIP-B, EIP-C is above the limit requirement in SJ/T11363-2006.</p>						


WEEE Directive



This equipment is regulated by the European Union under WEEE Directive (2012/19/EU). Refer to www.nordsonefd.com/WEEE for information about how to properly dispose of this equipment.


Operating Features

Front Panel

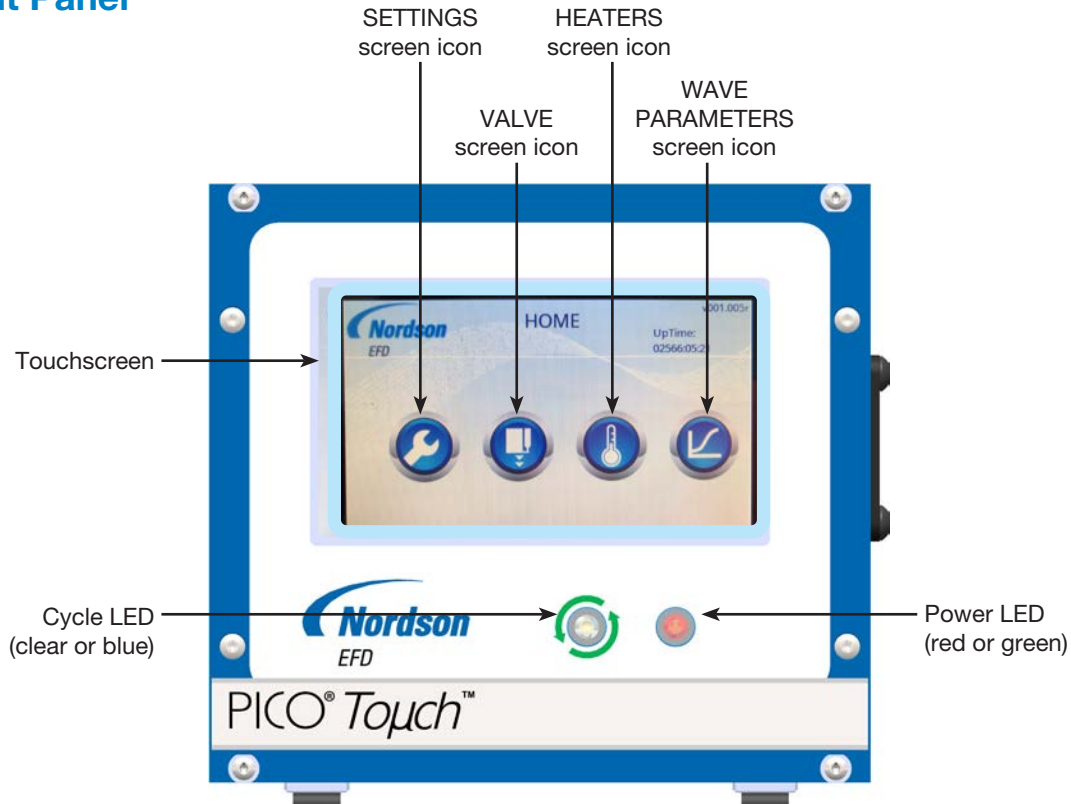

Back Panel


NOTE: The VALVE power and communication ports differ on the *Touch* XP controller. Refer to “*Touch* XP Back Panel” on page 67.

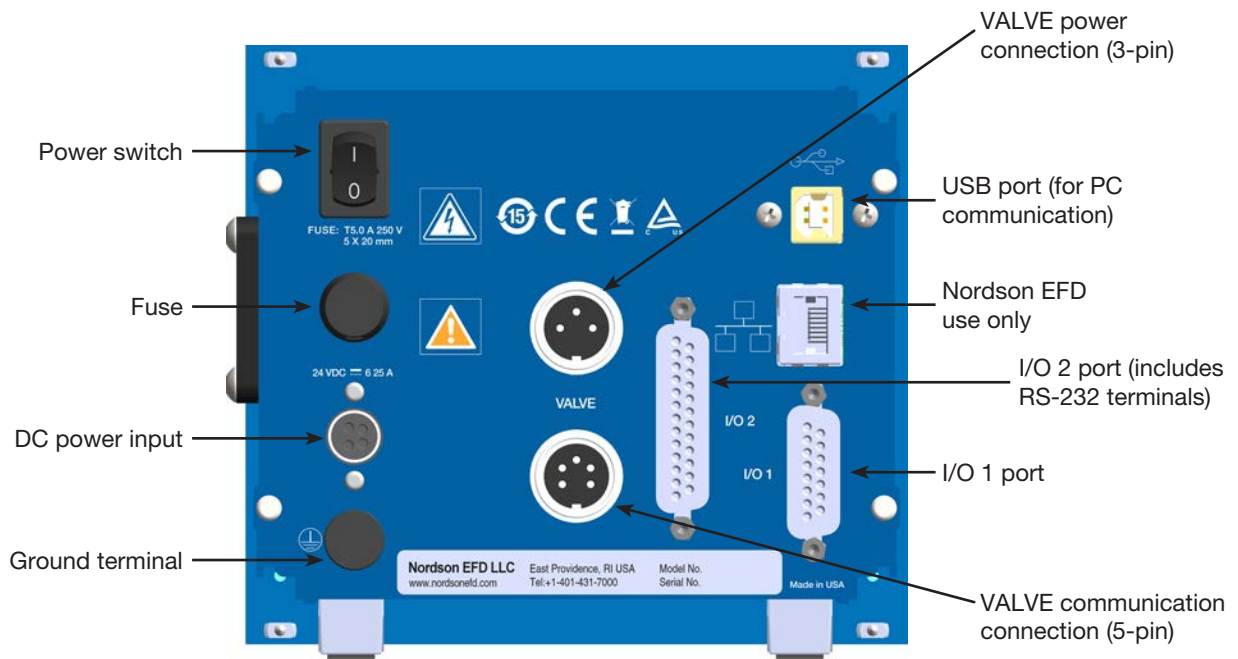

Installation

Use this section in tandem with the quick start guide and any other system component operating manuals to install all components of the system.

Unpack the System Components

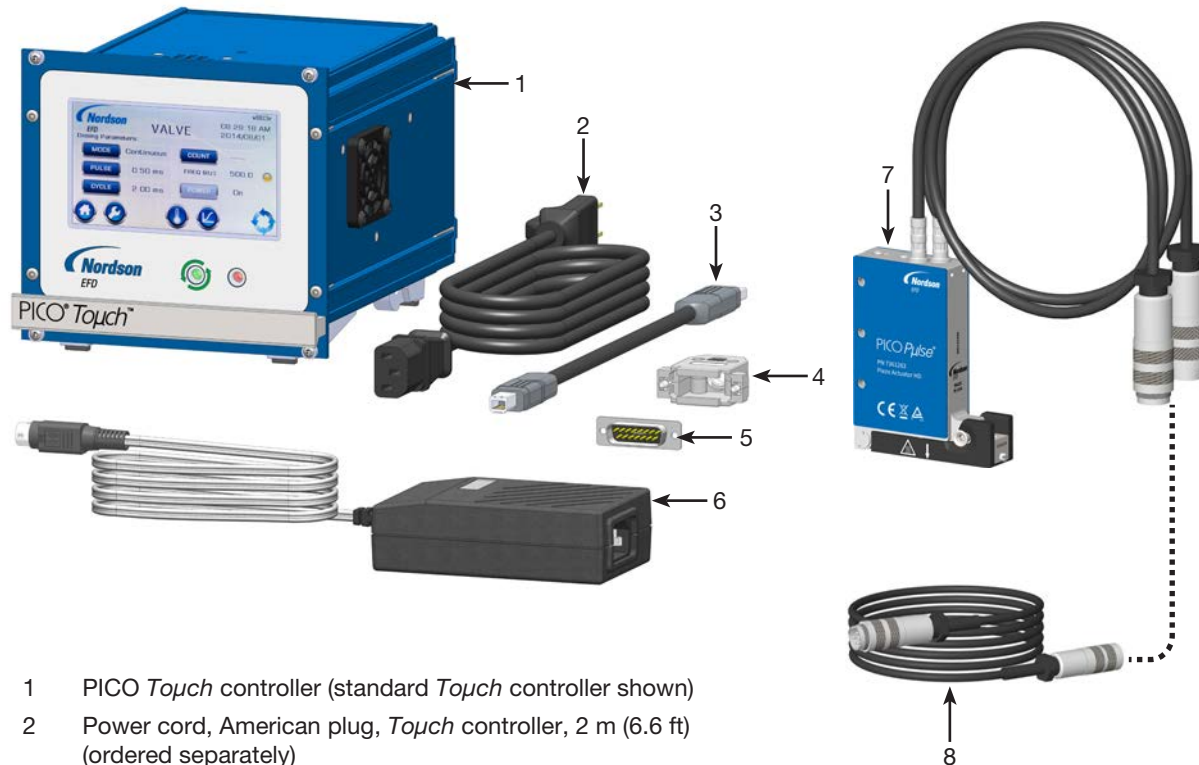

- 1 PICO *Touch* controller (standard *Touch* controller shown)
- 2 Power cord, American plug, *Touch* controller, 2 m (6.6 ft) (ordered separately)
- 3 Cable, USB, A male to B male, 2 m (6.6 ft)
- 4 Backshell, I/O, 15 position, D-sub
- 5 Connector, I/O, 15 position, D-sub
- 6 Power supply, *Touch* controller, 1 m (3.3 ft) (ordered separately)
- 7 PICO *Pulse* valve (ordered separately) (standard *Pulse* valve shown)
- 8 Extension cable (optional)

(Not shown)

Quick start guide

Install the Valve and Controller

The callouts in the system installation images correspond to the steps in this procedure.

1. Install any components other than the *Pulse* valve and controller that will comprise the complete dispensing system. For example, if you are using a fluid reservoir, position and install all the fluid reservoir components. For all ancillary components, refer to the quick start guide and / or operating manual provided with those components for installation, setup, and operating instructions.


CAUTION



Ensure that air can flow around the controller. Blocked air flow can cause overheating.

2. Install or position the *Touch* controller. The controller can be integrated into existing machinery or used as a tabletop device:
 - To integrate the controller into existing machinery, remove the feet (if needed) and use the following specifications to install it as a standard rack mount:
 - Height: 3U
 - Width: 28 Hp
 - Depth: for 160 mm (6.3")
 - To use the controller as a tabletop device, lower the hinged legs.
 - Ensure there is adequate air flow around the controller.

3. Connect power to the controller as follows:

- a. Connect power to the back of the controller and to your local power source observing the following guidelines:
 - **Use only the power supply and cord ordered with the controller.**
 - Ensure that the power source is located near the equipment and is easily accessible.
 - Use only on a circuit with a fuse or circuit breaker that is 20 A or less.
- b. Connect a 16 AWG (1.3 mm) ground wire to the chassis grounding screw on the rear of the chassis using a toothed grounding lug. The wire must have green insulation with a yellow stripe or must be non-insulated (bare).
- c. Attach the opposite end of the ground wire to a permanent earth ground using toothed washers or a toothed lug.

 **CAUTION:** Nordson EFD requires the use of the power cord ordered with the controller. If it is not possible to use this power cord, you must source an IEC 60320-C13 power cord to plug into the power supply. The power supply must be grounded through the power cord to ensure proper operation.

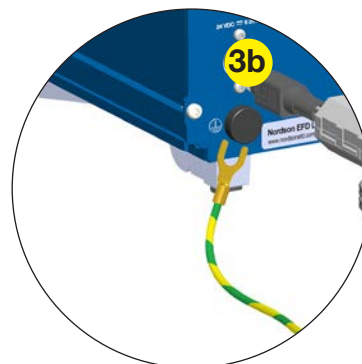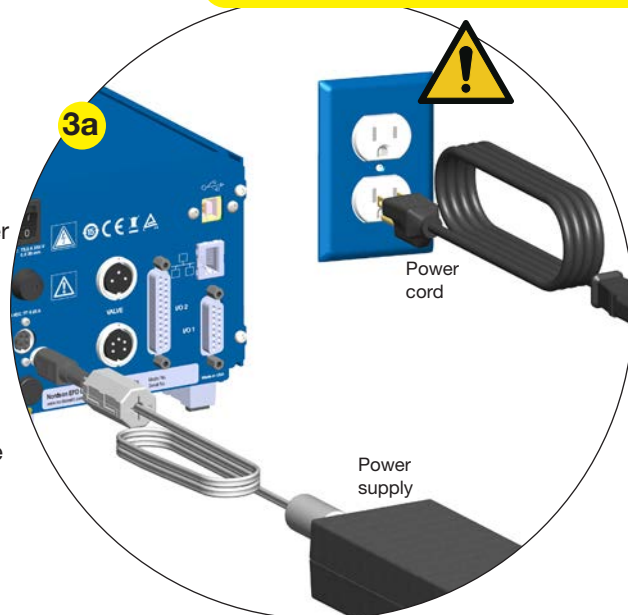


Install the Valve and the Controller (continued)

CAUTION


Always switch OFF the *Touch* controller before connecting or disconnecting the valve. Failure to do so can damage the controller and the valve.

4. Assemble and mount the *Pulse* valve as follows:

- a. Open the hinged seat of the piezo actuator by pushing the latch pin back towards the valve.
- b. Insert the fluid body assembly and close the hinged seat, ensuring it is fully engaged.
- c. Referring to the guidelines below, install the *Pulse* valve on the dispensing equipment:
 - Nordson EFD strongly recommends using a valve mounting bracket. There are multiple mounting holes to allow for adjustment. Some valve mounting examples are shown below.
 - For repeatable mounting-location precision, use alignment dowels to mount the valve by the frame side.
 - When mounting the valve, do not install bracketing that could apply pressure to either side panel. Doing so can damage the piezoactuator, compromising valve performance.
 - When mounting a *Pulse* XP valve, ensure that the fluid supply feed loads are properly supported to prevent movement of the fluid body assembly. For *Pulse* XP valves, proper mounting is critical to ensure correct operation. Forces applied to the valve where the fluid supply attaches can cause strain movements of the fluid body assembly, which can result in calibration errors if the strain movements are too large (alarm code b17 020 on the *Touch* controller).

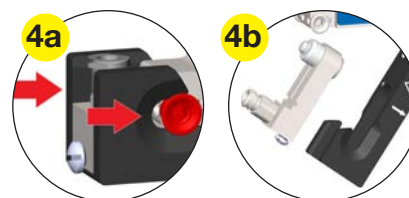

NOTE: Valve mounting kits are available. Refer to the valve operating manual.

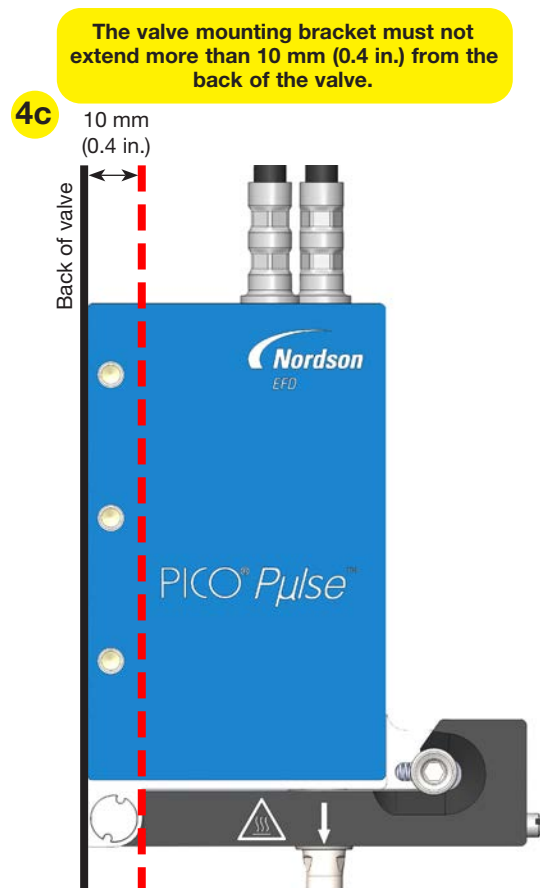

Examples of valve mounting using the optional bracket

Install the Valve and the Controller (continued)

CAUTION

Do not exceed the maximum extension cable length of 9 m (30 ft). Doing so will adversely affect communication between the valve and the controller.

CAUTION


Do not connect or disconnect a *Pulse* XP valve cable to a *Touch* XP controller when the controller is powered ON. Doing so can cause a b11 error and possibly damage the valve or the controller.

- d. Ensuring that the controller is powered OFF, connect the valve power and communication cables to the connectors on the back of the *Touch* controller. Refer to “Valve Extension Cables (Standard *Touch* Controller)” on page 47 for available extension cables.

NOTE: The VALVE power and communication ports differ on the *Touch* XP controller, so different valve extension cables are required. For *Touch* XP controller extension cables, refer to “*Touch* XP Valve Extension Cables” on page 74.


- e. To divert static charges from the valve, connect it to the machine system ground. Vacant fastening threads may be used for this.
- f. Add the fluid supply, but do not pressurize the fluid supply at this point.

NOTE: For low viscosity fluids used in a syringe barrel application, fill the barrel after installing it on the fluid-inlet fitting. High viscosity materials can be loaded into the barrel before installing it on the inlet fitting.

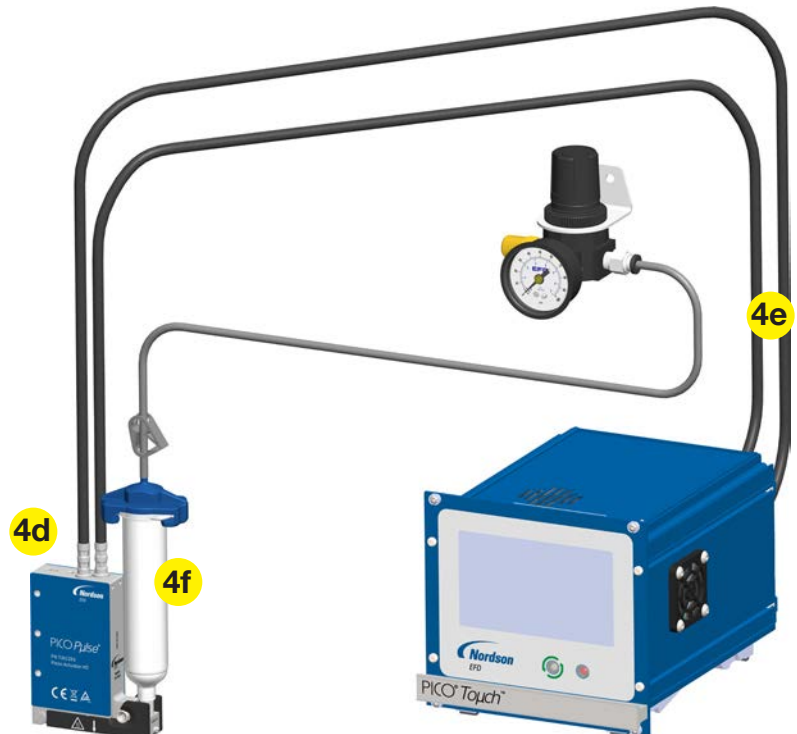

5. Connect inputs / outputs (I/O) to I/O 1 and I/O 2 as needed for your operation. Refer to “Input / Output Port Pin Descriptions” on page 52 for detailed I/O information. A 15-position D-sub and backshell are provided. A cable for the 25-pin D-sub connection is customer-supplied.

NOTE: Nordson EFD recommends using the analog temperature output (I/O 1, pin 11) to provide operators with appropriate identification and protection against contact when the valve temperature exceeds +45° C (113° F).

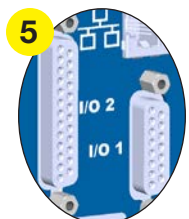

Install the Valve and the Controller (continued)

CAUTION


Do not dry cycle the Pulse valve! The ceramic nozzle seat and ball can be damaged if the valve is operated without fluid, causing leakage and a poor seal. Precise dispensing can no longer be guaranteed if this occurs.

6. Start up and test the system as follows:

- a. Switch the *Touch* controller power ON and complete the touchscreen calibration as prompted (required only at initial startup).



- b. (Heated systems only):

- Press the HEATERS icon () and then enter a temperature SETTING that is just above the ambient temperature (or as appropriate for the fluid).
- Press ON to switch the HEATERS mode to On.
- Wait for the system to reach temperature setpoint.

NOTE: The HEATERS screen shows the actual temperature of the valve.



- c. **IMPORTANT:** Press the VALVE icon () and then press POWER to switch the valve ON.

- d. Introduce fluid to the system.

- e. Set the reservoir pressure lower for thin fluids and higher for thick fluids [approximately 0.4–1.0 bar (5–15 psi), depending on the fluid]. For tanks, use the in-line air shut-off valve to pressurize or de-pressurize the fluid supply. For syringe barrels, connect or disconnect the adapter assembly from the reservoir pressure regulator and gauge.

- f. Press the PURGE icon () and allow fluid to purge from the system until the fluid flow is steady.


- g. Press MODE and enter the following recommended settings to test an actual deposit:

- MODE = Timed
- PULSE = 0.5 (ms)
- CYCLE = 5 (ms)
- COUNT = 10

- h. Press the CYCLE icon ()

The system dispenses 10 deposits and displays the frequency (FREQ) indication on the VALVE screen.

- i. Make parameter adjustments until the desired deposit result is achieved. Use caution not to exceed maximum frequency ranges.

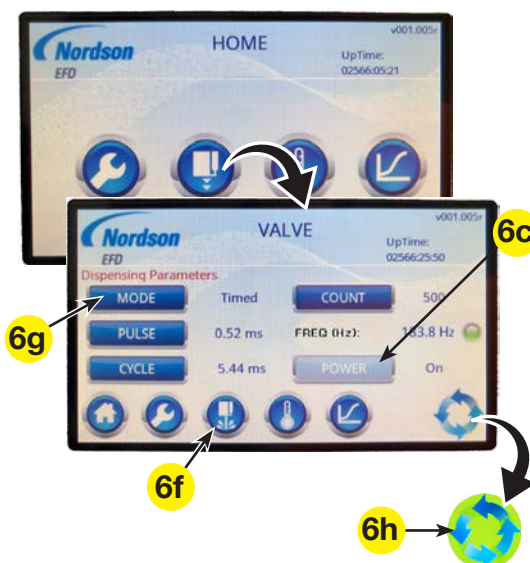

User Interface

The controller is operated through an easy-to-use touchscreen interface. This section provides an overview of the user interface and all the controller's screens and menus.

Navigation and Screen Structure

All system controls are accessed through the icons and buttons on the touchscreen. Each screen includes icons that allow you to jump quickly to other main screens. Each screen also shows the current LCD display version and the system UpTime, which is an indicator of how long the controller has been active or operational. The UpTime is specifically used to track when alarm conditions occur in the controller.



Structure of a Touch controller screen (standard Touch VALVE screen shown; LCD version number and UpTime values are only examples)

Alarm Indication

The title bar blinks red anytime an alarm condition is detected, regardless of the type of alarm. For example, if a POWER alarm occurs when the VALVE screen is open, the title bar blinks red even though the alarm is not a valve-related alarm. To view the alarm type, touch the title bar.






Example of the alarm screen





















User Interface (continued)

Buttons and Icons

System selections are made by pressing a button or an icon. Buttons change color based on their status, as shown in the following table.

Button	Button Color	Status
	Blue	Not selected
	Pale blue	Selected
	Light gray	Disabled

All non-textual system controls are shown in the legend below. Screen names are shown in all-capital letters. This legend is present on the pages of this manual that include programming procedures.

ABOUT 	CALENDAR CLOCK SET 	OK (check) 	LANGUAGE 	WAVE PARAMETERS 
Backspace 	Cancel 	HEATERS 	LOCKOUTS 	SETTINGS 
LCD SETTINGS 	Decimal Point 	HOME 	PASSWORDS 	SYSTEM 
CYCLE 	Decrement 	Increment 	PURGE 	VALVE 

System Refresh



A system refresh occurs upon power on or when settings are changed remotely. When the system refreshes, an hourglass appears on the touchscreen and no user input is accepted. Refresh takes just a few seconds.



User Interface (continued)

Entering Values


A numeric or alphanumeric keypad appears whenever data entry is required, such as for password entry.

CANCEL

Press to discard any entered data and return to the previous screen

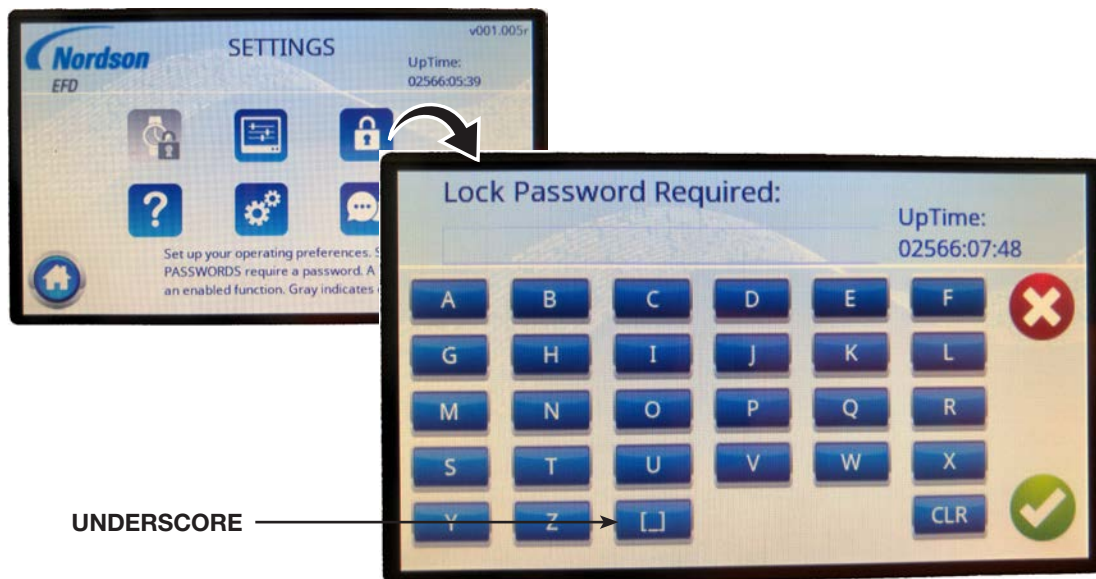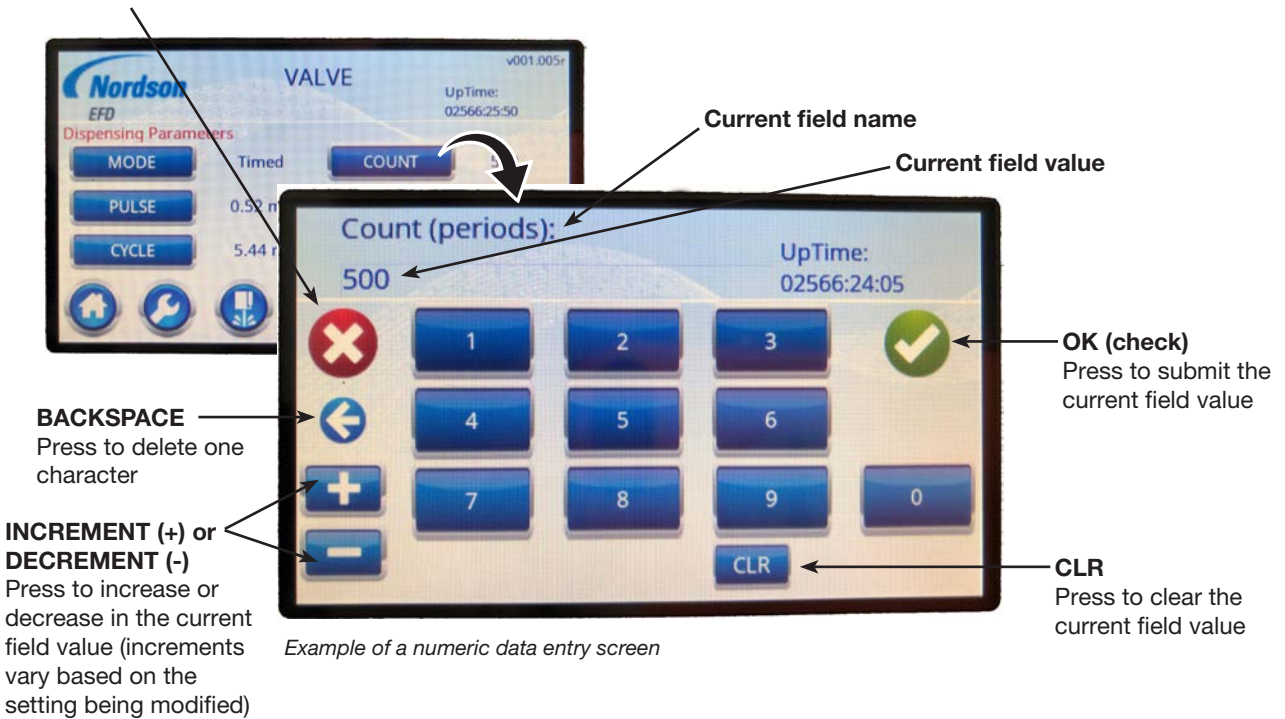



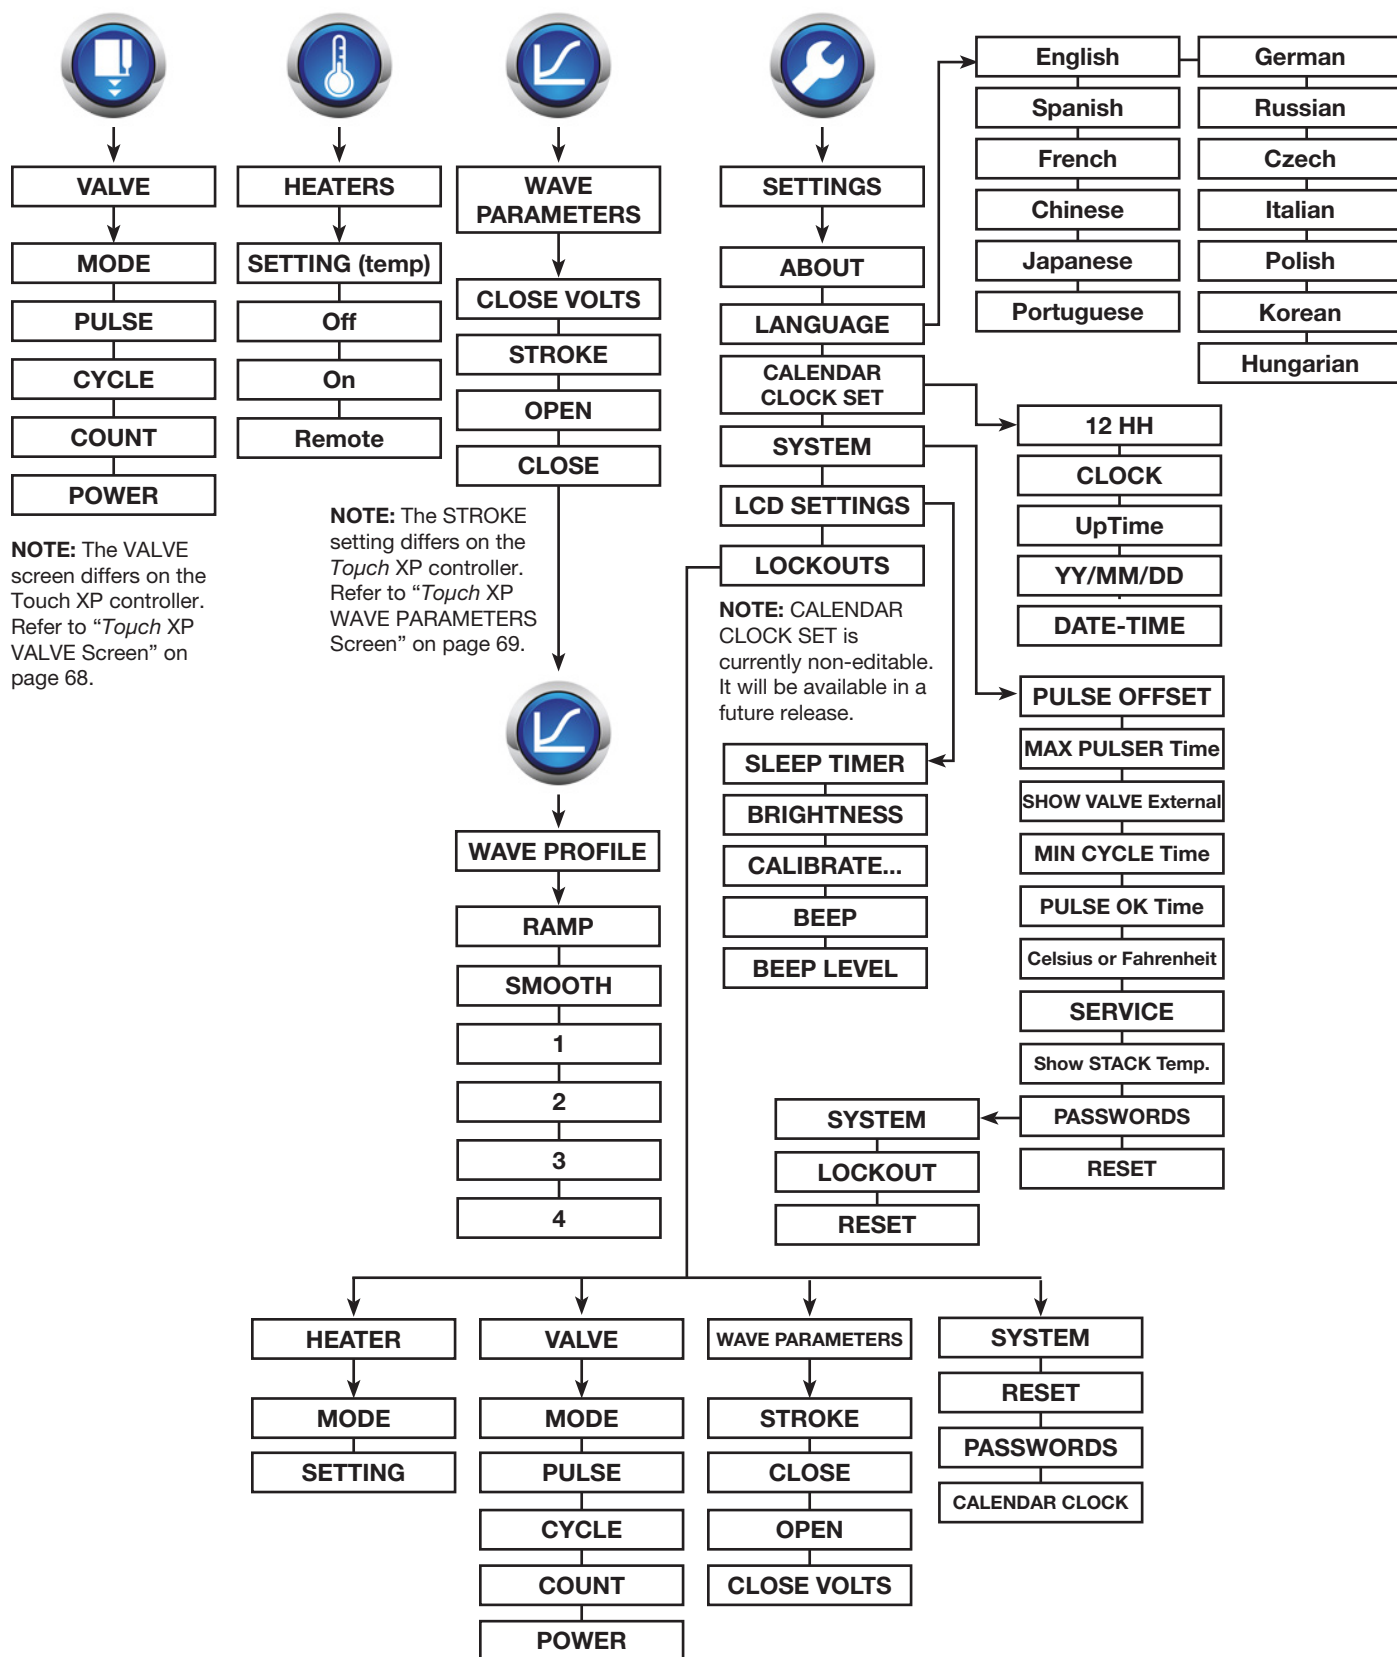

Flowchart of Menu Structure



HOME Screen

All secondary and tertiary screens are accessed through the HOME screen.




Icon	Description
 SETTINGS	Opens the SETTINGS screen. The SETTINGS screen provides access to all system-related setup screens. Refer to “SETTINGS Screen” on page 29.
 WAVE PARAMETERS	Opens the WAVE PARAMETERS screen, which provides access to the WAVE PROFILE screen. The WAVE PROFILE screen is used to select a wave profile; the WAVE PARAMETERS screen is used to adjust the parameters of the selected wave profile. Refer to “WAVE PROFILE Screen” on page 27 and to “WAVE PARAMETERS Screen (Standard Touch Controller)” on page 28 for details.
 VALVE	Opens the VALVE screen. Refer to “VALVE Screen (Standard Touch Controller)” on page 24. NOTE: The VALVE screen differs on the Touch XP controller. Refer to “Touch XP VALVE Screen” on page 68.
 HEATERS	Opens the HEATERS screen. Refer to “HEATERS Screen” on page 26.

VALVE Screen (Standard Touch Controller)

The VALVE screen is used to change the operating mode, enter valve dispensing parameters, and control valve power.

NOTE: The VALVE screen differs on the Touch XP controller. Refer to “Touch XP VALVE Screen” on page 68.





Button or Icon	Description	
MODE	Sets the system operating mode.	
	Mode	Description
	Timed	In the Timed mode, the valve cycles according to the settings for PULSE (valve open time), CYCLE (time between deposits), and COUNT (number of deposits) for each valve initiate signal.
	Continuous	In the Continuous mode, the valve cycles according to the settings for PULSE (valve open time) and CYCLE (time between deposits) for as long as the valve initiate signal is active, ignoring any setting for COUNT (number of deposits). NOTE: If the system is latched on to a signal in the Continuous mode, you cannot change screens.
	External	In the External mode, the controller operates as a slave to an input signal and thus no longer generates the timing signals required to drive the valve. This mode is typically used with a device such as the PICO 2+2-XCH-V3 Controller (a legacy product) for pattern generation. NOTE: This selection is available only when SHOW VALVE EXTERNAL is toggled ON via the SYSTEM screen. Refer to SHOW VALVE EXTERNAL under “SYSTEM Screens” on page 32.
<div> CAUTION</div> <p>Because the controller does not generate timing signals in the external mode, take care to not exceed the maximum operating parameters of the connected valve. In addition, the time setting of any external signal used to drive the valve must be greater than the RAMP OPEN profile time setting (refer to “WAVE PROFILE Screen” on page 27). Exceeding timing and valve operational parameters can result in overall loss of performance.</p>		
PULSE	Sets how long the valve opens (in milliseconds). Default: 10 (ms) Range: Depends on the open profile time and the type of valve being used; as low as 100 μs possible	
CYCLE	Sets the amount of time between deposits (in milliseconds). Default: 30 (ms) Range: 2 (ms) to 9.9999 (s) typical (minimum setting depends on open and close profile times)	
Continued on next page		

VALVE Screen (Standard Touch Controller) (continued)

NOTE: The VALVE screen differs on the *Touch* XP controller. Refer to “*Touch* XP VALVE Screen” on page 68.



Button or Icon	Description								
COUNT	Sets the number of deposits the valve dispenses per valve initiate cycle. Default: 1 Range: 00001–65535								
FREQ (Hz) (Non-editable)	Provides a color indication to show how fast the valve is operating (in Hz) at the selected settings; a lower frequency indicates slower operation; a higher frequency indicates faster operation.								
	<table> <tr> <th>Color</th><th>Description</th></tr> <tr> <td>Green</td><td>Safe operating frequency</td></tr> <tr> <td>Yellow</td><td>Caution—exceeding maximum frequency limits</td></tr> <tr> <td>Red</td><td>At the border of maximum operating frequency</td></tr> </table>	Color	Description	Green	Safe operating frequency	Yellow	Caution—exceeding maximum frequency limits	Red	At the border of maximum operating frequency
Color	Description								
Green	Safe operating frequency								
Yellow	Caution—exceeding maximum frequency limits								
Red	At the border of maximum operating frequency								
POWER	Sets whether a valve initiate signal is processed and also closes (applies voltage to) the valve. Valve initiate signals are processed only when valve POWER is ON. By default, valve POWER is ON when the controller is switched on. NOTE: The valve is normally open and power must be applied to close it. Always turn the valve ON before applying fluid and air pressure; otherwise, the valve will leak.								
	<table> <tr> <td>ON</td><td>Valve closed</td></tr> <tr> <td>OFF</td><td>Valve open</td></tr> </table>	ON	Valve closed	OFF	Valve open				
ON	Valve closed								
OFF	Valve open								
 (PURGE)	Purges the system. NOTE: The PURGE icon: <ul style="list-style-type: none"> • Is present only on the VALVE screen. • Is visible only when valve POWER is ON. • Functions only if the valve is not dispensing. • Is disabled if an alarm condition exists. 								
 (CYCLE)	Initiates a dispense cycle. How the system responds varies depending on the mode. Refer to “Changing the System (VALVE) Operating Mode” on page 33 for more detailed information. NOTE: The CYCLE icon: <ul style="list-style-type: none"> • Is present only on the VALVE screen. • Is disabled if an alarm condition exists. 								

HEATERS Screen

The HEATERS screen is used to turn heater control on or off, change the heater control to remote operation, and to enter a temperature setpoint for the valve heater.



Item or Button	Description	
MODE	Shows the current heater control mode.	
	Mode	Description
	OFF	Heater control is switched OFF.
	ON	Heater control is switched ON.
	REMOTE	The heater control follows the remote input supplied through the I/O connector. Refer to "Input / Output Port Pin Descriptions" on page 52.
SETTING	Sets the heater temperature in degrees C or degrees F.	
ACTUAL (Non-editable)	Shows the actual temperature of the heater.	
STACK (Non-editable)	If toggled on, shows the actual temperature of the piezo actuator stack. Refer to the SYSTEM screen parameters under "SYSTEM Screens" on page 32 to toggle the STACK display.	

WAVE PROFILE Screen

A wave profile, or waveform, is the rise and fall of the valve actuation signal. The WAVE PROFILE screen is used to select a wave profile. Two pre-programmed wave profiles (RAMP and SMOOTH) are included. RAMP is the default wave profile. Up to four additional custom wave profiles can be created by Nordson EFD. Contact your Nordson EFD technical support representative for assistance.

NOTES:

- Press the RAMP or SMOOTH buttons for a description of these profiles (and also to enable the selected profile).
- On the WAVE PROFILE screen, press the Wave Profile icon (📈) to open the WAVE PARAMETERS screen, which is used to fine-tune the enabled wave profile. Refer to “WAVE PARAMETERS Screen (Standard Touch Controller)” on page 28 for details.



Button	Description
RAMP	Enables the Ramp wave profile. This is the default selection. Use this wave profile when dispensing thicker or shear-thinning fluids.
SMOOTH	Enables the Smooth wave profile. Use this wave profile for micro-bubble mitigation. The Smooth wave profile has softer edges to prevent agitation or cavitation of shear, sensitive fluids, such as UV-cure adhesives.
1, 2, 3, or 4	Up to four custom wave profiles configured by Nordson EFD can be added. Contact your Nordson EFD technical support representative for assistance.

WAVE PARAMETERS Screen (Standard *Touch* Controller)



The WAVE PARAMETERS screen is used to adjust the parameters of a wave profile in order to fine-tune the resulting material deposit. The graph on the screen provides a visual representation of a wave profile.

NOTES:

- On a standard *Touch* controller, STROKE is a percentage value.
- This screen is accessed in two ways: (1) by pressing the Wave Profile icon (📈) on the HOME screen or (2) by pressing the Wave Profile icon (📈) on the WAVE PROFILE screen.
- Wave profiles are enabled on the WAVE PROFILE screen. Refer to “WAVE PROFILE Screen” on page 27.
- This screen differs on the *Touch* XP controller. Refer to “*Touch* XP WAVE PARAMETERS Screen” on page 69.



Wave Parameters screen on the standard *Touch* controller (STROKE units set in percentage of CLOSE VOLTS)

Button	Description
CLOSE VOLTS	<p>Sets the voltage to close the valve. The higher the voltage, the greater the sealing force applied.</p> <p>Minimum: 20 V Maximum: 130 V</p>
STROKE	<p>Sets the total percent of the CLOSE VOLTS setting for each initiate cycle.</p> <p>Minimum: 20% Maximum: 100%</p> <p>For example, a CLOSE VOLTS setting of 120V and a STROKE setting of 50% means that when the valve actuates, the voltage changes from 120V to 60V and then back to 120V.</p> <p>NOTE: This parameter differs on the <i>Touch</i> XP controller. Refer to “<i>Touch</i> XP WAVE PARAMETERS Screen” on page 69.</p>
<div style="text-align: center;">  CAUTION </div> <p>For fluids with a viscosity lower than 1000 cP, do not use aggressively low Open / Close settings (i.e., settings lower than 250 μs / 0.25 ms); doing so can damage the valve. Nordson EFD recommends starting with higher Open / Close settings (250 μs / 0.25 ms or greater), then decreasing in small increments based on the dispensing results.</p>	
OPEN	<p>Sets how fast the valve opens.</p> <p>Minimum: 150 μs (0.15 ms) Maximum: 500 μs (0.5 ms)</p>
CLOSE	<p>Sets how fast the valve closes.</p> <p>Minimum: 100 μs (0.10 ms) Maximum: 2000 μs (2.0 ms)</p>
	<p>When pressed on this screen, the Wave Profile icon opens the WAVE PROFILE screen, on which you can select a different wave profile. Refer to “WAVE PROFILE Screen” on page 27 for details.</p>

SETTINGS Screen


The SETTINGS screen provides access to system-level information, settings, and functions.



Icon	Description
CALENDAR CLOCK SET	Sets the system date, time, date format, and time format. NOTE: CALENDAR CLOCK SET is currently non-editable. It will be available in a future release.
LCD SET	Refer to "LCD SET Screen" on page 30.
FUNCTION LOCKOUT	Refer to "FUNCTION LOCKOUT Screen" on page 31.
ABOUT	Provides the following system information: <div> <div>Model</div> <div>LCD Version Number</div> <div>Date</div> <div>Valve Firmware Version</div> <div>Valve Model Number</div> <div>Shot Count (the total number of deposits)</div> </div> <div> <div>Serial Number</div> <div>Firmware Version</div> <div>LCD Serial Number</div> <div>Valve Serial Number</div> <div>Failure Count (the number of alarms recorded since the system has been active; see NOTES)</div> </div> <p>NOTES:</p> <ul style="list-style-type: none"> Alarm conditions and when they occurred can be extracted via the serial command "ralr." Refer to "Appendix A, Remotely Operating the Controller" on page 59. For screen captures, refer to "Viewing the Controller and Valve Information" on page 43.
SYSTEM	Refer to "SYSTEM Screens" on page 32.
LANGUAGE	Sets the user interface language. Refer to the SET LANGUAGE screens for available languages. NOTE: For screen captures, refer to "Setting the Language" on page 43.


LCD SET Screen



Icon	Description	
 LCD SETTINGS	Provides access to the LCD settings and adjustments.	
	Setting	Description
	SLEEP TIMER	Sets how long the touchscreen remains on with no user interaction before entering a sleep mode. Touch any part of the screen to restore the display.
	BRIGHTNESS	Sets the touchscreen brightness (25–100%).
	CALIBRATE TOUCH DISPLAY	Opens the LCD calibration screen.
	BEEP	Enables or disables the button-press beep sound.
	BEEP LEVEL	Sets the button-press beep volume (5–100 %).


FUNCTION LOCKOUT Screen



Icon	Description																		
 LOCKOUTS (LOCKOUT password required for access)	Opens the FUNCTION LOCKOUT screen, which provides access to the following settings that can be locked against user modification. Locked settings are password-protected — to view or change a locked setting, you must enter the LOCKOUT password. NOTE: Changing the LOCKOUT password AND also enabling the SYSTEM lockout removes the ability to perform an emergency password reset. Contact Nordson EFD Technical Services if you forget your custom LOCKOUT password and you have enabled the SYSTEM lockout.																		
	<table><tr><th>Lockout</th><th>Description</th></tr><tr><td>HEATER</td><td>When enabled, requires users to enter the LOCKOUT password to change the following HEATERS settings: MODE, SETTING.</td></tr><tr><td>VALVE</td><td>When enabled, requires users to enter the LOCKOUT password to change the following VALVE settings: MODE, PULSE, CYCLE, COUNT, On / Off.</td></tr><tr><td>WAVE PARAMETERS</td><td>When enabled, requires users to enter the LOCKOUT password to change the following WAVE PARAMETER settings: STROKE, CLOSE, OPEN, CLOSE VOLTS.</td></tr><tr><td>SYSTEM</td><td>When enabled, requires users to enter the SYSTEM password to access the SYSTEM screen.</td></tr><tr><td>RESET</td><td>When enabled, requires users to enter the RESET password to reset the system.</td></tr><tr><td>PASSWORDS</td><td>When enabled, requires users to enter the LOCKOUT password to access the SET PASSWORDS screen.</td></tr><tr><td>CALENDAR CLOCK</td><td>CALENDAR CLOCK lockout is currently disabled. It will be available in a future release.</td></tr><tr><td>More...</td><td>Toggles between the two function lockout screens.</td></tr></table>	Lockout	Description	HEATER	When enabled, requires users to enter the LOCKOUT password to change the following HEATERS settings: MODE, SETTING.	VALVE	When enabled, requires users to enter the LOCKOUT password to change the following VALVE settings: MODE, PULSE, CYCLE, COUNT, On / Off.	WAVE PARAMETERS	When enabled, requires users to enter the LOCKOUT password to change the following WAVE PARAMETER settings: STROKE, CLOSE, OPEN, CLOSE VOLTS.	SYSTEM	When enabled, requires users to enter the SYSTEM password to access the SYSTEM screen.	RESET	When enabled, requires users to enter the RESET password to reset the system.	PASSWORDS	When enabled, requires users to enter the LOCKOUT password to access the SET PASSWORDS screen.	CALENDAR CLOCK	CALENDAR CLOCK lockout is currently disabled. It will be available in a future release.	More...	Toggles between the two function lockout screens.
	Lockout	Description																	
	HEATER	When enabled, requires users to enter the LOCKOUT password to change the following HEATERS settings: MODE, SETTING.																	
	VALVE	When enabled, requires users to enter the LOCKOUT password to change the following VALVE settings: MODE, PULSE, CYCLE, COUNT, On / Off.																	
	WAVE PARAMETERS	When enabled, requires users to enter the LOCKOUT password to change the following WAVE PARAMETER settings: STROKE, CLOSE, OPEN, CLOSE VOLTS.																	
	SYSTEM	When enabled, requires users to enter the SYSTEM password to access the SYSTEM screen.																	
	RESET	When enabled, requires users to enter the RESET password to reset the system.																	
	PASSWORDS	When enabled, requires users to enter the LOCKOUT password to access the SET PASSWORDS screen.																	
	CALENDAR CLOCK	CALENDAR CLOCK lockout is currently disabled. It will be available in a future release.																	
More...	Toggles between the two function lockout screens.																		

SYSTEM Screens



Icon	Description	
 SYSTEM (SYSTEM password required for access)	Opens the SYSTEM screen, which provides access to the system-level settings.	
	Setting	Description
	PULSE OFFSET	Sets a minimum time (in ms) difference allowed between the VALVE screen CYCLE and PULSE settings. For example, if PULSE OFFSET is set to 3 and a user enters 1.00 (ms) for CYCLE, then the setting entered for PULSE must be 4.00 ms or greater.
	MAX PULSER Time	Sets the maximum time (in ms) that the CYCLE icon can be held active in the Continuous mode or when purging.
	SHOW VALVE External	Adds EXTERNAL to the MODE selections available on the VALVE screen. Refer to MODE under “VALVE Screen (Standard Touch Controller)” on page 24 for additional information on the external mode.
	MIN CYCLE Time	Sets a minimum time (in ms) that can be entered for CYCLE on the VALVE screen. The controller automatically modifies an entered CYCLE setting if it exceeds the safe operating range of the connected valve. Default: 30 (ms)
	PULSE OK Time	Sets how long the PULSE OK output signal (pin 14 on the 15-pin I/O connector) stays on AFTER the current dispense parameters are executed. Default: 6 (ms) Range: 1–100 (ms)
	CELSIUS or FAHRENHEIT	Sets how temperature units are displayed (Celsius or Fahrenheit).
	SERVICE	Nordson EFD use only.
	Show STACK Temp.	When SHOW STACK TEMP is toggled on, the controller displays the actual temperature of the piezo actuator stack on the VALVE screen. When SHOW STACK TEMP is toggled off, the stack temperature is not displayed. NOTE: This setting becomes useful when the valve is operating at the higher end of its operating range. Stack temperature is a crucial variable that can cause the controller to generate an alarm as it tries to protect the valve. Once the stack temperature reaches 55° C (131° F), the controller generates an alarm because the valve temperature is getting too hot.
	PASSWORDS	Opens the SET CONTROL PASSWORD screen, which provides access to the password setup options. Refer to “Managing Password Protection” on page 40 for additional information.
	RESET	Forces a reset of the LCD and re-initiates communication with the controller. All settings return their factory default values. Performing a reset causes an LCD fault alarm.
	More...	Toggles between the two system screens.

Setup and Programming Procedures

Use these procedures as needed to finalize setup, fine-tune the performance of the system, or view / change settings.

NOTE: These procedures show data being entered manually at the Toch controller. To operate the controller remotely, refer to “Appendix A, Remotely Operating the Controller” on page 59.

Connecting a Valve Initiate Signal


Follow this procedure to connect a clean, bounce-free input signal to initiate valve dispense cycles.

1. **IMPORTANT:** Connect a clean, bounce-free valve initiate signal to the following pins of the I/O port on the back of the controller:

- Pin 3 — USET Metering Start High (Valve Initiate)
- Pin 4 — USET Metering Start Low (GND)

Refer to “Input / Output Port Pin Descriptions” on page 52 for detailed I/O information.

2. Change the operating mode to Timed.

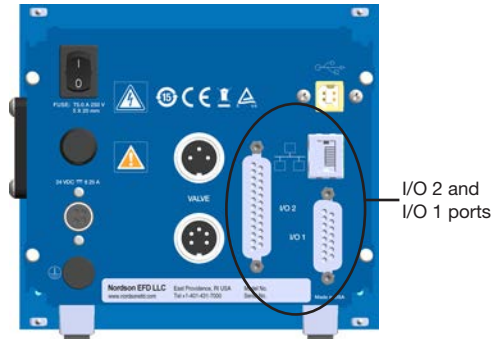

Changing the System (VALVE) Operating Mode

Follow this procedure to change the operating mode. For more information on the modes, refer to “VALVE Screen (Standard Touch Controller)” on page 24.

1. Press the VALVE icon ().
2. Press MODE until the touchscreen shows the desired operating mode.

Timed: The valve cycles according to the settings for PULSE (valve open time), CYCLE (time between deposits), and COUNT (number of deposits) for each valve initiate signal. When you press the CYCLE icon, the system dispenses for one cycle.

Continuous: The valve cycles according to the settings for PULSE (valve open time) and CYCLE (time between deposits) for as long as the valve initiate signal is active, ignoring any setting for COUNT (number of deposits). When you press the CYCLE icon, the system opens the valve for 10 seconds or until you press the CYCLE icon again, ignoring COUNT.

External: The controller operates as a slave to an input signal and ignores all programmed settings. Refer to “VALVE Screen (Standard Touch Controller)” on page 24 for cautions and important information about this mode.

3. Press HOME to save the setting and return to the HOME screen.



Standard Touch controller
VALVE screen shown


CYCLE icon

ABOUT ?	CALENDAR CLOCK SET	OK (check) ✓	LANGUAGE	WAVE PARAMETERS
Backspace ←	Cancel ✕	HEATERS	LOCKOUTS	SETTINGS
LCD SETTINGS	Decimal Point	HOME	PASSWORDS	SYSTEM
CYCLE	Decrement -	Increment +	PURGE	VALVE

Setup and Programming Procedures (continued)

Adjusting the Valve Operating Parameters (PULSE, CYCLE, or COUNT)

Follow this procedure to adjust how the valve operates, including valve open time (PULSE), time between deposits (CYCLE), and number of deposits per cycle (COUNT). For more information on these parameters, refer to “VALVE Screen (Standard Touch Controller)” on page 24.


1. Press the VALVE icon ().
2. Press PULSE, CYCLE, or COUNT. A numeric keypad appears for data entry.
3. Enter the desired setting for PULSE, CYCLE, or COUNT.
 - **PULSE:** How long the valve stays opens (in ms).
 - **CYCLE:** Amount of time between deposits (in ms).
 - **COUNT:** Number of deposits per cycle.
4. Press OK (check) > HOME to save the setting and return to the HOME screen.



Switching Valve Power On or Off





















Follow this procedure to set whether a valve initiate signal is processed. Valve initiate signals are processed only when valve Power is ON.

NOTE: By default, valve POWER is ON when the controller is switched ON (or anytime the controller is rebooted). To change the valve POWER setting default, refer to “Appendix A, Remotely Operating the Controller” on page 59.

1. Press the VALVE icon ().
2. Press POWER until the touchscreen shows the desired valve power status.
 - **On:** Valve closed; valve initiate signals processed.
 - **Off:** Valve open; valve initiate signals NOT processed.
3. Press HOME to save the setting and return to the HOME screen.



Standard Touch controller VALVE screen shown


ABOUT 	CALENDAR CLOCK SET 	OK (check) 	LANGUAGE 	WAVE PARAMETERS 
Backspace 	Cancel 	HEATERS 	LOCKOUTS 	SETTINGS 
LCD SETTINGS 	Decimal Point 	HOME 	PASSWORDS 	SYSTEM 
CYCLE 	Decrement 	Increment 	PURGE 	VALVE 

Setup and Programming Procedures (continued)

Switching the Heater Control (MODE) to On, Off, or Remote

Follow this procedure to switch the heater control on or off or to change the heater mode to remote operation.

1. Press the HEATERS icon (🔥).
2. Press the button for the desired heater mode.
 - **Off:** Heater control switches OFF.
 - **On:** Heater control switches ON.
 - **Remote:** Heater control follows a remote input signal (refer to “Input / Output Port Pin Descriptions” on page 52 to connect inputs / outputs).
3. Press HOME to save the setting and return to the HOME screen.

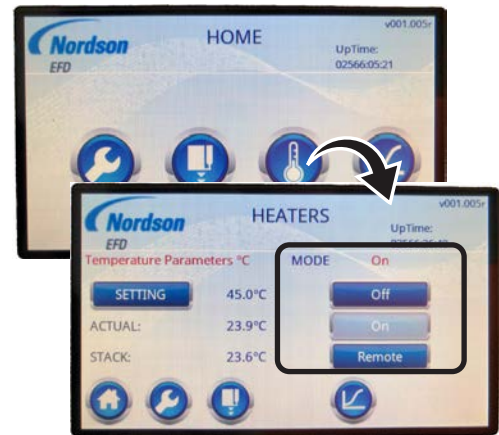

Viewing or Changing the Valve Heater Temperature / Temperature Setpoint

Follow this procedure to view or change the valve heater setpoint temperature or to view the actual temperature of the valve heater.

1. Press the HEATERS icon (🔥).
2. Press SETTING and enter the desired temperature setpoint on the numeric keypad.

NOTES:

- The actual temperature of the heater is displayed on the touchscreen next to ACTUAL.
 - To change how temperature units are displayed, refer to “Viewing or Changing System Settings” on page 39.
3. Press OK (check) > HOME to save the setting and return to the HOME screen.



ABOUT ?	CALENDAR CLOCK SET 🕒	OK (check) ✓	LANGUAGE 🗣️	WAVE PARAMETERS 📶
Backspace ⬅️	Cancel ✖️	HEATERS 🔥	LOCKOUTS 🔒	SETTINGS ⚙️
LCD SETTINGS 📺	Decimal Point 📏	HOME 🏠	PASSWORDS 🔑	SYSTEM ⚙️
CYCLE 🔄	Decrement ➖	Increment ➕	PURGE 🚰	VALVE 🚰

Setup and Programming Procedures (continued)





















Connecting a Controller Status Monitoring Signal

The *Pulse* valve is normally open and power must be applied to close it. In the case of damage to the piezo actuator or the *Touch* controller, the valve may transition from a CLOSED to an OPEN condition, which can cause fluid release. Nordson EFD recommends continually monitoring the status signal of the *Touch* controller and immediately and automatically de-pressurizing the system if the signal indicates an error. Follow this procedure to connect a controller status monitoring signal.

Connect wiring from the monitoring device to the following pins of the I/O port on the back of the controller:

- Pin 7 — Power signal
- Pin 13 — Error Out signal

Refer to “Input / Output Port Pin Descriptions” on page 52 for detailed I/O information.

ABOUT 	CALENDAR CLOCK SET 	OK (check) 	LANGUAGE 	WAVE PARAMETERS 
Backspace 	Cancel 	HEATERS 	LOCKOUTS 	SETTINGS 
LCD SETTINGS 	Decimal Point 	HOME 	PASSWORDS 	SYSTEM 
CYCLE 	Decrement 	Increment 	PURGE 	VALVE 

Setup and Programming Procedures (continued)


Managing the Wave Profile

A wave profile, or waveform, is the rise and fall of the valve actuation signal. The WAVE PROFILE screen is used to select a wave profile. Two pre-programmed wave profiles (RAMP and SMOOTH) are included. RAMP is the default wave profile. Up to four custom wave profiles can be added.

From the HOME screen or the WAVE PROFILE screen, you can open the WAVE PARAMETERS screen, which includes four adjustable settings that can be used to fine-tune the enabled Wave Profile.

Selecting a Wave Profile

- On the HOME screen, press the WAVE PROFILE icon (📶).
The WAVE PARAMETERS screen opens.
- On the WAVE PARAMETERS screen, press the WAVE PROFILE icon (📶).
The WAVE PROFILE screen opens. The selected wave profile is indicated by the pale blue button.
- Press the button of the wave profile you want to enable:
 - RAMP:** This is the default selection. Use this wave profile when dispensing thicker or shear-thinning fluids.
 - SMOOTH:** Use this wave profile for micro-bubble mitigation. The Smooth wave profile has softer edges to prevent agitation or cavitation of shear, sensitive fluids, such as UV-cure adhesives.
 - 1, 2, 3, or 4:** Up to four custom wave profiles configured by Nordson EFD can be added. Contact your Nordson EFD technical support representative for assistance.
- When the selected wave profile screen opens, press OK (checkmark) (✓) to enable the profile, or press X (✗) to cancel.
- To make adjustments to the selected wave profile, continue to “Adjusting a Wave Profile (Standard Touch Controller)” on page 38.

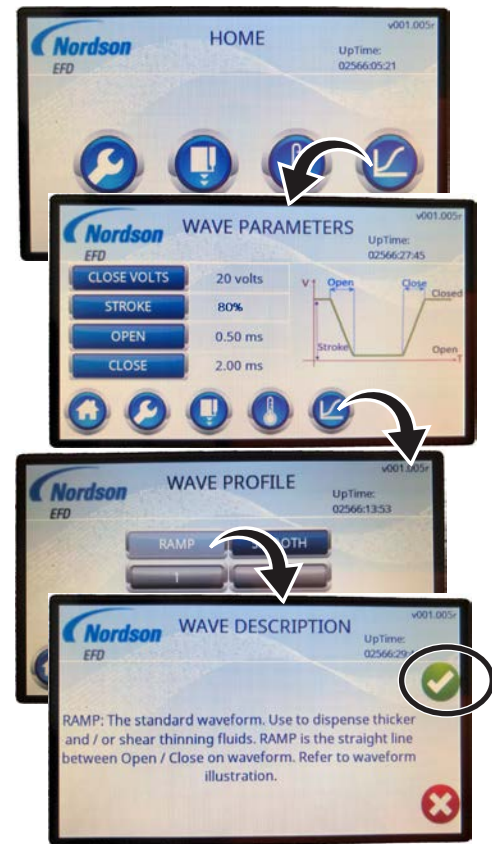

Enabling the RAMP wave profile

ABOUT ?	CALENDAR CLOCK SET 🕒	OK (check) ✓	LANGUAGE 🗣️	WAVE PARAMETERS 📶
Backspace ⬅️	Cancel ✗	HEATERS 🔥	LOCKOUTS 🔒	SETTINGS ⚙️
LCD SETTINGS 📺	Decimal Point 📏	HOME 🏠	PASSWORDS 🔑	SYSTEM ⚙️
CYCLE 🔄	Decrement ➖	Increment ➕	PURGE 🚰	VALVE 📶

Setup and Programming Procedures (continued)

Managing the Wave Profile (continued)


Adjusting a Wave Profile (Standard Touch Controller)

The WAVE PARAMETERS screen includes four adjustable settings that can be used to fine-tune the enabled Wave Profile.

NOTE: Custom profiles created before February 2020 cannot be edited.

- On the HOME screen, press the WAVE PROFILE icon (📈).
The WAVE PARAMETERS screen for the enabled wave profile opens.
NOTE: To determine which wave profile is active, refer to “Selecting a Wave Profile” on page 37.
- On the WAVE PARAMETERS screen, make the desired adjustments to the following parameters:
 - CLOSE VOLTS:** The voltage applied to close the valve. The higher the voltage, the greater the sealing force applied.
Minimum: 20 V
Maximum: 130 V
 - STROKE:** The voltage applied for each initiate cycle.
Minimum: 20%
Maximum: 100%
For example, a CLOSE VOLTS setting of 120V and a STROKE setting of 50% means that when the valve actuates, the voltage changes from 120V to 60V and then back to 120V.

NOTE: The STROKE setting differs on the Touch XP controller. Refer to “Adjusting a Wave Profile on the Touch XP Controller” on page 71.

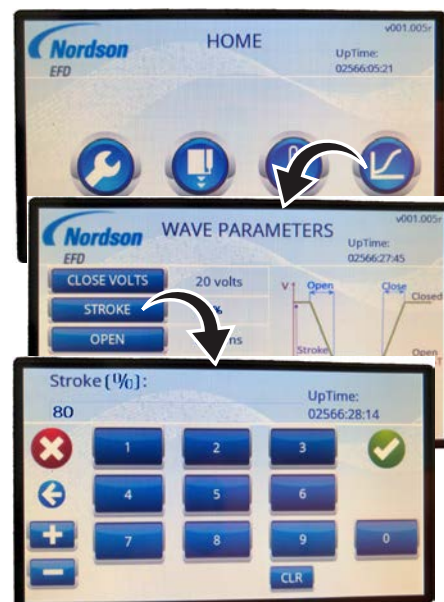

Adjusting the STROKE setting of the enabled wave profile (standard Touch controller)

CAUTION

For fluids with a viscosity lower than 1000 cP, do not use aggressively low Open / Close settings (i.e., settings lower than 250 μ s / 0.25 ms); doing so can damage the valve. Nordson EFD recommends starting with higher Open / Close settings (250 μ s / 0.25 ms or greater), then decreasing in small increments based on the dispensing results.

- OPEN:** How fast the valve opens.
Minimum: 150 μ s (0.15 ms)
Maximum: 500 μ s (0.5 ms)
- CLOSE:** How fast the valve closes.
Minimum: 100 μ s (0.10 ms)
Maximum: 2000 μ s (2.0 ms)

NOTE: Minimum limits are valve-specific and will be updated by the controller if they are exceeded.


- Press HOME to save the settings and return to the HOME screen.

Setup and Programming Procedures (continued)

Viewing or Changing System Settings

Follow this procedure as needed to view or change the SYSTEM settings explained under “SYSTEM Screens” on page 32.

1. Press the SETTINGS icon (⚙️).
 2. Press the SYSTEM icon (⚙️) and enter the SYSTEM password.
 3. Press MORE... to toggle between the SYSTEM1,2 and SYSTEM2,2 screens.
 4. Refer to the SYSTEM section of the “SYSTEM Screens” on page 32 for detailed information the following SYSTEM screen selections:
 - PULSE OFFSET
 - MAX PULSER Time
 - SHOW VALVE External
 - MIN. CYCLE Time
 - PULSE OK Time
 - CELSIUS / FAHRENHEIT (how temperature units display)
 - SERVICE
 - Show STACK Temp.
- NOTE:** For PASSWORDS, refer to “Managing Password Protection” on page 40.
- NOTE:** For RESET, refer to “Restoring the System to the Factory Default Settings” on this page.
5. Press HOME to save the setting and return to the HOME screen.

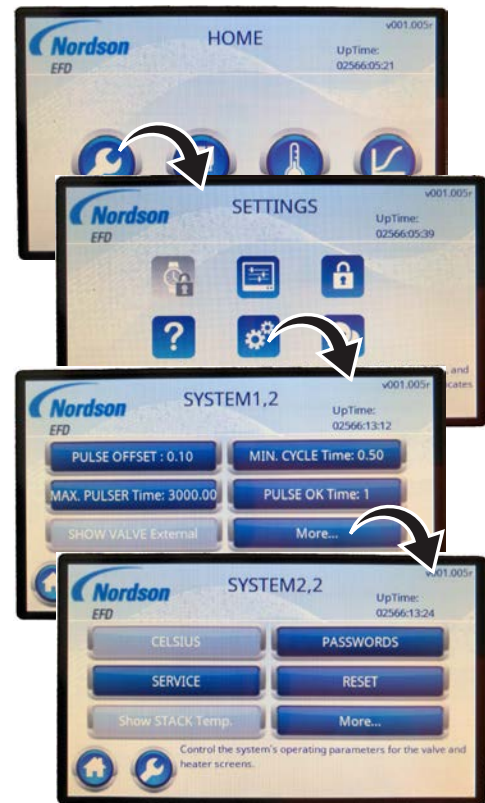

Restoring the System to the Factory Default Settings

Follow this procedure to restore all system settings to their factory-default values.

1. Press the SETTINGS icon (⚙️).
2. Press the SYSTEM icon (⚙️).
3. Press MORE... > RESET > and enter the RESET password.
4. Press OK (check) to reset the system. The system prompts for verification.

ABOUT ?	CALENDAR CLOCK SET ⌚	OK (check) ✓	LANGUAGE 🗣️	WAVE PARAMETERS ⌵
Backspace ⬅️	Cancel ❌	HEATERS 🔥	LOCKOUTS 🔒	SETTINGS ⚙️
LCD SETTINGS 📺	Decimal Point 📏	HOME 🏠	PASSWORDS 🔑	SYSTEM ⚙️
CYCLE 🔄	Decrement ➖	Increment ➕	PURGE 🚰	VALVE ⚙️

Setup and Programming Procedures (continued)

Managing Password Protection

The controller requires one of three password types to access some screens.

Password Type	Function	Default Password
SYSTEM	Protects the SYSTEM and SET PASSWORDS screens.	EFD_STM
LOCKOUT	Protects the SET FUNCTION LOCKOUT screens.	EFD_LOK
RESET	Protects the factory-reset function.	EFD_RST (non-editable)

Changing a SYSTEM or LOCKOUT Password

NOTE: To password-protect (lock out) additional menu items, refer to “Managing Lockouts” on page 41.


1. Press the SETTINGS icon (⚙️).
2. Press the SYSTEM icon (⚙️) and enter the SYSTEM password.
3. Press MORE... > PASSWORDS > and enter the SYSTEM password.
4. Press SYSTEM or LOCKOUT and then enter the new password. Passwords are limited to eight (8) characters.
5. Press OK (check) > HOME to save the setting and return to the HOME screen.

Resetting the SYSTEM and LOCKOUT Passwords

If you forget a SYSTEM or LOCKOUT password, follow this procedure to reset the passwords to their defaults.

NOTE: Changing the LOCKOUT password AND also enabling the SYSTEM lockout removes the ability to perform this password reset. Contact Nordson EFD Technical Services if you forget your custom LOCKOUT password and you have enabled the SYSTEM lockout.

1. Press the SETTINGS icon (⚙️).
2. Press the SYSTEM icon (⚙️).
3. When prompted for the SYSTEM password, enter PICO_TOUCH.
The SYSTEM and RESET passwords are restored to their defaults and the controller opens the SET PASSWORDS screen.
4. Enter new passwords or press HOME to accept the factory defaults.

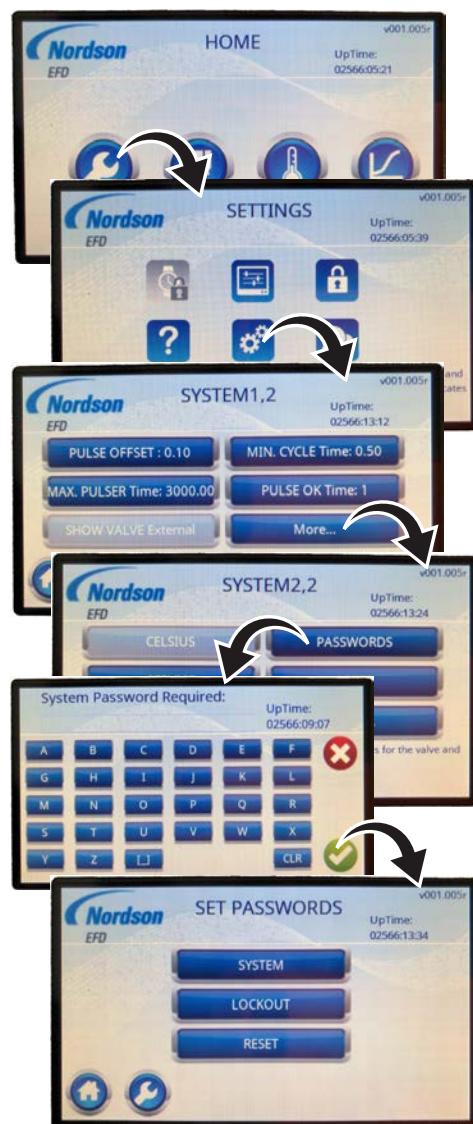

Accessing the SET PASSWORDS screen

ABOUT ?	CALENDAR CLOCK SET ⌚	OK (check) ✓	LANGUAGE 🗣️	WAVE PARAMETERS ⌵
Backspace ⬅️	Cancel ✖️	HEATERS 🔥	LOCKOUTS 🔒	SETTINGS ⚙️
LCD SETTINGS 📺	Decimal Point 📏	HOME 🏠	PASSWORDS 🔑	SYSTEM ⚙️
CYCLE 🔄	Decrement ➖	Increment ➕	PURGE 🚰	VALVE ⚙️

Setup and Programming Procedures (continued)

Managing Lockouts



Lockouts block access to specific screens or menu items to prevent unintended changes, thus providing an additional layer of protection. When a screen or menu item is locked out, it cannot be accessed.

1. Press the SETTINGS icon (⚙️).
2. Press the LOCKOUTS icon (🔒) and then enter the LOCKOUT password.
3. The SET FUNCTION LOCKOUT 1, 2 screen appears. Press MORE to see the SET FUNCTION LOCKOUT 2, 2 SCREEN.

The following table shows the control functions that can be locked out for each selection.

Button	Lockout Options
HEATER	MODE or SETTING buttons
VALVE	MODE, PULSE, CYCLE, COUNT, or POWER buttons
WAVE PARAMETERS	STROKE, CLOSE, OPEN, or CLOSE VOLTS buttons
SYSTEM	SYSTEM screen (locks out entire screen)
RESET	RESET button (locks out the factory reset function)
PASSWORDS	SET PASSWORDS screen (locks out entire screen)
CALENDAR CLOCK	Not available

4. Make your desired selections. Press HOME to save the setting and return to the HOME screen.

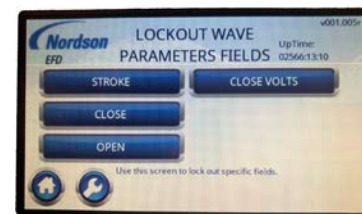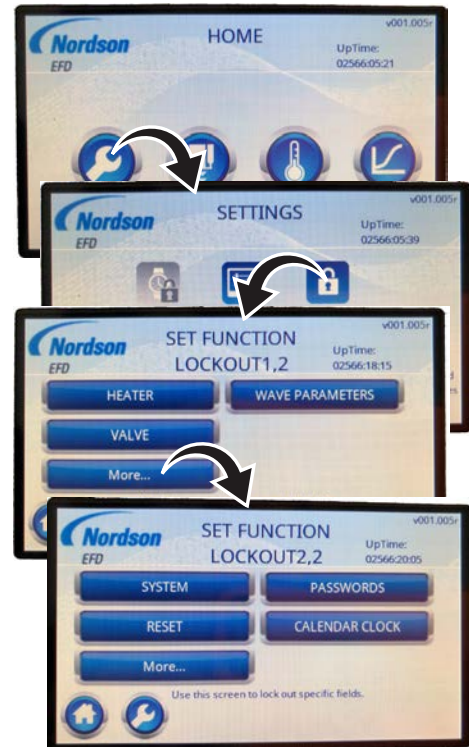

Lockout screens for heater, valve, and wave parameters fields

NOTE: The SYSTEM, RESET, PASSWORDS, and CALENDAR CLOCK buttons do not have an associated lockout screen.

ABOUT ?	CALENDAR CLOCK SET ⌚	OK (check) ✓	LANGUAGE 🗨️	WAVE PARAMETERS ⚙️
Backspace ⬅️	Cancel ❌	HEATERS 🔥	LOCKOUTS 🔒	SETTINGS ⚙️
LCD SETTINGS 📺	Decimal Point 📏	HOME 🏠	PASSWORDS 🔑	SYSTEM ⚙️
CYCLE 🔄	Decrement ➖	Increment ➕	PURGE 🚰	VALVE ⚙️

Setup and Programming Procedures (continued)

Adjusting the LCD and Beep Settings


Follow this procedure to make LCD and beep-sound adjustments.

1. Press the SETTINGS icon (⚙️).
2. Press the LCD SETTINGS icon (📺).
3. Enter the desired setting for SLEEP TIMER, BEEP, BRIGHTNESS, and BEEP LEVEL.
 - **SLEEP TIMER:** How long the touchscreen remains on with no user interaction before entering a sleep mode (touch any part of the screen to restore the display).
 - **BEEP:** Switches the button-press beep sound on or off.
 - **BRIGHTNESS:** Sets the touchscreen brightness (25–100%).
 - **BEEP LEVEL:** Sets the button-press beep volume (5–100%).
4. Press OK (check) > HOME to save the setting and return to the HOME screen.



Calibrating the LCD

1. Press the SETTINGS icon (⚙️).
2. Press the LCD SETTINGS icon (📺).
3. Press CALIBRATE TOUCH DISPLAY.
4. Follow the on-screen directions to calibrate the touchscreen.
5. Press OK (check) > HOME to save the setting and return to the HOME screen.

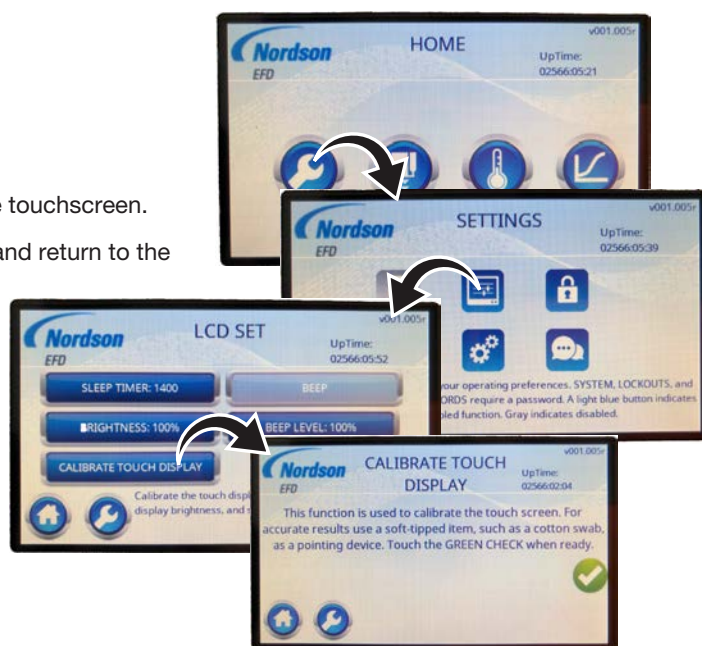

ABOUT ?	CALENDAR CLOCK SET ⌚	OK (check) ✓	LANGUAGE 🗨️	WAVE PARAMETERS ⚙️
Backspace ⬅️	Cancel ✖️	HEATERS 🔥	LOCKOUTS 🔒	SETTINGS ⚙️
LCD SETTINGS 📺	Decimal Point 📏	HOME 🏠	PASSWORDS 🔑	SYSTEM ⚙️
CYCLE 🔄	Decrement ➖	Increment ➕	PURGE 🚰	VALVE 🚰

Setup and Programming Procedures (continued)

Setting the Language


1. Press the SETTINGS icon (⚙️).
2. Press the LANGUAGE icon (💬).
3. Press MORE... to toggle through the SET LANGUAGE screens.
4. Press the button for the correct language.
5. Press HOME to save the setting and return to the HOME screen.



Viewing the Controller and Valve Information

Firmware resides in three locations in a PICO Touch system: On the main circuit board inside the Touch controller, on the LCD circuit board, and on a small circuit board inside the Pulse valve.

1. Press the SETTINGS icon (⚙️).
 2. Press the ABOUT icon (❓).
 3. Press MORE... to see the ADDITIONAL INFORMATION screen.
- The ABOUT and ADDITIONAL INFORMATION screens provide the current system information. Refer to “SETTINGS Screen” on page 29 for additional details on these screens.

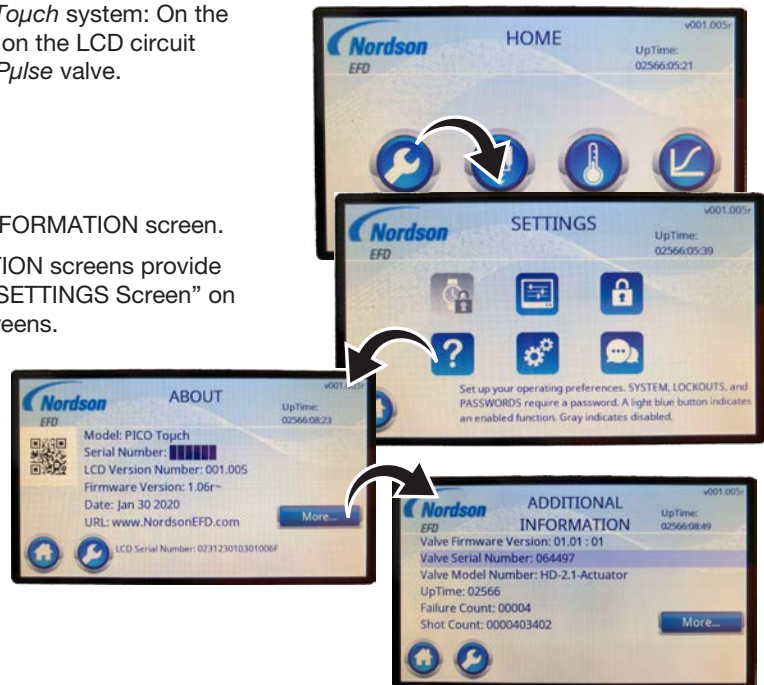

ABOUT (❓)	CALENDAR CLOCK SET (🕒)	OK (check) (✅)	LANGUAGE (💬)	WAVE PARAMETERS (📈)
Backspace (⬅️)	Cancel (❌)	HEATERS (🔥)	LOCKOUTS (🔒)	SETTINGS (⚙️)
LCD SETTINGS (📺)	Decimal Point (🔢)	HOME (🏠)	PASSWORDS (🔑)	SYSTEM (⚙️)
CYCLE (🔄)	Decrement (➖)	Increment (➕)	PURGE (🚰)	VALVE (🔧)

Operation

Follow these recommended procedures for daily / routine startup and shutdown to obtain the best performance from your system.




CAUTION

The *Pulse* valve is normally open and power must be applied to close it. In the case of damage to the piezo actuator or the *Touch* controller, the valve may transition from a CLOSED to an OPEN condition, which can cause fluid release. Nordson EFD recommends continually monitoring the status signal of the *Touch* controller and immediately and automatically de-pressurizing the system if the signal indicates an error.

Routine Startup

1. Switch the *Touch* controller power ON.
2. If the process requires a heated valve, press the HEATERS icon and then press ON to switch the HEATERS mode to On.

NOTE: Upon reboot, the controller remembers the last selected HEATERS mode.

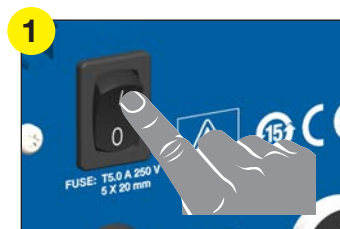

Switching on heater control

Operation (continued)

3. Press the VALVE icon and then MODE until the touchscreen shows the desired operating mode.
4. Start your process.



Purging the System

Press the VALVE > PURGE icons as needed to clear debris or after changing the fluid body assembly. Refer to the valve operating manual for more detailed information on purging and system cleaning.



Operation (continued)

Clearing Alarms

When an alarm occurs, the screen title bar blinks red and an alarm window appears. All errors cause the system to stop dispensing.

When an alarm occurs:

1. Clear the alarm. Alarms can be cleared in two ways:
 - Locally at the controller by pressing OK (check).
 - Remotely through pin 6 (Error Reset) of the I/O 1 (input / output) connector. Refer to "Input / Output Port Pin Descriptions" on page 52 to connect inputs / outputs.
2. If needed, correct the problem that caused the alarm. Refer to "Troubleshooting" on page 48 for complete troubleshooting information, including a list of all system alarms, causes, and corrective actions.



Clearing an alarm

Routine Shutdown

1. Stop the process.
2. De-pressurize the system.

WARNING

Risk of burns. Wear heat-protective gloves when working with a heated valve.

3. If the valve is heated, switch OFF heater control.
4. Refer to the valve manual to perform any of the following procedures as appropriate for the fluid:
 - Removing the fluid body assembly.
 - Purging the valve with the process fluid.
 - Purging the valve with cleaning fluid.
 - Cleaning the valve fluid paths.

Standard *Touch* Controller Part Number

NOTES:

- Power cords are purchased separately.
- Refer to “*Touch* XP Controller Part Number” on page 74 for the *Touch* XP controller part number.

Part #	Description	Supported Valves
7361217	PICO <i>Touch</i> controller	<ul style="list-style-type: none"> • PICO <i>Pulse</i> HD • PICO <i>Pulse</i> HD Contact
7014871	Kit, power cord, American plug	n/a
7014872	Kit, power cord, European plug	n/a



Valve Extension Cables (Standard *Touch* Controller)


NOTE: The *Touch* XP controller requires different extension cables from the standard *Touch* controller. Refer to “*Touch* XP Valve Extension Cables” on page 74 for the *Touch* XP controller extension cables.

CAUTION

Risk of equipment damage. The standard *Touch* controller does not accept extension cables designed for the *Touch* XP controller.

CAUTION

Do not exceed the maximum extension cable length of 9 m (30 ft). Doing so will adversely affect communication between the valve and the controller.

Item	Part #	Description
	7361298	2 m (6.6 ft) valve extension cable set*
	7361299	6 m (19.7 ft) valve extension cable set*
	7361300	9 m (29.5 ft) valve extension cable set*
*Includes one power cable and one communication cable		

Troubleshooting

General Troubleshooting

NOTE: To troubleshoot alarm codes, refer to “Alarm Code Troubleshooting” on page 49.

Problem	Possible Cause	Corrective Action
Fluid leaks	Valve not powered ON	Verify that the valve POWER is ON.
	Insufficient closing voltage	Increase the closing voltage of the valve.
	Improper profile selected	If RAMP is not selected for the open and close WAVE PROFILE settings, verify that the selected profile is correctly programmed.
	Worn or damaged valve	Refer to the troubleshooting section of the valve operating manual.
	Damaged driver	Contact Nordson EFD.
Valve will not power ON	Loose or damaged cable / connection	Verify that both valve input cables are connected. Check the integrity of all cables and connections.
	Alarm condition present	Correct and clear any pending alarms.
	Improper profile selected	If RAMP is not selected for the open and close WAVE PROFILE settings, verify that the selected profile is correctly programmed. Switch off the controller and wait 5 seconds for the valve to fully discharge. Disconnect and reconnect all cables to the controller, then switch on the controller. If a system restart does not correct the problem, contact Nordson EFD.
Controller not responding to an initiate signal	Alarm condition present	When an alarm condition is present, the controller will not initiate. Correct and clear any pending alarms.
	Problem with initiate signal integrity	Verify that the signal being user on the USET (Initiate) circuit is a clean, bounce-free signal (5–24VDC).
	Problem with wiring integrity	Ensure that the wiring is correctly stripped and that the conductors are making contact on the 15 pin connector
	Valve not powered ON	Verify that the valve POWER is ON.
LCD not responding to touches	LCD requires calibration	Refer to “Calibrating the LCD” on page 42 to recalibrate the LCD.
Display screen flashes white and is unresponsive	Failed real-time clock battery	Remove or replace the battery. Contact your Nordson EFD representative for the battery replacement instructions. NOTE: The battery powers only the real-time clock. Its removal or replacement will not affect any functions.

Troubleshooting (continued)

Alarm Code Troubleshooting

NOTES:

- For troubleshooting not related to alarm codes, refer to “General Troubleshooting” on page 48.
- The Touch XP controller includes the alarms shown below plus additional alarms. Refer to “Alarm Code Troubleshooting on the Touch XP Controller” on page 72.


LCD Code	Internal Code	Alarm Name	Related to...	Possible Cause: Corrective Action(s)
b8	001	Valve Heater Fault	Valve	Heater failed or shorted RTD in the valve: <ul style="list-style-type: none"> • Switch off the controller and wait 5 seconds for the valve to fully discharge, then switch on the controller. If the alarm persists, a possible valve heater failure exists. Return the valve to Nordson EFD or to the vendor for service.
b9	002	Stack Over Temperature	<ul style="list-style-type: none"> • Valve settings • Environment 	System operating beyond its acceptable range, typically caused by high frequency operation: <ul style="list-style-type: none"> • Frequency of operation too high for duty cycle: Lower the operating frequency (increase CYCLE time). • Duty cycle too high for frequency of operation: Lower the duty cycle rate (decrease PULSE time). Environmental conditions slowing heat dissipation: <ul style="list-style-type: none"> • Improve valve heat dissipation. Internal valve problem: <ul style="list-style-type: none"> • Return the valve to Nordson EFD or to the vendor for service.
b10	003	LCD Communication Loss	Controller	Problem occurred with LCD display: <ul style="list-style-type: none"> • Return the controller to Nordson EFD or to the vendor for service.
Continued on next page				

Alarm Code Troubleshooting (continued)

LCD Code	Internal Code	Alarm Name	Related to...	Possible Cause: Corrective Action(s)
b11	004	Piezo Driver Fault	Controller	<p>Pulse XP valve cable disconnected or connected when the <i>Touch</i> XP controller is powered ON, or error within the piezo driver circuitry:</p> <ul style="list-style-type: none"> To troubleshoot a b11 alarm, follow the steps provided in the Touch b11 Alarm Code Troubleshooting Instructions. <p>NOTES:</p> <ul style="list-style-type: none"> If the link above is not working, perform an Internet search for the instructions or contact your Nordson EFD representative to obtain a copy. A b11 alarm cannot be cleared via the Error Reset input.
b12	005	Pulse Time Adjusted Profile Timing Error	External triggering issue	<p>Programmed wave length time (RAMP) longer than PULSE time interval length, or consecutive dispense signals arriving at controller before task execution completed on first signal:</p> <ul style="list-style-type: none"> Check for a clean, bounce-free electrical signal.
b13	006	Driver Disabled	Controller	<p>Piezo driver unexpectedly shut off and the system recovered, typically caused by improper use or installation:</p> <ul style="list-style-type: none"> Switch off the controller and wait 5 seconds for the valve to fully discharge, then switch on the controller. If the alarm persists, return the controller to Nordson EFD or to the vendor for service.

Continued on next page


Alarm Code Troubleshooting (continued)

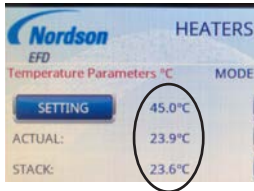LCD Code	Internal Code	Alarm Name	Related to...	Possible Cause: Corrective Action(s)
b14	007	Loss of Valve Communications	Valve cables	<p>Controller experiencing valve communication issues; typically caused by a faulty physical connection:</p> <ol style="list-style-type: none"> 1. On the controller alarm screen, press OK (check). <p>NOTE: This action clears the screen, but may not clear the alarm. Continue with the next steps to ensure the alarm is cleared.</p> <ol style="list-style-type: none"> 2. Switch the controller OFF and wait 5 seconds for the valve to fully discharge. 3. Ensure that the valve cables are properly connected. 4. Check the valve cables for damage and replace as needed. 5. Switch the controller ON and verify that the controller shows valve temperature readings on the HEATERS screen.  <p>NOTE: Valve communication can also be verified by ensuring that the valve serial number is shown on the INFO screen. Refer to “Viewing the Controller and Valve Information” on page 43.</p>
b15	008	No Valve Detected	Valve cables	<p>System cannot detect a valid valve connected to the controller:</p> <ul style="list-style-type: none"> • Ensure that all wiring connections are correct. • Ensure that the valve cables are properly connected.
b16	009	PZD Communication Fault	Controller	<p>Issue with system electronics:</p> <ul style="list-style-type: none"> • Switch off the controller and wait 5 seconds for the valve to fully discharge, then switch on the controller. If the alarm persists, return the controller to Nordson EFD or to the vendor for service.

Technical Data

Input / Output Port Pin Descriptions

I/O 1 15-Position D-Sub

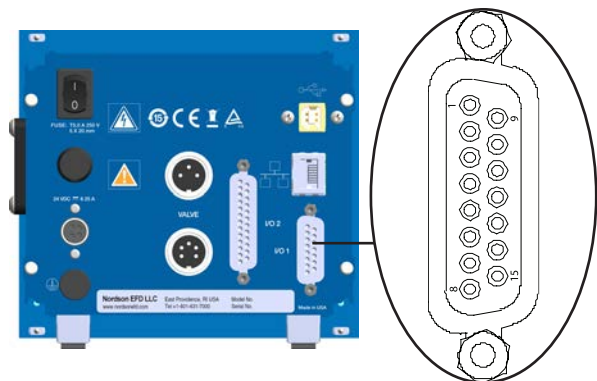

Pin Number	Pin Name	Direction	Level	Description
1	Remote Temperature Setting	Input	0–10V	<ul style="list-style-type: none"> Analog input for temperature adjustment 0–100° C (no cooling possible) 1 volt = 10° C Input impedance 40 KΩ
2	Analog Ground			Ground for temperature adjustment
3	USET (Voltage Initiate)	Input	0–24V	<ul style="list-style-type: none"> Programmed dispensing parameters start (must be a clean, bounce-free signal) Input impedance 1.3 KΩ <p>NOTES:</p> <ul style="list-style-type: none"> In the Continuous mode, dispensing occurs when this signal is ON; the controller also executes the values entered for PULSE (valve open time) and CYCLE (time between deposits). In the Timed mode, when this signal rises the controller actuates the number of deposits entered for COUNT while also executing the values entered for CYCLE (time between deposits) and PULSE (valve open time). In the External mode, any values entered for CYCLE and PULSE are ignored and, when this signal rises, one dispense cycle occurs. This allows precise control of each deposit.
4	GND			Ground for inputs and outputs
5	Status of Temperature	Output	0–24V	<p>Status of output temperature, comparison of actual and target temperature:</p> <ul style="list-style-type: none"> 0V = Target temperature not reached 24V = Target temperature reached (temperature within 6° C) <p>NOTE: Use the remote communication capability to change the target temperature window. Refer to the "trng" command in the "Temperature" table in "Appendix A, Remotely Operating the Controller" on page 59.</p>

Continued on next page

Input / Output Port Pin Descriptions (continued)

I/O 1 15-Position D-Sub (continued)


Pin Number	Pin Name	Direction	Level	Description
6	Error Reset	Input	0–24V	<p>Default: Error Reset (signal to reset error or alarm condition remotely)</p> <p>Option: Remote Valve Power On/Off Control</p> <ul style="list-style-type: none"> • 0V = Valve Power OFF • 24V = Valve Power ON <p>Option: Valve Purge Control</p> <ul style="list-style-type: none"> • 0V = Valve Purge OFF • 24V = Valve Purge ON <p>NOTES:</p> <ul style="list-style-type: none"> • This input cannot be used to clear a b11 alarm. To troubleshoot a b11 alarm, refer to “Alarm Code Troubleshooting” on page 49. • Use the remote communication capability to change the default pin function to Remote Valve On / Off Control or Valve Purge Control. Refer to “Configuration” under “Appendix A, Remotely Operating the Controller” on page 59.
7	Power	Output	0–24V	<p>Status signal to identify controller status:</p> <ul style="list-style-type: none"> • 0V = Controller OFF • 24V = Controller ON
8	Pulse Out	Output		Nordson EFD use only
9	Warn Over Temperature	Output	0–24V	<p>Valve piezo actuator has exceeded its operating temperature limits:</p> <ul style="list-style-type: none"> • 0V = Valve piezo actuator temperature exceeded • 24V = Valve piezo actuator temperature within range
10	Analog Ground			Ground for temperature adjustment
11	Temperature Out	Output	0–10V	Analog temperature output: 1 volt = 10° C
12	Temperature Off	Input	0–24V	<p>Default: Temperature Off (valve heater control)</p> <ul style="list-style-type: none"> • 0V = Heater mode ON • 24V = Heater Mode OFF <p>Option: Remote Valve Power On/Off Control</p> <ul style="list-style-type: none"> • 0V = Valve Power OFF • 24V = Valve Power ON <p>Option: Valve Purge Control</p> <ul style="list-style-type: none"> • 0V = Valve Purge OFF • 24V = Valve Purge ON <p>NOTE: Use the remote communication capability to change the default pin function to Remote Valve On/Off Control or Valve Purge Control. Refer to “Configuration” under “Appendix A, Remotely Operating the Controller” on page 59.</p>
13	Error Out	Output	0–24V	<p>Status signal indicating that an error or alarm condition has occurred:</p> <ul style="list-style-type: none"> • 0V = Error or alarm condition active • 24V = No error or alarm condition detected <p>NOTE: This signal is active only when the valve POWER is ON. Refer to “POWER” on page 25 to understand how the valve is powered ON or OFF.</p>
Continued on next page				

Input / Output Port Pin Descriptions (continued)

I/O 1 15-Position D-Sub (continued)

Pin Number	Pin Name	Direction	Level	Description
14	Pulse OK	Output	0–24V	<p>End of Cycle feedback indicating that the programmed dispense parameters have completed.</p> <p>The PULSE OK signal is generated after each programmed dispensing parameter has occurred. The signal can be used for monitoring and counting.</p> <ul style="list-style-type: none"> • 0V = No dispensing active • 24V (6 ms) = Dispensing has occurred <p>The signal duration of 6 ms is the factory default. The signal duration is adjustable from 1–100 (ms). Refer to the System PULSE OK Time setting under “SYSTEM Screens” on page 32.</p>
15	Ext 24 Volts	Input/output	24V	<p>The controller can provide up to 200 mA as a courtesy power supply or this pin can be used to provide an external isolated power supply. Use the “dioe” and “dloi” commands to configure the functionality of this pin (Refer to “Appendix A, Remotely Operating the Controller” on page 59). Contact Nordson EFD for applications which require more than 200 mA.</p>

I/O 2 25-Position D-Sub

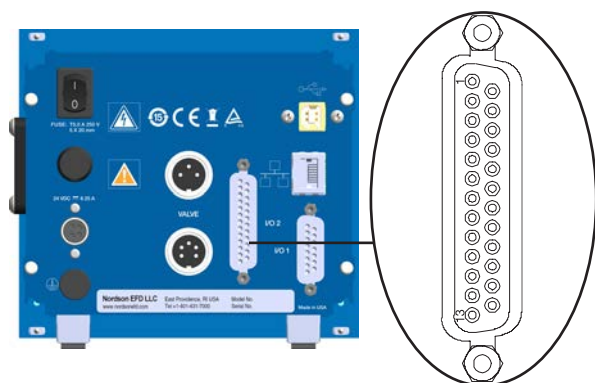

Pin Number	Pin Name	Direction	Level	Description
1	Not available			Nordson EFD use only
2	RS_232_RX	Input	0–5V	Receiving pin for RS232. Data from an RS232 device inputs to this pin to command the controller. Refer to “Appendix A, Remotely Operating the Controller” on page 59 for instructions.
3	RS_232_TX	Output	0–5V	Transmission pin for RS232. Contains response data from controller.
4	Not available			Nordson EFD use only
5	Not available			Nordson EFD use only

Continued on next page

Input / Output Port Pin Descriptions (continued)


I/O 2 25-Position D-Sub (continued)

Pin Number	Pin Name	Direction	Level	Description
6	Not available			Nordson EFD use only
7	DGND			Internal non-isolated ground for use with RS232
8	Not available			Nordson EFD use only
9	Not available			Nordson EFD use only
10	Not available			Nordson EFD use only
11	Not available			Nordson EFD use only
12	Not available			Nordson EFD use only
13	DGND			Internal non-isolated ground for use with RS232
14	Not available			Nordson EFD use only
15	DGND			Internal non-isolated ground for use with RS232
16	Not available			Nordson EFD use only
17	DSUB_GND			External ground
18	Not available			Nordson EFD use only
19	DSUB_GND			External ground
20	Not available			Nordson EFD use only
21	DSUB_GND			External ground
22	Not available			Nordson EFD use only
23	Not available			Nordson EFD use only
24	Not available			Nordson EFD use only
25	Ext 24 Volts	Input/output	24V	The controller can provide up to 200 mA as a courtesy power supply or this pin can be used to provide an external isolated power supply. Use the "dioe" and "dioi" commands to configure the functionality of this pin (Refer to "Appendix A, Remotely Operating the Controller" on page 59). Contact Nordson EFD for applications which require more than 200 mA.

Wiring Diagrams


PICO Touch Controller Inputs

- All inputs are 0–12V OFF, 15–24V ON.
- When ON, the current draw is 18 mA per pin at 24V, showing about 1.3 k Ω input resistance.

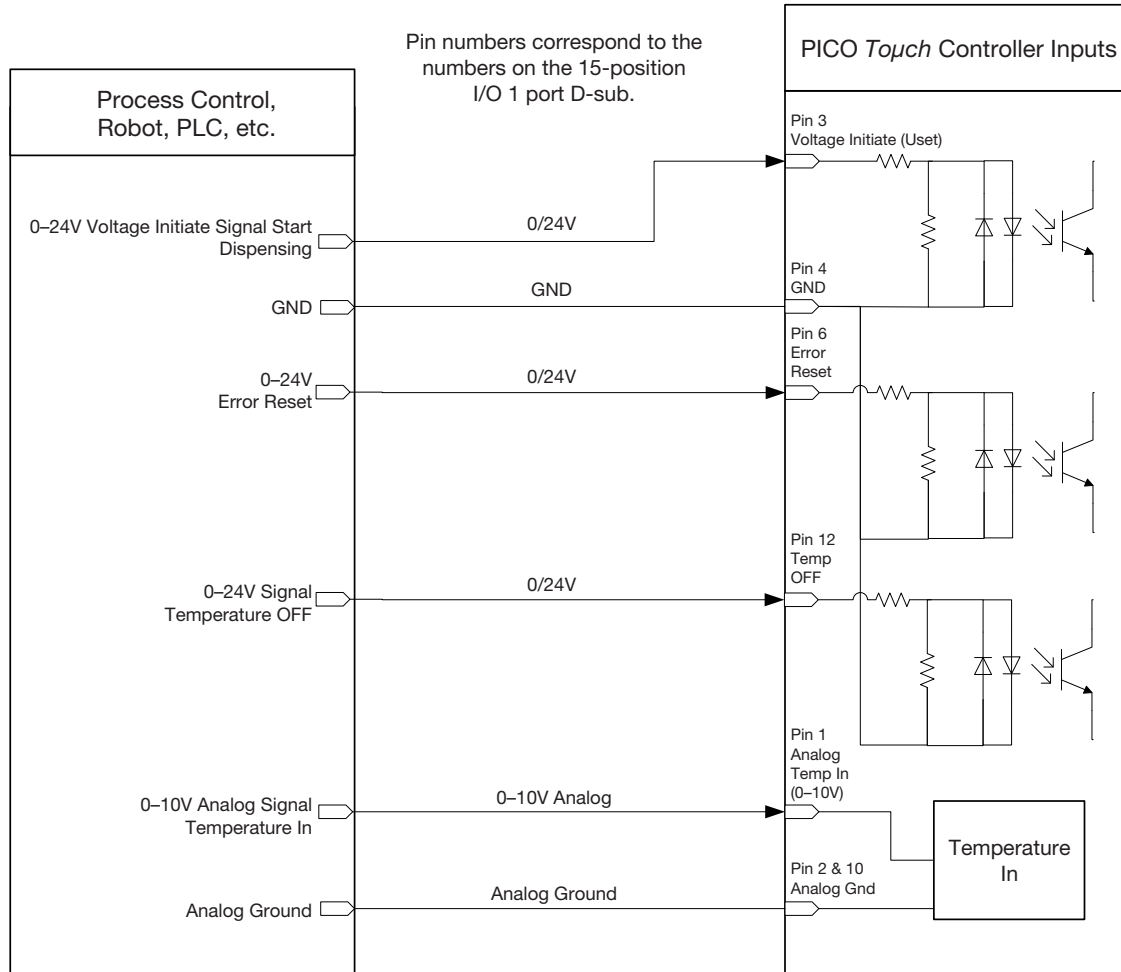

Wiring Diagrams (continued)


PICO *Topch* Controller Outputs

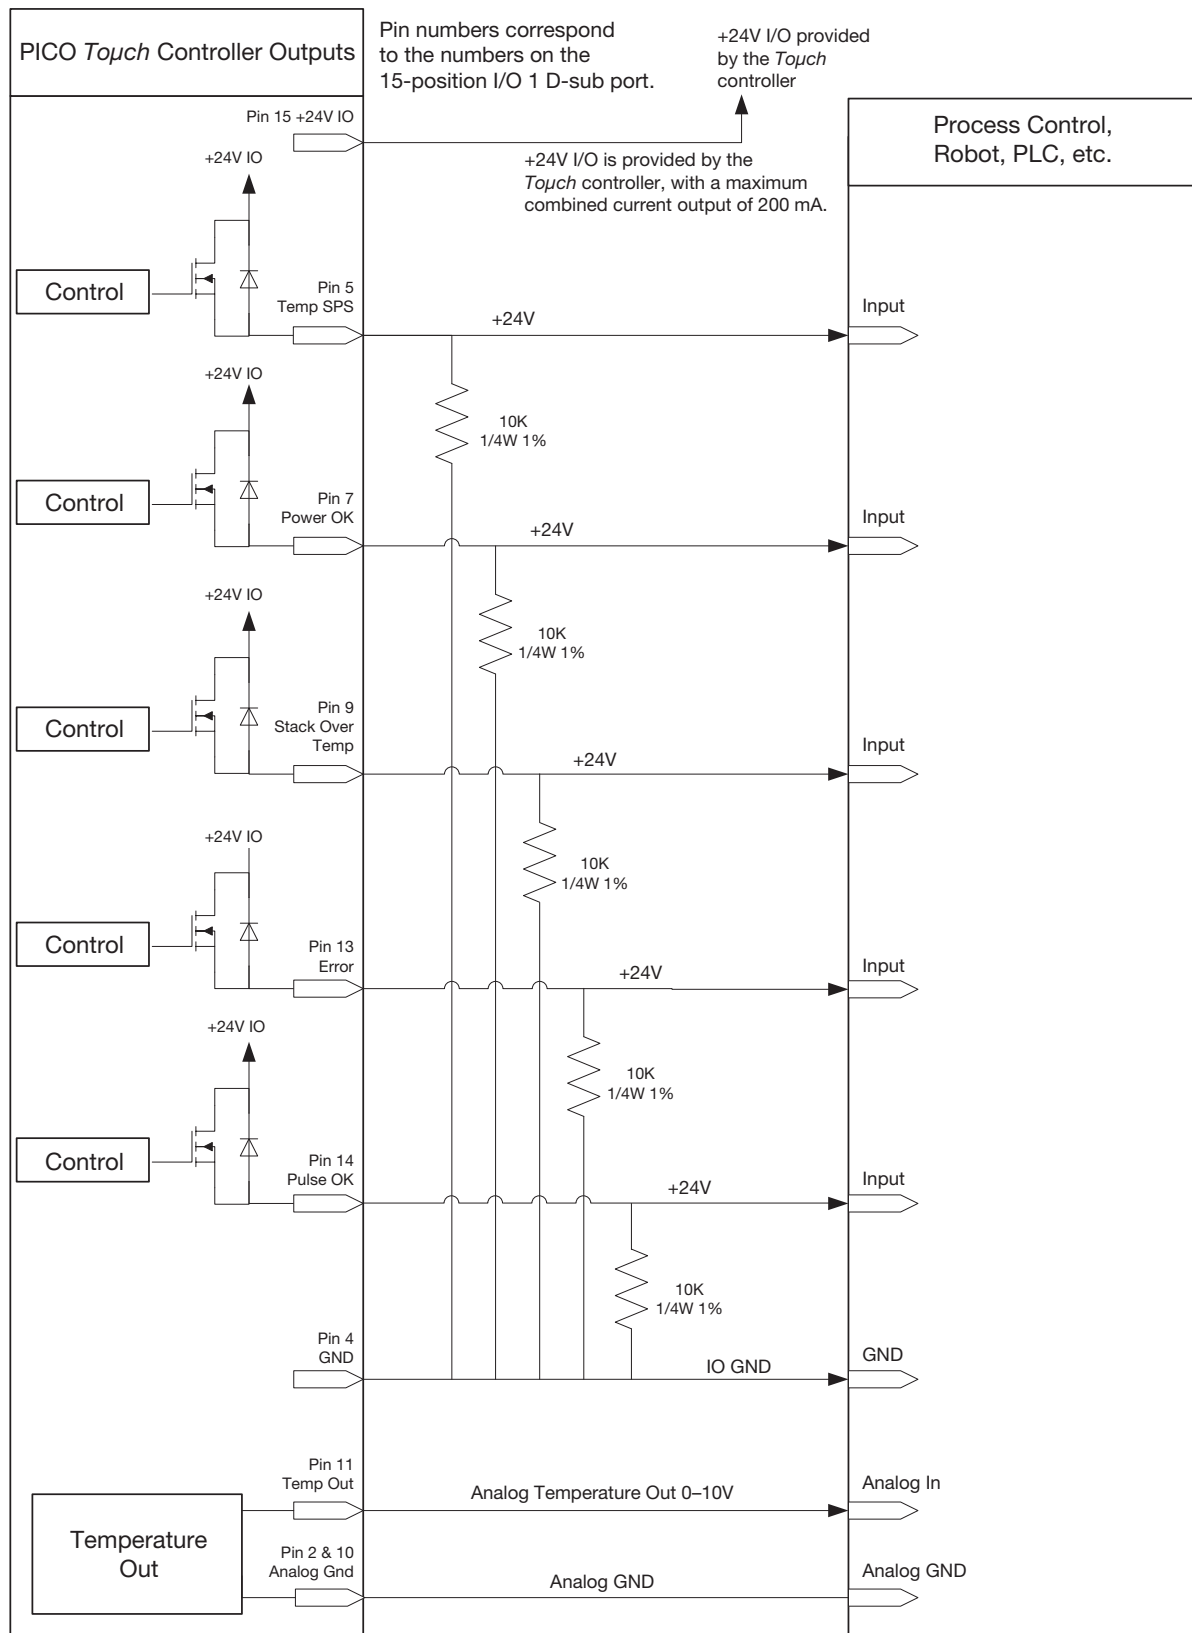

Wiring Diagrams (continued)

PICO *Touch* Controller and PICO Controller 2+2-XCH-V3

NOTE: The PICO Controller 2+2-XCH-V3 is a legacy product.

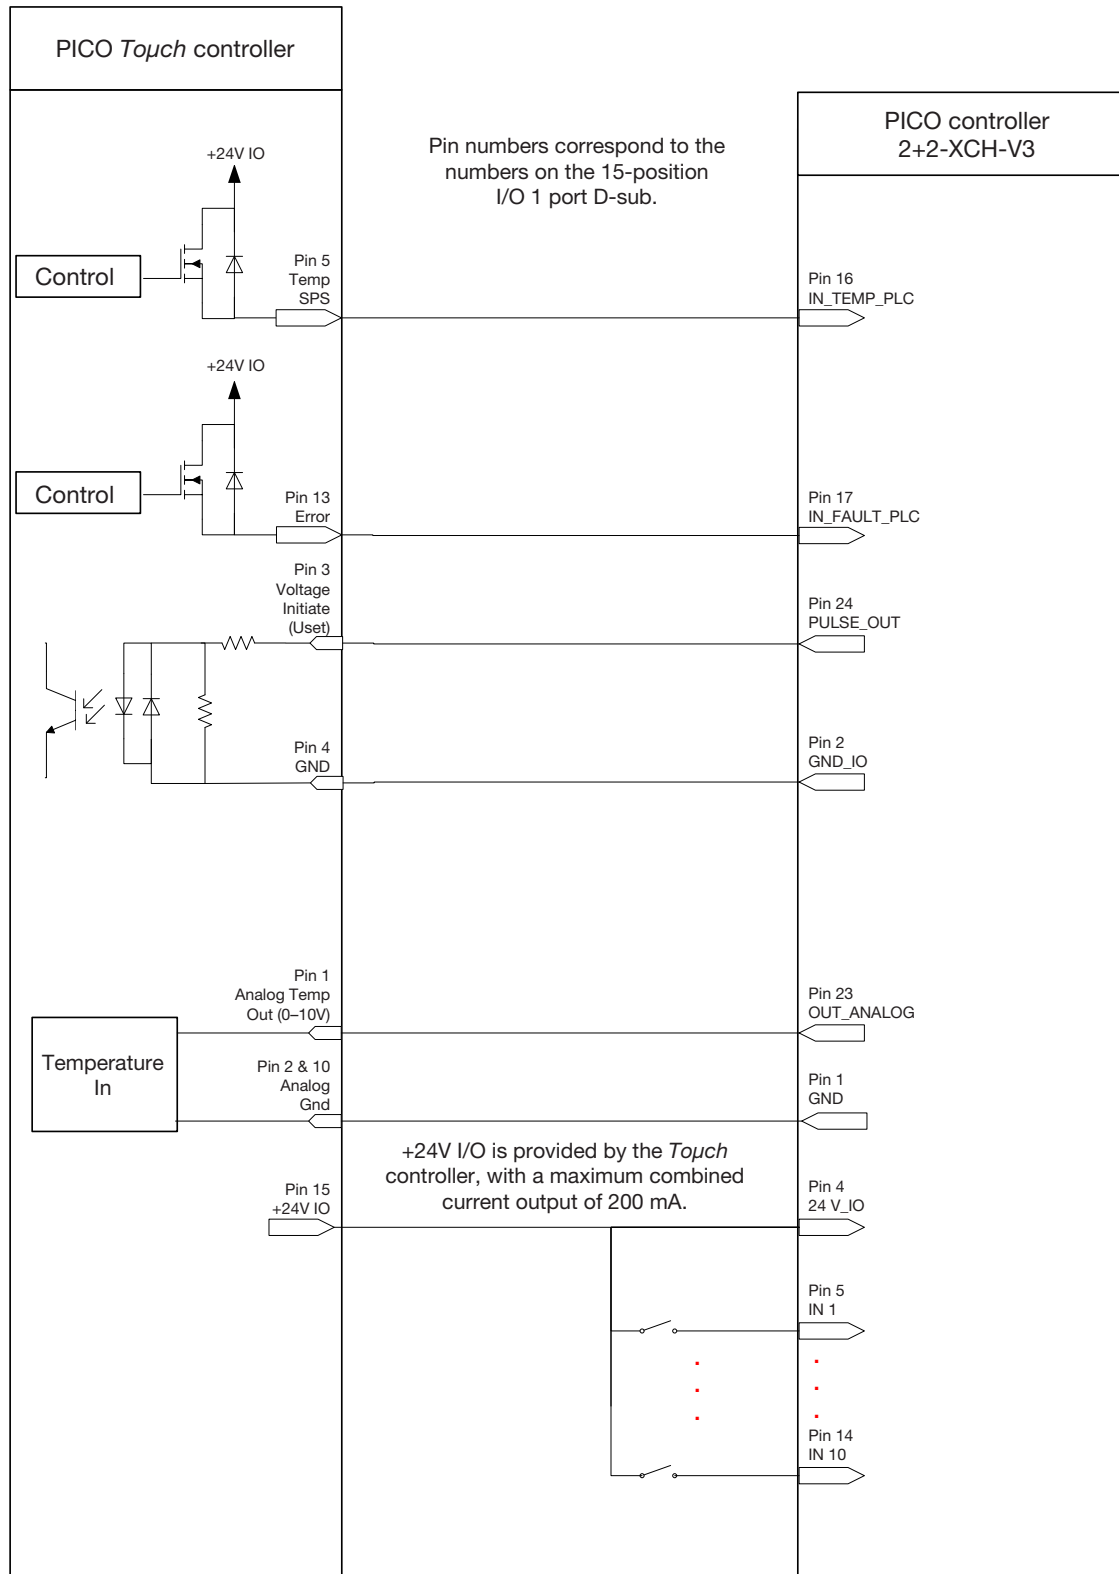

Appendix A, Remotely Operating the Controller


You can operate the controller through a personal computer (PC) using the supplied USB communication cable or by connecting to the RS232 connection through the 25-pin D-sub (port I/O 2). Communicating in this manner allows you to modify dispensing parameters remotely and also to load custom wave profiles on the controller.

Connection Using a PC

Connect the USB cable to the USB port on the back of the controller and to a PC.

Connection Using the RS232 I/O Pins

The 25-pin D-sub (port I/O 2) is configured for use with a null modem cable. Alternatively, use the I/O 2 port RS232 pins (pins 2 and 3) to make your connection. Refer to “I/O 2 25-Position D-Sub” on page 54 for the I/O 2 port pin descriptions.

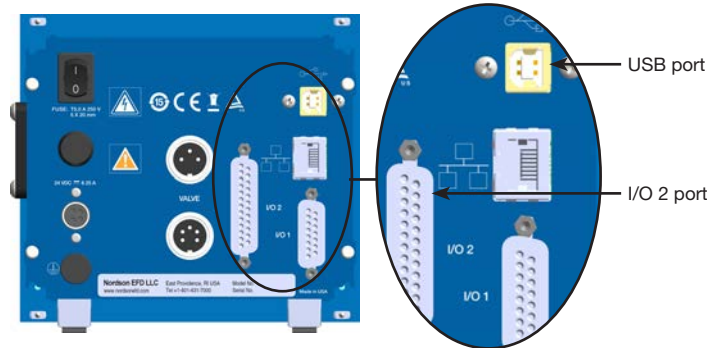

Communication Specifications

The controller acts as a terminal to the remote host PC. The controller communicates using the following settings:

- Synchronous mode: half duplex
- Baud rate: 115200
- Start bit: 1
- Data length: 8 bit (ASCII)
- Parity bit: None
- Stop bit: 1

Communication Sequence

The host machine initiates all communication sequences. The controller evaluates the last four characters in the command packet as the command.

Typical Command Packet: `xxxCCCC`
 (where `xxx` is the setting and `CCCC` is the command)
 The length of the setting varies depending on the command.

Serial Commands

Commands are evaluated after a return (Enter key or 0x0D hex). After a return is received, the controller evaluates the command, transmits any data related to the command, and closes the packet with <3.

The following tables provide the commands for the controller. Each entry includes a brief description of the command, shows the command format, and provides a description of the data that is attached and retrieved by the command.

NOTES:

- The <3 acknowledge command is removed from the examples since all commands are successfully evaluated.
- The return constant (Enter key: ↵) is depicted as [Enter] in all examples.

Appendix A, Remotely Operating the Controller (continued)

Valve (Driver)

Command	Description	Command Format	Sample, with Output After [Enter]
drv1	Sets the valve mode (MODE)	x = 1-5 Where x equals: 1drv1 Sets MODE to Timed 2drv1 Sets MODE to External / Purge 3drv1 Sets MODE to Continuous 5drv1 Reads the current mode	1drv1 [Enter] Driver 1: TIME 2drv1 [Enter] Driver 1: PURG 3drv1 [Enter] Driver 1: CONT 5drv1 [Enter] Driver 1: CONT
dcn1	Sets the valve dispense count (COUNT)	xxxxxdcn1 Where x equals: >00001-65535 counts (DCNT)	00001dcn1 [Enter] Dispense Count (DCNT) = 00001
ont1	Sets the valve ON time (PULSE)	xxxx.xxont1 Where xxxx.xx = ON time in ms NOTE: Time is entered as an ON / OFF time where ON = PULSE and CYCLE = ON + OFF. ON and OFF times should be adjusted together to preserve the CYCLE time setting.	0001.45ont1 [Enter] Time Set To = 0001.45 ms
oft1	Sets the valve OFF time (CYCLE) (Where OFF time + ON Time = CYCLE)	xxxx.xxoft1 Where xxxx.xx = OFF time in ms NOTE: Time is entered as an ON / OFF time where ON = PULSE and CYCLE = ON + OFF. ON and OFF times should be adjusted together to preserve the CYCLE time setting.	0005.00oft1 [Enter] Time Set To = 0005.00 ms
rdr1	Returns the valve status	rdr1	rdr1 [Enter] Power: OFF MODE : TIME PULSE: 0002.00ms CYCLE: 0004.00ms COUNT: 00001 Profile Rise.: 6 Profile Fall.: 6 Stroke.....: 0070 Up Ramp Time.: 000.500ms Dwn Ramp Time: 000.250ms Close Voltage: 090 Numb Shots...: 0000398174 Power Mode: ON at boot up

Continued on next page

Appendix A, Remotely Operating the Controller (continued)

Valve (Driver) (continued)

Command	Description	Command Format	Sample, with Output After [Enter]
cycl	Cycles the valve (mimics the CYCLE icon on the touchscreen)	0cycl Cycle OFF 1cycl Cycle ON NOTE: Each Cycle ON command must be followed by a Cycle OFF command.	1cycl [Enter] Cycle: ON 0cycl [Enter] Cycle: OFF
dpwr	Sets the valve power control	0dpwr Valve power OFF 1dpwr Valve power ON	0dpwr [Enter] Valve Driver Power: OFF 1dpwr [Enter] Valve Driver Power: ON
plok	Sets the duration of the PULSE OK Time I/O pin output	AAAplok Where AAA = PULSE OK Time in ms	050plok [Enter] Pulse OK Time Adj:050
drvo	Sets the driver configuration at power up to ON	drvo	drvo [Enter] Power Mode: ON at boot up
drvf	Sets the driver configuration at power up to OFF (default)	drvf	drvf [Enter] Power Mode: Default
sdr1	Sets OPEN, CLOSE, and COUNT in one command	xxxx.xx,yyyy.yy,zzzzzsdr1 Where xxxx.xx is the OPEN time (in ms) Where yyyy.yy is the CLOSE time (in ms) Where zzzzz is COUNT	0002.23,0005.77,00535sdr1 [Enter] 0002.23,0005.77,00535

Appendix A, Remotely Operating the Controller (continued)

Temperature

Command	Description	Command Format	Sample, with Output After [Enter]
chtr	Sets the heater mode	xchtr Where x equals: 0chtr Disables the corresponding channel 1chtr Enables the corresponding channel 2chtr Reads back the status (enabled / disabled) of the corresponding channel 3chtr Sets the heater mode to remote	0chtr [Enter] Heater: OFF 1chtr [Enter] Heater: ON 2chtr [Enter] Heater: ON 3chtr [Enter] Heater: REM
stmp	Sets the heater temperature setpoint	DDD.Dstmp Where DDD.D = temperature setting in degrees C NOTE: Temperature must be entered in °C.	045.9stmp [Enter] Set Temperature = 045.9C
rhtr	Returns the heater status	rhtr	rhtr [Enter] MODE = OFF SET = 055.3C ACT = 031.5C STACK = 031.1C
trng	Sets the adjustable temperature range limit for I/O 1 pin 5 (Status of Temperature)	DD.Dtrng Where DD.D = temperature range limit for pin 5 (0.5–12.0° C) NOTES: • Default is 06.0C (6° C). • Temperature must be entered in °C.	06.0trng [Enter] Temp Range = 06.0C
rrng	Reads the adjustable temperature range limit for I/O 1 pin 5 (Status of Temperature)	rrng	rrng [Enter] Temp Range = 06.0C

Appendix A, Remotely Operating the Controller (continued)

Profile

Command	Description	Command Format	Sample, with Output After [Enter]
rzpr	Sets the close (rise) profile of the valve	Xrzpr Where X = selections 1–6	6rzpr [Enter] Profile: 6
flpr	Sets the open (fall) profile of the valve	Xflpr Where X = selections 1–6	6flpr [Enter] Profile: 6
strk	Sets the stroke of the valve	AAAstrk Where AAA = stroke adjustment in volts NOTE: Only valid in Ramp mode.	075strk [Enter] Stroke Adjusted: 075
volp	Sets the close voltage of the valve	AAAvolp Where AAA = close voltage NOTE: Only valid in Ramp mode.	095volp [Enter] Voltage Adjust: 095
clst	Sets the close (rise) time of the valve	AAAAclst Where AAAA = close time in μ s NOTE: Only valid in Ramp mode.	0300clst [Enter] Profile Time Adj: 0300
opnt	Sets the open (fall) time of the valve	AAAAopen Where AAAA = open time in μ s NOTE: Only valid in Ramp mode.	0220opnt [Enter] Profile Time Adj: 0220

Configuration

Command	Description	Command Format	Sample, with Output After [Enter]
cfg1	Configures I/O 1 pin 6 for Error Reset (default), Valve Power On/Off Control, or Valve Purge Control NOTE: If pin 6 is set to Valve Power On / Off Control, the drvf command must be used. Refer to drvf under “Valve (Driver)” on page 60.	0cfg1 Sets pin 6 to Error Reset (default)	0cfg1 [Enter] Input Configuration... Pin 6 = Error Reset Pin 12 = Temperature Off 1cfg1 [Enter] Input Configuration... Pin 6 = Valve Power On/Off Control Pin 12 = Temperature Off 2cfg1 [Enter] Input Configuration... Pin 6 = Valve Purge Control Pin 12 = Temperature Off
		1cfg1 Sets pin 6 to Valve Power On/Off Control	
		2cfg1 Sets pin 6 to Valve Purge Control	
cfg2	Configures I/O 1 pin 12 for Temperature Off (default), Valve Power On/Off Control, or Valve Purge Control NOTE: If pin 12 is set to Valve Power On / Off Control, the drvf command must be used. Refer to drvf under “Valve (Driver)” on page 60.	0cfg2 Sets pin 12 to Temperature Off (default)	0cfg2 [Enter] Input Configuration... Pin 6 = Error Reset Pin 12 = Temperature Off 1cfg2 [Enter] Input Configuration... Pin 6 = Error Reset Pin 12 = Valve Power On/Off Control 2cfg2 [Enter] Input Configuration... Pin 6 = Error Reset Pin 12 = Valve Purge Control
		1cfg2 Sets pin 12 to Valve Power On/Off Control	
		2cfg2 Sets pin 12 to Valve Purge Control	

Continued on next page

Appendix A, Remotely Operating the Controller (continued)

Configuration (continued)

Command	Description	Command Format	Sample, with Output After [Enter]
rcfg	Reads the current configuration settings for I/O 1 pins 6 and 12	rcfg	rcfg [Enter] Input Configuration... Pin 6 = Error Reset Pin 12 = Valve Purge Control
dioi	Sets the following pins to an internally provided (non-isolated) signal: <ul style="list-style-type: none"> I/O 1 pin 4 (GND) and pin 15 (Ext 24 Volts) I/O 2 pins 17, 19, and 21 (DSUB_GND) and pin 25 (+25). NOTE: Use this setting to configure an Ext 24 Volt pin as a courtesy power supply.	dioi	dioi [Enter] Voltage = Internal
dioe	Sets the following pins to an externally provided (non-isolated) signal: <ul style="list-style-type: none"> I/O 1 pin 4 (GND) and pin 15 (Ext 24 Volts) I/O 2 pins 17, 19, and 21 (DSUB_GND) and pin 25 (+25). NOTE: Use this setting to configure an Ext 24 Volts pin as an externally provided source for the optically isolated inputs / outputs.	dioe	dioe [Enter] Voltage = External
rly	Reads the current settings (as set using the dioi and dioe commands) for the following pins: <ul style="list-style-type: none"> I/O 1 pin 4 (GND) and pin 15 (Ext 24 Volts) I/O 2 pins 17, 19, and 21 (DSUB_GND) and pin 25 (+25). 	rly	rly [Enter] Voltage = Internal
baud	Sets the bits per second (bps) of this interface.	xbaud Where x equals: 0baud Set baud rate to 115200 bps 1baud Set baud rate to 57600 bps 2baud Set baud rate to 38400 bps 3baud Set baud rate to 19200 bps 4baud Set baud rate to 9600 bps (default)	0baud [Enter] Communications will be interrupted. Changing Baud Rate to: 9600 NOTE: The usual <3 will be transmitted at the new baud rate, so it may not be correctly received.

Appendix A, Remotely Operating the Controller (continued)

Other


Command	Description	Command Format	Sample, with Output After [Enter]
info	Displays the controller and valve information	info	info [Enter] PICO Touch: 01.05 PCB Serial Number: 12345678 Serial Number: 123456 Model Number: 7361217 Hardware Version: 04 Valve Serial Number: 123456 Valve FW Rev: 01.01 Valve PCB Rev: 02 Valve Type: HD-Actuator
ralr	Retrieves the last 40 (0-39) alarm conditions that occurred; includes time and alarm name	ralr	ralr [Enter] Current Error #: 30 Code # 00 Time: 00005 Code: Piezo Driver Fault Code # 01 Time: 00005 Code: Piezo Driver Fault : : Code # 39 Time: 00005 Code: Piezo Driver Fault
stat	Returns the system status (active alarms) as a bitmap or SYS OK when there are no alarms	stat	stat [Enter] Alarm:0x90 stat [Enter] SYS OK
arst	Resets a currently active alarm	arst	arst [Enter]

Appendix B, *Touch* XP Controller

The PICO® *Touch*™ XP (Extreme Precision) controller and PICO *Pulse*® XP jet valve apply the most exact fluid deposits, regardless of external factors that can affect deposit definition and repeatability. The system's closed-loop capability monitors variables such as temperature and internal tolerances, allowing self-adjustment to minimize the production downtime needed to recalibrate the jetting system when external factors cause slight variations in repeatability. This is especially important for applications that require extremely precise, repeatable micro-deposits where strict tolerances or deposit definition must be met. The PICO *Touch* XP controller allows users to program stroke in microns for the finest parameter adjustments possible.

The differences between the *Touch* XP controller and the standard *Touch* controller include the following:

- A 5-pin VALVE power cable instead of a 3-pin cable
- A 6-pin VALVE communication cable instead of a 5-pin cable
- On the RAMP screen, STROKE is adjusted in microns (instead of the total percent of CLOSE VOLTS); the micron setting affects the tappet displacement. The ability to minutely adjust the tappet displacement contributes to the high deposit repeatability provided by the *Touch* XP controller.
- On the *Touch* XP VALVE screen only, the frequency indication displays under the cycle time.

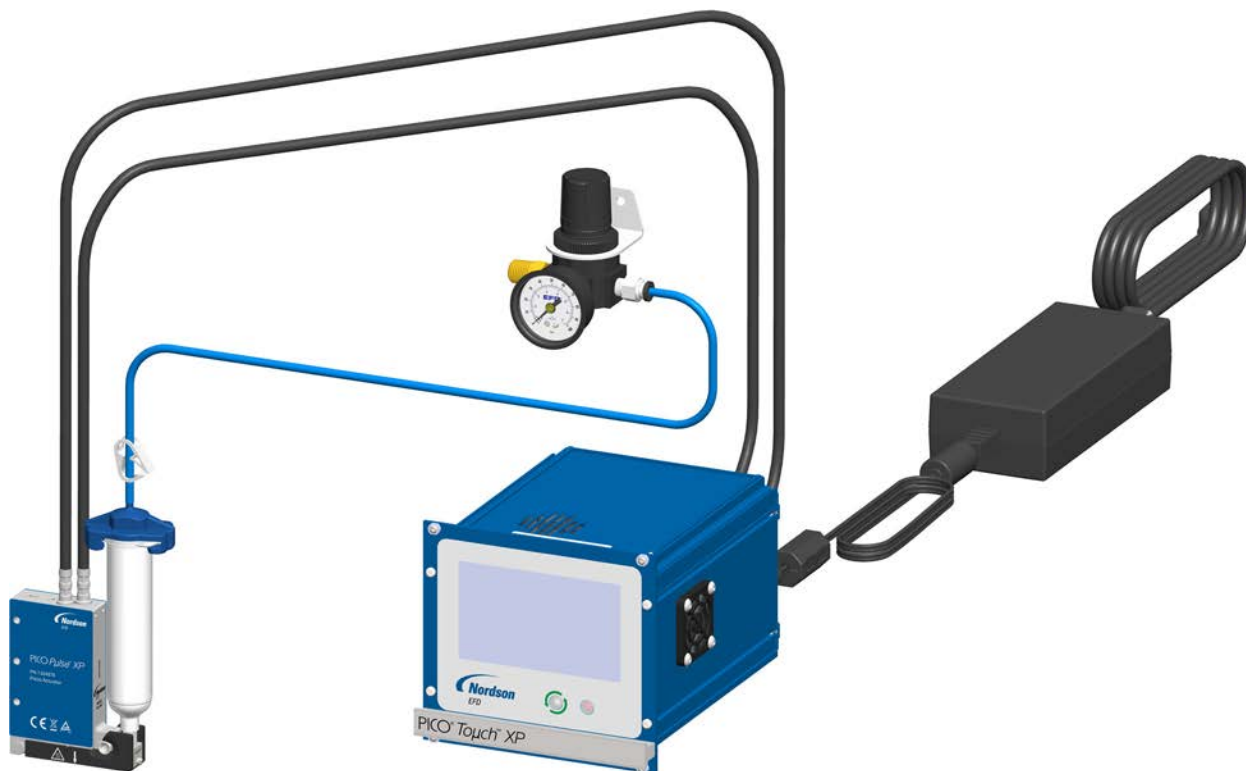


PICO Touch XP controller and Pulse XP valve


Appendix B, Touch XP Controller (continued)

Touch XP Operating Features

Touch XP Front Panel

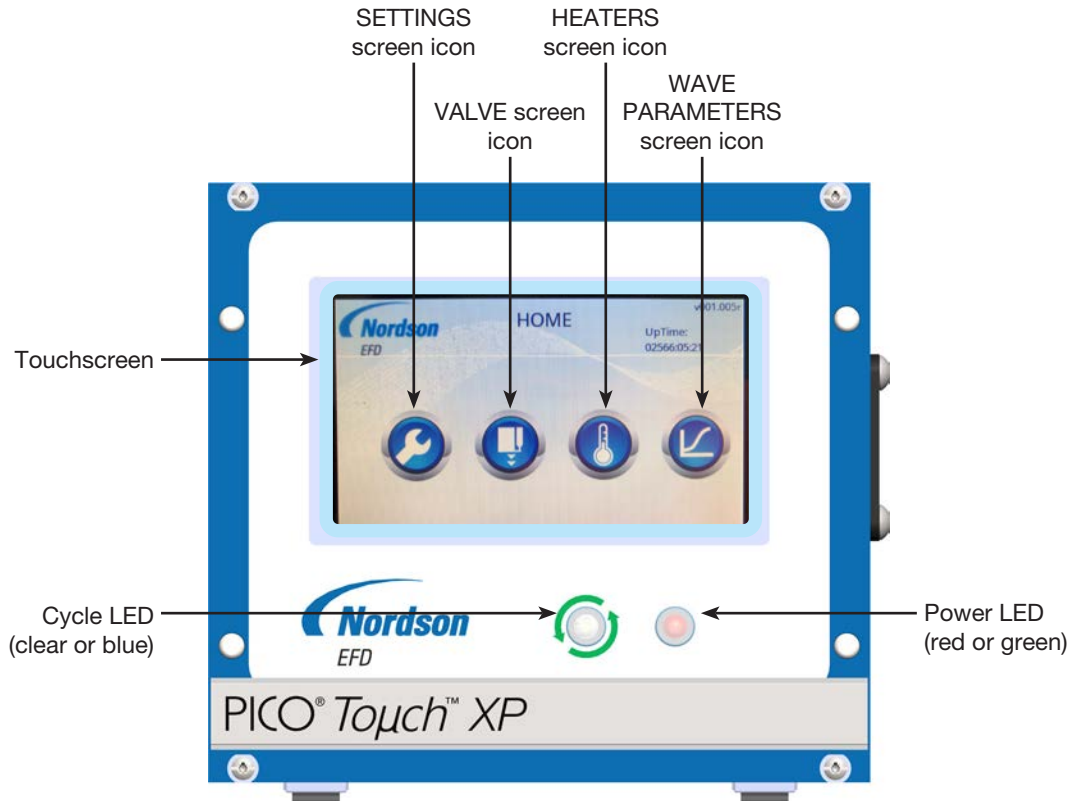

Touch XP Back Panel

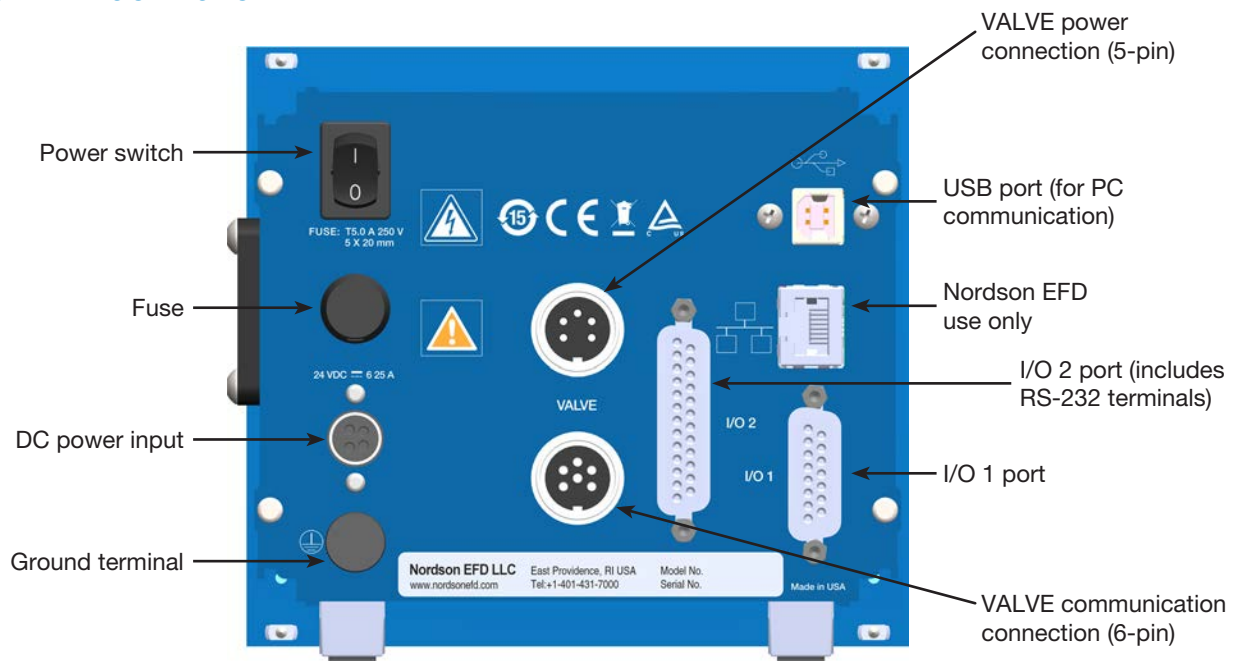


Appendix B, Touch XP Controller (continued)

Touch XP VALVE Screen

The VALVE screen is used to change the operating mode, enter valve dispensing parameters, and control valve power. On the Touch XP VALVE screen only, the frequency indication displays under the cycle time.

NOTE: For an explanation of all elements on the VALVE screen, refer to “VALVE Screen (Standard Touch Controller)” on page 24.

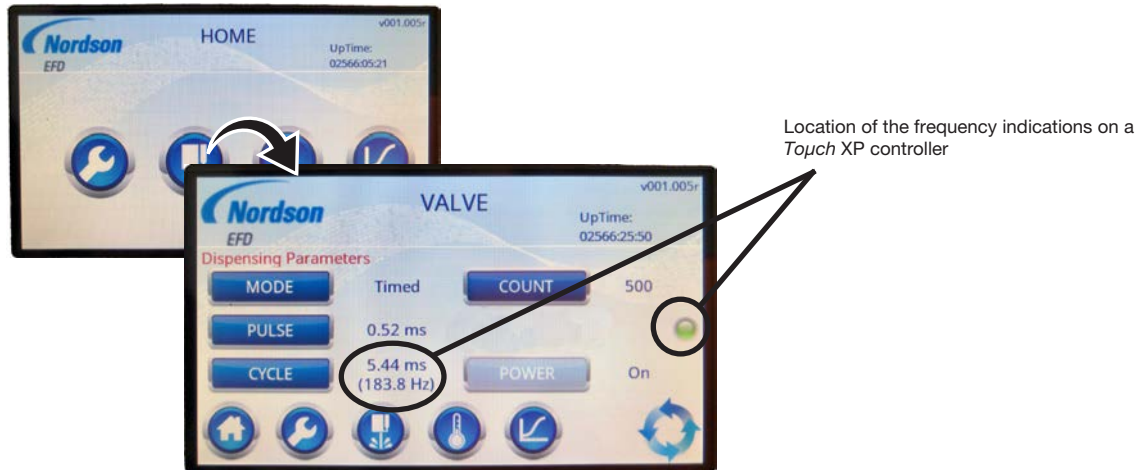

Appendix B, Touch XP Controller (continued)

Touch XP WAVE PARAMETERS Screen


The WAVE PARAMETERS screen is used to adjust the parameters of a wave profile in order to fine-tune the resulting material deposit. The graph on the screen provides a visual representation of a wave profile.

NOTES:

- On a Touch XP controller, the STROKE value is set in microns.
- This screen is accessed in two ways: (1) by pressing the Wave Profile icon (📈) on the HOME screen or (2) by pressing the Wave Profile icon (📈) on the WAVE PROFILE screen.
- Wave profiles are enabled on the WAVE PROFILE screen. Refer to “WAVE PROFILE Screen” on page 27.



WAVE PARAMETERS screen on the Touch XP controller (STROKE units set in microns)

Button	Description
CLOSE VOLTS	Sets the voltage to close the valve. The higher the voltage, the greater the sealing force applied. Minimum: 20 V Maximum: 130 V
STROKE	Sets the tappet displacement in microns. Minimum: 15 µm Maximum: 165 µm NOTE: This parameter differs on the standard Touch controller. Refer to “WAVE PARAMETERS Screen (Standard Touch Controller)” on page 28.
⚠ CAUTION	
For fluids with a viscosity lower than 1000 cP, do not use aggressively low Open / Close settings (i.e., settings lower than 250 µs / 0.25 ms); doing so can damage the valve. Nordson EFD recommends starting with higher Open / Close settings (250 µs / 0.25 ms or greater), then decreasing in small increments based on the dispensing results.	
OPEN	Sets how fast the valve opens. Minimum: 150 µs (0.15 ms) Maximum: 500 µs (0.5 ms)
CLOSE	Sets how fast the valve closes. Minimum: 100 µs (0.10 ms) Maximum: 2000 µs (2.0 ms)
	When pressed on this screen, the Wave Profile icon opens the WAVE PROFILE screen, on which you can select a different wave profile. Refer to “WAVE PROFILE Screen” on page 27 for details.

Appendix B, Touch XP Controller (continued)

Routine Startup for a Touch XP and Pulse XP System

1. Switch the Touch controller power ON.
NOTE: Upon power on, the system automatically calibrates the Pulse XP valve.
2. If the process requires a heated valve, press the HEATERS icon and then press ON to switch the HEATERS mode to On.
NOTE: Upon reboot, the controller remembers the last selected HEATERS mode.



Switching on heater control

3. Press the VALVE icon and then MODE until the touchscreen shows the desired operating mode.



Placing a Touch XP system in the Continuous mode

Appendix B, Touch XP Controller (continued)

Adjusting a Wave Profile on the Touch XP Controller

The WAVE PARAMETERS screen includes four adjustable settings that can be used to fine-tune the enabled Wave Profile.

NOTE: Custom profiles created before February 2020 cannot be edited.

- On the HOME screen, press the WAVE PROFILE icon (📈).
The WAVE PARAMETERS screen for the enabled wave profile opens.
NOTE: To determine which wave profile is active, or to change the selected wave profile, refer to “Selecting a Wave Profile” on page 37.
- On the WAVE PARAMETERS screen, make the desired adjustments to the following parameters:
 - CLOSE VOLTS:** The voltage applied to close the valve. The higher the voltage, the greater the sealing force applied.
Minimum: 20 V
Maximum: 130 V
 - STROKE:** The tappet displacement in microns.
Minimum: 0.15 μm
Maximum: 165 μm



Adjusting the STROKE setting of the enabled wave profile (Touch XP controller)

CAUTION

For fluids with a viscosity lower than 1000 cP, do not use aggressively low Open / Close settings (i.e., settings lower than 250 μs / 0.25 ms); doing so can damage the valve. Nordson EFD recommends starting with higher Open / Close settings (250 μs / 0.25 ms or greater), then decreasing in small increments based on the dispensing results.

- OPEN:** How fast the valve opens.
Minimum: 150 μs (0.15 ms)
Maximum: 500 μs (0.5 ms)
- CLOSE:** How fast the valve closes.
Minimum: 100 μs (0.10 ms)
Maximum: 2000 μs (2.0 ms)

NOTE: Minimum limits are valve-specific and will be updated by the controller if they are exceeded.

- Press HOME to save the settings and return to the HOME screen.

Appendix B, Touch XP Controller (continued)

Alarm Code Troubleshooting on the Touch XP Controller

When an alarm occurs, the screen title bar blinks red and an alarm window appears. Refer to the table below for a list of system alarms unique to the Touch XP controller.

NOTES:

- Refer to “Clearing Alarms” on page 46 for additional information.
- The Touch XP controller also includes the alarms shown under “Alarm Code Troubleshooting” on page 49.



LCD Code	Internal Code	Alarm Name	Related to...	Possible Cause: Corrective Action(s)
b17	010	Missing Valve Response	Valve cables	The controller is missing a reply communication from the valve: <ul style="list-style-type: none"> • Check the valve cables for interference (EMI). • Ensure that the valve cables are properly connected.
b17	011	Voltage Curve Mismatch	Programming	Custom wave profile outside of allowed operating parameters: <ul style="list-style-type: none"> • Correct the programming parameters of the custom wave profile.
b17	012	Extra Valve Response	All	Controller has received more communication signals from the valve than expected: <ul style="list-style-type: none"> • Check the valve cables for interference (EMI).
b17	013	Stroke Limitation Error	<ul style="list-style-type: none"> • Settings • Fluid body assembly condition • Valve actuator condition 	Stroke setting too high for other paired settings: <ul style="list-style-type: none"> • If using a PULSE time that is close to the OPEN time, try a slightly longer PULSE time. This will allow the valve time to fully open before it tries to close. • Ensure that the fluid body assembly is clean and free of deposits or residues. • Ensure that the valve actuator assembly is clean and free of deposits or residues. • Ensure that the tappet O-ring of the fluid body assembly is properly lubricated. • Test the operation with a different fluid body assembly to see if the alarm repeats. If the alarm persists, return the valve to Nordson EFD or to the vendor for service.

Continued on next page

Appendix B, Touch XP Controller (continued)

Alarm Code Troubleshooting on the Touch XP Controller (continued)

LCD Code	Internal Code	Alarm Name	Related to...	Possible Cause: Corrective Action(s)
b17	014	Valve Response Mismatch	All	Controller has received more communication signals from the valve than expected: <ul style="list-style-type: none"> Check the valve cables for interference (EMI).
b17	015	None	n/a	n/a
b17	016	Valve Hall Null Invalid	Valve	Return the valve to Nordson EFD or to the vendor for service.
b17	017	None	n/a	n/a
b17	018	Valve Hall Scale Invalid	Valve	Return the valve to Nordson EFD or to the vendor for service.
b17	019	None	n/a	n/a
b17	020	FA Calibration Error	<ul style="list-style-type: none"> Fluid body assembly condition Settings Mechanical operation 	<p>Issue with fluid body assembly condition:</p> <ul style="list-style-type: none"> Ensure that the fluid body assembly is clean and free of deposits or residues. Ensure that the tappet O-ring of the fluid body assembly is properly lubricated. Test the operation with a different fluid body assembly to see if the alarm repeats. If the alarm persists, return the valve to Nordson EFD or to the vendor for service. <p>CLOSE VOLTS setting too low:</p> <ul style="list-style-type: none"> Adjust the CLOSE VOLTS setting. <p>Fluid body assembly not installed:</p> <ul style="list-style-type: none"> Install the fluid body assembly. <p>Fluid assembly latch not closed fully:</p> <ul style="list-style-type: none"> Ensure that the heater body that houses the fluid body assembly is fully closed.
b17	021	Zero Ramp Time	Settings	Return the valve to Nordson EFD or to the vendor for service.
b17	022	Extra Valve Comm Data	Valve	Return the valve to Nordson EFD or to the vendor for service.

Appendix B, *Touch* XP Controller (continued)

Touch XP Controller Part Number

NOTE: Power cords are purchased separately.

Part #	Description	Supported Valves
7364877	PICO <i>Touch</i> XP controller	<ul style="list-style-type: none"> • PICO <i>Pulse</i> XP • PICO <i>Pulse</i> XP Contact
7014871	Kit, power cord, American plug	n/a
7014872	Kit, power cord, European plug	n/a



Touch XP Valve Extension Cables


NOTE: The *Touch* XP controller requires different extension cables from the standard *Touch* controller. For standard *Touch* controller extension cables, refer to “Valve Extension Cables (Standard *Touch* Controller)” on page 47.

CAUTION

Risk of equipment damage. The *Touch* XP controller does not accept extension cables designed for the standard *Touch* controller.

CAUTION

Do not exceed the maximum extension cable length of 9 m (30 ft). Doing so will adversely affect communication between the valve and the controller.

Item	Part #	Description
	7365311	2 m (6.6 ft) valve extension cable set,* <i>Touch</i> XP
	7365312	6 m (19.7 ft) valve extension cable set,* <i>Touch</i> XP
	7365313	9 m (29.5 ft) valve extension cable set,* <i>Touch</i> XP
	7365314	12 m (39.4 ft) valve extension cable set,* <i>Touch</i> XP
*Includes one power cable and one communication cable		

Notes

NORDSON EFD ONE YEAR LIMITED WARRANTY

This Nordson EFD product is warranted for one year from the date of purchase to be free from defects in material and workmanship (but not against damage caused by misuse, abrasion, corrosion, negligence, accident, faulty installation, or by dispensing material incompatible with equipment) when the equipment is installed and operated in accordance with factory recommendations and instructions.

Nordson EFD will repair or replace free of charge any defective part upon authorized return of the part prepaid to our factory during the warranty period. The only exceptions are those parts which normally wear and must be replaced routinely, such as, but not limited to, valve diaphragms, seals, valve heads, needles, and nozzles.

In no event shall any liability or obligation of Nordson EFD arising from this warranty exceed the purchase price of the equipment.

Before operation, the user shall determine the suitability of this product for its intended use, and the user assumes all risk and liability whatsoever in connection therewith. Nordson EFD makes no warranty of merchantability or fitness for a particular purpose. In no event shall Nordson EFD be liable for incidental or consequential damages.

This warranty is valid only when oil-free, clean, dry, filtered air is used, where applicable.



For Nordson EFD sales and service in over 40 countries, contact Nordson EFD or go to www.nordsonefd.com.

Global

800-556-3484; +1-401-431-7000
info@nordsonefd.com

Europe

00800 7001 7001
infoefd.europe@nordsonefd.com

Asia

China: +86 (21) 3866 9006; china@nordsonefd.com
India: +91 80 4021 3600; india@nordsonefd.com
Japan: +81 03 5762 2760; japan@nordsonefd.com
Korea: +82-31-736-8321; korea@nordsonefd.com
SEAsia: +65 6796 9522; sin-mal@nordsonefd.com

The Wave Design is a trademark of Nordson Corporation.
©2023 Nordson Corporation 7361505 v121123