

# ValveMate 7197PCP-2K Controller

## Operating Manual



Electronic pdf files of Nordson EFD manuals are also available at [www.nordsonefd.com](http://www.nordsonefd.com)



You have selected a reliable, high-quality dispensing system from Nordson EFD, the world leader in fluid dispensing. The ValveMate™ 7197PCP-2K controller is designed specifically for industrial dispensing and will provide you with years of trouble-free, productive service.

This manual will help you maximize the usefulness of your ValveMate 7197PCP-2K controller.

Please spend a few minutes to become familiar with the controls and features. Follow our recommended testing procedures. Review the helpful information we have included, which is based on more than 50 years of industrial dispensing experience.

Most questions you will have are answered in this manual. However, if you need assistance, please do not hesitate to contact EFD or your authorized EFD distributor. Detailed contact information is provided on the last page of this document.

## The Nordson EFD Pledge

Thank You!

You have just purchased the world's finest precision dispensing equipment.

I want you to know that all of us at Nordson EFD value your business and will do everything in our power to make you a satisfied customer.

If at any time you are not fully satisfied with our equipment or the support provided by your Nordson EFD Product Application Specialist, please contact me personally at 800.556.3484 (US), 401.431.7000 (outside US), or [Ferran.Ayala@nordsonefd.com](mailto:Ferran.Ayala@nordsonefd.com).

I guarantee that we will resolve any problems to your satisfaction.

Thanks again for choosing Nordson EFD.

*Ferran*

Ferran Ayala, Vice President

# Contents

Contents .....	3
Introduction .....	5
Nordson EFD Product Safety Statement .....	6
Halogenated Hydrocarbon Solvent Hazards .....	7
High Pressure Fluids .....	7
Qualified Personnel .....	7
Intended Use .....	8
Regulations and Approvals .....	8
Personal Safety .....	8
Fire Safety .....	9
Preventive Maintenance .....	9
Important Disposable Component Safety Information .....	10
Action in the Event of a Malfunction .....	10
Disposal .....	10
Specifications .....	11
Operating Features .....	12
Installation .....	13
Unpack the System Components .....	13
Install the 797PCP-2K Pumps .....	14
Install the Ancillary System Components .....	14
Connect the ESTOP Jumper .....	14
Connect the Foot Pedal .....	14
Connect Power .....	15
Connect the Pump Motor Cables .....	15
Connect a Purge Initiate Signal (Optional) .....	16
Make the Ethernet Connection (Optional) .....	16
Purge the Pumps .....	17
Installation Example .....	18
Programming .....	19
Navigation .....	19
Entering Values on the Touchscreen .....	20
Variable Table .....	20
Status Indications .....	21
Switching Pump Screens .....	22
Flowchart of Controller Screens (ValveMate 7197PCP-2K) .....	23
Flowchart of Controller Screens (7197PCP-2K Web Application) .....	24
Adjusting the Purge Speed Setting .....	25
Creating Programs .....	26
Line Programs .....	28
Volume Programs .....	29
Weight Programs .....	30
Teach Programs .....	31
Timed Programs .....	32
Saving a Program to the Program Library (Save Screen) .....	33
Opening a Saved Program (Load Screen) .....	34
Locking or Unlocking the System (Touchscreen Only) .....	35
Resetting the Password .....	37
Setting the Language .....	38
Viewing the System Information .....	39
Defining the Controller Network Settings .....	40

*Continued on next page*

# Contents

Operation.....	41
Routine Startup.....	41
Errors and Emergency Stops (ESTOP) .....	41
Disabling a Pump.....	42
Longterm Shutdown .....	43
Firmware Update.....	43
Part Numbers .....	44
ValveMate 7197PCP-2K Controller .....	44
797PCP-2K Pumps and Pump Motor Cables .....	44
Accessories .....	44
Replacement Parts.....	44
Troubleshooting .....	45
Viewing the Log .....	45
Event Log Feedback Troubleshooting.....	45
General Troubleshooting .....	46
Technical Data.....	47
I/O Port Pin Assignments and Wiring Diagrams .....	47
Sourcing Wiring Diagram for Connecting the Cycle Initiate (Ex_Trig).....	48
Sinking Wiring Diagram for Connecting the Cycle Initiate (Ex_Trig) .....	48
Wiring Diagram for Connecting the Emergency Stop (ESTOP) Circuit .....	48
Wiring Diagrams for Connecting the PURGE Initiate Circuit .....	49
Maximum Motor Speed Based on Viscosity .....	50
Motor Port Pin Assignments.....	51
Appendix A, Changing the IP Address of a Computer.....	52
Appendix B, Example Volume Program.....	54

## Introduction

This manual provides installation, setup, programming, and service information for the ValveMate 7197PCP-2K controller. The ValveMate 7197PCP-2K controller provides precise dispensing control for Nordson EFD 797PCP-2K Series progressive cavity pumps. Refer to the 797PCP-2K operating manual for detailed information on the pump.

The ValveMate 7197PCP-2K controller features an easy-to-use touchscreen interface for quick setup and operation of 797PCP-2K pumps in a two-component (2K) application. This allows you to accurately meter exact ratios of part A and part B materials through Nordson EFD static mixers for better mix quality and bond strength. It also provides highly repeatable dispensing results at  $\pm 1\%$  volumetric.

Dispense programs are created based on the way you want to control material output, including the following:

- By dispense time, in milliseconds
- By material volume, in milliliters
- By material weight, in grams

The controller also includes a Teach feature, which allows you to “teach” the controller the desired dispense time and volume settings.

As with all EFD products, the ValveMate 7197PCP-2K controller has been produced to exacting specifications and thoroughly tested prior to shipment.

To obtain maximum performance from this equipment, read this manual carefully.



# Nordson EFD Product Safety Statement

## **WARNING**

The safety message that follows has a WARNING level hazard.  
Failure to comply could result in death or serious injury.



### **ELECTRIC SHOCK**

Risk of electric shock. Disconnect power before removing covers and / or disconnect, lock out, and tag switches before servicing electrical equipment. If you receive even a slight electrical shock, shut down all equipment immediately. Do not restart the equipment until the problem has been identified and corrected.

## **CAUTION**

The safety messages that follow have a CAUTION level hazard.  
Failure to comply may result in minor or moderate injury.



### **READ MANUAL**

Read manual for proper use of this equipment. Follow all safety instructions. Task- and equipment-specific warnings, cautions, and instructions are included in equipment documentation where appropriate. Make sure these instructions and all other equipment documents are accessible to persons operating or servicing equipment.



### **MAXIMUM AIR PRESSURE**

Unless otherwise noted in the product manual, the maximum air input pressure is 7.0 bar (100 psi). Excessive air input pressure may damage the equipment. Air input pressure is intended to be applied through an external air pressure regulator rated for 0 to 7.0 bar (0 to 100 psi).



### **RELEASE PRESSURE**

Release hydraulic and pneumatic pressure before opening, adjusting, or servicing pressurized systems or components.



### **BURNS**

Hot surfaces! Avoid contact with the hot metal surfaces of heated components. If contact can not be avoided, wear heat-protective gloves and clothing when working around heated equipment. Failure to avoid contact with hot metal surfaces can result in personal injury.

# Nordson EFD Product Safety Statement (continued)

## Halogenated Hydrocarbon Solvent Hazards

Do not use halogenated hydrocarbon solvents in a pressurized system that contains aluminum components. Under pressure, these solvents can react with aluminum and explode, causing injury, death, or property damage. Halogenated hydrocarbon solvents contain one or more of the following elements.

Element	Symbol	Prefix
Fluorine	F	“Fluoro-”
Chlorine	Cl	“Chloro-”
Bromine	Br	“Bromo-”
Iodine	I	“Iodo-”

Check the Safety Data Sheet (SDS) or contact your material supplier for more information. If you must use halogenated hydrocarbon solvents, contact your EFD representative for compatible EFD components.

## High Pressure Fluids

High pressure fluids, unless they are safely contained, are extremely hazardous. Always release fluid pressure before adjusting or servicing high pressure equipment. A jet of high pressure fluid can cut like a knife and cause serious bodily injury, amputation, or death. Fluids penetrating the skin can also cause toxic poisoning.

### **WARNING**

Any injury caused by high pressure liquid can be serious. If you are injured or even suspect an injury:

- Go to an emergency room immediately.
- Tell the doctor that you suspect an injection injury.
- Show the doctor the following note.
- Tell the doctor what kind of material you were dispensing.

### **Medical Alert — Airless Spray Wounds: Note to Physician**

Injection in the skin is a serious traumatic injury. It is important to treat the injury surgically as soon as possible. Do not delay treatment to research toxicity. Toxicity is a concern with some exotic coatings injected directly into the bloodstream.

## Qualified Personnel

Equipment owners are responsible for making sure that EFD equipment is installed, operated, and serviced by qualified personnel. Qualified personnel are those employees or contractors who are trained to safely perform their assigned tasks. They are familiar with all relevant safety rules and regulations and are physically capable of performing their assigned tasks.

# Nordson EFD Product Safety Statement (continued)

## Intended Use

Use of EFD equipment in ways other than those described in the documentation supplied with the equipment may result in injury to persons or damage to property. Some examples of unintended use of equipment include:

- Using incompatible materials.
- Making unauthorized modifications.
- Removing or bypassing safety guards or interlocks.
- Using incompatible or damaged parts.
- Using unapproved auxiliary equipment.
- Operating equipment in excess of maximum ratings.
- Operating equipment in an explosive atmosphere.

## Regulations and Approvals

Make sure all equipment is rated and approved for the environment in which it is used. Any approvals obtained for Nordson EFD equipment will be voided if instructions for installation, operation, and service are not followed. If the equipment is used in a manner not specified by Nordson EFD, the protection provided by the equipment may be impaired.

## Personal Safety

To prevent injury, follow these instructions:

- Do not operate or service equipment unless you are qualified.
- Do not operate equipment unless safety guards, doors, and covers are intact and automatic interlocks are operating properly. Do not bypass or disarm any safety devices.
- Keep clear of moving equipment. Before adjusting or servicing moving equipment, shut off the power supply and wait until the equipment comes to a complete stop. Lock out power and secure the equipment to prevent unexpected movement.
- Make sure spray areas and other work areas are adequately ventilated.
- When using a syringe barrel, always keep the dispensing end of the tip pointing towards the work and away from the body or face. Store syringe barrels with the tip pointing down when they are not in use.
- Obtain and read the Safety Data Sheet (SDS) for all materials used. Follow the manufacturer's instructions for safe handling and use of materials and use recommended personal protection devices.
- Be aware of less-obvious dangers in the workplace that often cannot be completely eliminated, such as hot surfaces, sharp edges, energized electrical circuits, and moving parts that cannot be enclosed or otherwise guarded for practical reasons.
- Know where emergency stop buttons, shutoff valves, and fire extinguishers are located.
- Wear hearing protection to protect against hearing loss that can be caused by exposure to vacuum exhaust port noise over long periods of time.

# Nordson EFD Product Safety Statement (continued)

## Fire Safety

To prevent a fire or explosion, follow these instructions:

- Shut down all equipment immediately if you notice static sparking or arcing. Do not restart the equipment until the cause has been identified and corrected.
- Do not smoke, weld, grind, or use open flames where flammable materials are being used or stored.
- Do not heat materials to temperatures above those recommended by the manufacturer. Make sure heat monitoring and limiting devices are working properly.
- Provide adequate ventilation to prevent dangerous concentrations of volatile particles or vapors. Refer to local codes or the SDS for guidance.
- Do not disconnect live electrical circuits when working with flammable materials. Shut off power at a disconnect switch first to prevent sparking.
- Know where emergency stop buttons, shutoff valves, and fire extinguishers are located.

## Preventive Maintenance

As part of maintaining continuous trouble-free use of this product, Nordson EFD recommends the following simple preventive maintenance checks:

- Periodically inspect tube-to-fitting connections for proper fit. Secure as necessary.
- Check tubing for cracks and contamination. Replace tubing as necessary.
- Check all wiring connections for looseness. Tighten as necessary.
- Clean: If a front panel requires cleaning, use a clean, soft, damp rag with a mild detergent cleaner. DO NOT USE strong solvents (MEK, acetone, THF, etc.) as they will damage the front panel material.
- Maintain: Use only a clean, dry air supply to the unit. The equipment does not require any other regular maintenance.
- Test: Verify the operation of features and the performance of equipment using the appropriate sections of this manual. Return faulty or defective units to Nordson EFD for replacement.
- Use only replacement parts that are designed for use with the original equipment. Contact your Nordson EFD representative for information and advice.

# Nordson EFD Product Safety Statement (continued)

## Important Disposable Component Safety Information

All Nordson EFD disposable components, including syringe barrels, cartridges, pistons, tip caps, end caps, and dispense tips, are precision engineered for one-time use. Attempting to clean and re-use components will compromise dispensing accuracy and may increase the risk of personal injury.

Always wear appropriate protective equipment and clothing suitable for your dispensing application and adhere to the following guidelines:

- Do not heat syringe barrels or cartridges to a temperature greater than 38° C (100° F).
- Dispose of components according to local regulations after one-time use.
- Do not clean components with strong solvents (MEK, acetone, THF, etc.).
- Clean cartridge retainer systems and barrel loaders with mild detergents only.
- To prevent fluid waste, use Nordson EFD SmoothFlow™ pistons.

## Action in the Event of a Malfunction

If a system or any equipment in a system malfunctions, shut off the system immediately and perform the following steps:

1. Disconnect and lock out system electrical power. If using hydraulic and pneumatic shutoff valves, close and relieve pressure.
2. For Nordson EFD air-powered dispensers, remove the syringe barrel from the adapter assembly. For Nordson EFD electro-mechanical dispensers, slowly unscrew the barrel retainer and remove the barrel from the actuator.
3. Identify the reason for the malfunction and correct it before restarting the system.

## Disposal

Dispose of equipment and materials used in operation and servicing according to local codes.

# Specifications

**NOTE:** Specifications and technical details are subject to change without prior notification.

Item	Specification
Cabinet size	21.2W x 10.8H x 17.3D cm (8.33W x 4.27H x 6.82D")
Weight	1.8 kg (4.0 lb)
Rotor speed	10–150 RPM
Time range	0.001–600,000 ms (1 s to 10 min)
Electrical power input	24 VDC ( $\pm 2\%$ ), 3.75 Amp maximum
Feedback circuits	Electronic switch, 24 VDC, 100 mA maximum
Cycle initiate	Foot pedal
Ambient operating conditions	Temperature: 5–45° C (41–113° F) Humidity: 85% RH at 30° C, 40% at 45° C non-condensing Height above sea level: 2,000 meters max (6,562 feet)
Product classification	Installation Category II Pollution Degree 2
Approvals	CE, UKCA, TÜV, RoHS, China RoHS, WEEE

## RoHS标准相关声明 (China RoHS Hazardous Material Declaration)



产品名称 Part Name	有害物质及元素 Toxic or Hazardous Substances and Elements					
	铅 Lead (Pb)	汞 Mercury (Hg)	镉 Cadmium (Cd)	六价铬 Hexavalent Chromium (Cr6)	多溴联苯 Polybrominated Biphenyls (PBB)	多溴联苯醚 Polybrominated Diphenyl Ethers (PBDE)
外部接口 External Electrical Connectors	<b>X</b>	<b>0</b>	<b>0</b>	<b>0</b>	<b>0</b>	<b>0</b>
<p><b>0:</b> 表示该产品所含有的危险成分或有害物质含量依照EIP-A, EIP-B, EIP-C 的标准低于SJ/T11363-2006 限定要求。Indicates that this toxic or hazardous substance contained in all the homogeneous materials for this part, according to EIP-A, EIP-B, EIP-C is below the limit requirement in SJ/T11363-2006.</p> <p><b>X:</b> 表示该产品所含有的危险成分或有害物质含量依照EIP-A, EIP-B, EIP-C 的标准高于SJ/T11363-2006 限定要求。Indicates that this toxic or hazardous substance contained in all the homogeneous materials for this part, according to EIP-A, EIP-B, EIP-C is above the limit requirement in SJ/T11363-2006.</p>						

## WEEE Directive



This equipment is regulated by the European Union under WEEE Directive (2012/19/EU). Refer to [www.nordsonefd.com/WEEE](http://www.nordsonefd.com/WEEE) for information about how to properly dispose of this equipment.

# Operating Features

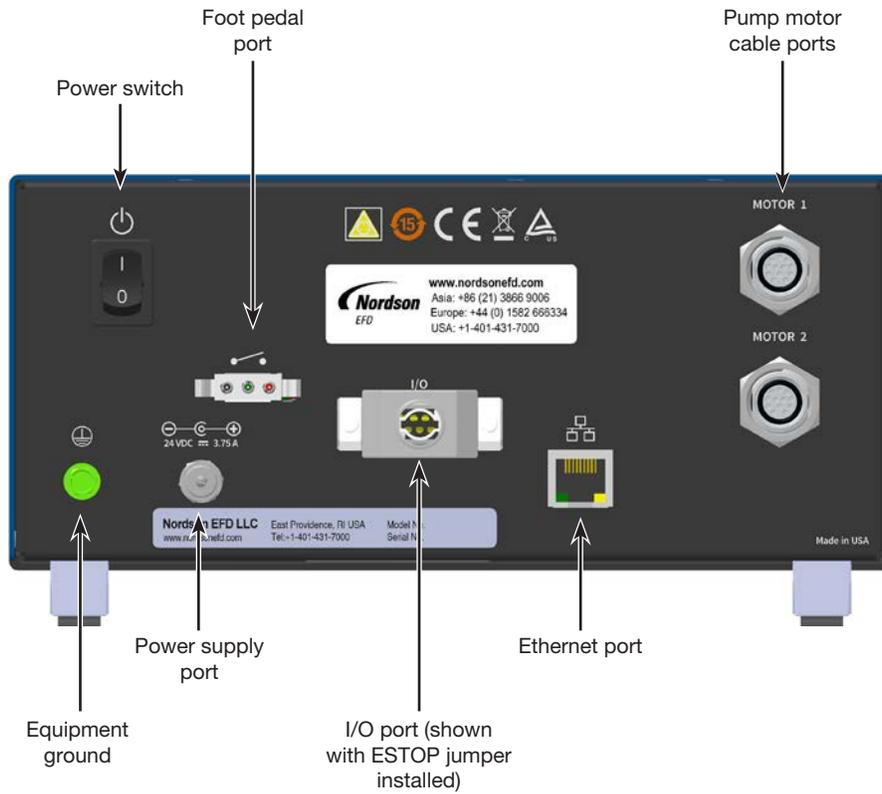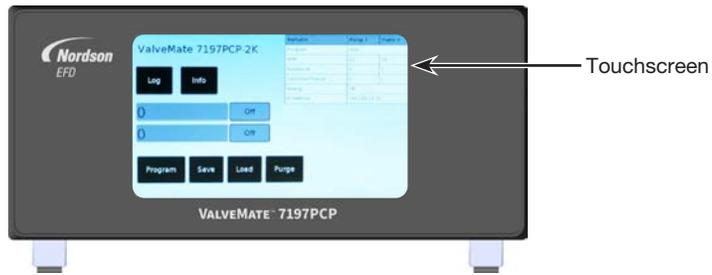

## Installation

Use this section in tandem with the quick start guide and any other system component operating manuals to install all components of the system.

### Unpack the System Components



- 1 ValveMate 7197PCP-2K controller
- 2 Power cord and power supply, 24V, 90 W (ordered separately)
- 3 Foot pedal (P/N 7014865)
- 4 ESTOP jumper, DB-15

(Not shown)

797PCP-2K pumps (ordered separately)

797PCP-2K pump motor cables (ordered separately)

Quick start guide

## Installation (continued)

### Install the 797PCP-2K Pumps

For pump installation instructions, refer to the 797PCP-2K manual.

### Install the Ancillary System Components

**NOTE:** Refer to “Installation Example” on page 18 for system layout images of typical installations.

Install any system components (other than the controller and pumps) that will comprise the complete dispensing system. For example, if you are using a fluid reservoir, position and install all the fluid reservoir components. For all ancillary components, refer to the quick start guide and / or operating manual provided with those components for installation and setup instructions.

### Connect the ESTOP Jumper

Connect the supplied ESTOP jumper to the I/O port on the back on the controller.

This jumper creates an ESTOP circuit. The pump will dispense only if the ESTOP pins (Estop\_H and Estop\_L) are connected. Refer to “I/O Port Pin Assignments and Wiring Diagrams” on page 47 for wiring details.

### Connect the Foot Pedal

Connect the foot pedal to the food pedal port on the back of the controller.

**NOTE:** An alternative to the foot pedal is a 24 VDC dispense cycle initiate signal connected to the I/O port. To use this option, you will need to remove the ESTOP jumper and then make the correct connections to the I/O port. Nordson EFD recommends using a breakout board and cable to connect wiring to the I/O port. Refer to “I/O Port Pin Assignments and Wiring Diagrams” on page 47 for wiring details. Contact your Nordson EFD representative for assistance in obtaining a breakout board and cable.



## Installation (continued)

### Connect Power


#### NOTES:

- Use only the power cord purchased with the unit.
  - Ensure that the power source is located near the equipment and is easily accessible.
  - Use only on a circuit with a fuse or circuit breaker that is 20 A or less.
1. Connect the power cord to the back of each controller and to your local power source.
  2. Connect a 16 AWG (1.3 mm) wire to the chassis grounding screw on the rear of the chassis using a toothed grounding lug. The wire must have green insulation with a yellow stripe or must be noninsulated (bare).
  3. Attach the opposite end of the wire to a permanent earth ground using toothed washers or a toothed lug.



### Connect the Pump Motor Cables

Connect the 797PCP-2K pump motor cables to the MOTOR 1 and MOTOR 2 ports on the controller.

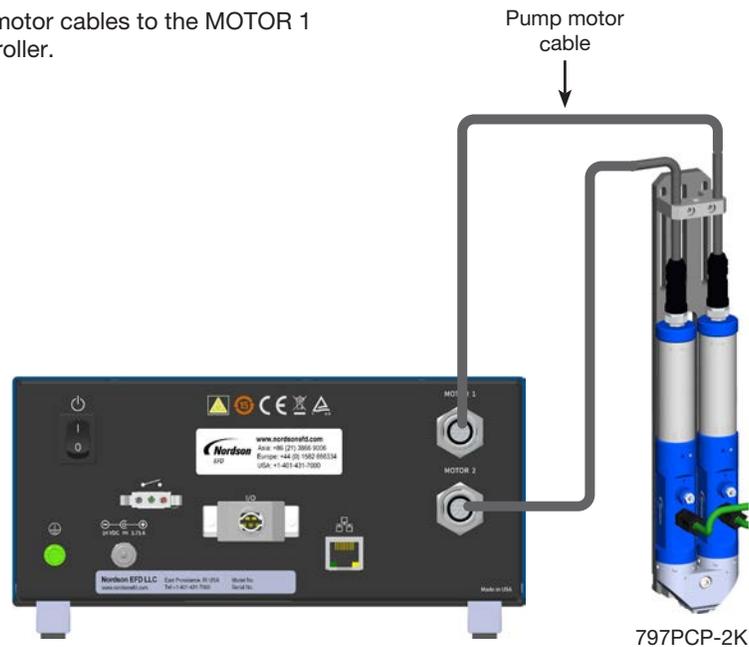

## Installation (continued)

### Connect a Purge Initiate Signal (Optional)

If you want to connect an external purge initiate, you will need to remove the ESTOP jumper and then make the appropriate connections to the I/O port. Nordson EFD recommends using a breakout board and DB-15 cable to make these connections.

- Contact your Nordson EFD representative for assistance in obtaining a breakout board and cable.
- Refer to “I/O Port Pin Assignments and Wiring Diagrams” on page 47 for wiring details.

### Make the Ethernet Connection (Optional)


An Ethernet cable can be connected to the ValveMate 7197PCP-2K controller to support factory integration and firmware updates. Make the Ethernet connection as applicable for your system.

#### To access the optional 7197PCP web interface:

Making an Ethernet connection allows you to also control the system via a web interface. After the Ethernet connection is made, open a web browser (Chrome or Firefox are preferred) and go to the following URL: <http://192.168.10.51:8088/lface.php>.

**NOTE:** A ValveMate 7197PCP-2K controller’s preprogrammed IP address is 192.168.10.51. If there are multiple ValveMate 7197PCP-2K controllers on the same network, they each need a unique IP address:

- To change the IP address of a ValveMate 7197PCP-2K controller, refer to “Defining the Controller Network Settings” on page 40.
- To change the IP address of a computer, refer to “Appendix A, Changing the IP Address of a Computer” on page 52.

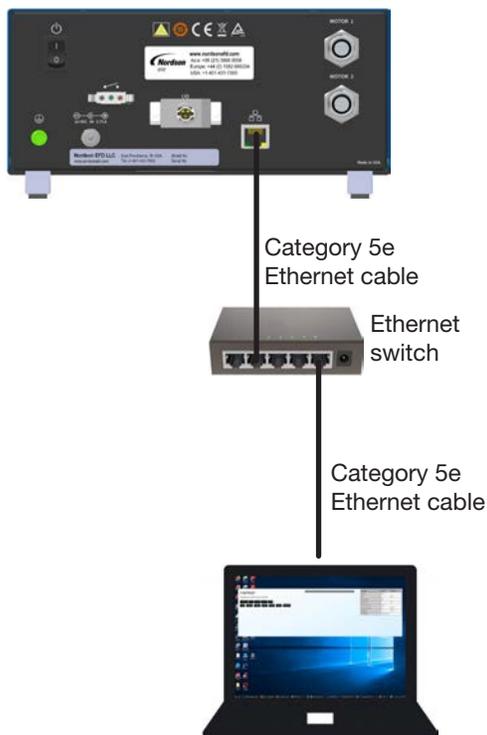

*Making the Ethernet connection between the ValveMate 7197PCP-2K and a computer*

## Installation (continued)

### Purge the Pumps

Before creating any programs or placing the system into operation for the first time, each pump must first be purged through the manifold (without a mixer installed), and then both pumps must be purged at the same time through an installed mixer.

#### CAUTION


Risk of equipment damage. **Do not operate a 797PCP-2K without material.** Excessive friction of dry components can damage the pump.

1. **Refer to the pump purging procedure in the installation section of the pump manual to purge each 797PCP-2K pump through the manifold. Return here to continue.**
2. **Before installing the mixer, determine and enter the correct settings for your Part A (Pump 1) and Part B (Pump 2) components. Nordson EFD recommends using the Volume program for this part of the installation process. Refer to “Appendix B, Example Volume Program” on page 54 to complete the installation process.**

The system is now ready for routine operation. Continue to “Programming” on page 19 to create dispense programs for pump operation.

# Installation Example

For pump installation instructions, refer to the 797PCP-2K operating manual.

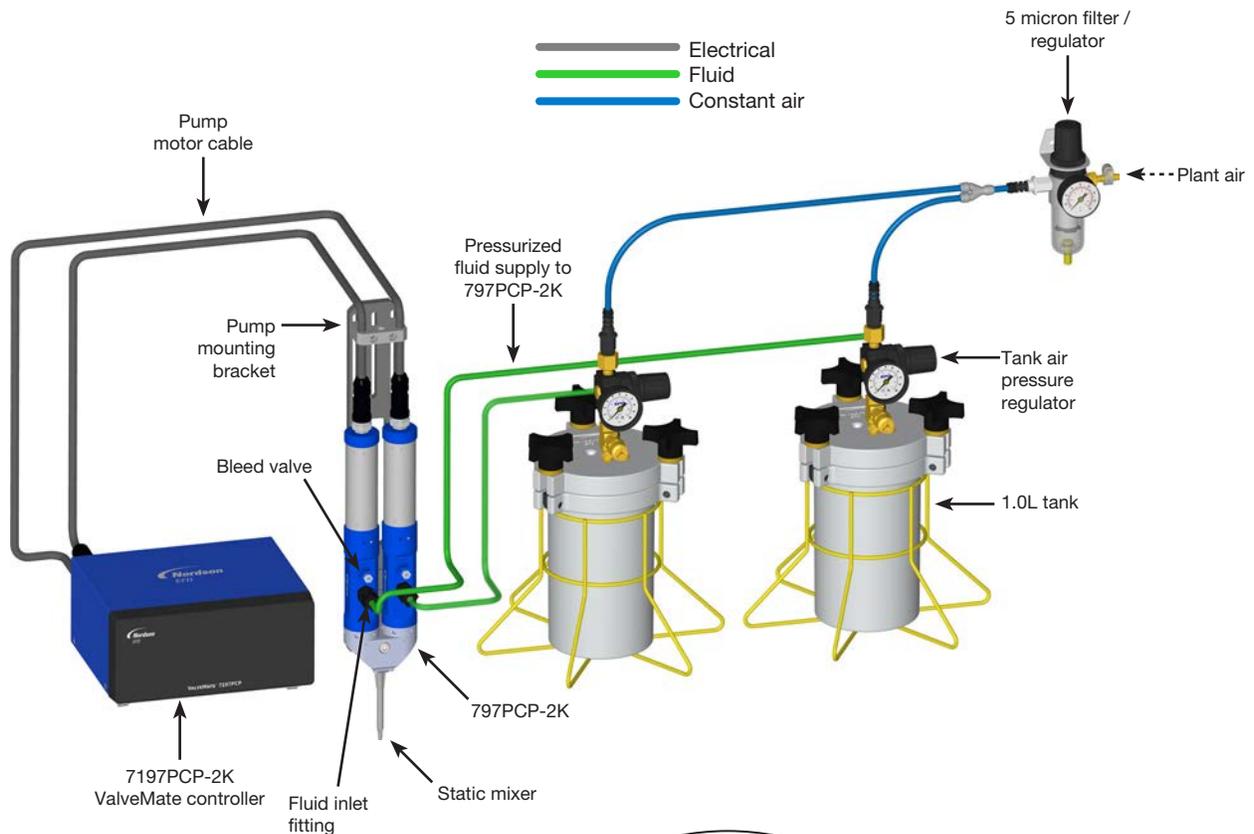

*Back view of controller, showing the pump motor cable connections*

# Programming


The ValveMate 7197PCP-2K controller is operated via a touchscreen interface.

**NOTE:** Making an Ethernet connection allows you to also control the system via a web interface. Refer to “Make the Ethernet Connection (Optional)” on page 16 for details. This section applies to the ValveMate 7197PCP-2K touchscreen interface. The 7197PCP web interface functions in the same manner except for the following: (1) The Program screen is eliminated and (2) the settings for both pumps are present on the Line, Volume, Weight, Teach, and Timed screens.


## Navigation

From the Main screen, you can access all other screens:

- On the touchscreen interface, all buttons except the program type buttons are present on the main screen. To access the program type buttons, select Program.
- On the web interface, all buttons are present on the Main screen.

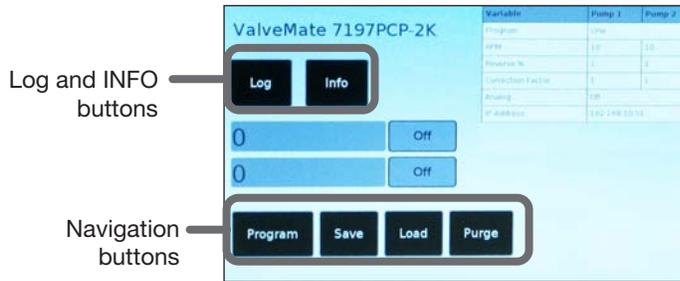

Main screen, touchscreen interface

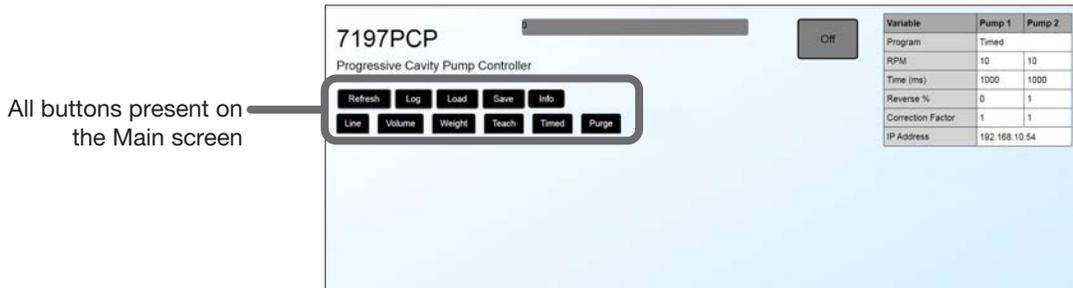

Main screen, web interface

Button	Description	Relevant Section in this Manual
Refresh (web only)	Returns the web interface to the Main screen	n/a
Log	Opens the Log screen	“Viewing the Log” on page 45
Info	Opens a screen that provides information about the currently selected screen	n/a
Program (touchscreen interface only)	Opens the Program screen, where you can select the type of program to create: Line, Volume, Weight, Teach, or Timed	“Creating Programs” on page 26
Save	Opens the Save screen	“Saving a Program to the Program Library (Save Screen)” on page 33
Load	Opens the Load screen	“Opening a Saved Program (Load Screen)” on page 34
Purge	Displays the Purge screen to allow adjustment of the purge speed	“Adjusting the Purge Speed Setting” on page 25

## Programming (continued)

### Entering Values on the Touchscreen


When you select a numeric value to edit, a numeric keypad opens:

- Use the keypad to enter the desired value.
- To clear all entered numbers, select CLEAR.
- To delete only the last number entered, select DEL.
- To save the entered value, select DONE.



### Variable Table

The variable table at the top right of the screen changes based on the open program. For the Line, Volume, Weight, Teach, and Timed program screens, the variable table shows the currently entered values of all variables side by side, for both pumps. For example, when you select the Line Program screen, the table changes to show the current values of the Line Program settings.

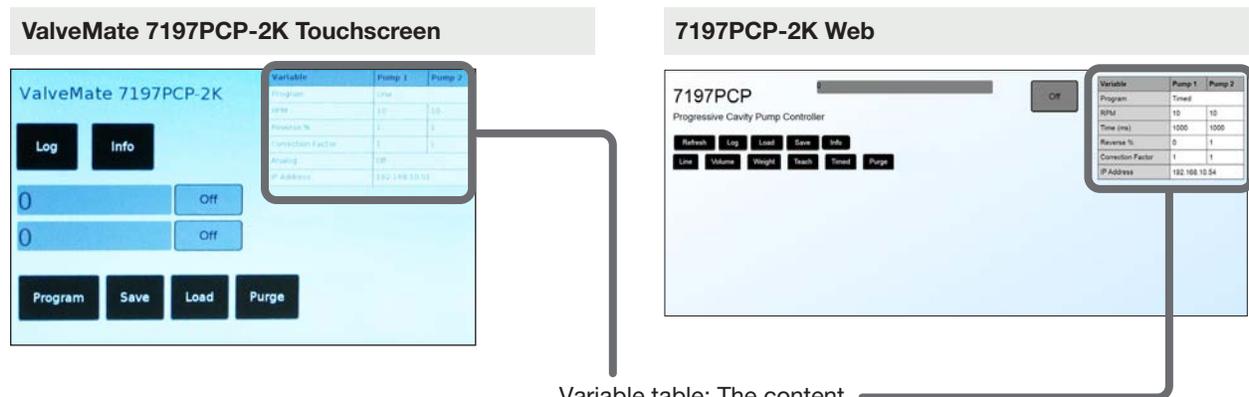

Variable table: The content of this table changes based on the selected program / variables.


# Programming (continued)

## Status Indications


On the touchscreen interface, the status indications shown below are present on the Main screen.

On the web interface, these status indication are present on the Line, Volume, Weight, Teach, Timed, and Purge screens.



Operating Mode	Indicator Description
Volume program running	Shows what percentage of the dispense cycle remains
Weight program running	
Timed program running	
Teach program OFF	
Teach program ON	Shows how long the dispense cycle has been triggered
Line program running	Shows the speed in RPM

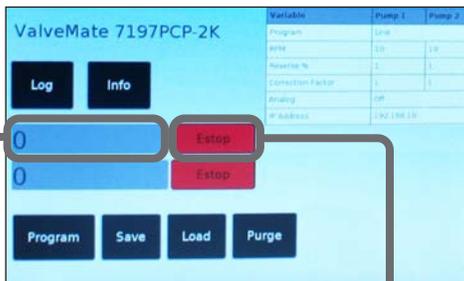

Main screen, touchscreen interface

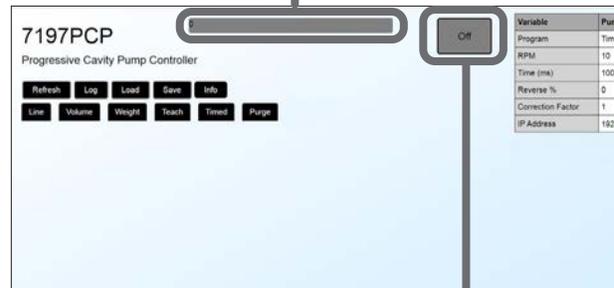

Main screen, web interface


Status	Color	Description
Off	 Dark gray	The pump is not running.
Running	 Green	The system is running normally.
ESTOP	 Red	An emergency stop has occurred.
Error	 Yellow	An error has occurred. Refer to "Troubleshooting" on page 45.

# Programming (continued)


## Switching Pump Screens

On the ValveMate 7197PCP-2K touchscreen interface, the settings for Pump 1 and Pump 2 are on different program screens (Line, Volume, Weight, Teach, and Timed). On the 7197PCP-2K web interface, the settings for both Pump 1 and Pump 2 are on the same program screen.

Select this button to toggle between the Pump 1 and Pump 2 screens

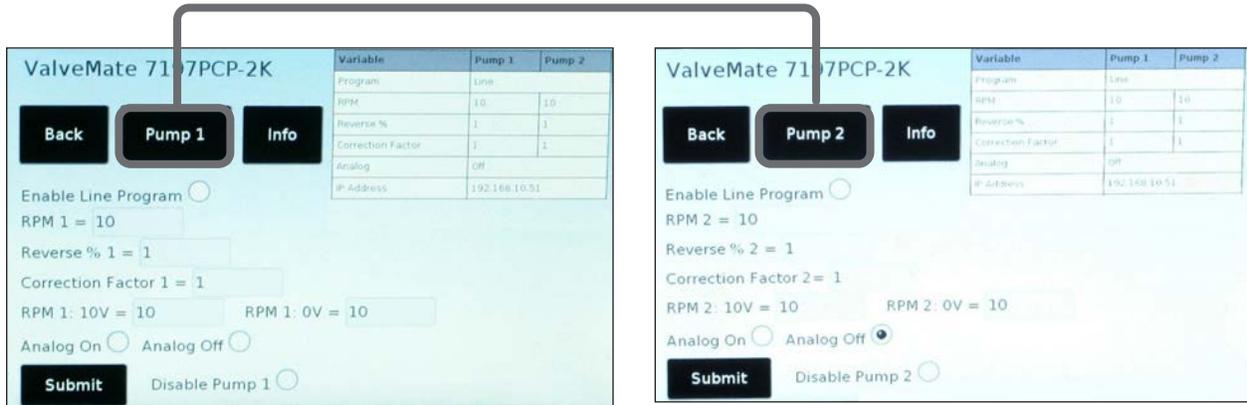


On the ValveMate 7197PCP-2K controller touchscreen, the editable settings for Pump 1 and Pump 2 are on separate screens (Line program screen shown)

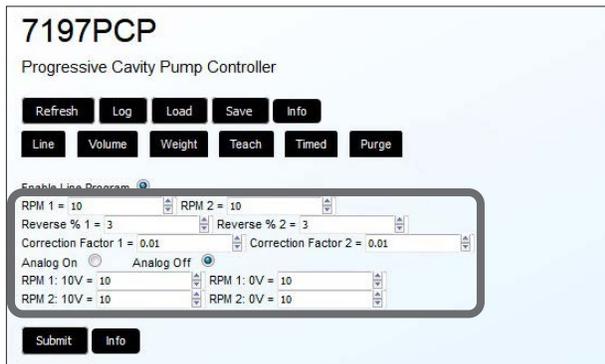

On the 7197PCP-2K web interface, all editable settings for both pumps are present on the program screens (Line program screen shown)


# Programming (continued)

## Flowchart of Controller Screens (ValveMate 7197PCP-2K)

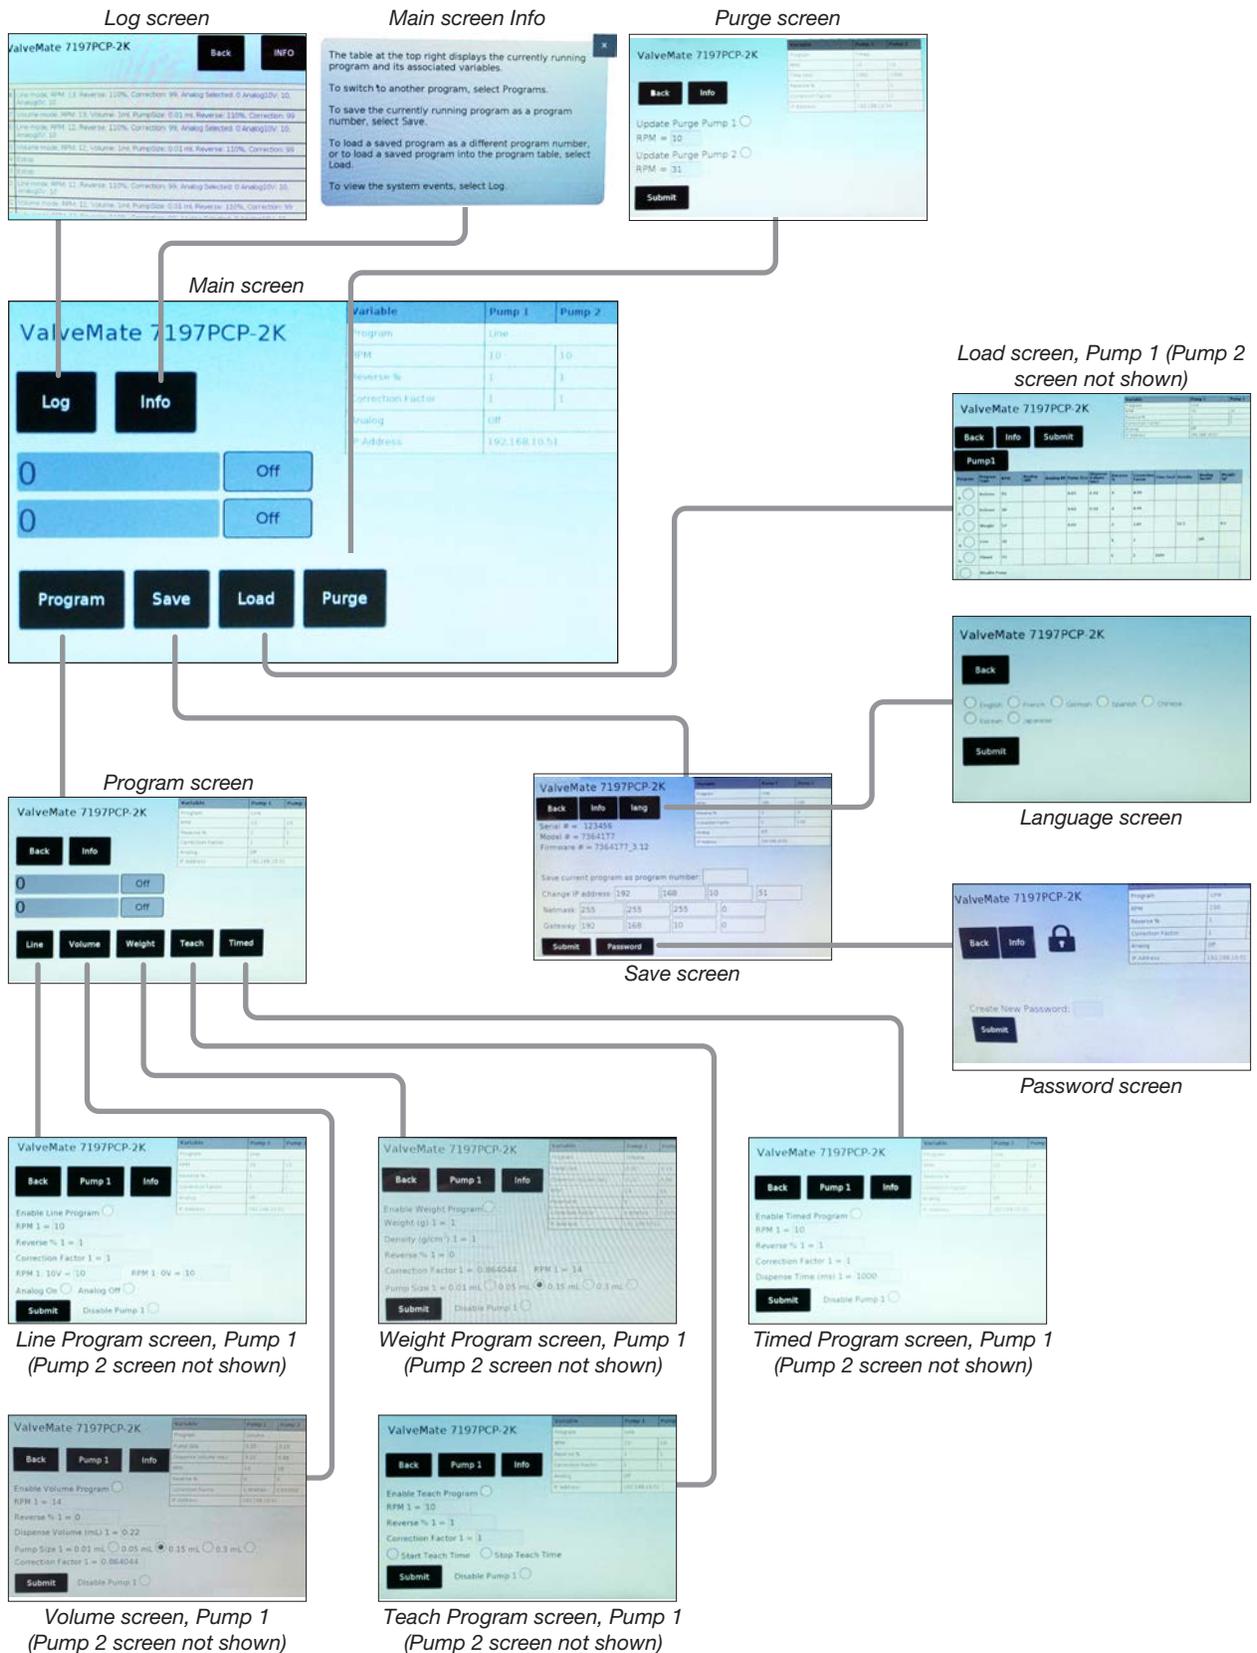

# Programming (continued)

## Flowchart of Controller Screens (7197PCP-2K Web Application)

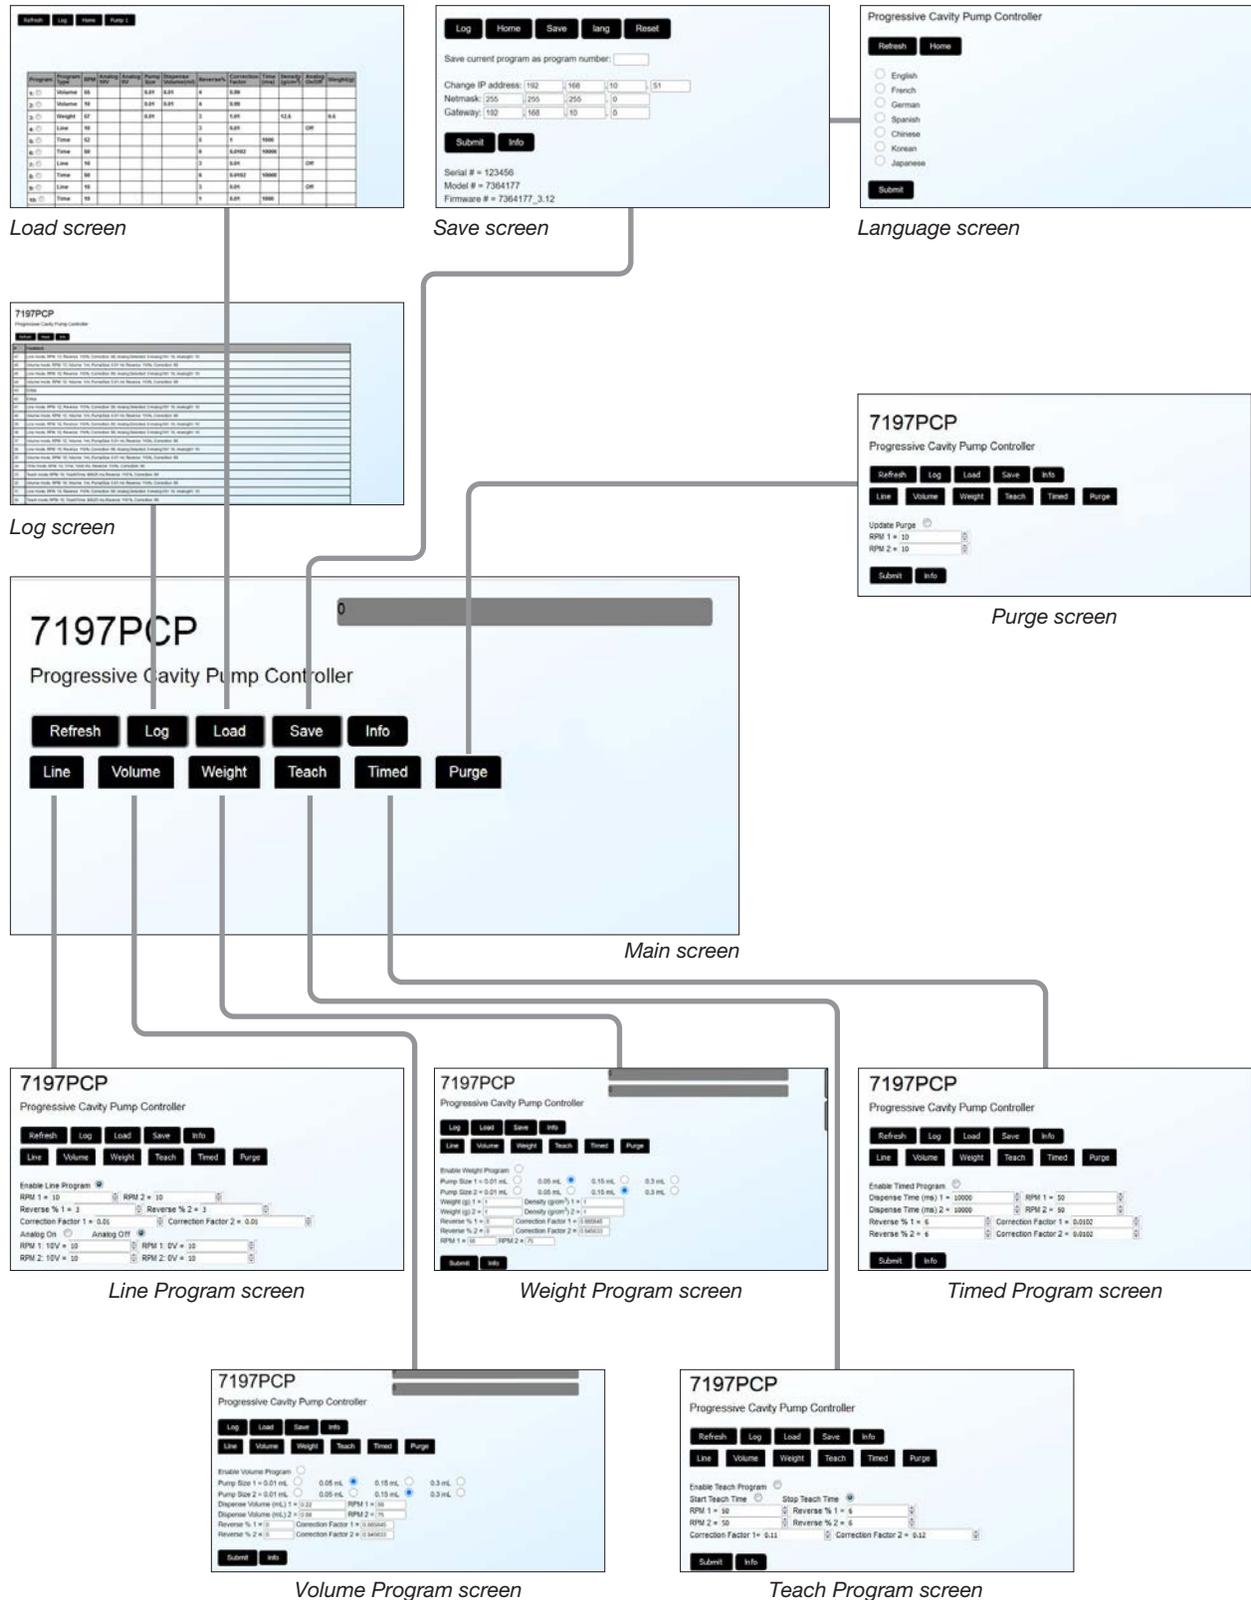

# Programming (continued)

## Adjusting the Purge Speed Setting



Before placing the system into operation, or anytime that purging is required, refer to the purging procedures earlier in this manual. Use this procedure only to change the purge RPM, ensuring that the maximum allowable motor speed is not exceeded. Refer to “Maximum Motor Speed Based on Viscosity” on page 50.

1. On the Main screen, select PURGE.
2. On the touchscreen interface: Select the UPDATE PURGE PUMP radio button for the pump you want to purge.  
On the web interface: Select the UPDATE PURGE radio button.
3. Enter the desired RPM setting, ensuring that the maximum allowable motor speed is not exceeded. Refer to “Maximum Motor Speed Based on Viscosity” on page 50.

**NOTE:** Values must be within the specified range limits, or they will not save.

4. Select SUBMIT. The Purge RPM speed updates.

**NOTE:** On the web interface, the system returns to the Home screen after a purge RPM update.

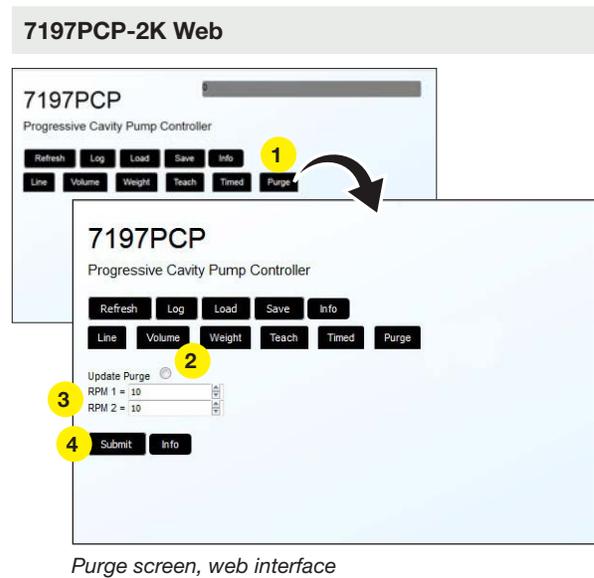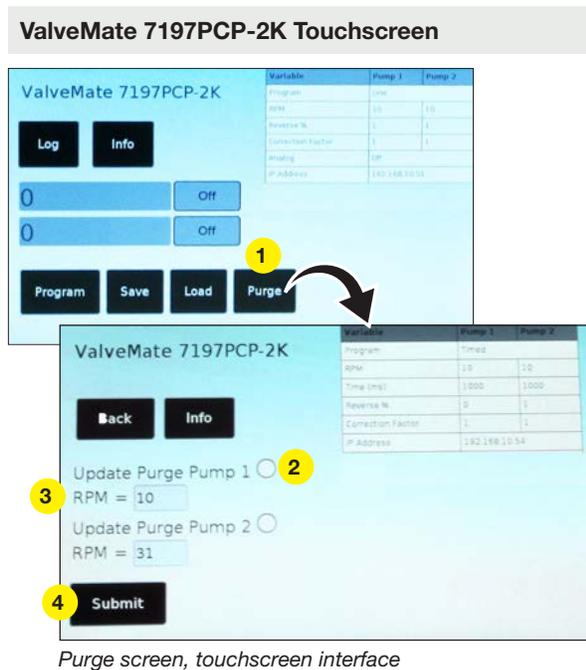

Variable	Range	Description
RPM	10–150 (RPM)	Sets the purge motor speed in RPM; for guidance on setting the RPM, refer to “Maximum Motor Speed Based on Viscosity” on page 50.
Info	n/a	Select to view information about the current screen, including the range limits for settings.


# Programming (continued)

## Creating Programs

The controller allows you to create five types of program: Line, Volume, Weight, Teach, and Timed. A general programming procedure is provided on the next page. Specific programming procedures, including detailed information on all settings, are provided in the sections shown under “Detailed Information.”


Program Type	Description	Typical Application	Detailed Information
Line	Use a Line program to dispense material continuously, for as long as the dispense cycle is activated.	Continuous lines, all viscosities	Refer to “Line Programs” on page 28.
Volume	Use a Volume program to dispense a specified amount of material in milliliters.	Filling a known volume	Refer to “Volume Programs” on page 29.
Weight	Use a Weight program to dispense a specified amount of material in grams.	Dispensing based on weight	Refer to “Weight Programs” on page 30.
Teach	Use Teach program to “Teach” the system the desired dispense time and volume.	Filling an unknown volume	Refer to “Teach Programs” on page 31.
Timed	Use a Timed program to dispense for a specified amount of time, in milliseconds per cycle.	Dispensing for a known period of time	Refer to “Timed Programs” on page 32.

### ValveMate 7197PCP-2K Touchscreen

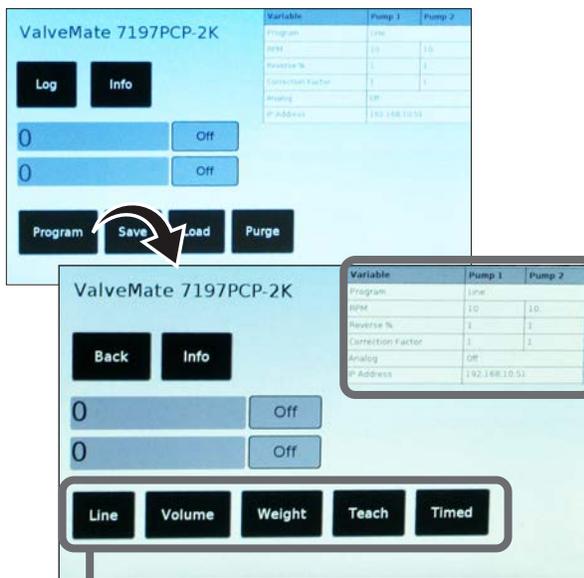

On the touchscreen interface, all program type buttons are on the Program screen

### 7197PCP-2K Web

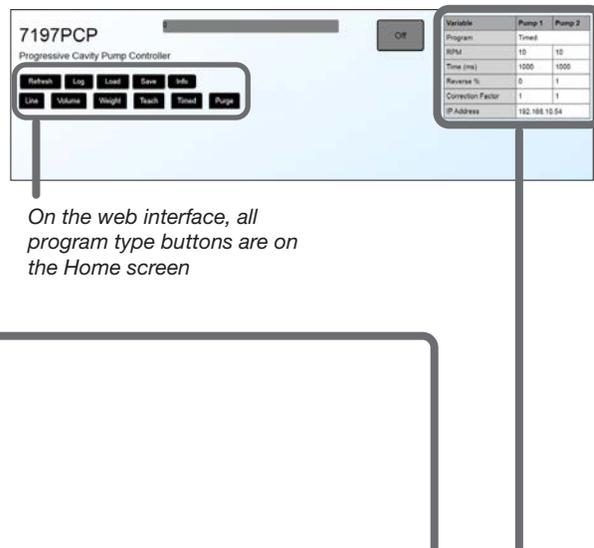

On the web interface, all program type buttons are on the Home screen

Variable table: The content of this table changes based on the selected program / variables. The settings for both pumps are shown side by side.


# Programming (continued)

## Creating Programs (continued)

Follow this general procedure to enter settings for a program. A task-specific procedure is also provided for each program type later in this section.

1. (Touchscreen interface only) On the Main screen, select PROGRAM.
2. Select any program type button to display the variables for that selection.
3. To view information about the currently displayed screen, select INFO.
4. (Touchscreen interface only) Select the pump button to toggle between the Pump 1 and Pump 2 screens.
5. To enable a program, select the ENABLE [program type] PROGRAM radio button.  
**NOTE:** If you don't enable the program, the system will not save any entered settings.
6. Make the desired radio button selections and / or enter settings inside the value fields. Refer to the applicable sections of this manual as noted in the table above for detailed information about each program type, including setting ranges.
7. When all variables are at the desired setting, select SUBMIT. The system saves the settings and displays them in the Variable table.
8. Select BACK (touchscreen) or REFRESH (web) to return to the Main screen.
9. To save the values you entered as a program in the Program Library, refer to "Saving a Program to the Program Library (Save Screen)" on page 33.


### ValveMate 7197PCP-2K Touchscreen

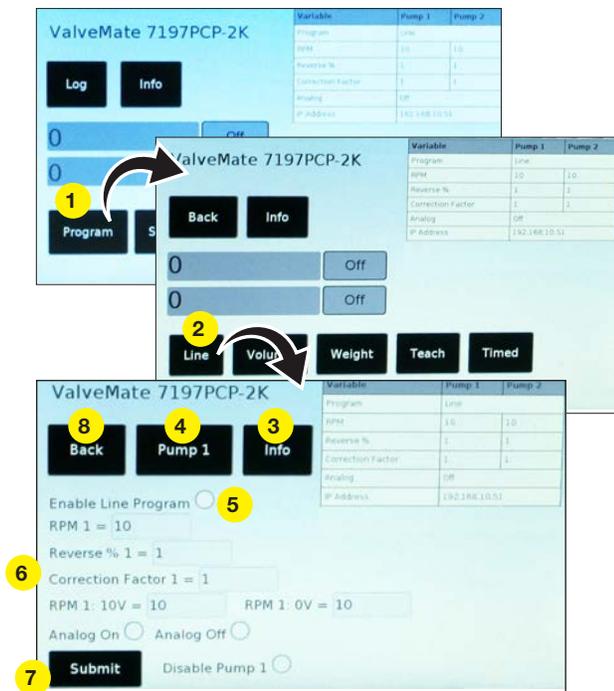

Line program screen, touchscreen interface

Example of general programming steps (Line program screen shown)

### 7197PCP-2K Web

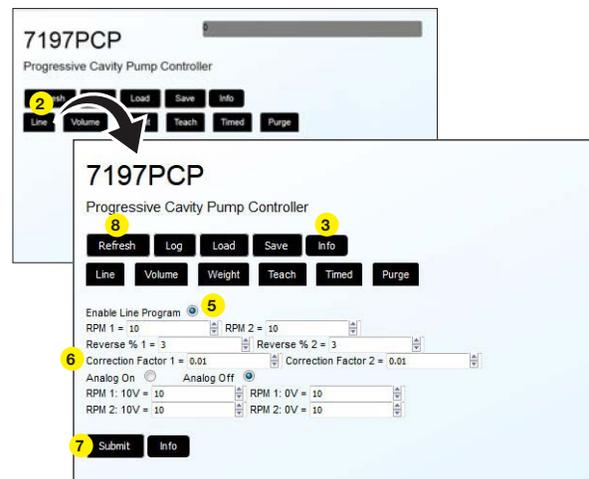


Line program screen, web interface

# Programming (continued)


## Line Programs

Use a Line program to dispense a continuous line of material. When a Line program is run, the pump dispenses for as long as the dispense cycle is initiated. You can enable Analog On to fine-tune the motor speed while running a Line program.

1. Navigate to the Line program screen.
2. (Touchscreen interface only) Select the pump button to toggle between the Pump 1 and Pump 2 screens.
3. Select the ENABLE LINE PROGRAM radio button.  
**NOTE:** If you don't enable the program, the system will not save any entered settings.
4. Enter the desired settings, referring to the table below for detailed information on each variable.
5. Select SUBMIT to save the settings. The variable table shows the saved settings.
6. To save the values you entered as a program in the Program Library, refer to "Saving a Program to the Program Library (Save Screen)" on page 33.

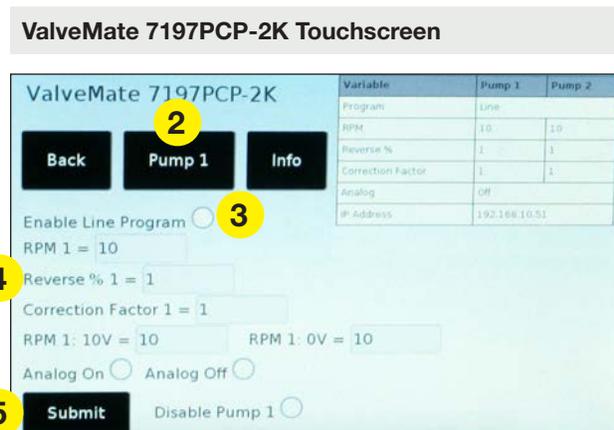

Line program screen, touchscreen interface

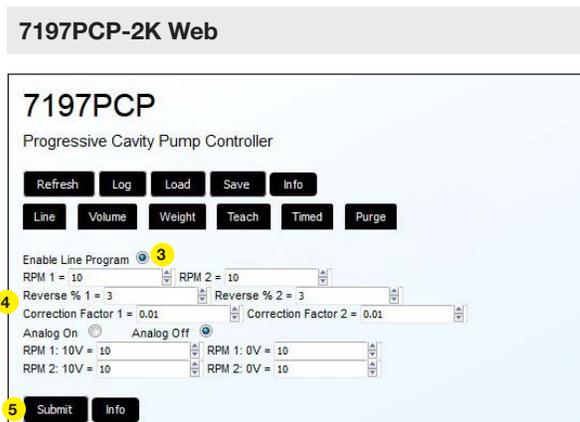

Line program screen, web interface

Variable	Range	Description
Info	n/a	Select to view information about the current screen, including the range limits for settings.
RPM	10–150 (RPM)	Sets the motor speed in RPM; for guidance on setting the RPM, refer to “Maximum Motor Speed Based on Viscosity” on page 50.
Reverse %	0–200 (%) (adjustable in increments of 1%)	Based on the percentage of rotation, sets the suck-back to reverse the motor at the end of a dispense cycle to prevent drooling.
Correction Factor	0.1–2.00 (adjustable in increments of 0.01)	Because rotors and stators may not be perfectly matched, the Correction Factor linearly scales the output to ensure that the expected amount is deposited every time.
Analog On / Analog Off	n/a	Select Analog On to use the “RPM: 10V” and “RPM: 0V” fields to change the motor speed on-the-fly. When Analog Off is selected, the “RPM: 10V” and “RPM: 0V” fields are disabled.
Analog RPM: 10V	10–150	Scales the output RPM linearly from 0–10V based on the input analog voltage (pins 12 and 13 of the I/O port; refer to “I/O Port Pin Assignments and Wiring Diagrams” on page 47 as needed)
Analog RPM: 0V	10–150	
Disable Pump (touchscreen interface only)	Enabled or disabled	If selected, disables Pump 1 or Pump 2.

# Programming (continued)

## Volume Programs


Use a Volume program to dispense primarily based on volume. When a Volume program is used, the pump dispenses until the specified amount (in milliliters) has been deposited.

**NOTE:** For an example of how to create a Volume program, including how to use Correction Factor and Reverse %, refer to “Appendix B, Example Volume Program” on page 54.

1. Navigate to the Volume program screen.
2. (Touchscreen interface only) Select the pump button to toggle between the Pump 1 and Pump 2 screens.
3. Select the ENABLE VOLUME PROGRAM radio button.

**NOTE:** If you don't enable the program, the system will not save any entered settings.

4. Enter the desired settings, referring to the table below for detailed information on each variable.
5. Select SUBMIT to save the settings. The variable table shows the saved settings.
6. To save the values you entered as a program in the Program Library, refer to “Saving a Program to the Program Library (Save Screen)” on page 33.

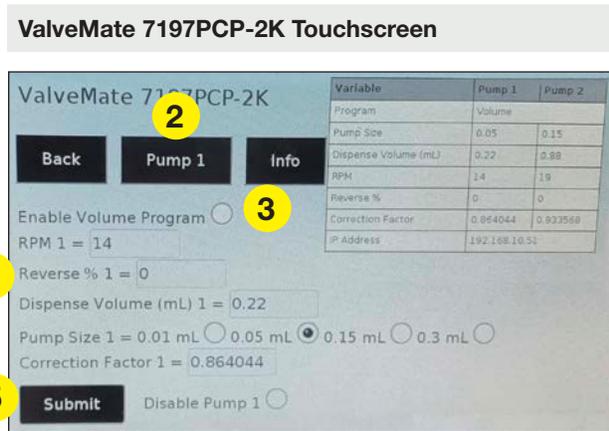

Volume program screen, touchscreen interface



Volume program screen, web interface

Variable	Range	Description
Info	n/a	Select to view information about the current screen, including the range limits for settings.
RPM	10–150 (RPM)	Sets the motor speed in RPM; for guidance on setting the RPM, refer to “Maximum Motor Speed Based on Viscosity” on page 50.
Reverse %	0–200 (%) (adjustable in increments of 1%)	Based on the percentage of rotation, sets the suck-back to reverse the motor at the end of a dispense cycle to prevent drooling.
Dispense Volume (mL)	0.001–15000.00 (mL) (adjustable in increments of 0.001)	Sets the amount of material (in mL) that will be dispensed for each cycle of the pump.
Pump Size	0.01 mL, 0.05 mL, 0.15 mL, or 0.30 mL	Select the size of the pump for which you are creating the program.
Correction Factor	0.1–2.00 (adjustable in increments of 0.01)	Because rotors and stators may not be perfectly matched, the Correction Factor linearly scales the output to ensure that the expected amount is deposited every time.
Disable Pump (touchscreen interface only)	Enabled or disabled	If selected, disables Pump 1 or Pump 2.

## Programming (continued)

### Weight Programs

Use a Weight program to dispense primarily based on weight. When a Weight program is used, the pump dispenses until the specified material weight (in grams) has been deposited.

1. Navigate to the Weight program screen.
2. (Touchscreen interface only) Select the pump button to toggle between the Pump 1 and Pump 2 screens.
3. Select the ENABLE WEIGHT PROGRAM radio button.
 

**NOTE:** If you don't enable the program, the system will not save any entered settings.
4. Enter the desired settings, referring to the table below for detailed information on each variable.
5. Select SUBMIT to save the settings. The variable table shows the saved settings.
6. To save the values you entered as a program in the Program Library, refer to "Saving a Program to the Program Library (Save Screen)" on page 33.

ValveMate 7197PCP-2K Touchscreen

Variable	Pump 1	Pump 2
Program	Volume	
Pump Size	0.05	0.15
Dispense Volume (mL)	0.22	0.88
RPM	14	19
Reverse %	0	0
Correction Factor	0.864044	0.932568
IP Address	192.168.10.51	

Weight program screen, touchscreen interface

7197PCP-2K Web

Weight program screen, web interface

Variable	Range	Description
Info	n/a	Select to view information about the current screen, including the range limits for settings.
Weight	0–600 (g) (adjustable in increments of 0.001 g)	Sets the amount of material (in g) that will be dispensed for each cycle of the pump.
Density	0–11000 (g/cm <sup>3</sup> ) (adjustable in increments of 0.01 g/cm <sup>3</sup> )	Sets the density of the material (in g/cm <sup>3</sup> ) to be dispensed.
Reverse %	0–200 (%) (adjustable in increments of 1%)	Based on the percentage of rotation, sets the suck-back to reverse the motor at the end of a dispense cycle to prevent drooling.
Correction Factor	0.1–2.00 (adjustable in increments of 0.01)	Because rotors and stators may not be perfectly matched, the Correction Factor linearly scales the output to ensure that the expected amount is deposited every time.
RPM	10–150 (RPM)	Sets the motor speed in RPM; for guidance on setting the RPM, refer to "Maximum Motor Speed Based on Viscosity" on page 50.
Pump Size	0.01 mL, 0.05 mL, 0.15 mL, or 0.30 mL	Select the size of the pump for which you are creating the program.
Disable Pump (touchscreen interface only)	Enabled or disabled	If selected, disables Pump 1 or Pump 2.

# Programming (continued)

## Teach Programs

The Teach program allows you to “Teach” the system how long to run at the specified speed. When a Teach program is selected and the dispense cycle is activated, the pump dispenses for the amount of time determined by the Teach program.

1. Navigate to the Teach program screen.
2. (Touchscreen interface only) Select the pump button to toggle between the Pump 1 and Pump 2 screens.
3. Select the ENABLE TEACH PROGRAM radio button.

**NOTE:** If you don’t enable the program, the system will not save any entered settings.

4. Enter the desired settings, referring to the table below for detailed information on each variable.

**NOTE:** Values must be within the specified range limits, or they will not save.

5. Select the START TEACH TIME radio button, then select SUBMIT.

6. Press the foot pedal to start the dispense cycle.


**NOTE:** As long as the dispense cycle is activated, the controller tracks the dispense time. If the dispense cycle is stopped and restarted, the controller erases the previous time and starts tracking again.

7. When the desired amount of material has been dispensed, release the foot pedal and select the STOP TEACH TIME radio button.


8. Select SUBMIT.

The system saves the setting, and the new Teach Time (ms) is displayed in the Variable table.

9. To save the values you entered as a program in the Program Library, refer to “Saving a Program to the Program Library (Save Screen)” on page 33.

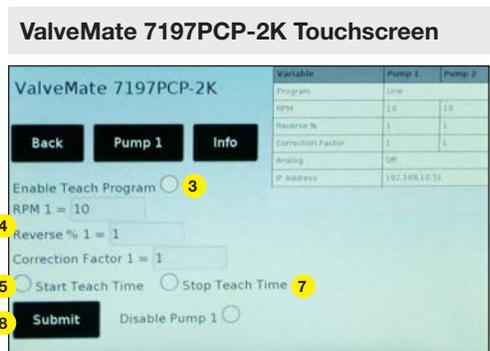

Teach program screen, touchscreen interface

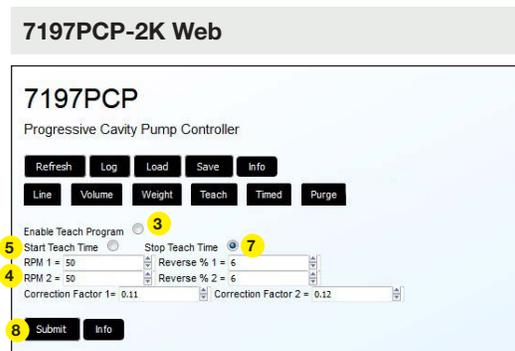

Teach program screen, web interface


Variable	Range	Description
Info	n/a	Select to view information about the current screen, including the range limits for settings.
RPM	10–150 (RPM)	Sets the motor speed in RPM; for guidance on setting the RPM, refer to “Maximum Motor Speed Based on Viscosity” on page 50.
Reverse %	0–200 (%) (adjustable in increments of 1%)	Based on the percentage of rotation, sets the suck-back to reverse the motor at the end of a dispense cycle to prevent drooling.
Correction Factor	0.1–2.00 (adjustable in increments of 0.01)	Because rotors and stators may not be perfectly matched, the Correction Factor linearly scales the output to ensure that the expected amount is deposited every time.
Disable Pump (touchscreen interface only)	Enabled or disabled	If selected, disables Pump 1 or Pump 2.

# Programming (continued)


## Timed Programs

Use a Timed program to dispense primarily based on time. When a Timed program is run, the pump dispenses for the specified time (in milliseconds) for each dispense cycle.

1. Navigate to the Timed program screen.
2. (Touchscreen interface only) Select the pump button to toggle between the Pump 1 and Pump 2 screens.
3. Select the ENABLE TIMED PROGRAM radio button.  
**NOTE:** If you don't enable the program, the system will not save any entered settings.
4. Enter the desired settings, referring to the table below for detailed information on each variable.
5. Select SUBMIT to save the settings. The variable table shows the saved settings.
6. To save the values you entered as a program in the Program Library, refer to "Saving a Program to the Program Library (Save Screen)" on page 33.

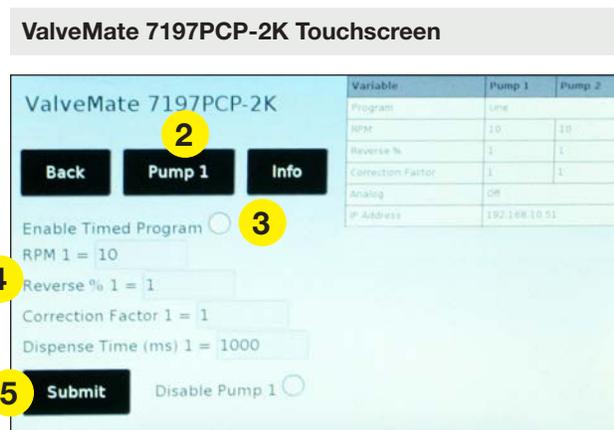

Timed program screen, touchscreen interface

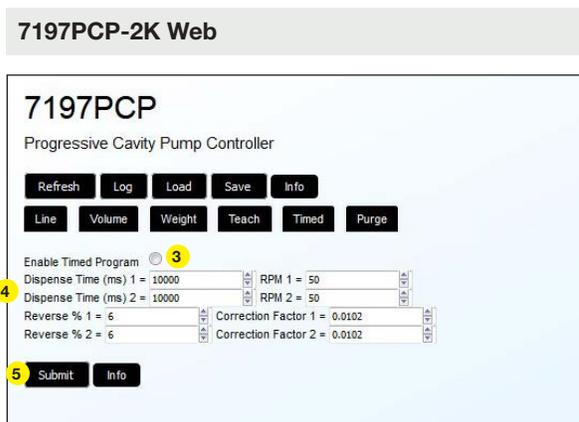

Timed program screen, web interface


Variable	Range	Description
Info	n/a	Select to view information about the current screen, including the range limits for settings.
RPM	10–150 (RPM)	Sets the motor speed in RPM; for guidance on setting the RPM, refer to “Maximum Motor Speed Based on Viscosity” on page 50.
Reverse %	0–200 (%) (adjustable in increments of 1%)	Based on the percentage of rotation, sets the suck-back to reverse the motor at the end of a dispense cycle to prevent drooling.
Correction Factor	0.1–2.00 (adjustable in increments of 0.01)	Because rotors and stators may not be perfectly matched, the Correction Factor linearly scales the output to ensure that the expected amount is deposited every time.
Dispense Time (ms)	0.001–600,000 (ms) (adjustable in increments of 0.001 ms)	Sets the amount of time (in ms) to open the pump for each dispense cycle. <b>NOTE:</b> In other words, the Dispense Time is adjustable between 1 ms (0.001 s) and 10 minutes (600,000 ms).
Disable Pump (touchscreen interface only)	Enabled or disabled	If selected, disables Pump 1 or Pump 2.

# Programming (continued)

## Saving a Program to the Program Library (Save Screen)

Follow this procedure to save a program to the Program Library.

1. Ensure that the program you want to save is displayed in the variable table, and that the variable settings are correct.
2. On the Main screen, select SAVE. The Save screen opens.
3. Enter a program number next to “Save current program as program number.”  
Up to 5 programs per pump can be saved. The program shown in the variable table is saved to the selected program number.
4. Select SUBMIT. The system saves the program in the Program Library.
5. Select BACK (touchscreen) or HOME (web) to return to the Main screen.

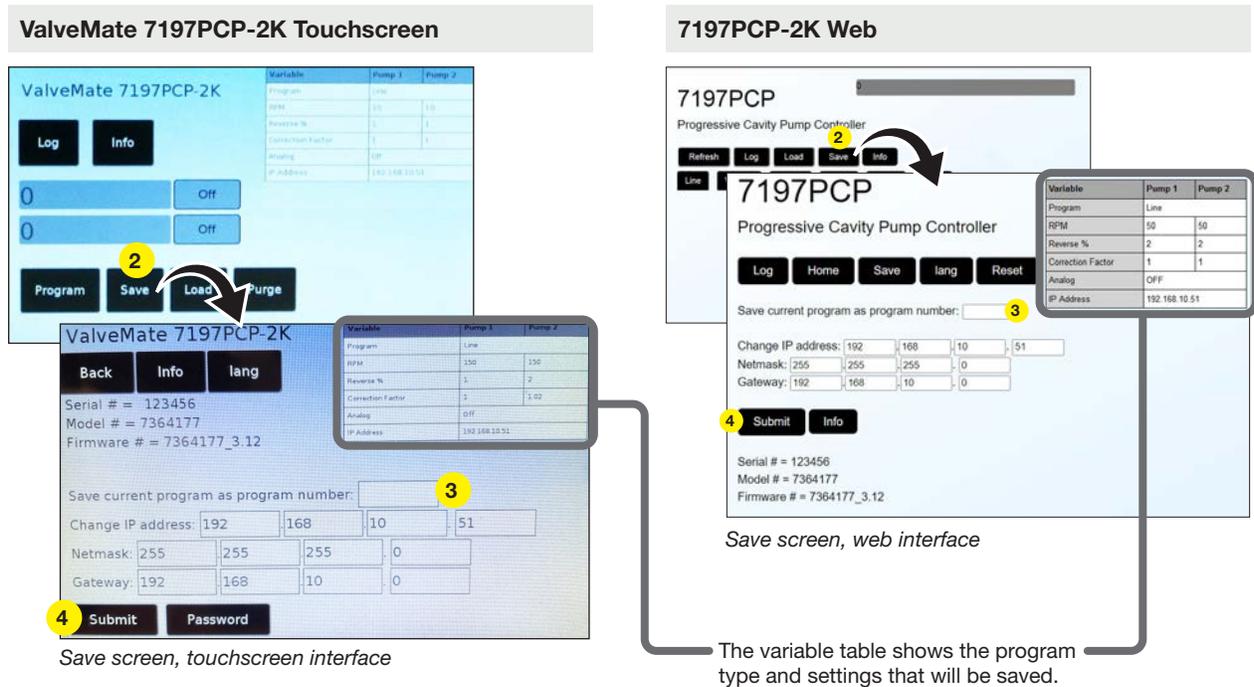

Field	Description
Save current program as program number:	Used to save a program to the Program Library.
Change IP address, Netmask, and Gateway	Used to change the network settings of the controller. Refer to “Defining the Controller Network Settings” on page 40.


# Programming (continued)

## Opening a Saved Program (Load Screen)


If you have saved a program to the Program Library, follow this procedure to load the program at any time.

**NOTE:** This screen also includes a radio button to disable the pump. Refer to “Disabling a Pump” on page 42 for details.

1. On the Main screen, select LOAD. The Load screen opens.
2. Select the pump button to toggle between the Pump 1 and Pump 2 screens.
3. Select the radio button of the program number you want to load.
4. Select SUBMIT. The selected program loads into the variable table.
5. Select BACK (touchscreen) or HOME (web) to return to the Main screen.

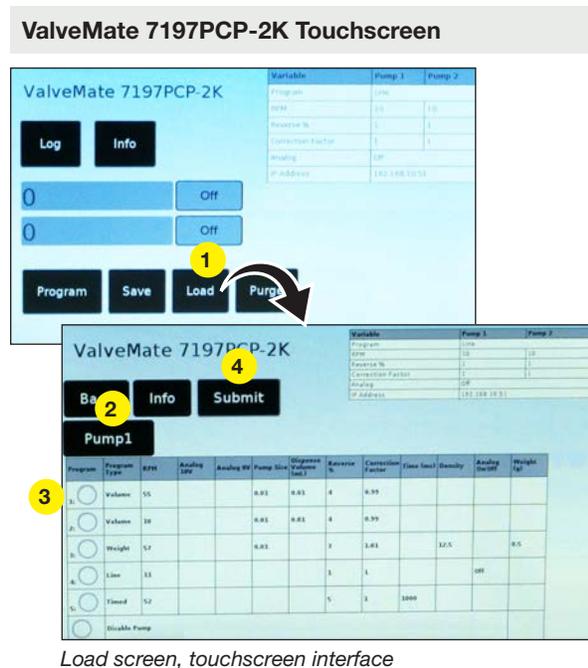

Load screen, touchscreen interface

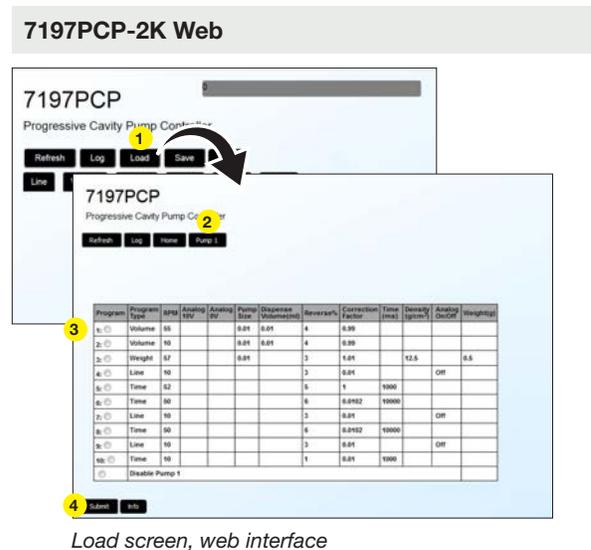


Load screen, web interface


# Programming (continued)

## Locking or Unlocking the System (Touchscreen Only)


Follow these procedures to use the lock / unlock function for a desktop controller. When the lock / unlock function is enabled, an unlock button appears on the Main screen. When the system is locked, the unlock button changes to a locked icon.

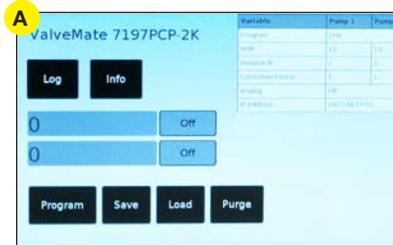

Main screen when the lock / unlock function is disabled (no lock / unlock icon)

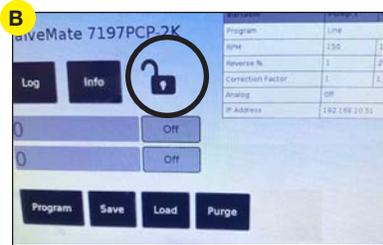


Main screen when the lock / unlock function is enabled, but the system is not locked

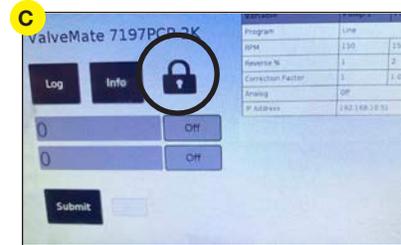

Main screen when the lock / unlock function is enabled and the system is locked; a password is required

### Enabling the Lock / Unlock Function

1. On the Main screen, select SAVE. The Save screen opens.
2. Select PASSWORD. The Password screen opens.
3. Select the UNLOCK button  to enable lock / unlock function. When the lock / unlock function is enabled:
  - A lock button  appears on the Password screen.
  - The system password is automatically set as "0." To change the password, refer to "Changing the Lock Function Password".
  - A locked icon  appears on the Main screen.

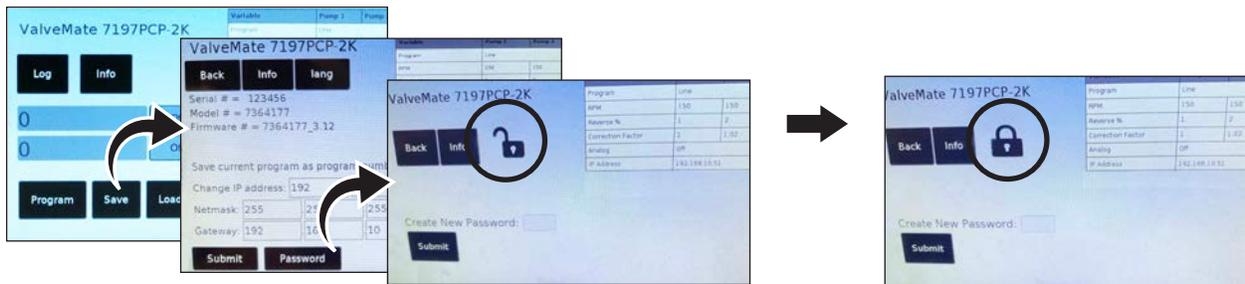

Password screen, lock / unlock function disabled

Password screen, lock / unlock function enabled

### Changing the Lock Function Password

1. Open the Password screen (from the Main screen, select SAVE > PASSWORD).
2. Select the LOCK button .
3. Enter a numeric password (1 to 4 digits).
 

**NOTE:** If you do not enter a password, the system automatically enters "0" as the password.
4. Select SUBMIT.
5. Select BACK two times to return to the Main screen.

# Programming (continued)


## Locking or Unlocking the System (Touchscreen Only) (continued)

### Unlocking and Relocking a Locked System

1. To unlock the system, enter the password in the field next to the Submit button, then select SUBMIT.

The locked icon changes to an unlock button.


**NOTE:** If you forget the password, you can use the web interface to reset the password to 0. Refer to “Resetting the Password” on page 37.

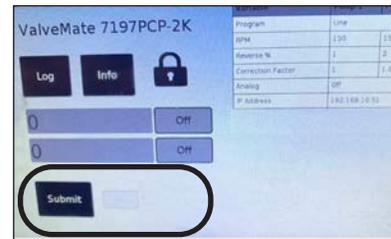

Main screen when the lock / unlock function is enabled and the system is locked; a password is required

2. To relock the system, select the UNLOCK button.

**NOTE:** The system stays unlocked until you select the unlock button.

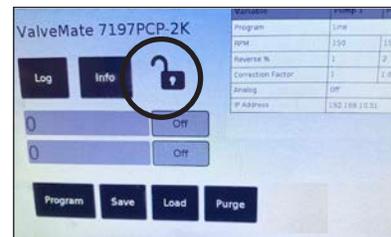


Main screen when the lock / unlock function is enabled, but the system is not locked

### Disabling the Lock / Unlock Function

1. If the Main screen is locked, enter the password and select SUBMIT.
2. On the Main screen, select SAVE. The Save screen opens.
3. Select PASSWORD. The Password screen opens.
4. Select the LOCK button to disable the Lock / Unlock function.

When the Lock / Unlock function is disabled, an unlock button appears on the Password screen and the locked icon / unlock button is removed from the Main screen.

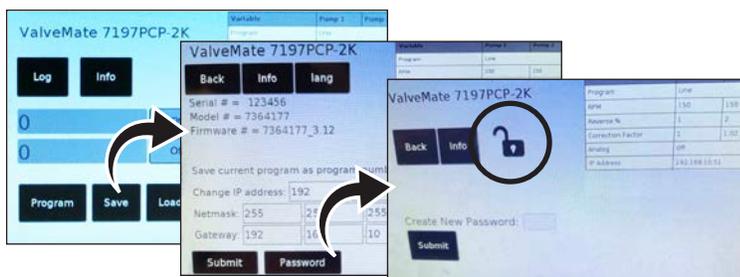

Password screen, lock / unlock function disabled



Main screen when the lock / unlock function is disabled (no locked icon or unlock button)

# Programming (continued)

## Resetting the Password

If you forget the lock / unlock password for the touchscreen lockout, follow this procedure to use the web interface to reset the password to 0.

1. On the Main screen, select SAVE. The Save screen opens.
2. Select RESET.
3. Select HOME to return to the Main screen.

### 7197PCP-2K Web

7197PCP  
Progressive Cavity Pump Controller

Refresh Log Load Save Info

Line Volume Weight

7197PCP  
Progressive Cavity Pump Controller

Log Home Save lang Reset

Save current program as program number:

Change IP address:  192  168  10  51

Netmask:  255  255  0

Gateway:  192  168  10  0

Submit Info

Serial # = 123456  
Model # = 7364177  
Firmware # = 7364177\_3.12

Save screen, web interface


# Programming (continued)

## Setting the Language

Follow this procedure to select the desired language.


1. On the Main screen, select SAVE. The Save screen opens.
2. Select LANG.
3. Select the radio button for the desired language.
4. Select SUBMIT.
5. Select BACK (touchscreen) or HOME (web) to return to the Main screen.

### ValveMate 7197PCP-2K Touchscreen

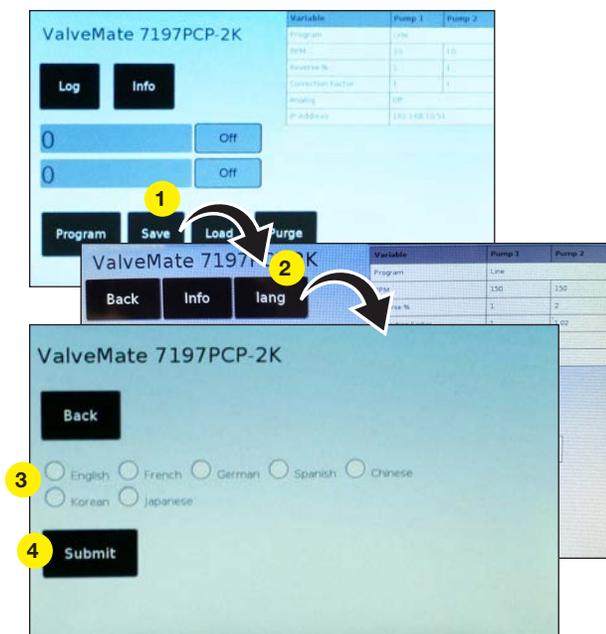

Language screen, touchscreen interface

### 7197PCP-2K Web

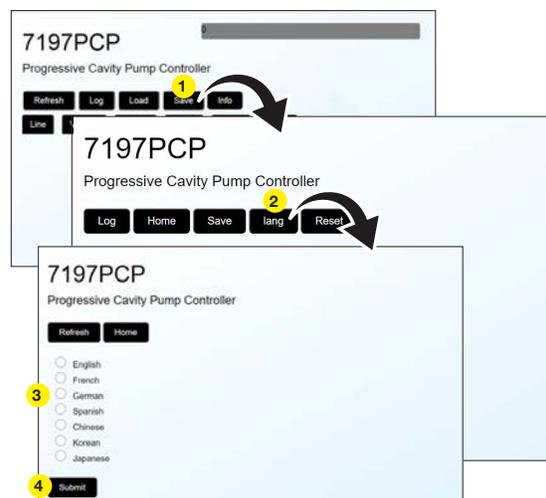

Language screen, web interface

# Programming (continued)



## Viewing the System Information

Follow this procedure to view the following information about the controller:

- Serial number
- Model number
- Firmware version

**NOTE:** To update the controller firmware, refer to “Firmware Update” on page 43.

1. On the Main screen, select SAVE. The Save screen opens.  
The system information is displayed on the Save screen.
2. Select BACK (touchscreen) or HOME (web) to return to the Main screen.

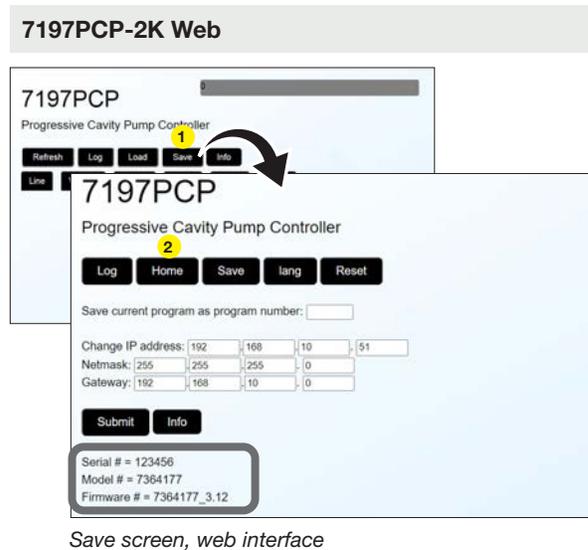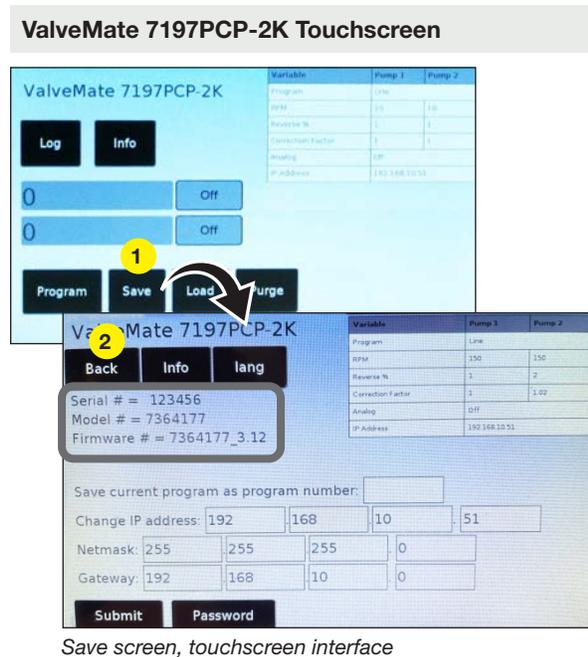

# Programming (continued)



## Defining the Controller Network Settings

Use the Save screen to define the IP address, netmask, and gateway settings for your system.

**NOTES:**

- A ValveMate 7197PCP-2K controller must have a unique IP address. If a controller is connected to a network that includes another device with the same IP address, follow this procedure to change the IP address of a controller.
- Each computer in a 797PCP-2K system must also have a unique IP address. Refer to “Appendix A, Changing the IP Address of a Computer” on page 52 to change the IP address of a computer.

1. On the Main screen, select SAVE. The Save screen opens.
2. Enter the desired network settings.
3. Select SUBMIT.
4. Cycle the controller power to make the changes live.

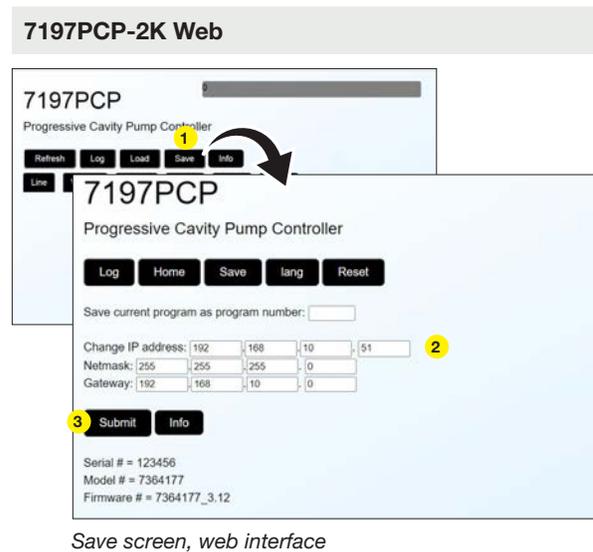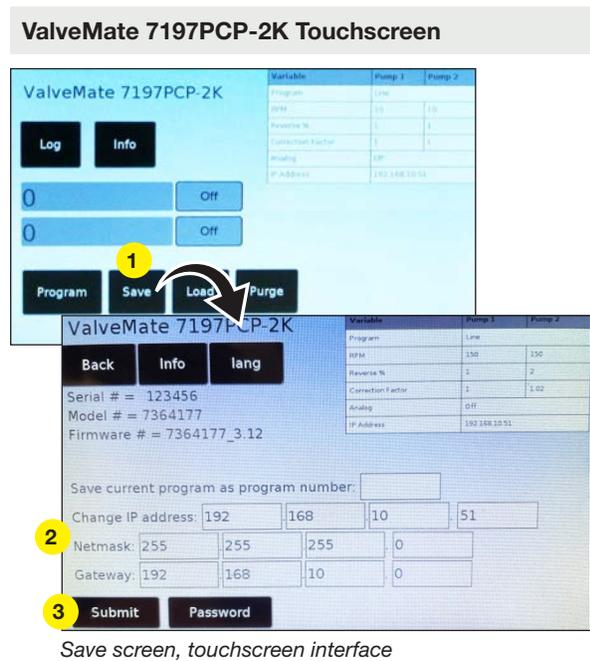

Field	Description
Save current program as program number:	Used to save a program to the Program Library.
Change IP address: 192.168.10.	Used to change the IP address of the controller.
Netmask	Used to set the netmask address for the system
Gateway	Used to set the gateway address for the system

## Operation

After the dispensing system is fully installed and the desired dispensing programs are created, the system is ready for routine operation. Follow these recommended procedures for daily / routine startup and shutdown to obtain the best performance from your system.

### Routine Startup

1. Switch on the power for all ValveMate 7197PCP-2K controllers in the system.

#### CAUTION

Risk of equipment damage. **Do not operate a 797PCP-2K without material.** Excessive friction of dry components can damage the pump.

2. Create or load the program to run. To load a saved program, refer to “Opening a Saved Program (Load Screen)” on page 34.
3. Start your process.

When the system is operating normally, the status indication on the Main screen indicates “Running.”


**NOTE:** Refer to “Status Indications” on page 21 for an explanation of all status indications provided on the Main screen.

Power switch



### Errors and Emergency Stops (ESTOP)

If the status indication on the Main screen shows an error or emergency stop condition, check the Log screen and correct the problem that caused the error or stop. Refer to “Viewing the Log” on page 45 and to “Troubleshooting” on page 45.

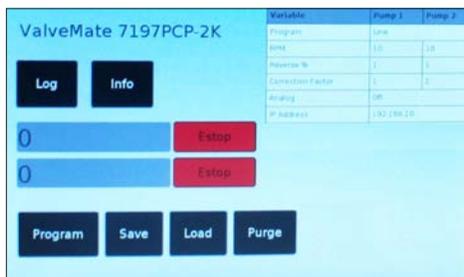

Main screen after an emergency stop


# Operation (continued)

## Disabling a Pump


Follow these procedures to disable a pump, whether for service or to test the output of only one pump in a 2K system.

### To Disable a Pump Using the Load Screen

1. On the Main screen, select LOAD. The Load screen opens.
2. Select the pump button to toggle between the Pump 1 and Pump 2 screens.
3. Select the DISABLE PUMP radio button. The pump connected to the controller is now disabled.  
To re-enable the pump, select a program to run by creating one on the Main screen or by selecting a program from the Load screen.

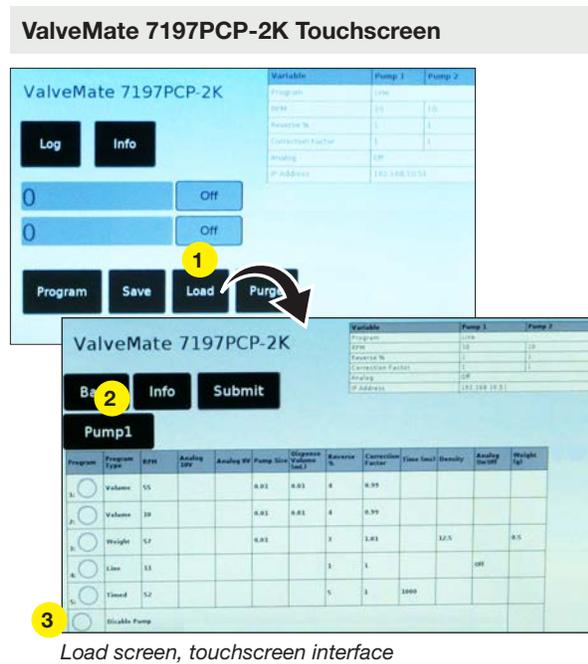

Load screen, touchscreen interface

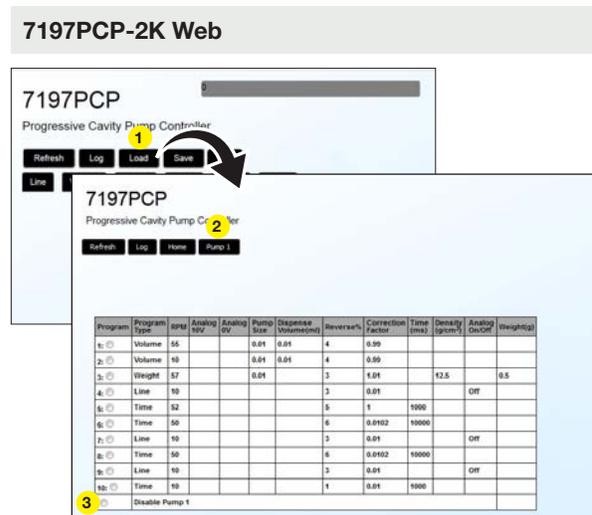


Load screen, web interface

### To Disable a Pump on a Program Screen (Touchscreen Only)

1. On the Line, Volume, Weight, Teach, or Time screen, select the pump to disable by toggling to the PUMP 1 or PUMP 2 screen.
2. Select the ENABLE [xxxxxx] PROGRAM radio button.  
**NOTE:** If you don't enable the program, Disable Pump will not work.
3. Select the DISABLE PUMP radio button, then select SUBMIT.  
The pump connected to the controller is now disabled. To re-enable the pump, deselect the DISABLE PUMP radio button, select the ENABLE [xxxxxx] PROGRAM radio button, then select SUBMIT.

**NOTE:** If you select the BACK button, the pump will be re-enabled.

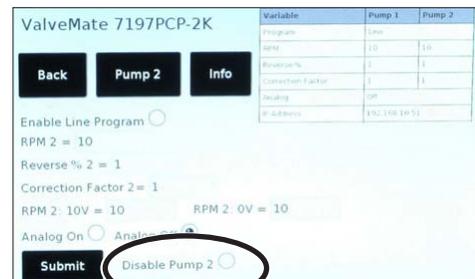

Location of the Disable Pump radio button on a program screen (touchscreen interface only)

## Operation (continued)


### Longterm Shutdown

For long periods of downtime or for storage, refer to the applicable pump manual to remove the pump stator(s). Removing the stator prevents rotor deformation.

### Firmware Update

Follow this procedure to update the firmware.

1. Create an Ethernet connection between the ValveMate 7197PCP-2K controller and a computer.
2. Go to [www.nordsonefd.com/VM7197PCP-2K](http://www.nordsonefd.com/VM7197PCP-2K) to download the latest firmware and the firmware update instructions.
3. Open a web browser (Chrome or Firefox are preferred) and go to the following URL:  
<http://192.168.10.51:8088/lface.php>.
4. Refer to the firmware update instructions to complete the update.

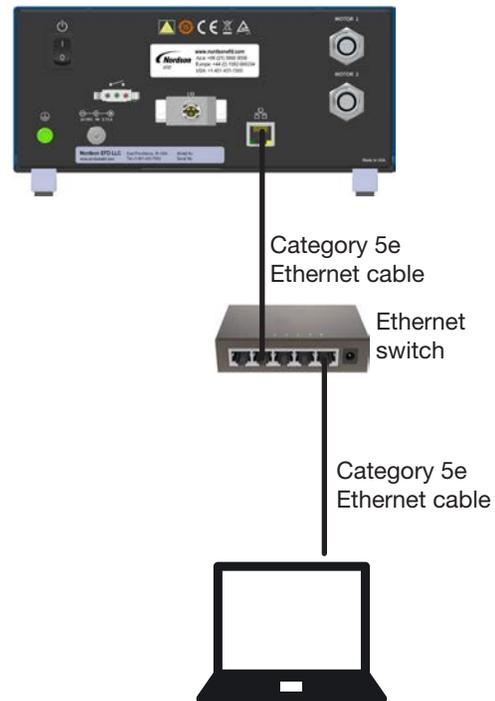

*Making the Ethernet connection between the ValveMate 7197PCP-2K and a computer*

## Part Numbers

### ValveMate 7197PCP-2K Controller



Part #	Description	Compatible Pump
7364177	ValveMate 7197PCP-2K Controller (includes foot pedal, and ESTOP jumper)	797PCP-2K
7014871	Kit, power cord*, American plug	n/a
7014872	Kit, power cord*, European plug	n/a
*Ordered separately.		

### 797PCP-2K Pumps and Pump Motor Cables

797PCP-2K pumps and the pump motor cables are ordered separately. Refer to the 797PCP-2K manual for part numbers.

## Accessories



Part #	Description
7364775	Breakout board and DB-15 cable (for Internet connectivity)

## Replacement Parts



Part #	Description
7014865	Foot pedal

# Troubleshooting



Use the troubleshooting table in this section, along with the system error log, to troubleshoot the dispensing system. Contact your Nordson EFD representative for assistance as needed.

## Viewing the Log

The log is a list of notable system events. Events are listed in ascending order, starting with the most recent event. The system stores up to 50 events before it starts to overwrite the oldest ones.

**NOTE:** Log entries are in English only.

1. On the Main screen, select LOG. The Log screen opens.  
The event number is shown in the left column. The event is described in the right column.
2. Select BACK (touchscreen) or HOME (web) to return to the Main screen.

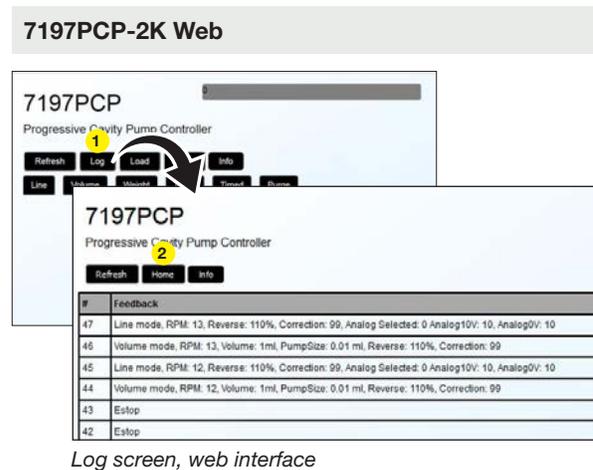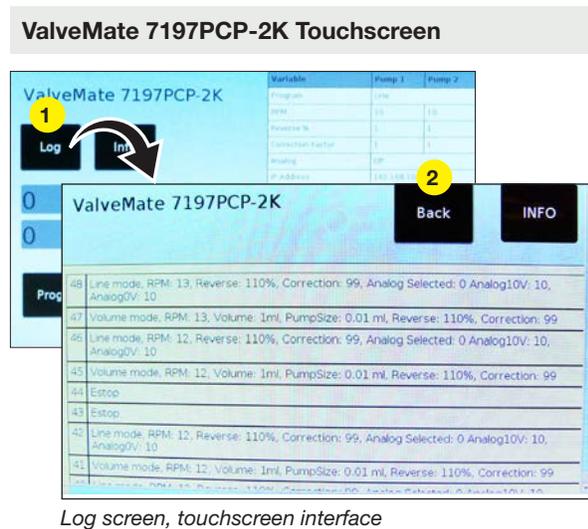

## Event Log Feedback Troubleshooting

Feedback	Possible Cause	Corrective Action
No motor feedback	Pump motor cable not connected, loose, or damaged	Disconnect and lock out power to the controller Ensure that the pump motor cable is properly connected. Replace the cable if it is damaged.
No counter feedback	Faulty printed circuit board	Cycle the controller power. If the problem persists, contact your Nordson EFD representative for assistance.
	Encoder feedback error	

## General Troubleshooting

Problem	Possible Cause	Corrective Action
Controller not powering on	Power supply not connected	Ensure that the power cord is properly connected.
Pump not dispensing	Foot pedal not connected or loose	Ensure that the foot pedal is properly connected.
	Pump motor cable not connected, loose, or damaged	Disconnect and lock out power to the controller Ensure that the pump motor cable is properly connected. Replace the cable if it is damaged.
	ESTOP signal not connected	Ensure that the ESTOP jumper is properly installed in the I/O port on the back of the controller.  The pump will dispense only if pins 1 and 2 (Estop_H and Estop_L) and connected.
Entered value will not save	Value not within range limits	The values entered for program variables must be within the specified range limits. Refer to the information table for each program type for range limits.
	Program not enabled	Ensure that the program is enabled by selected the enable / disable radio button; program variables can be changed only after a program is enabled.

## Technical Data

### I/O Port Pin Assignments and Wiring Diagrams


If desired, you can use a breakout board and DB-15 cable to make connections to the I/O port on the back of the controller. Contact your Nordson EFD representative for assistance.

- All outputs are rated at 70 mA.
- Inputs / outputs can be wired as either sinking or sourcing.
- Inputs / outputs can use either the courtesy 24 VDC power source at pin 15 or an external 24 VDC source.
- All inputs can be wired as shown in this section. Outputs are configured only for 24 VDC sourcing, but the source can be either pin 15 or an external source. To use the courtesy 24 VDC power source for the output signals, connect to pins 14 and 15. To use an external power source, connect to pin 14.

#### I/O Port Pin Assignments

**NOTE:** Do not connect the system ground (pin 9) and the analog ground (pin 13) together.

I/O Pin	Direction	Assignment
1	Source	Estop_H
2	Input	Estop_L
3	Input	NC (not connected)
4	Input	NC (not connected)
5	Input	Ex_Trig (+)
6	Input	Ex_Trig (-)
7	Output	Error (output)
8	Output	Running (out)
9	n/a	GND
10	Input	Purge (+)
11	Input	Purge (-)
12	Input	Analog in (0–10V)
13	n/a	Analog GND
14	Input	External 24V input
15	Output	24 VDC (100 mA) out

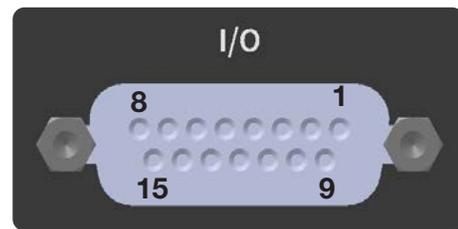


# Technical Data (continued)


## I/O Port Pin Assignments and Wiring Diagrams (continued)

**NOTE:** The breakout board shown in these diagrams is an optional component available to facilitate wiring connections to the I/O port. A DB-15 cable is also required. Both components are available in a kit (P/N 7364775).


### Sourcing Wiring Diagram for Connecting the Cycle Initiate (Ex\_Trig)

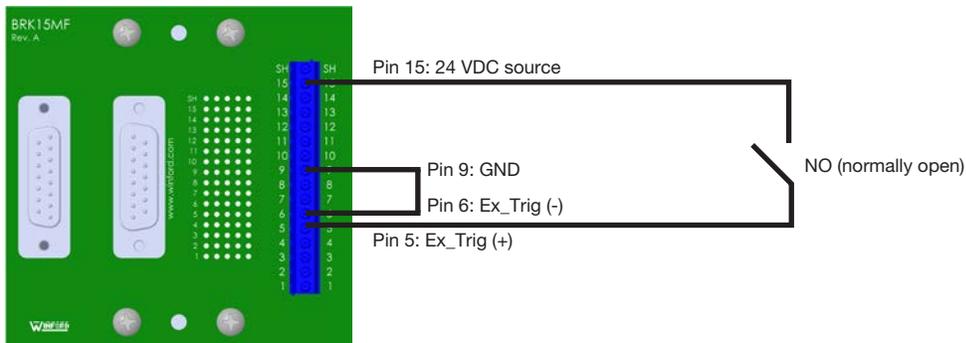

### Sinking Wiring Diagram for Connecting the Cycle Initiate (Ex\_Trig)

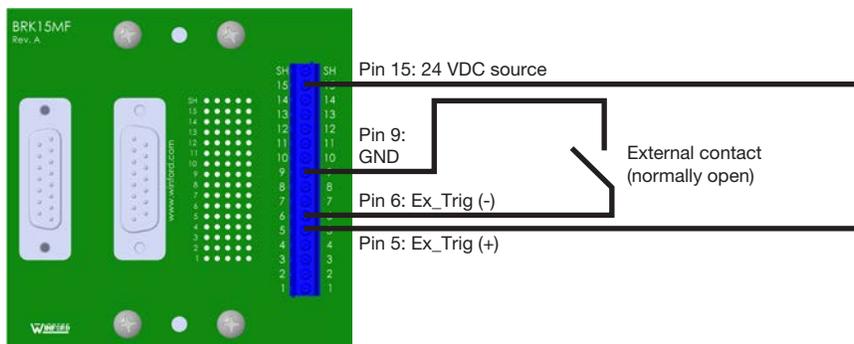

### Wiring Diagram for Connecting the Emergency Stop (ESTOP) Circuit

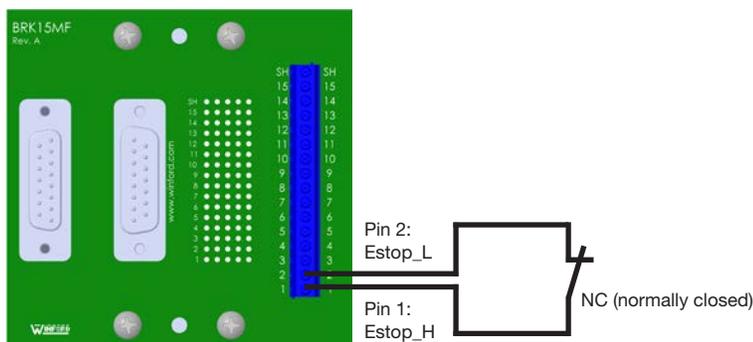


## Technical Data (continued)


**NOTE:** The breakout board shown in these diagrams is an optional component available to facilitate wiring connections to the I/O port. A DB-15 cable is also required. Both components are available in a kit (P/N 7364775).

### Wiring Diagrams for Connecting the PURGE Initiate Circuit

#### Sourcing

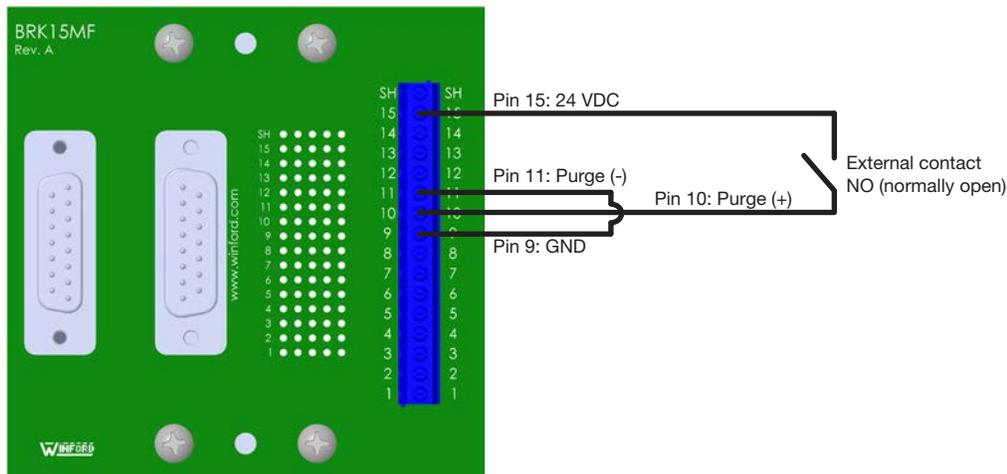

#### Sinking

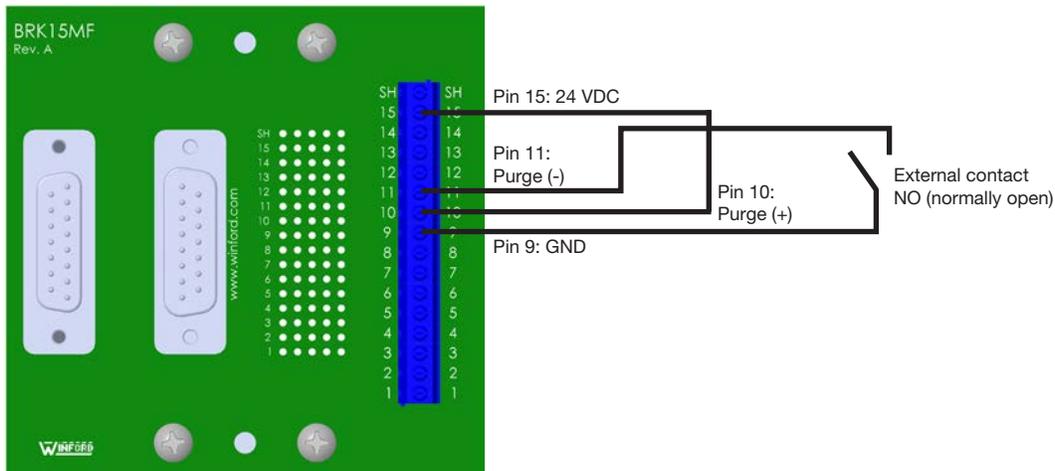


## Technical Data (continued)

### Maximum Motor Speed Based on Viscosity

Based on the viscosity of the dispensing material, ensure that the motor speed does not exceed the maximum RPM shown in the table and graph below.


**Example:** If the dispensing material has a viscosity of 8,000 mPa s, the RPM setting should be no higher than 135 RPM (90% of the allowable maximum setting of 150 RPM).

Viscosity	Percentage of Maximum RPM
1–800 mPa s	100%
800–10,000 mPa s	90%
10,000–25,000 mPa s	70%
25,000–50,000 mPa s	50%
50,000–150,000 mPa s	25%

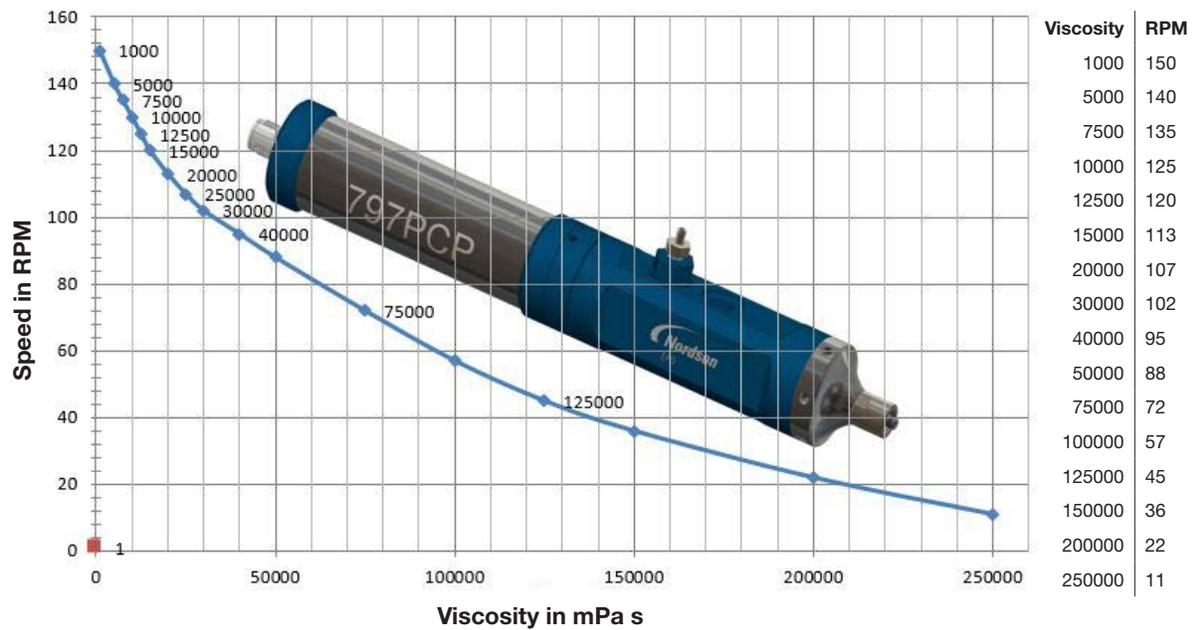

# Technical Data (continued)

## Motor Port Pin Assignments

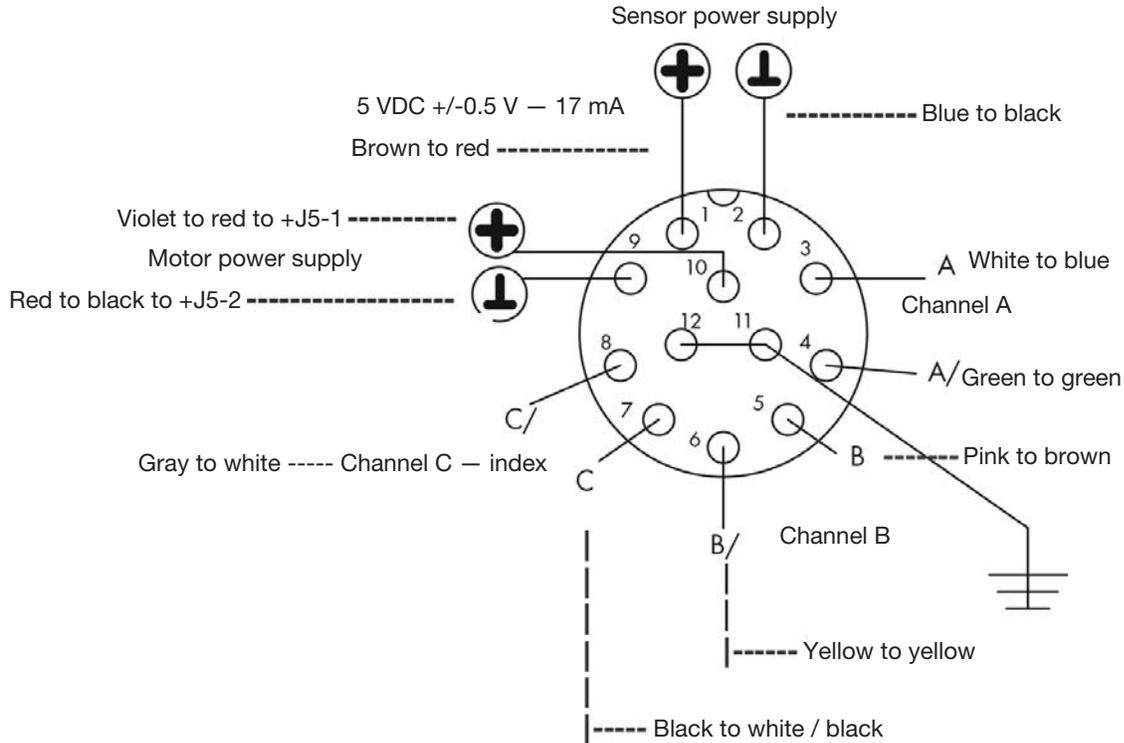


## Appendix A, Changing the IP Address of a Computer


Each computer in a 797PCP-2K system must have a unique IP address. Follow this procedure to change the IP address of a computer.

**NOTE:** To change the IP address of the ValveMate 7197PCP-2K controller, refer to “Defining the Controller Network Settings” on page 40.

1. On your computer, navigate to the “Network and Sharing Center.”
2. Click “Change Adapter Settings.”

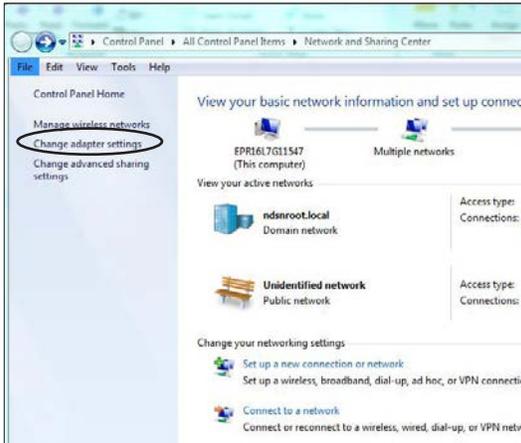


Windows® 7

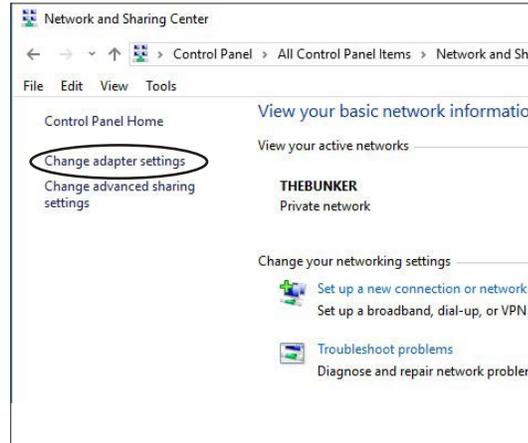


Windows 10

3. Select “Local Area Connection” (Windows 7) or “Ethernet” (Windows 10).

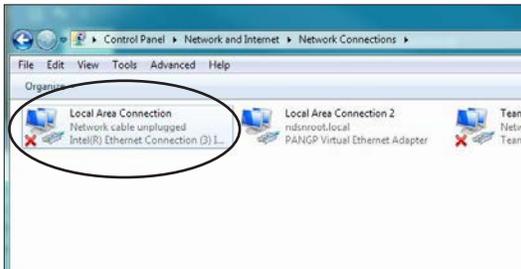


Windows 7

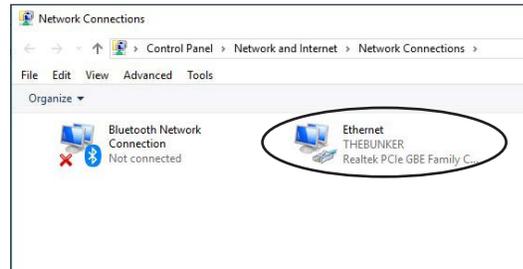


Windows 10

4. Double-click (Windows 7) or right-click (Windows 10) to select “Properties.”

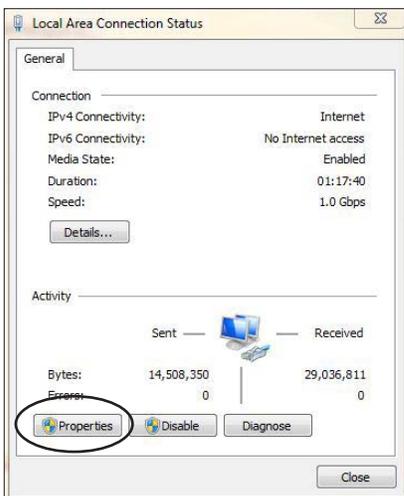


Windows 7

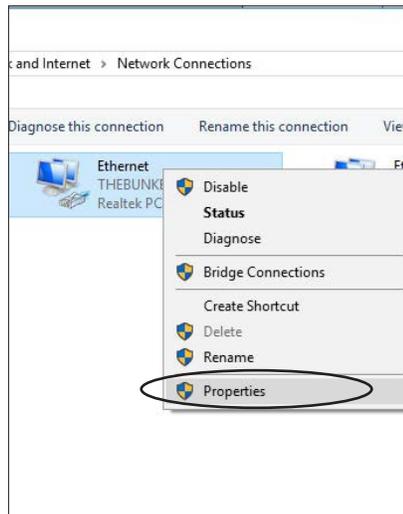


Windows 10

## Appendix A, Changing the IP Address of a Computer (continued)

5. Double-click “Internet Protocol Version 4 (TCP/IPv4).”

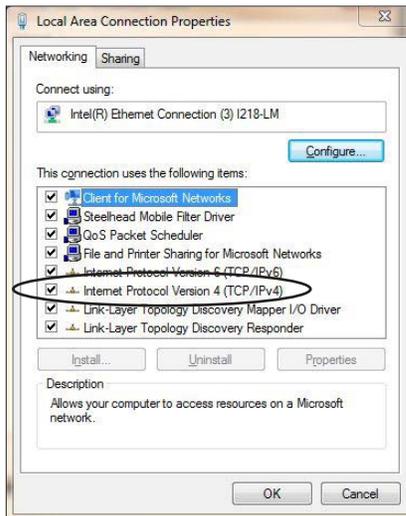

Windows 7

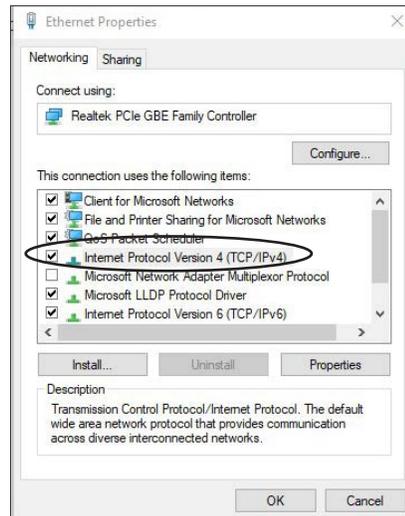


Windows 10


6. Click “Use the following IP address” and then enter the desired IP address.

**NOTE:** In this example, the entered IP address is 192.168.10.55. Because the IP address of the controller is 192.168.10.51, no IP conflicts can occur because the IP addresses are different. If you want to set up multiple controllers on one network, each controller and computer must have a unique IP address. The digit range for each field is 1–255.

7. Click OK > OK to save the new IP address.

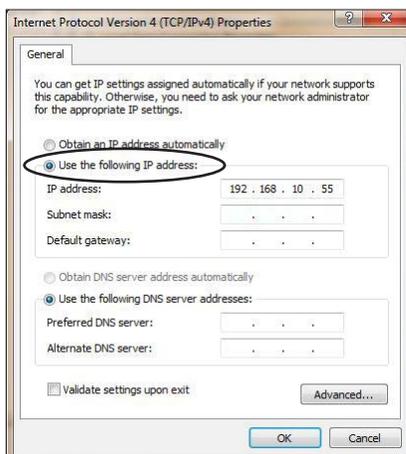

Windows 7

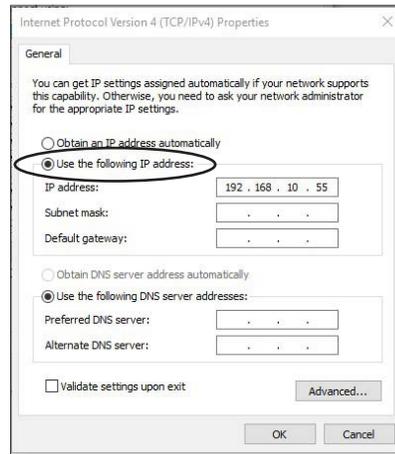

Windows 10

## Appendix B, Example Volume Program

This appendix provides an example setup of a Volume program for a two-component (2K) application. This example assumes that the proper procedures have been completed to remove all trapped air from the system and that the static mixer is not installed. To achieve a correct 2K mix, each component (fluid) must be dispensed and weighed individually and a correction factor calculated.

**The application used for this example has the following characteristics:**

- A mix ratio of 10:3 (A:B by weight)
- Two (2) pumps with 0.01 mL/rev rotors / stators (this is the Pump Size variable)
- Part A (epoxy) has a specific gravity of 1.2 and a viscosity of 8,000 mPa s
- Part B (catalyst) has a specific gravity of 1.01 and a viscosity of 20 mPa s


**NOTE:** For Line programs, Nordson EFD recommends following the example in this appendix to determine the Correction Factor. Then, for the RPM 1 and RPM 2 values, you can enter the fluid ratio. In this case, the RPM for Pump 1 (Part A) would be 130, and the RPM for Pump 2 (Part B) would be 39.

### Determine the Maximum Motor Speed

Consult the table below to determine the maximum operating RPM for each component. Based on a viscosity of 8,000 mPa s, the maximum RPM allowed for Part A is 130. Part B has no restrictions, so its maximum RPM is 150.

Viscosity	Percentage of Maximum RPM*
1–800 mPa s	100%
800–10,000 mPa s	90%
10,000–25,000 mPa s	70%
25,000–50,000 mPa s	50%
50,000–150,000 mPa s	25%

\*The RPM setting range is 10–150.

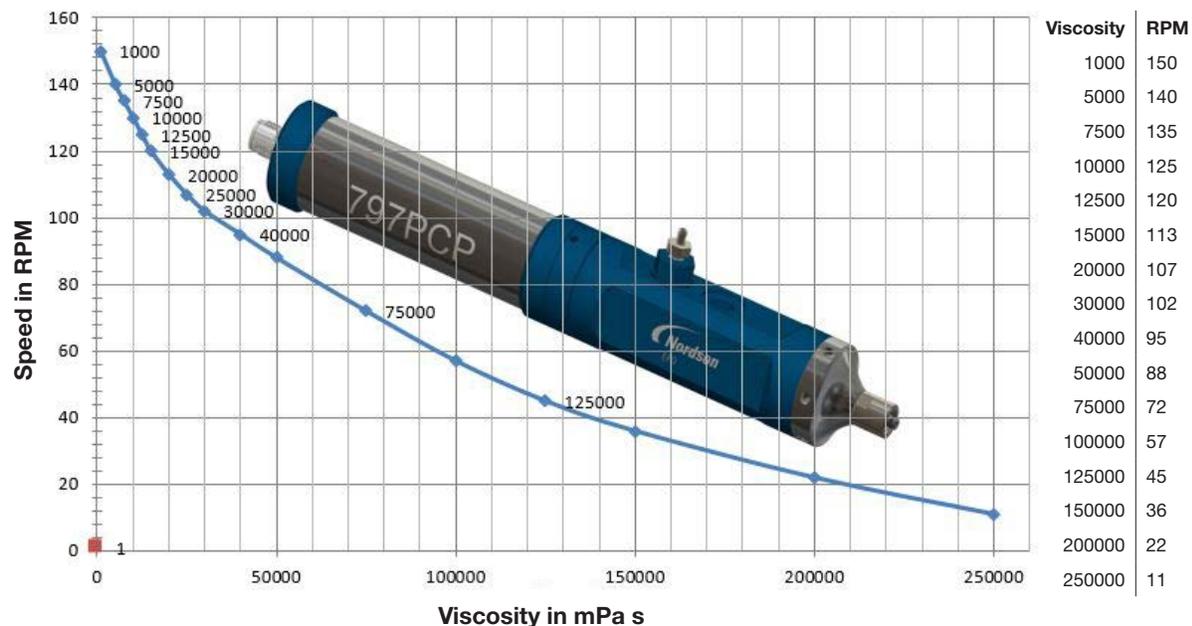

## Appendix B, Example Volume Program (continued)

### Determine a Target Weight for Each Component

For Part A, which has a specific gravity of 1.2, use a target dispense volume (mL) of 1 rotation (0.01 mL) to determine a target weight of 12 mg, as shown by the following equation:

$$\text{Weight (g)} = \text{Specific gravity} \times \text{Volume dispensed} = 1.2 \frac{\text{g}}{\text{mL}} \times 0.01 \text{ mL} = 12 \text{ mg}$$

For Part B, which has a specific gravity of 1.01, use a target dispense volume (mL) of 1 rotation (0.01 mL) to determine a target weight of 10.1 mg, as shown by the following equation:

$$\text{Weight (g)} = \text{Specific gravity} \times \text{Volume dispensed} = 1.01 \frac{\text{g}}{\text{mL}} \times 0.01 \text{ mL} = 10.1 \text{ mg}$$

### Determine Values for RPM 1 (Part A) and RPM 2 (Part B)

The maximum RPM for Part A is 130. If you enter 130 for RPM 1 (Part A), then, based on a mix ratio of 10:3, the correct RPM for Part B is 39, as shown by the following equation:

$$\text{Part B RPM} = \frac{\text{Part B ratio}}{\text{Part A ratio}} \times \text{Part A RPM} = \frac{3}{10} \times 130 = 39 \text{ RPM}$$

**NOTE:** The RPM values can be set to any ratio that is equivalent to 130:39 as long as the maximum RPM is not exceeded (in this example, a maximum of 130). For example, RPM 1 (Part A) could be set to 100 and RPM 2 (Pump B) could be set to 35. Round RPM values to nearest whole integer.

## Appendix B, Example Volume Program (continued)

### Pump 1: Use the Deposit Weight After One Rotation to Determine the Correction Factor


- Open the Volume screen for Pump 1 and enter the following values:
  - RPM 1 = 130
  - Reverse % 1 = 0
  - Dispense Volume (mL) 1 = 0.01
  - Pump Size 1 = 0.01 mL
  - Correction Factor 1 = 1
- Disable Pump 2 (Main > Load > Disable Pump 2).
- Make five deposits of Part A, ensuring that a representative amount of fluid has dispensed each time.
- Weigh the amount of all five deposits.
- Divide the weight amount by 5.
- Use the following formula to determine a Correction Factor:

$$\text{Correction Factor} = \frac{\text{Target weight}}{\text{Measured weight}}$$

**Example:** If the target weight was 12 mg and the average weight of the five deposits was 12.2 mg, then:

$$\text{Correction Factor} = \frac{12 \text{ mg}}{12.2 \text{ mg}} = 0.98$$

- On the Volume screen, enter 0.98 for Correction Factor 1.

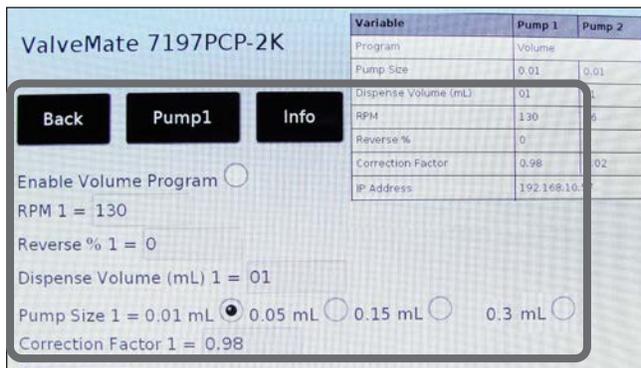

Volume screen for Pump 1 (touchscreen interface shown)

## Appendix B, Example Volume Program (continued)

### Pump 2: Use the Deposit Weight After One Rotation to Determine the Correction Factor


- Toggle the Volume screen to Pump 2 and enter the following variables for Pump 2:
  - RPM 2 = 39
  - Reverse % 2 = 0
  - Dispense Volume (mL) 2 = 0.01
  - Pump Size 2 = 0.01 mL
  - Correction Factor 2 = 1
- Disable Pump 1 (Main > Load > Disable Pump 1).
- Make five (5) deposits of Part B, ensuring that a representative amount of fluid has dispensed each time.
- Weigh the amount of all five deposits.
- Divide the weight amount by 5.
- Use the following formula to determine a Correction Factor:

$$\text{Correction Factor} = \frac{\text{Target weight}}{\text{Measured weight}}$$

**Example:** If the target weight was 10.1 mg and the average weight of the 5 deposits was 9.8 mg, then:

$$\text{Correction Factor} = \frac{10.1 \text{ mg}}{9.8 \text{ mg}} = 1.02$$

- On the Volume screen, enter 1.02 for Correction Factor 2.

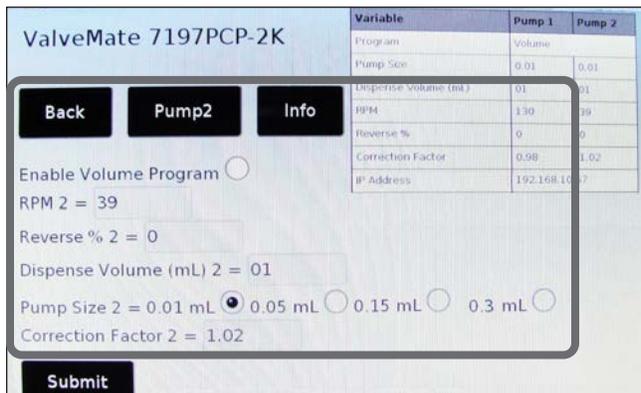

Volume screen for Pump 2 (touchscreen interface shown)

## Appendix B, Example Volume Program (continued)

### Install the Mixer and Test the Process

Now that the Correction Factors have been determined, install the static mixer. Nordson EFD recommends filling the mixer with the pumps inverted (upside down) to fully remove any trapped air in the static mixer. Ensure that the mixer is filled with the intended ratio. The target volume per dispense in this application based on the weight will be 0.1 mL for part A and 0.03 mL for part B, which also observes the required ratio 10:3.

This application has a minimum process time of:

$$t \text{ (min)} = \frac{\text{Dispense Volume}}{\text{RPM} \times \text{rotor / stator size}} = \frac{0.1 \text{ mL}}{120 \text{ rev/min} \times 0.01 \text{ mL/rev}} = 0.08 \text{ min (or 5 s)}$$

If a faster process time is needed, you can increase the size of the pump for part A. The next pump size up is 0.05 mL/rev. With this pump size, achieving the same volume will require only 2 revolutions of the rotor / stator. This would change the pump RPM ratio to 2:3, but the volume ratio will stay the same. With this new ratio, you can increase the RPM for Part B to a maximum of 150, and you can increase the RPM for Part A to 100. The new minimum process time will be:

$$t \text{ (min)} = \frac{\text{Dispense Volume}}{\text{RPM} \times \text{rotor / stator size}} = \frac{0.1 \text{ mL}}{100 \text{ rev/min} \times 0.05 \text{ mL/rev}} = 0.02 \text{ min (or 1.2 s)}$$



## NORDSON EFD ONE YEAR LIMITED WARRANTY

This Nordson EFD product is warranted for one year from the date of purchase to be free from defects in material and workmanship (but not against damage caused by misuse, abrasion, corrosion, negligence, accident, faulty installation, or by dispensing material incompatible with equipment) when the equipment is installed and operated in accordance with factory recommendations and instructions.

Nordson EFD will repair or replace free of charge any defective part upon authorized return of the part prepaid to our factory during the warranty period. The only exceptions are those parts which normally wear and must be replaced routinely, such as, but not limited to, valve diaphragms, seals, valve heads, needles, and nozzles.

In no event shall any liability or obligation of Nordson EFD arising from this warranty exceed the purchase price of the equipment.

Before operation, the user shall determine the suitability of this product for its intended use, and the user assumes all risk and liability whatsoever in connection therewith. Nordson EFD makes no warranty of merchantability or fitness for a particular purpose. In no event shall Nordson EFD be liable for incidental or consequential damages.

This warranty is valid only when oil-free, clean, dry, filtered air is used, where applicable.



For Nordson EFD sales and service in over 40 countries, contact Nordson EFD or go to [www.nordsonefd.com](http://www.nordsonefd.com).

**Global**

800-556-3484; +1-401-431-7000  
[info@nordsonefd.com](mailto:info@nordsonefd.com)

**Europe**

00800 7001 7001  
[infoefd.europe@nordsonefd.com](mailto:infoefd.europe@nordsonefd.com)

**Asia**

China: +86 (21) 3866 9006; [china@nordsonefd.com](mailto:china@nordsonefd.com)  
India: +91 80 4021 3600; [india@nordsonefd.com](mailto:india@nordsonefd.com)  
Japan: +81 03 5762 2760; [japan@nordsonefd.com](mailto:japan@nordsonefd.com)  
Korea: +82-31-736-8321; [korea@nordsonefd.com](mailto:korea@nordsonefd.com)  
SEAsia: +65 6796 9522; [sin-mal@nordsonefd.com](mailto:sin-mal@nordsonefd.com)

Windows is a registered trademark of Microsoft Corporation.  
The Wave Design is a trademark of Nordson Corporation.  
©2023 Nordson Corporation 7364843 v101323