

Ultimus I and II Dispenser

Pressure Readout, Vacuum Readout, and Dispense Timer Validation Instructions

Introduction

These instructions provide the pressure, vacuum, and dispense timer validation procedures for the following dispensers:

- Ultimus™ I: P/N 7017041
- Ultimus II: P/N 7002003

Specification List

Model	Pressure Accuracy	Vacuum Accuracy	Timer Accuracy
Ultimus I	±2.0 psi, 0–100 psi	±2.0 inH ₂ O, 0–6 inH ₂ O	±0.05%
Ultimus II	±0.3 psi, 0–15 psi	±2.0 inH ₂ O, 0–6 inH ₂ O	±0.05%

Required Tools and Supplies

The following equipment is required for the performance of these procedures.

#	Description	Minimum Accuracy Requirement	Suggested Equipment	Purpose
1*	Precision pressure and vacuum test gauge	±0.05 psi at 0–100 psi ±0.33" H ₂ O	Fluke, model 700G06 pressure and vacuum test gauge	Reference standard for 100/15 psi pressure and 6" H ₂ O vacuum
2	0–100 psi test gauge, ±0.25% full scale accuracy	±0.25 psi	WIKA®, model 312.20 6, P/N 9746892	Reference standard for validating the Ultimus I pressure readout
3	0–15 psi test gauge, ±0.25% full scale accuracy	±0.05 psi	WIKA®, model 312.20 6, P/N 9746867	Reference standard for validating the Ultimus II pressure readouts
4	Slack tube manometer, 18-0-18"	±0.33" H ₂ O	Dwyer Instruments, model 1211-36	Reference standard for validating the Ultimus I and II vacuum readouts
5	Function generator, triggered 10 s pulse, ±1 ppm accuracy	±20 ppm for a 10 s triggered pulse; 5–24V for ON, 0V for OFF Load: 1,200 ohms	Tektronix®, AFG 3021B	Reference standard for validating the Ultimus I and II dispense timer

*Item 1 is the preferred equipment and can be used in place of items 2–4. When item 1 is used, only item 5 is also required.

Optional Accessory

The following recommended Nordson EFD accessory is available to support the performance validation and field validation of the vacuum display.

Accessory	Description	Nordson EFD Part Number	Purpose
Input / output (I/O) cable, Ultimus I, II	8-pin DIN cable, color coded leads, stripped and tinned lead ends, 1.9 m (6 ft)	7017143	Connection to Ultimus I or II from the function generator for validation of the dispense timer

Pressure Readout Validation

The Ultimus I-II digital pressure readings are validated against a pressure standard with a known minimum accuracy. The pressure standard must be at least ± 0.25 psi for Ultimus I and ± 0.05 psi for Ultimus II. Refer to the equipment list for suitable test gauges. The digital pressure readout accuracy specification of the Ultimus I-II is $\pm 2.0\%$ of full scale range. Each of the five pressure validation points are applied and confirmed by the calibrated pressure standard. Maximum readout deviation, as observed on the Ultimus digital pressure display, at any of the five points is listed in the table below.

Pressure Readout Performance Validation Points

The following table provides the pressure validation points and maximum deviation for Ultimus I-II digital pressure readings.

Product Model	Verification Points (psi)	Maximum Deviation
Ultimus I (100 psi)	20, 40, 60, 80, 95	± 2.0 psi
Ultimus II (15 psi)	2, 6, 9, 12, 15	± 0.3 psi



Validation Procedure

Refer to the Ultimus Operating Manual and Quick Start Guide for connection and setup instructions.

1. Connect a foot pedal to the foot pedal port on the rear panel.
2. Set the air pressure to the minimum setting by turning the pressure regulator knob fully counterclockwise.
3. Set the vacuum to the minimum setting by turning the vacuum regulator knob fully counterclockwise.
4. Verify that the rear panel exhaust port is open.
5. Connect the 100 psi or 15 psi test gauge to the front or rear panel air output port.
6. Connect the dispenser air input to a 100 psi regulated air supply.
7. Plug the power supply DC connector into the rear panel power input port.
8. Plug the power supply into an AC power source.
9. Press the power switch to power ON the Ultimus dispenser.
10. Select STEADY mode using the Ultimus screen and/or menu controls.
11. Select "psi" for pressure units using the Ultimus menu controls.
12. Press and hold the foot pedal.
13. Adjust the pressure regulator to the first verification point specified in the "Pressure Readout Performance Validation Points" on page 2 as monitored on the test gauge.
NOTE: Adjust to verification points in a clockwise direction, never counterclockwise.
14. Ensure that the test gauge reading is exact by releasing and pressing the foot pedal, adjusting the pressure regulator if necessary, to attain a repeatable pressure.
15. Record the pressure reading from the Ultimus digital display.
16. Release the foot pedal.
17. Repeat steps 12 through 16 for all verification points.
18. Evaluate the five pressure digital display readings against the maximum deviation criteria shown in the "Pressure Readout Performance Validation Points" on page 2.



Validation Procedure (continued)

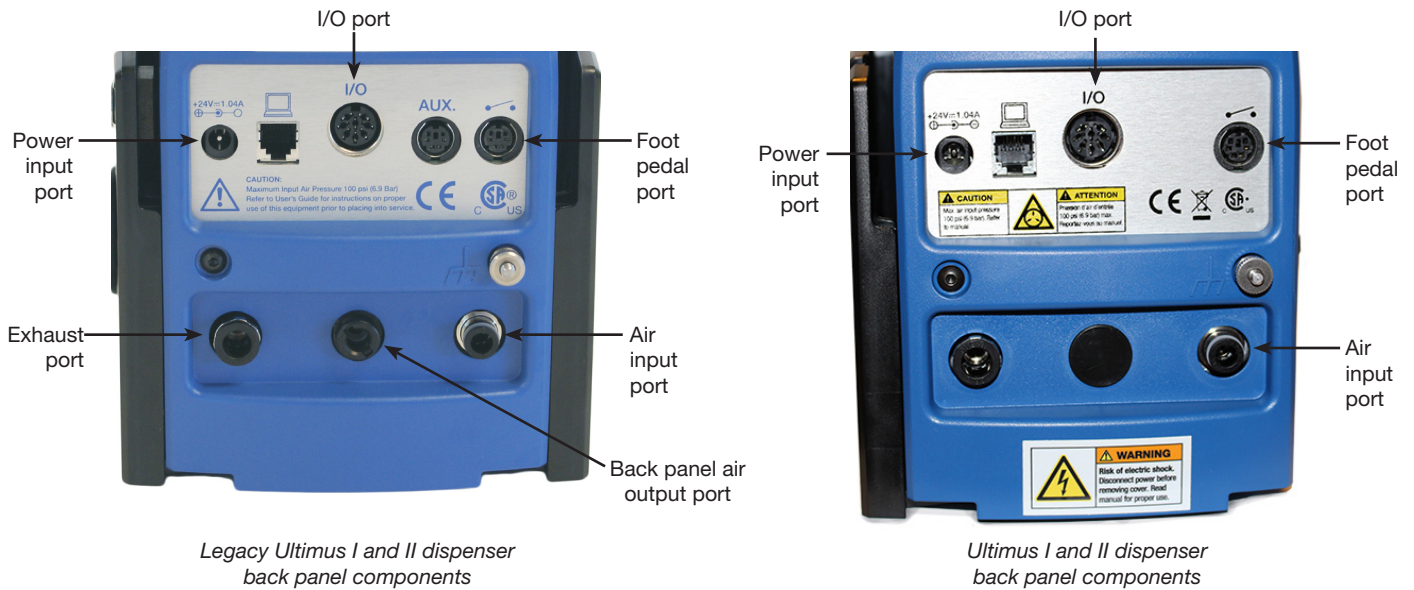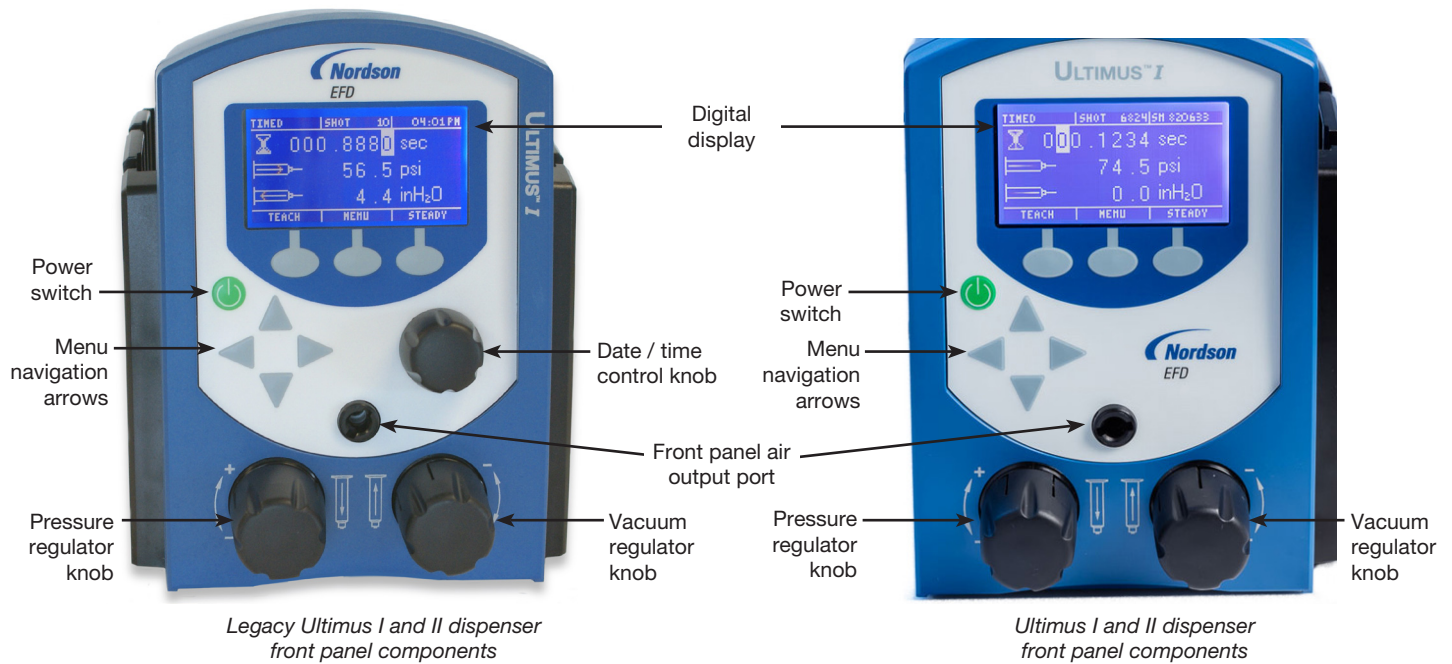

Vacuum Readout Validation

The Ultimus I-II digital vacuum readings are validated against a calibrated vacuum standard. Accuracy of the standard must be at least ± 0.33 inH₂O. Refer to the equipment list for a suitable vacuum test instrument. The digital vacuum readout accuracy specification of the Ultimus I-II is ± 2.0 inH₂O. Each of the vacuum verification points are applied and confirmed by the calibrated vacuum standard. The Ultimus I-II exhaust port must be unobstructed for this assessment. Maximum readout deviation, as observed on the Ultimus digital vacuum display, at any of the verification points is ± 2.0 inH₂O.

Vacuum Readout Performance Validation Points

The following table provides the vacuum validation points and maximum deviation for Ultimus I-II digital vacuum readings.

Product Model	Verification Points (inH ₂ O)	Maximum Deviation
Ultimus I or II	2, 6	± 2.0 inH ₂ O

Validation Procedure

Refer to the Ultimus Operating Manual and Quick Start Guide for connection and setup instructions.

1. Set the air pressure to the minimum setting by turning the pressure regulator knob fully counterclockwise and pushing the knob to lock the setting.
2. Set the vacuum to the minimum setting by turning the vacuum regulator knob fully counterclockwise.
3. Connect the vacuum test instrument to the front or rear panel air output port.
4. Verify that the rear panel exhaust port is open.
5. Connect the dispenser air input to a 100 psi regulated air supply.
6. Plug the power supply DC connector into the rear panel power input port.
7. Plug the power supply into an AC power source.
8. Press the power switch to power ON the Ultimus dispenser.
9. Select "inH₂O" for vacuum units using the Ultimus menu controls.
10. Adjust the vacuum regulator to the first verification point specified in the "Vacuum Readout Performance Validation Points" on page 4 as monitored on the vacuum test instrument.
11. Ensure that the reading on the vacuum test instrument is exact, adjusting if required.
12. Record the vacuum reading from the Ultimus digital display.
13. Repeat steps 10 through 12 for all verification points.
14. Evaluate the vacuum digital display readings against the maximum deviation criteria shown in the "Vacuum Readout Performance Validation Points" on page 4.



Dispense Timer Validation

The accuracy specification of the Ultimus I-II dispense timer is $\pm 0.05\%$ of the selected time setting. Validation of the Ultimus I-II dispense timer is performed by comparing an external time pulse that is known to be accurate to the internal timing reference of the Ultimus I-II. This timing reference establishes the dispense timer accuracy of the Ultimus I-II. The external time pulse is wired to the "Voltage Initiate" circuit on pins 1 and 2 of the I/O connector and measured by the Ultimus I-II TEACH feature.

The measured TEACH result shown on the Ultimus I-II display will be: External Pulse Time minus 0.0060 s (seconds).

Ultimus I-II dispensers add 0.0060 s to all dispense times to compensate for solenoid lag.

Tektronix AFG 3021B Function Generator Setup

The Tektronix AFG 3021B function generator, or an other verified pulse generator, can be used. Setup for an AFG 3021B is provided below. A single external time pulse of 10.0 s is specified to provide a high-resolution measurement.

Function:	Pulse
Run Mode:	Burst, N-Cycle = 1
Frequency/Period:	Period, Period = 12.00000000 s
Duty/Width:	Width, Width = 10.000 s
Amplitude/High:	High, High = 10.00 v
Offset/Low:	Low, Low = 0 mv
Output Menu:	Load = High Z, Noise Add = Off
Output:	50 ohm connector
Channel Button:	ON to Enable Trigger
Trigger:	Manual, Panel Button

Validation Procedure

Refer to the Operating Manual for instructions on connecting to the I/O connector and for using the TEACH mode.

1. Configure the pulse generator as described above.
2. Connect the pulse generator output to pins 1 and 2 of the I/O connector.
3. Plug the power supply DC connector into the rear panel power input port.
4. Plug the power supply into an AC power source.
5. Press the power switch to power ON the Ultimus dispenser.
6. Select the TEACH mode.
7. The time display should be zero. If not, press the CLEAR button.
8. Initiate the external 10 s time pulse:
 - The Ultimus I-II time display will ideally read 9.9940 s at the conclusion of the 10.0 s initiate pulse.
 - For a 10 s initiate pulse, the acceptable readout range is 9.9890 to 9.9990 s $[(10.0 - 0.006) \pm 0.005 \text{ s}]$.





EFD

For Nordson EFD sales and service in over 40 countries,
contact Nordson EFD or go to www.nordsonefd.com.

Global

800-556-3484; +1-401-431-7000
info@nordsonefd.com

Europe

00800 7001 7001
infoefd.europe@nordsonefd.com

Asia

China: +86 (21) 3866 9006; china@nordsonefd.com
India: +91 80 4021 3600; india@nordsonefd.com
Japan: +81 03 5762 2760; japan@nordsonefd.com
Korea: +82-31-736-8321; korea@nordsonefd.com
SEAsia: +65 6796 9522; sin-mal@nordsonefd.com

Tektronix is a registered trademark of Tektronix, Inc.
©2024 Nordson Corporation 7028813 v120324