

AltaPUR™ Slug Melter

Customer Product Manual

Part 1126381_01

Issued 03/18



This document contains important safety information.
Be sure to read and follow all safety information in this
document and any other related documentation.



NORDSON CORPORATION • DULUTH, GEORGIA • USA
www.nordson.com

For CE Declaration, refer to equipment documentation.

Nordson Corporation welcomes requests for information, comments, and inquiries about its products. General information about Nordson can be found on the Internet using the following address: <http://www.nordson.com>.

Address all correspondence to:

Nordson Corporation
Attn: Customer Service
11475 Lakefield Drive
Duluth, GA 30097

Notice

This is a Nordson Corporation publication which is protected by copyright. Original copyright date 2017.
No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of Nordson Corporation. The information contained in this publication is subject to change without notice.

Trademarks

Allegro, Apogee, Artiste, Asymtek, Automove, Avex, BaitGun, BKG, Blue Box, BM-32, BM-58, BM-63, Bowtie, Build-A-Part, CF, Century, CleanSleeve, CleanSpray, Color-on-Demand, ColorMax, Conexis, Connections to Life, Contour, Control Coat, Coolwave, Cross-Cut, CrystalCut, Dage, Dima, DispenseJet, DispenseMate, DuraBlue, DuraDrum, DuraPail, e.dot, e-stylized, Easymelt, Ecodry, Econo-Coat, EDI, EFD, Eliminator, Encore, Equatherm, Excel 2000, Fibrijet, Fluidmove, FoamMelt, FoamMelt - stylized, FoamMix, Freedom, Fulfill, HDLV, Heli-flow, iControl, iDry, iFlow, IntelliJet, Isocore, Iso-Flo, iTrax, KISS, Lean Cell, LogiComm, March, Matrix, MatriX, Maverick, Measuring the Invisible, MEG, Meltex, MicroCoat, MicroMark, Micromedics, Micro-Meter, Microshot, Millennium, MiniBlue, Mini Squirt, NexJet, No-Drip, Nordson, Nordson - stylized, Nordson and Arc, OptiMix, Optima, Optimum, Package of Values, Paragon, PermaFlo, PICO, Plasmod, Poly-Check, Polymer Solution Casting, Porous Coat, Posi-Dose, PowderGrid, Precisecoat, PrintPlus, ProBlue, ProBlue Liberty, Prodigy, Pro-Flo, Program-A-Bead, Program-A-Shot, Program-A-Stream, Program-A-Swirl, Pro-Meter, Pulsar, Quantum, Ratio-Pak, RBX, RediSet, Rhino, Saturn, Saturn with Rings, Scoreguard, Sealant Equipment & Engineering, Inc., SEE (and design), See-Flo, Select Charge, Select Coat, Select Cure, Servo-Flo, Shot-A-Matic, Signature - stylized, Slaughterback, Smart-Coat, Smart-Gun, SolderPlus, Spectrum, Speed-Coat, StediFlo, Stratablend, SureBead, Sure Coat, SureWrap, Tip-Seal, TRAK, Tribomatic, Trilogy, TrueBlue, TrueCoat, Turbo, Ultra, u-TAH, Value Plastics, Vantage, Vention Medical, Vention Medical Advancing Your Innovations For Health, VersaBlue, Versa-Coat, VersaDrum, VersaPail, Versa-Spray, VP stylized, When you expect more., X-Plane, Xaloy, Xaloy - stylized, YesTech, and 2 Rings (design) are registered trademarks of Nordson Corporation.

Accubar, Active Nozzle, Advanced Plasma Systems, AeroDeck, AeroWash, AirShield, AltaBlue, AltaSlot, Alta Spray, ATS, Auto-Flo, Autoflex, AutoScan, Axiom, Best Choice, Better Dispensing, Blue Series, Bravura, CanPro, Champion, Check Mate, Classic IX, ClassicBlue, Clean Coat, Cobalt, Concert, ContourCoat, Control Weave, Controlled Fiberization, CPX, cScan+, cSelect, Cyclo-Kinetic, Dial-A-Dose, DispensLink, Dry Cure, DuraBraid, DuraCoat, DuraPUR, e.dot+, Emerald, E-Nordson, Easy Clean, EasyOn, EasyPW, Eclipse, EcoBead, EdgeControl, Equalizer, Equi-Bead, FillEasy, Fill Sentry, FlexSeam, Flow Coat, FluxPlus, G-Net, G-Site, Genius, Get Green With Blue, Horizon, Inspire, iON, Iso-Flex, iTrend, Lacquer Cure, LightTite, Maxima, Mesa, MicroFin, MicroMax, Mikros, MiniEdge, Minimeter, MiniPUR, Multifill, MultiScan, Myritex, Nano, OmniScan, OptiStroke, Optix, Partnership+Plus, PatternJet, PCI, PharmaLok, PicoDot, Pinnacle, Powder Pilot, Powder Port, Powercure, Process Sentry, Pulse Spray, PURBlue, PReOne, PURJet, Qadence, Ready Coat, RediCoat, RolIVIA, Royal Blue, Select Series, Sensomatic, Shaftshield, SheetAire, Smart, Smartfil, SolidBlue, Spectral, SpeedKing, Spray Works, StediTherm, StrokeControl, Summit, SureFoam, Sure Mix, SureSeal, Swirl Coat, TAH, Trade Plus, ThruCoat, ThruCure, ThruWave, Trio, TruFlow, Ultraflex, Ultrasaver, Ultrasmart, Unity, UNITYMotion, Universal, Ultra FoamMix, UltraMax, ValueMate, Versa, VersaPUR, Vista, VP Quick Fit, VP Quick-Fit stylized, Web Cure, 781Mini, and 787Mini are trademarks of Nordson Corporation.

Designations and trademarks stated in this document may be brands that, when used by third parties for their own purposes, could lead to violation of the owners' rights.

Table of Contents

Safety	1-1
Safety Alert Symbols	1-1
Responsibilities of the Equipment Owner	1-2
Safety Information	1-2
Instructions, Requirements, and Standards	1-2
User Qualifications	1-3
Applicable Industry Safety Practices	1-3
Intended Use of the Equipment	1-3
Instructions and Safety Messages	1-4
Installation Practices	1-4
Operating Practices	1-4
Maintenance and Repair Practices	1-5
Equipment Safety Information	1-5
Equipment Shutdown	1-6
Relieving System Hydraulic Pressure	1-6
De-energizing the System	1-6
Disabling the Applicators	1-6
General Safety Warnings and Cautions	1-7
Other Safety Precautions	1-10
First Aid	1-10
Safety Labels and Tags	1-11
 Introduction	 2-1
Other Sources of Information	2-2
Online Support	2-2
Product Description	2-3
Intended Use	2-4
Limitations of Use	2-4
Additional Limitations of Use for PUR Adhesives	2-4
Melter Identification	2-4
Modes of Operation	2-5
Pressure Control Options	2-6
Key Components	2-8
Optional Equipment	2-10
 Installation	 3-1
Quick-Start	3-1
Overview	3-1
Installation Tasks	3-2
Experience of Installation Personnel	3-2
Installation Requirements	3-4
Clearances	3-4
Electrical Power	3-6
Compressed Air	3-6
Other Considerations	3-7
Unpacking the Melter	3-8
Customer-Supplied Materials	3-8
Contents of the Installation Kit	3-8


Mounting the Melter	3-10
Configuring the Electrical Service	3-11
Connecting Hoses and Applicators	3-16
Connecting a Compressed Air Supply	3-18
Connecting a Pressure Control Signal	3-19
Setting Up the Melter	3-21
Quick Setup	3-21
Operating Parameters	3-23
Selecting Operating Parameters	3-24
Reading or Editing Operating Parameters	3-25
Setpoint Temperature of the Reservoir, Hoses, and Applicators ..	3-29
Save and Restore Melter Settings	3-31
Review Parameter and Setpoint Temperature Changes	3-32
Installing Melter Inputs	3-34
Installing Melter Outputs	3-38
Setting Up Gear-to-Line Operation	3-42
Setting Up the Motor Control	3-44
Installing Optional Equipment	3-46
Connecting an Applicator Driver, Pattern Controller, or Timer	3-46
Flushing the Melter	3-46
 Operation	 4-1
Melt Plate Operation and More about Heated Components	4-2
Loading an Adhesive Slug	4-3
Starting the Melter	4-5
Operating in Manual Mode	4-6
Operating in Gear-To-Line Mode	4-7
Adjusting the PCV	4-8
Manual PCV	4-8
Automatic Pressure Control	4-9
Flow Control Bypass	4-9
Placing the System in Standby	4-9
Monitoring the Melter	4-10
Confirm that the Melter is Operating Correctly	4-10
Monitor the Adhesive Level	4-11
Monitor Component Temperatures	4-12
Monitor Melter Faults	4-14
How F1, F2, and F3 Faults are Handled	4-17
How F4 Faults are Handled	4-18
Monitor Motor/Piston Control or Motor Drive Faults	4-21
Monitor the Service Interval	4-22
Adjusting Component Temperatures	4-23
Entering the Melter Password	4-27
Using Melter Function Keys	4-28
Heaters Key	4-28
Pump Enable Key	4-28
Pump Mode Key	4-29
Setup Key	4-29
Seven-Day Clock Key	4-29
Standby Key	4-30

Switching the Melter Control Mode	4-31
Shutting Down the Melter	4-32
 Maintenance	 5-1
Preventive Maintenance Tasks	5-1
Relieving System Pressure	5-2
Locking Out External Communications	5-3
Flushing the Melter	5-3
Manually Lifting the Cylinder Plate	5-4
Cleaning the Melter	5-6
Cleaning the Hopper and Melt Plate	5-8
Cleaning the Reservoir and Level Sensors	5-9
Cleaning the Piston	5-10
Calibrating the Hopper-Empty Sensor	5-11
Calibrating the Reservoir Level Sensors	5-12
Calibrating the Pump Speed Display	5-14
 Troubleshooting	 6-1
Safety	6-1
Melter Faults	6-2
Motor/Piston Control Faults	6-4
Motor Drive Faults	6-5
LED Status Display	6-6
Motor Drive Error History	6-7
Error History	6-7
Error Messages	6-9
Changing a Motor Drive Parameter	6-12
Keypad	6-12
Display	6-12
Favorites Group Navigation	6-14
Saving the Settings	6-15
Navigation Group 1-7	6-16
Saving the Settings	6-16
Motor Drive Parameter Factory Settings	6-17
Pump Operational Status	6-18
Using the Troubleshooting Flow Chart	6-20
Troubleshooting Quick-Checks	6-21
Returning the Melter Setup to Factory Settings	6-21
Identifying Electrical Components	6-22
No adhesive output from one or more applicators	6-27
AltaPUR Troubleshooting Charts	6-27

Parts	7-1
Using the Illustrated Parts Lists	7-1
Melter Part Numbers	7-2
Reservoir/Manifold Assembly Parts	7-4
Reservoir Assembly Parts	7-6
Manifold Assembly Parts	7-8
Pivot Lid/Plunger 154/Hopper (154) Assembly Parts	7-10
Pivot Lid Assembly Parts	7-12
Plunger Assembly Parts	7-14
Hopper (154) Assembly Parts	7-16
Pivot Lid/Plunger (134)/Hopper (134) Assembly	7-18
Plunger (134) Assembly Parts	7-20
Hopper (134) Assembly Parts	7-22
Platen (Standard) Assembly Parts	7-24
Platen (HO) Assembly Parts	7-26
Motor Drive Assembly Parts	7-28
Motor Drive (1710) Assembly Parts	7-29
Pump Assembly Parts	7-30
Manual PCV and Cylinder Pressure Control Assembly Parts	7-32
Automatic Pressure Control and Cylinder Pressure Control Assembly Parts	7-34
Flow Control Bypass and Cylinder Pressure Control Assembly Parts	7-36
Back Panel Assembly Parts	7-38
Main Board Fuses	7-40
Left Panel Assembly Parts	7-41
Top Panel Assembly Parts	7-42
Bottom Panel Assembly Parts	7-43
Light Tower Service Kit	7-45
Light Tower Assembly Parts	7-46
Recommended Spare Parts	7-48
Optional Equipment	7-49
Flow/Pressure Control and Pressure Indication	7-49
Expansion and Control Kits	7-49
Cooling Fan and Light Tower	7-49
Line-Speed Signal Generator	7-49
 Technical Data	 8-1
General Specifications	8-1
Motor and Pump Specifications	8-1
Electrical Specifications	8-2
Heater Specifications	8-2
Dimensions	8-3
Conduit Penetration Sizes	8-4
Flow Control Bypass Pneumatic Schematic	8-5
Melter Configuration	8-6

Calculating Melter Power Requirements	A-1
 Operating Parameters	B-1
Standard	B-2
Pressure Control	B-7
Temperature Control	B-8
Input Setup	B-12
Output Setup	B-16
PUR Timer	B-17
Seven-Day Clock	B-18
Example 1	B-19
Example 2	B-19
Example 3	B-19
Automatic Fill Timer	B-28
PID Selection	B-28

This page intentionally left blank.



Safety

Section 1

Safety

Read this section before using the equipment. This section contains recommendations and practices applicable to the safe installation, operation, and maintenance (hereafter referred to as “use”) of the product described in this document (hereafter referred to as “equipment”). Additional safety information, in the form of task-specific safety alert messages, appears as appropriate throughout this document.



WARNING! Failure to follow the safety messages, recommendations, and hazard avoidance procedures provided in this document can result in personal injury, including death, or damage to equipment or property.

Safety Alert Symbols

The following safety alert symbol and signal words are used throughout this document to alert the reader to personal safety hazards or to identify conditions that may result in damage to equipment or property. Comply with all safety information that follows the signal word.



WARNING! Indicates a potentially hazardous situation that, if not avoided, can result in serious personal injury, including death.



CAUTION! Indicates a potentially hazardous situation that, if not avoided, can result in minor or moderate personal injury.

CAUTION! (Used without the safety alert symbol) Indicates a potentially hazardous situation that, if not avoided, can result in damage to equipment or property.

Responsibilities of the Equipment Owner

Equipment owners are responsible for managing safety information, ensuring that all instructions and regulatory requirements for use of the equipment are met, and for qualifying all potential users.

Safety Information

- Research and evaluate safety information from all applicable sources, including the owner-specific safety policy, best industry practices, governing regulations, material manufacturer's product information, and this document.
- Make safety information available to equipment users in accordance with governing regulations. Contact the authority having jurisdiction for information.
- Maintain safety information, including the safety labels affixed to the equipment, in readable condition.

Instructions, Requirements, and Standards

- Ensure that the equipment is used in accordance with the information provided in this document, governing codes and regulations, and best industry practices.
- If applicable, receive approval from your facility's engineering or safety department, or other similar function within your organization, before installing or operating the equipment for the first time.
- Provide appropriate emergency and first aid equipment.
- Conduct safety inspections to ensure required practices are being followed.
- Re-evaluate safety practices and procedures whenever changes are made to the process or equipment.

User Qualifications

Equipment owners are responsible for ensuring that users:

- receive safety training appropriate to their job function as directed by governing regulations and best industry practices
- are familiar with the equipment owner's safety and accident prevention policies and procedures
- receive equipment- and task-specific training from another qualified individual

NOTE: Nordson can provide equipment-specific installation, operation, and maintenance training. Contact your Nordson representative for information

- possess industry- and trade-specific skills and a level of experience appropriate to their job function
- are physically capable of performing their job function and are not under the influence of any substance that degrades their mental capacity or physical capabilities

Applicable Industry Safety Practices

The following safety practices apply to the use of the equipment in the manner described in this document. The information provided here is not meant to include all possible safety practices, but represents the best safety practices for equipment of similar hazard potential used in similar industries.

Intended Use of the Equipment

- Use the equipment only for the purposes described and within the limits specified in this document.
- Do not modify the equipment.
- Do not use incompatible materials or unapproved auxiliary devices. Contact your Nordson representative if you have any questions on material compatibility or the use of non-standard auxiliary devices.

Instructions and Safety Messages

- Read and follow the instructions provided in this document and other referenced documents.
- Familiarize yourself with the location and meaning of the safety warning labels and tags affixed to the equipment. Refer to *Safety Labels and Tags* at the end of this section.
- If you are unsure of how to use the equipment, contact your Nordson representative for assistance.

Installation Practices

- Install the equipment in accordance with the instructions provided in this document and in the documentation provided with auxiliary devices.
- Ensure that the equipment is rated for the environment in which it will be used. This equipment has not been certified for compliance with the ATEX directive nor as nonincendive and should not be installed in potentially explosive environments.
- Ensure that the processing characteristics of the material will not create a hazardous environment. Refer to the Safety Data Sheet (SDS) for the material.
- If the required installation configuration does not match the installation instructions, contact your Nordson representative for assistance.
- Position the equipment for safe operation. Observe the requirements for clearance between the equipment and other objects.
- Install lockable power disconnects to isolate the equipment and all independently powered auxiliary devices from their power sources.
- Properly ground all equipment. Contact your local building code enforcement agency for specific requirements.
- Ensure that fuses of the correct type and rating are installed in fused equipment.
- Contact the authority having jurisdiction to determine the requirement for installation permits or inspections.

Operating Practices

- Familiarize yourself with the location and operation of all safety devices and indicators.
- Confirm that the equipment, including all safety devices (guards, interlocks, etc.), is in good working order and that the required environmental conditions exist.
- Use the personal protective equipment (PPE) specified for each task. Refer to *Equipment Safety Information* or the material manufacturer's instructions and SDS for PPE requirements.
- Do not use equipment that is malfunctioning or shows signs of a potential malfunction.

Maintenance and Repair Practices

- Allow only personnel with appropriate training and experience to operate or service the equipment.
- Perform scheduled maintenance activities at the intervals described in this document.
- Relieve system hydraulic and pneumatic pressure before servicing the equipment.
- De-energize the equipment and all auxiliary devices before servicing the equipment.
- Use only new Nordson-authorized refurbished or replacement parts.
- Read and comply with the manufacturer's instructions and the SDS supplied with equipment cleaning compounds.

NOTE: SDSs for cleaning compounds that are sold by Nordson are available at www.nordson.com or by calling your Nordson representative.

- Confirm the correct operation of all safety devices before placing the equipment back into operation.
- Dispose of waste cleaning compounds and residual process materials according to governing regulations. Refer to the applicable SDS or contact the authority having jurisdiction for information.
- Keep equipment safety warning labels clean. Replace worn or damaged labels.

Equipment Safety Information

This equipment safety information is applicable to the following types of Nordson equipment:

- hot melt and cold adhesive application equipment and all related accessories
- pattern controllers, timers, detection and verification systems, and all other optional process control devices

Equipment Shutdown

To safely complete many of the procedures described in this document, the equipment must first be shut down. The level of shut down required varies by the type of equipment in use and the procedure being completed. If required, shut down instructions are specified at the start of the procedure. The levels of shut down are:

Relieving System Hydraulic Pressure

Completely relieve system hydraulic pressure before breaking any hydraulic connection or seal. Refer to the melter-specific product manual for instructions on relieving system hydraulic pressure.

De-energizing the System

Isolate the system (melter, hoses, applicators, and optional devices) from all power sources before accessing any unprotected high-voltage wiring or connection point.

1. Turn off the equipment and all auxiliary devices connected to the equipment (system).
2. To prevent the equipment from being accidentally energized, lock and tag the disconnect switch(es) or circuit breaker(s) that provide input electrical power to the equipment and optional devices.

NOTE: Government regulations and industry standards dictate specific requirements for the isolation of hazardous energy sources. Refer to the appropriate regulation or standard.

Disabling the Applicators

NOTE: Adhesive dispensing applicators are referred to as “guns” in some previous publications.

All electrical or mechanical devices that provide an activation signal to the applicators, applicator solenoid valve(s), or the melter pump must be disabled before work can be performed on or around an applicator that is connected to a pressurized system.

1. Turn off or disconnect the applicator triggering device (pattern controller, timer, PLC, etc.).
2. Disconnect the input signal wiring to the applicator solenoid valve(s).
3. Reduce the air pressure to the applicator solenoid valve(s) to zero; then relieve the residual air pressure between the regulator and the applicator.

General Safety Warnings and Cautions

Table 1-1 contains the general safety warnings and cautions that apply to Nordson hot melt and cold adhesive equipment. Review the table and carefully read all of the warnings or cautions that apply to the type of equipment described in this manual.

Equipment types are designated in Table 1-1 as follows:

HM = Hot melt (melters, hoses, applicators, etc.)

PC = Process control

CA = Cold adhesive (dispensing pumps, pressurized container, and applicators)

Table 1-1 General Safety Warnings and Cautions










Equipment Type	Warning or Caution
HM	 <p>WARNING! Hazardous vapors! Before processing any polyurethane reactive (PUR) hot melt or solvent-based material through a compatible Nordson melter, read and comply with the material's SDS. Ensure that the material's processing temperature and flashpoints will not be exceeded and that all requirements for safe handling, ventilation, first aid, and personal protective equipment are met. Failure to comply with SDS requirements can cause personal injury, including death.</p>
HM	 <p>WARNING! Reactive material! Never clean any aluminum component or flush Nordson equipment with halogenated hydrocarbon fluids. Nordson melters and applicators contain aluminum components that may react violently with halogenated hydrocarbons. The use of halogenated hydrocarbon compounds in Nordson equipment can cause personal injury, including death.</p>
HM, CA	 <p>WARNING! System pressurized! Relieve system hydraulic pressure before breaking any hydraulic connection or seal. Failure to relieve the system hydraulic pressure can result in the uncontrolled release of hot melt or cold adhesive, causing personal injury.</p>
Continued...	

Table 1-1 General Safety Warnings and Cautions (*contd*)

Equipment Type	Warning or Caution
HM	 <p>WARNING! Molten material! Wear eye or face protection, clothing that protects exposed skin, and heat-protective gloves when servicing equipment that contains molten hot melt. Even when solidified, hot melt can still cause burns. Failure to wear appropriate personal protective equipment can result in personal injury.</p>
HM, PC	 <p>WARNING! Equipment starts automatically! Remote triggering devices are used to control automatic hot melt applicators. Before working on or near an operating applicator, disable the applicator's triggering device and remove the air supply to the applicator's solenoid valve(s). Failure to disable the applicator's triggering device and remove the supply of air to the solenoid valve(s) can result in personal injury.</p>
HM, CA, PC	 <p>WARNING! Risk of electrocution! Even when switched off and electrically isolated at the disconnect switch or circuit breaker, the equipment may still be connected to energized auxiliary devices. De-energize and electrically isolate all auxiliary devices before servicing the equipment. Failure to properly isolate electrical power to auxiliary equipment before servicing the equipment can result in personal injury, including death.</p>
HM, CA, PC	 <p>WARNING! Risk of fire or explosion! Nordson adhesive equipment is not rated for use in explosive environments and has not been certified for the ATEX directive or as nonincendive. In addition, this equipment should not be used with solvent-based adhesives that can create an explosive atmosphere when processed. Refer to the SDS for the adhesive to determine its processing characteristics and limitations. The use of incompatible solvent-based adhesives or the improper processing of solvent-based adhesives can result in personal injury, including death.</p>
HM, CA, PC	 <p>WARNING! Allow only personnel with appropriate training and experience to operate or service the equipment. The use of untrained or inexperienced personnel to operate or service the equipment can result in injury, including death, to themselves and others and can damage to the equipment.</p>

Equipment Type	Warning or Caution
HM	 <p>CAUTION! Hot surfaces! Avoid contact with the hot metal surfaces of applicators, hoses, and certain components of the melter. If contact can not be avoided, wear heat-protective gloves and clothing when working around heated equipment. Failure to avoid contact with hot metal surfaces can result in personal injury.</p>
HM	<p>CAUTION! Some Nordson melters are specifically designed to process polyurethane reactive (PUR) hot melt. Attempting to process PUR in equipment not specifically designed for this purpose can damage the equipment and cause premature reaction of the hot melt. If you are unsure of the equipment's ability to process PUR, contact your Nordson representative for assistance.</p>
HM, CA	<p>CAUTION! Before using any cleaning or flushing compound on or in the equipment, read and comply with the manufacturer's instructions and the SDS supplied with the compound. Some cleaning compounds can react unpredictably with hot melt or cold adhesive, resulting in damage to the equipment.</p>
HM	<p>CAUTION! Nordson hot melt equipment is factory tested with Nordson Type R fluid that contains polyester adipate plasticizer. Certain hot melt materials can react with Type R fluid and form a solid gum that can clog the equipment. Before using the equipment, confirm that the hot melt is compatible with Type R fluid.</p>

Other Safety Precautions

- Do not use an open flame to heat hot melt system components.
- Check high pressure hoses daily for signs of excessive wear, damage, or leaks.
- Never point a dispensing hand-held applicator at yourself or others.
- Suspend dispensing hand-held applicators by their proper suspension point.

First Aid

If molten hot melt comes in contact with your skin:

1. Do NOT attempt to remove the molten hot melt from your skin.
2. Immediately soak the affected area in clean, cold water until the hot melt has cooled.
3. Do NOT attempt to remove the solidified hot melt from your skin.
4. In case of severe burns, treat for shock.
5. Seek expert medical attention immediately. Give the SDS for the hot melt to the medical personnel providing treatment.

Safety Labels and Tags

Figure 1-1 illustrates the location of the product safety labels and tags affixed to the equipment. Table 1-2 provides an illustration of the hazard identification symbols that appear on each safety label and tag, the meaning of the symbol, or the exact wording of any safety message.

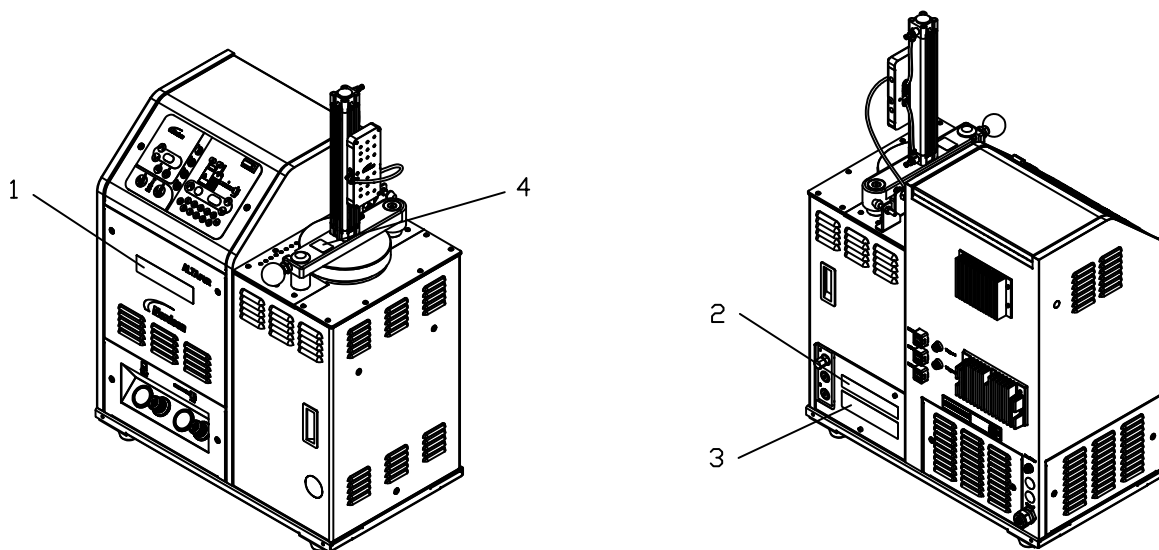



Figure 1-1 Safety labels and tags

Table 1-2 Safety Labels and Tags

Item	Part Number	Description
1	1025795	WARNING: Hazardous voltage. Disconnect all power supply connections before servicing.
2	1100254	WARNING: Burn hazard. Hot surfaces.
3	1100256	WARNING: Burn hazard. Hot adhesive. Release pressure before servicing.
4	7413175	WARNING: Pinch hazard.
NS	—	 Tag, hazardous voltage [located inside the electrical cabinet on the main board—refer to Section 7, Parts, for an illustration that shows the location of the main board]
NS: Not Shown		

This page intentionally left blank.

Section 2

Introduction

This manual describes the installation and use of AltaPUR adhesive melters. When necessary, the reader is referred to the documentation supplied with other Nordson products or products supplied by third parties.

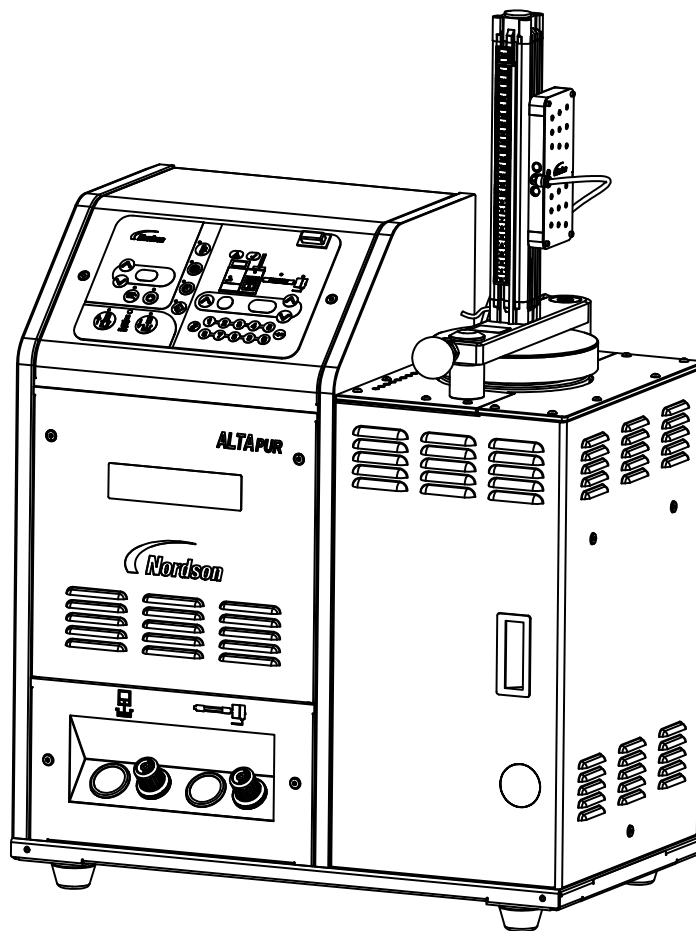


Figure 2-1 AltaPUR adhesive melter

Other Sources of Information

Refer to the following additional resources for quick-reference information, technical support, and information about getting the most out of your AltaPUR melter.



Online Support

Visit www.enordson.com/support to download melter firmware updates and Blue Series software utilities.

Product Description

See Figure 2-2. Nordson AltaPUR adhesive melters are used in conjunction with Nordson hot melt hoses and applicators to create a hot melt application system.

The melter liquifies solid-form hot melt in foil wrapped slugs and maintains the hot melt at the desired temperature. When the applicators are activated, the melter pumps the liquified hot melt through the hoses and out the applicator nozzles, where it is commonly applied to the surface of a product.

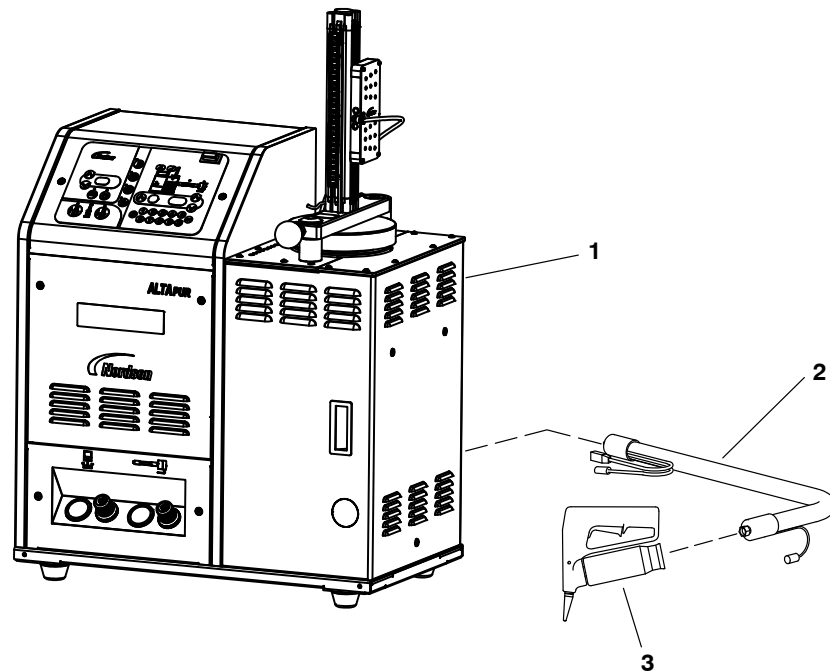


Figure 2-2 System components

- 1. AltaPUR melter
- 2. Hot melt hose
- 3. Hot melt hand-held applicator

Intended Use

AltaPUR melters are specifically designed to:

- Melt and pump solid-form hot melt materials in foil wrapped slugs, such as polyurethane-reactive (PUR), ethylene vinyl acetate copolymer (EVA), and polyolefine (PO) adhesives, that are engineered to be liquified and extruded at temperatures at or below 191 °C (375 °F)
- Be used with compatible hot melt hoses and applicators that are manufactured by Nordson Corporation
- Be used in non-explosive environments

Limitations of Use

Use AltaPUR melters only for the purpose for which they are designed. AltaPUR melters should not be used:

- to melt or pump any material that creates a health or safety hazard when heated
- in environments that will require the melter to be cleaned using a water wash or spray

Additional Limitations of Use for PUR Adhesives

When the maximum level of harmful substance concentration is exceeded, use a gas mask and air purifying equipment.

Melter Identification

You will need to know the configuration of your melter when requesting service or ordering spare parts and optional equipment. Refer to *Melter Part Numbers* in Section 7, *Parts*, or to *Melter Configuration Code* in Section 8, *Technical Data*, to determine the part number and/or configuration of your melter.

Modes of Operation

AltaPUR melters operate in the following modes:

Automatic scan — The melter automatically checks and displays the current temperature of the reservoir, hoses, and applicators to confirm that they are within their pre-defined temperature range. By default, the melter is always in the automatic scan mode unless it is placed into another operating mode.

Melt-on-demand — The melter automatically melts the amount of adhesive needed from the foil wrapped slug to keep the 0.5-kg reservoir full. When the melt-on-demand sensor detects that the reservoir is not full, the melt plate (grid) turns on and the pneumatic cylinder applies downward force (as set by the melter air regulator) on the slug. When the melt-on-demand sensor detects that the reservoir is full, the melt plate turns off and the cylinder force is removed.

NOTE: To prevent unnecessary heating of PUR adhesive, the melter may enter the standby mode in the following ways:

- If the melt plate is **off** for too long, the control system determines that it is no longer in use and sets the system to standby. This time is determined by parameter 24, Automatic Standby Timeout.
- If the melt plate is **on** for too long, the control system determines that the MOD sensor has failed and sets an S1Cal condition, which places the unit in standby. This time is determined by parameter 49, PUR Timer.

Standby — The temperatures of the reservoir, hoses, and applicators are reduced down from their operating temperature (hereafter referred to as setpoint temperature) by a preset number of degrees and the melt plate, which is controlled by the melt-on-demand sensor, is turned off.

Setup — The setup mode is used to configure melter control options and features and to review stored operating data. To prevent unauthorized changes to the melter's configuration, the melter can be password-protected.

Fault — The melter alerts the operator when an abnormal event occurs. For a list of faults and their impact, refer to *Melter Faults* in *Troubleshooting*.

Manual and gear-to-line — The melter allows you to manually set the adhesive output rate or the melter can automatically adjust the adhesive output based on production requirements.

Pressure Control Options

AltaPUR melters have four different pressure control options for maintaining maximum adhesive output pressure. When the melter is dispensing adhesive, the system hydraulic pressure is governed by the pressure drop through the manifold, hose, and applicator as affected by fluid flow rate, fluid viscosity, and nozzle size(s). However, between products (or any time the pump is turning but no adhesive is being dispensed) the pump adhesive output is being recirculated to the reservoir through a hydraulic pressure regulator that maintains the maximum hydraulic pressure. The method of maintaining this hydraulic pressure can significantly affect the adhesive application. Depending on the specific needs of an application, one of the following pressure control options will provide optimum performance:

- **Standard:** A melter with this option has a spring-balanced manual pressure control valve (PCV) with which the operator can easily set the maximum pressure by adjusting the preload of the spring.

One way this option may be used is to meter a specific amount of adhesive based on the pump rpm and displacement, in which case the PCV is set to a high value and the pump speed changes (either manually or automatically through the gear-to-line capability) based on the output requirements.
- **Pneumatic PCV with automatic control through a user supplied signal:** A melter with this option has a pneumatic PCV integrated with a pneumatic transducer that regulates the air pressure from 0-5 bar (0-70 PSI). With this option, the maximum hydraulic pressure can easily be controlled by the user from 0-96 bar (0-1,400 PSI).
- **Pneumatic PCV with flow control bypass:** A melter with this option has a pneumatic PCV that is integrated with a solenoid valve. An air pressure regulator and gauge located on the drive cover assembly are used to set the air pressure to the pneumatic PCV when the solenoid is in a non-energized state (applicator-closed). When the solenoid is energized, the air pressure to the pneumatic PCV is switched to the air supplied to the melter, which in turn sets the system hydraulic pressure to the maximum possible. On a melter with this option, the user provides only the 24V signal—no additional air supply is required.

This option is typically set up such that the signal to the solenoid valve is in common with the signal that opens the applicator so that when the applicator is dispensing adhesive, the PCV is set to maximum and the entire output of the pump is delivered through the applicator. This allows for consistent, metered adhesive application because the hydraulic pressure is consistent in both the applicator-open and applicator-closed states.

This page intentionally left blank.

Key Components

Figure 2-3 provides the name and the location of key melter components.

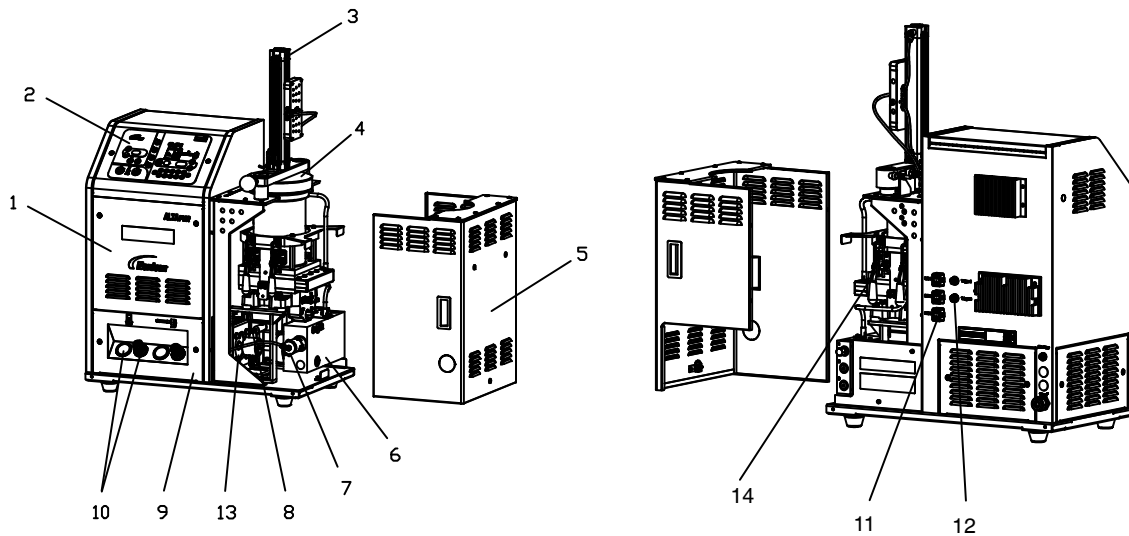


Figure 2-3 Key components

- | | | |
|---|---|--|
| 1. Electrical enclosure door | 6. Manifold and pump assembly | 11. Hose/applicator electrical receptacles |
| 2. Control panel (see Figure 2-4) | 7. Pressure control valve (PCV) | 12. Switch receptacles |
| 3. Pneumatic cylinder | 8. Drive removal jack screw | 13. Motor and coupling |
| 4. Hopper lid | 9. Pressure control panel | 14. Hopper assembly |
| 5. Service cover—hopper, melt plate, and reservoir assembly | 10. Piston air pressure regulator and gauge | |

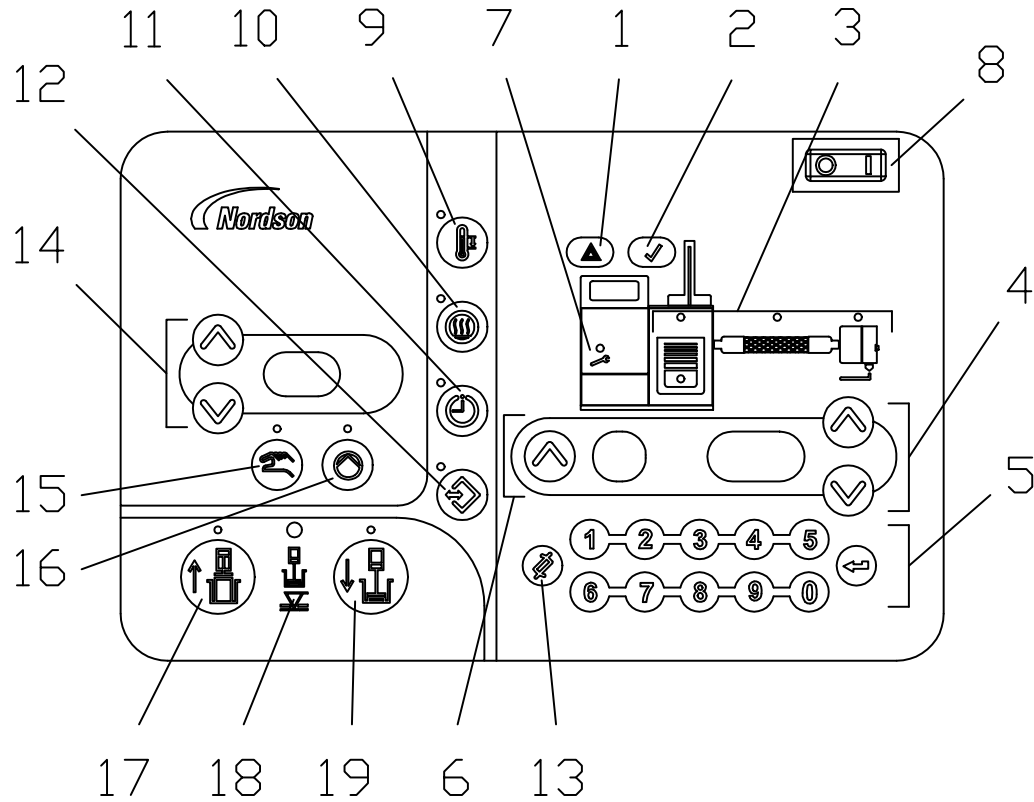


Figure 2-4 Control panel

- | | | |
|----------------------------------|--|-----------------------------|
| 1. Fault LED | 8. Control switch | 15. Pump mode key/LED |
| 2. Ready LED | 9. Standby key | 16. Pump start/stop key/LED |
| 3. Component keys/LEDs | 10. Heaters key/LED | 17. Piston up key/LED |
| 4. Right display and scroll keys | 11. Clock key/LED | 18. Hopper empty LED |
| 5. Keypad | 12. Setup key/LED | 19. Piston down key/LED |
| 6. Left display and scroll key | 13. Clear/reset key | |
| 7. Service LED | 14. Pump speed display (rpms) and arrow keys | |

Optional Equipment

Optional equipment may be ordered to expand the functionality of AltaPUR melters, including, but not limited to, the following:

- **Automatic pressure control option kits** that allow the melter to automatically adjust adhesive output pressure based on production requirements.
- **Pressure gauge** that provides a manifold hydraulic pressure reading. A hose port must be available to use this gauge.
- **Input/output (I/O) expansion cards (digital)** that allow you to expand the number of available control inputs and outputs.
- **Communications cards** that allow the melter to communicate with other process equipment or a controller using standard network protocols.
- **Footswitch** that allows remote pump activation.

Refer to Section 7, *Parts*, for a complete list of optional equipment.



Installation

Section 3

Installation



WARNING! Allow only personnel with appropriate training and experience to operate or service the equipment. The use of untrained or inexperienced personnel to operate or service the equipment can result in injury, including death, to themselves and others, and damage to the equipment.

Quick-Start

If you have already installed the melter, go to *Setting Up the Melter* later in this section for information about how to prepare the melter to operate with your manufacturing process.

Overview

AltaPUR melters are factory-configured for each order and require only the assembly and set up tasks described in this section.

The melter is shipped from the factory with an installation kit that contains components that must be assembled on the melter by the customer. Some additional materials must also be supplied by the customer to complete the installation.

If optional equipment was ordered with the melter, refer to the documentation provided with the optional equipment for installation and operating instructions.

Installation Tasks

The installation sequence is as follows:

1. Verify that the required installation conditions and utilities exist.
2. Unpack and inspect the melter.
3. Mount the melter on the parent machine or support structure.
4. Configure the electrical service.
5. Connect hot melt hoses and applicators.
6. Connect a compressed air supply.
7. Set up the melter to work with the manufacturing process.
8. (Optional) Install inputs and outputs.
9. Install optional equipment.
10. Set up the melter for gear-to-line operation.
11. (If used) Connect a applicator driver, pattern controller, or timer.
12. Flush the melter.

Experience of Installation Personnel

The instructions provided in this section are intended to be used by personnel who have experience in the following subjects:

- Hot melt application processes
- Industrial power and control wiring
- Industrial mechanical installation practices
- Basic process control and instrumentation

This page intentionally left blank.

Installation Requirements

Before installing the melter, ensure that the desired installation location provides the required clearances, environmental conditions, and utilities.

Clearances

Figure 3-1 illustrates the *minimum* clearances that are required between the melter and surrounding objects. Table 3-1 describes each clearance. For all melter dimensions, refer to Section 8, *Technical Data*.

Table 3-1 Minimum Installation Clearances

Item	Description	Required Clearance
A	Clearance required between the back of the melter and the nearest object	345 (13.6 in.)
B	Clearance required between the front of the melter (control panel) and the nearest object in order to fully open the electrical enclosure door	192 (7.6 in.)
C	Minimum horizontal space required to remove the service cover	292 (11.5 in.)
D	Depth of melter including service handles	770 (30.3 in.)
E	Minimum vertical space required for the melter if mounting feet are not used	1120 (44.1 in.)

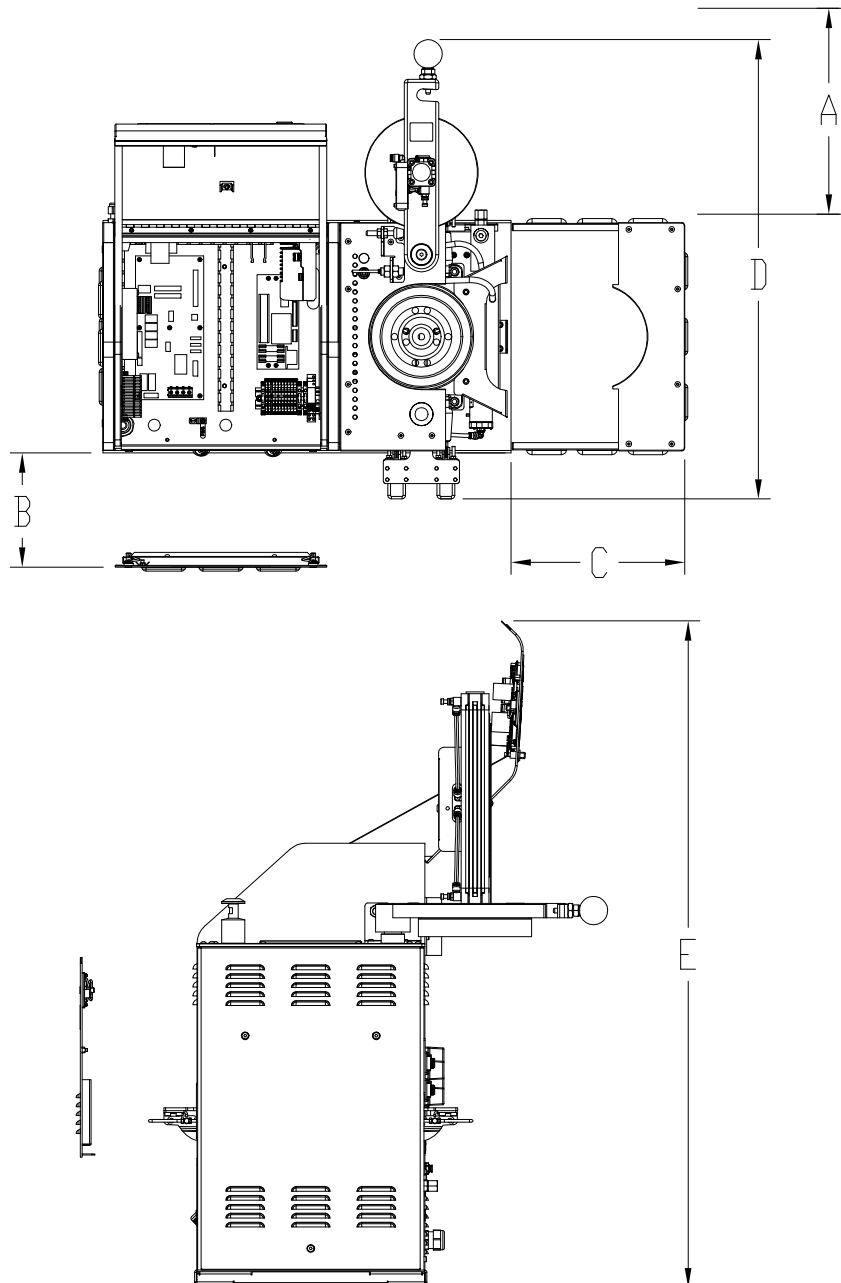


Figure 3-1 Minimum installation clearances

Electrical Power

Before installing the melter, ensure that the melter will not be overloaded and that the plant's electrical service is rated to handle the power required by the melter and the hoses and applicators that you plan to use.

Refer to Appendix A, *Calculating Melter Power Requirements*, for information about how to calculate the maximum allowable hose lengths and applicator wattages that can be used in your manufacturing application.



WARNING! Risk of electrocution! Install a lockable power disconnect switch between the electrical service and the melter. Failure to install or properly use the disconnect switch when servicing the melter can result in personal injury, including death.

Compressed Air

The melter must be connected to an air supply that is capable of providing a maximum of 7.0 bar (102 PSI) of dry, nonlubricated air. The actual pressure required for the melter to support your manufacturing process will depend on such factors as the type of hot melt and applicator you are using and the required dimensions of the hot melt bead.

Nordson recommends that an isolation valve be installed in the plant air supply line just before the melter.

Other Considerations

Consider the following additional factors when determining where to install the melter.

- The maximum distance between the melter and each applicator is dictated by the power requirement of each hose. Refer to Appendix A, *Calculating Melter Power Requirements*, for information about how to determine the maximum allowable length.
- The operator must be able to safely reach the control panel and accurately monitor the control panel indicators.
- The operator must be able to access all four sides of the melter for service.
- The melter must be installed away from areas with strong drafts or where sudden temperature changes occur.
- The melter must be installed away from areas where debris or contaminant could fall into the hopper.
- The melter must be installed where it will be in conformance with the ventilation requirements specified in the Material Safety Data Sheet for the hot melt being used.

Unpacking the Melter

Before starting the installation, remove the melter from the pallet, locate the installation kit, and inspect the melter for damaged and missing parts. Report any problems to your Nordson representative.

Customer-Supplied Materials

The following additional materials are required to install the melter:

- Four 10-mm machine bolts and locking hardware
- 10 mm² (8 AWG) power cable

Contents of the Installation Kit

The installation kit provided with the melter contains the components shown in Figure 3-2. The quantity and type of hose fittings provided in the kit depends upon the melter's model number and configuration.

NOTE: Fuses are provided as spares.

The installation kit also contains a package of safety label overlays that are printed in variety of languages. If required by local regulations, the appropriate language overlay should be applied over the English version of the same label. Refer to *Safety Labels and Tags* in Section 1, *Safety*, for the location of each safety label.

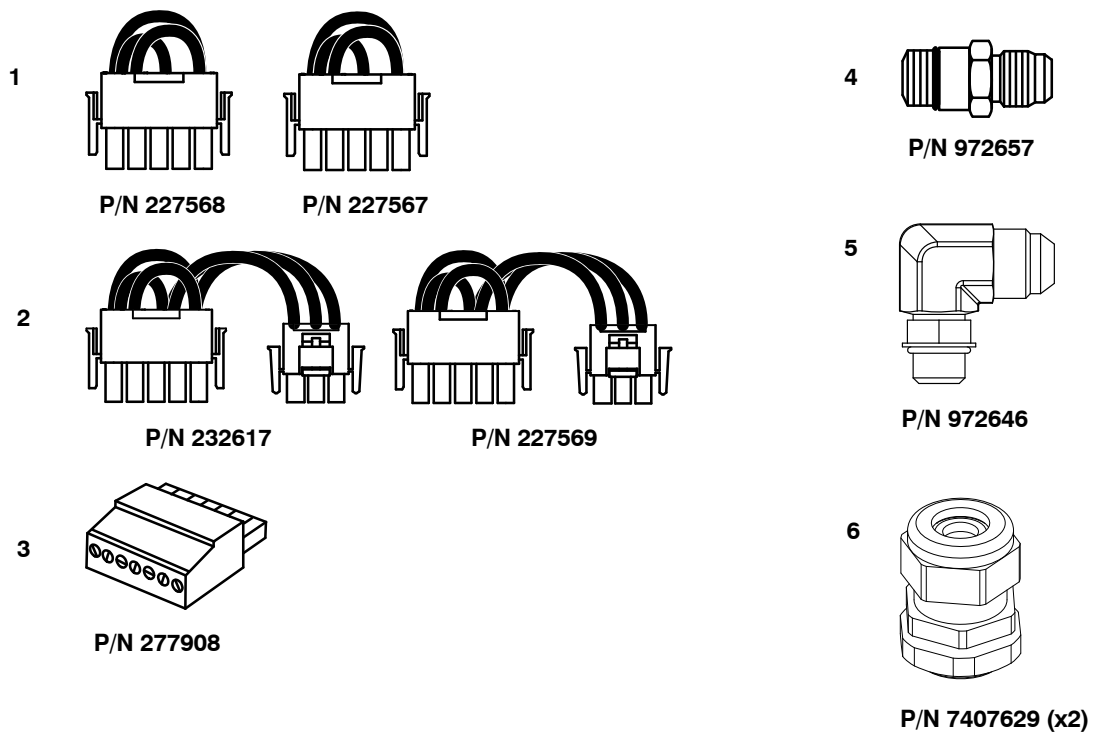



Figure 3-2 Installation kit components

- | | |
|----------------------------------|--------------------------------|
| 1. Voltage plug (2) | 3. Input/output connectors (2) |
| 2. Voltage plug with neutral (2) | 4. Straight hose fitting (1) |

- | |
|--------------------------------|
| 5. 90-degree hose fitting (1) |
| 6. Strain relief connector (2) |

Note: Voltage plug P/Ns 232617 and 227569 are not used on 200V melters.

Mounting the Melter

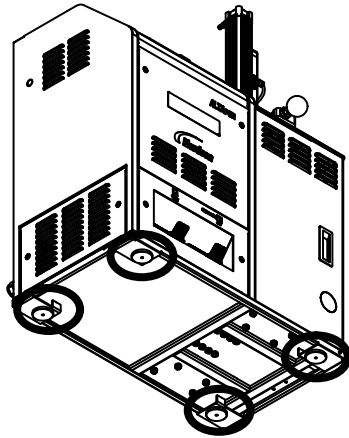

Location of the mounting holes

Before mounting the melter, ensure that the parent machine or support structure is level with respect to the floor, provides an even mounting surface, is not subject to extreme vibration, and is capable of supporting the weight of the melter, a full reservoir of hot melt, and the hoses and applicators.

Refer to Section 8, *Technical Data*, for the weight of the melter. Refer to the technical data provided by the hot melt manufacturer for information about the volumetric weight of the hot melt.

To mount the melter

See Figure 3-3. Use 6-mm machine bolts and locking hardware to secure the melter mounting brackets to the mounting surface.

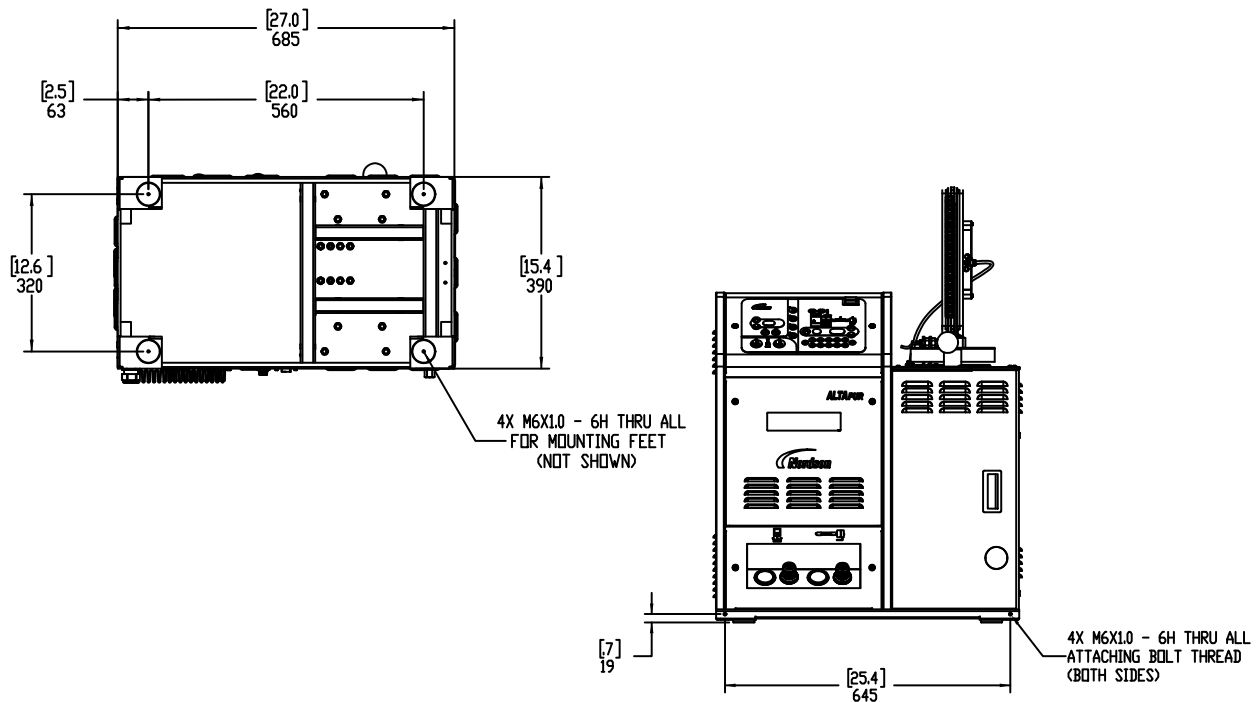


Figure 3-3 Bolt mounting pattern

Configuring the Electrical Service

AltaPUR melters are shipped from the factory without an attached power cable and without a designated service-type. To configure the melter to function in your facility, you must connect a power cable to the melter and designate the service type by installing a Nordson-supplied voltage plug into the melter.



To connect a power cable to the melter


WARNING! Risk of electrocution! Install a lockable power disconnect switch between the electrical service and the melter. Failure to install or properly use the disconnect switch when servicing the melter can result in personal injury, including death.

1. Select a 10 mm² (8 AWG) power cable that meets applicable electrical codes and standards. The maximum amperages of AltaPUR melters operating at a specified voltage are shown in Table 3-2.

Table 3-2 Maximum Amperages

Model	Voltage (VAC)	Maximum Amperage
AltaPUR, three hoses/ applicators	200-240, 1-phase	20-24
	200-240, 3-phase	18-21
	200, 1-phase	29
	200, 3-phase	25
	400/230Y, 1-phase	24
	400/230Y, 3-phase	16
NOTE: The voltage tolerance is ± 10 percent. For 200 VAC systems, the voltage must be 180-220 VAC. For 200-240 VAC systems, the voltage must be 180-264 VAC.		

Configuring the Electrical Service *(contd)*

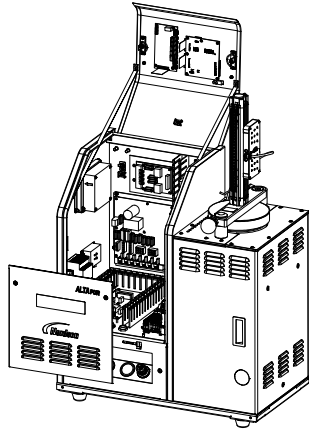

Opening the electrical enclosure

2. Open the electrical enclosure door.

See Figure 3-4.

3. Route the power cable through the back of the electrical enclosure and under the electrical box tray to terminal block XT1.
4. Connect each power cable lead to terminal block XT1. Table 3-3 lists the terminals that are used for each of the electrical service types that are compatible with the melter.
5. Connect the ground lead from the power cable to the ground lug that is located on the chassis. The ground lug is marked PE/G.

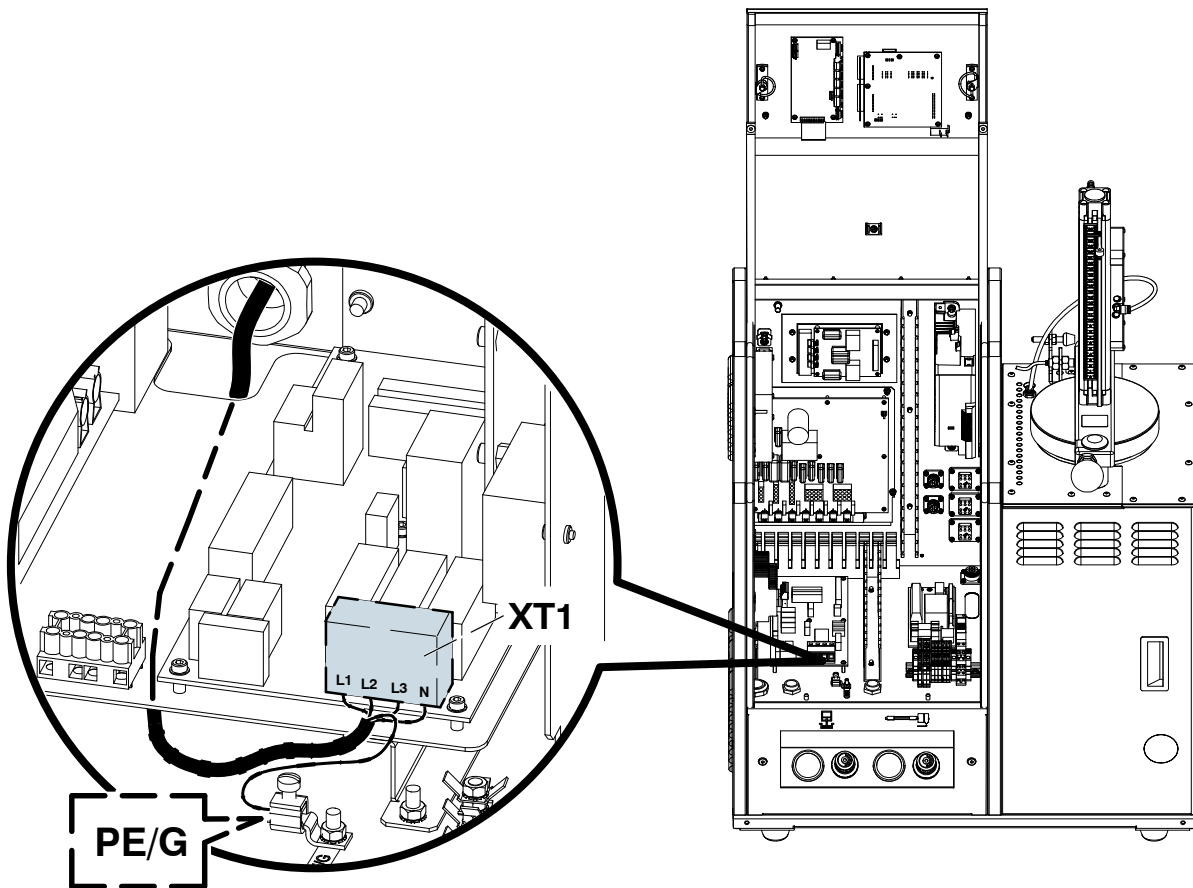


Figure 3-4 Connecting the power cable and ground lead

Table 3-3 Electrical Service Information

If the Electrical Service Type is..		Use Electrical Connector Terminals..				Use Voltage Plug..
		L1	L2	L3	N	
400/230 VAC 3-phase (4-wire service, including a neutral) (See Note A)	3/N/PE AC 400/230V	●	●	●	●	227569 Red/Yellow (See Note B)
230 VAC 1-phase (2-wire service, including a neutral) (See Note A)	1/N/PE AC 200–240V	●			●	232617 Blue/Yellow (See Note B)
200 VAC or 200 to 240 VAC 3-phase (3-wire service without a neutral)	3/PE AC 200V or 200–240V	●	●	●		227568 Red/Green
200 VAC or 200 to 240 VAC 1-phase (2-wire service without a neutral)	1/PE AC 200V or 200–240V	●	●			227567 Blue/Green
<p>NOTE A: The 400/230 VAC 3-phase service (4-wire service including neutral) includes the 415/240 VAC 3-phase (4-wire service, including neutral) voltage. The 230 VAC 1-phase service (2-wire service, including a neutral) includes the 240 VAC 1-phase (2-wire service, including a neutral) voltage.</p> <p>B: This voltage plug is not provided with 200 VAC melters.</p>						


To connect a voltage plug to the melter

1. Refer to Table 3-3 to determine the part number of the voltage plug that matches the required electrical service. Each voltage plug is labeled with its part number and service type.

See Figure 3-5.

2. Insert the correct voltage plug into receptacle X1. Ensure that the plug snaps into place. If the plug contains a neutral lead, connect the neutral lead to receptacle X2.
3. When the electrical service is completely installed and inspected in accordance with local electrical codes and standards, close the electrical enclosure door and switch the local power disconnect switch on.

If the electrical service was configured correctly, the melter control panel will display dashes.

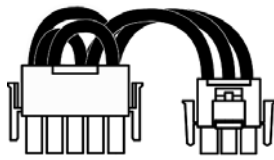

Typical voltage plugs
(plugs with and without the neutral
lead shown)

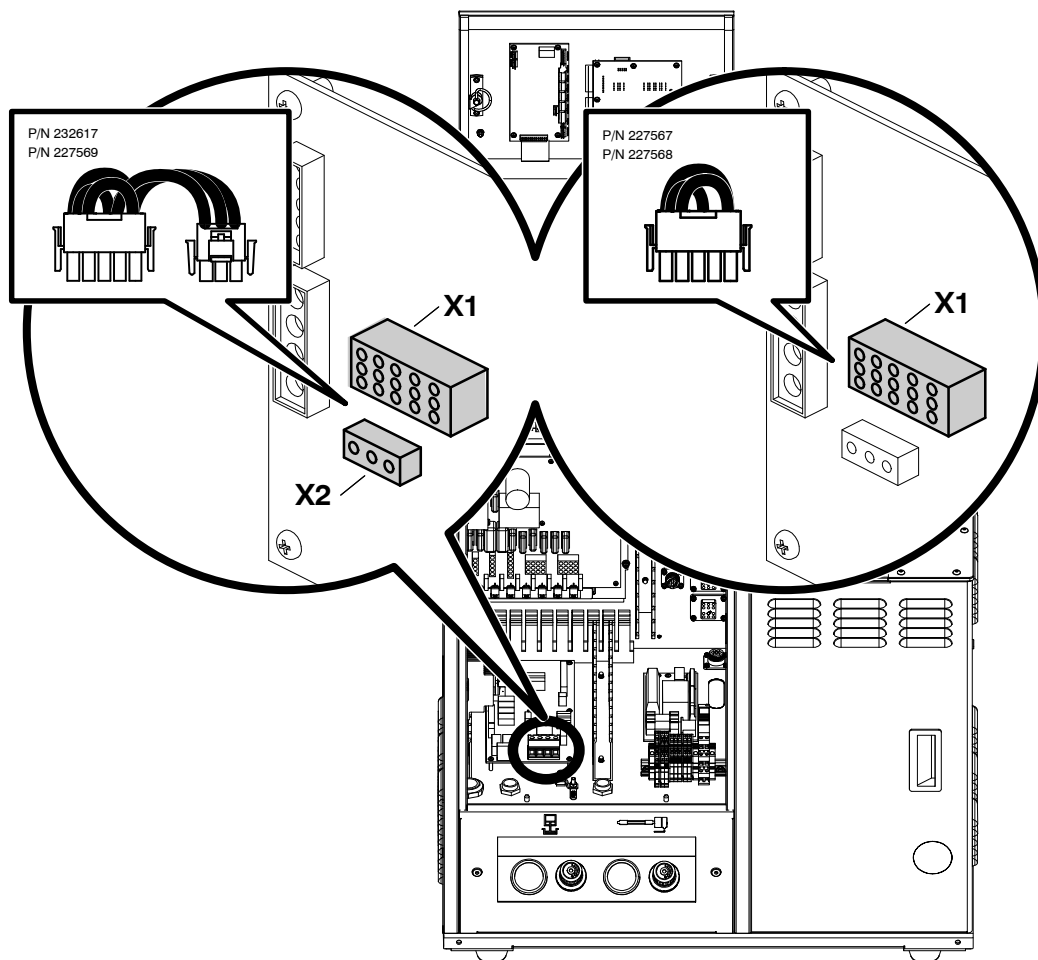


Figure 3-5 Connecting a voltage plug

This page intentionally left blank.

Connecting Hoses and Applicators

AltaPUR melters use standard Nordson hoses and applicators and support the connection of up to three hose/applicator pairs. The hose/applicator capacity of each melter is determined by the number of hose/applicator receptacles on the melter. Each hose/applicator receptacle supports the connection of one hose/applicator pair.



WARNING! Risk of fire or equipment damage. Before connecting hoses and applicators to the melter, confirm that the power required by the hoses and the applicators does not exceed the maximum wattages specified in Appendix A, *Calculating Melter Power Requirements*.


To connect hoses

See Figure 3-6.

Observe the following guidelines:

- For information about choosing the correct Nordson hot melt hose for your manufacturing process, refer to the latest edition of Nordson's hot melt dispensing equipment *Replacement Parts Catalog* or contact your Nordson representative.
- Connect hoses to any of the hose ports provided on the manifold. The melter is shipped with one hose fitting (capped) pre-installed on the manifold.
- Refer to the user's guide provided with each Nordson hose. The guide contains important information about routing and installing the hose.
- Save all of the plugs that were removed from the hose ports. A plug will need to be reinstalled into a hose port if a hose is later removed.
- Connect switched hand-held applicator hoses or footswitches to the switch receptacles on the back of the melter.

NOTE: Only connect a switched hand-held applicator, the optional footswitch, or a cordset that is approved by Nordson Corporation to the switch receptacle.

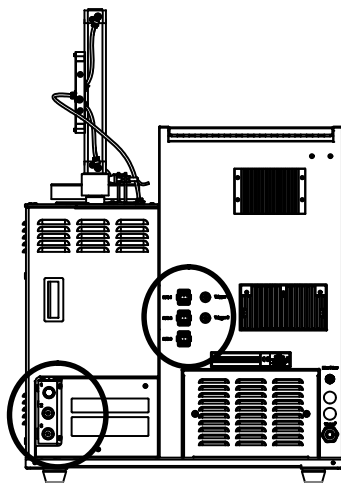

Location of hose ports and switch receptacles

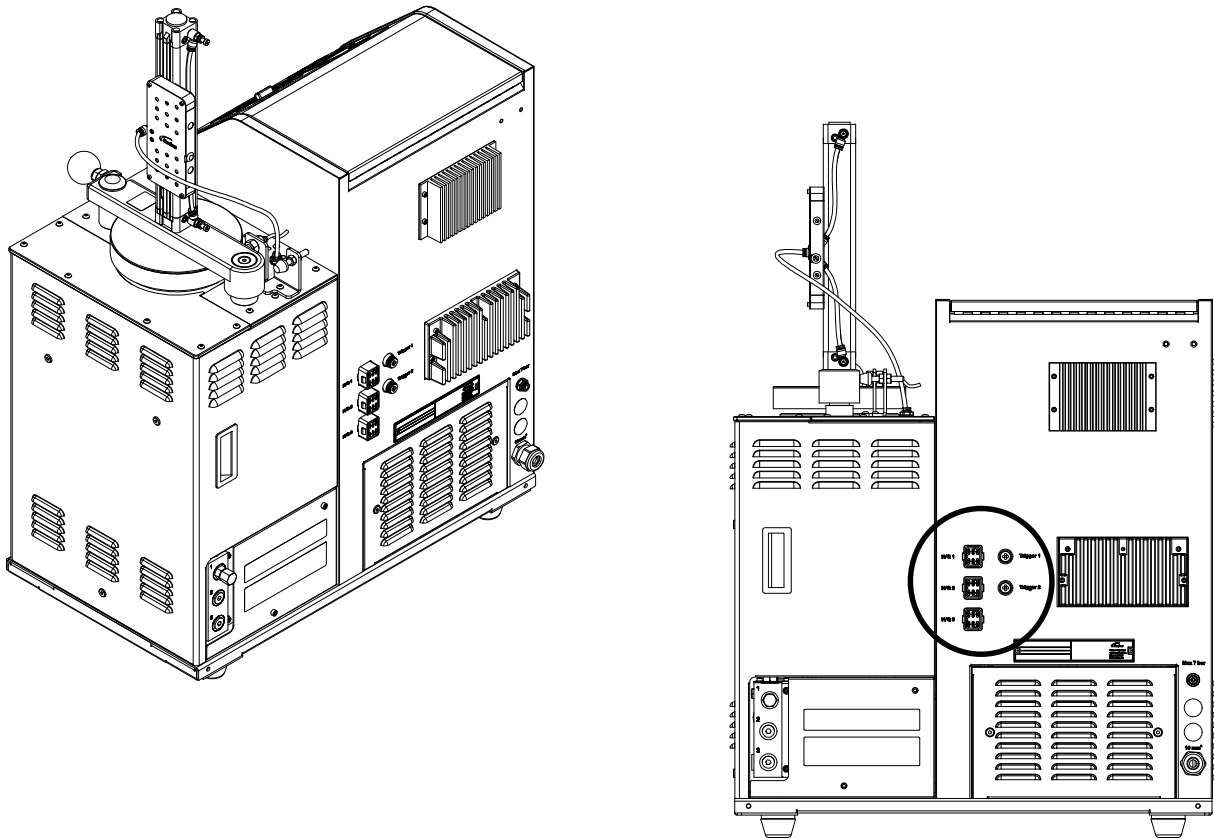


Figure 3-6 Connecting a switched hand-held applicator hose or footswitch

To connect applicators

Observe the following guidelines:

- For information about choosing the most appropriate Nordson hot melt applicator for your manufacturing process, refer to the latest edition of Nordson's hot melt dispensing equipment *Replacement Parts Catalog* or contact your Nordson representative. Refer to Appendix A, *Calculating Melter Power Requirements*, for information about how to calculate the power required by Nordson hot melt applicators.
- Refer to the user's guide that is shipped with each applicator for information about installing the applicator and connecting a hose to the applicator.

Connecting a Compressed Air Supply

To connect an air supply

See Figure 3-7.

1. Connect a regulated plant air supply to the air supply inlet (2) at 7.0 bar (102 PSI) using $\Phi 6$ flexible tubing.
2. Open the plant air supply to the melter.
3. Turn the air regulator (1) to set the melter's operating air pressure (pressure supplied to the piston) to 2 bar (30 PSI).

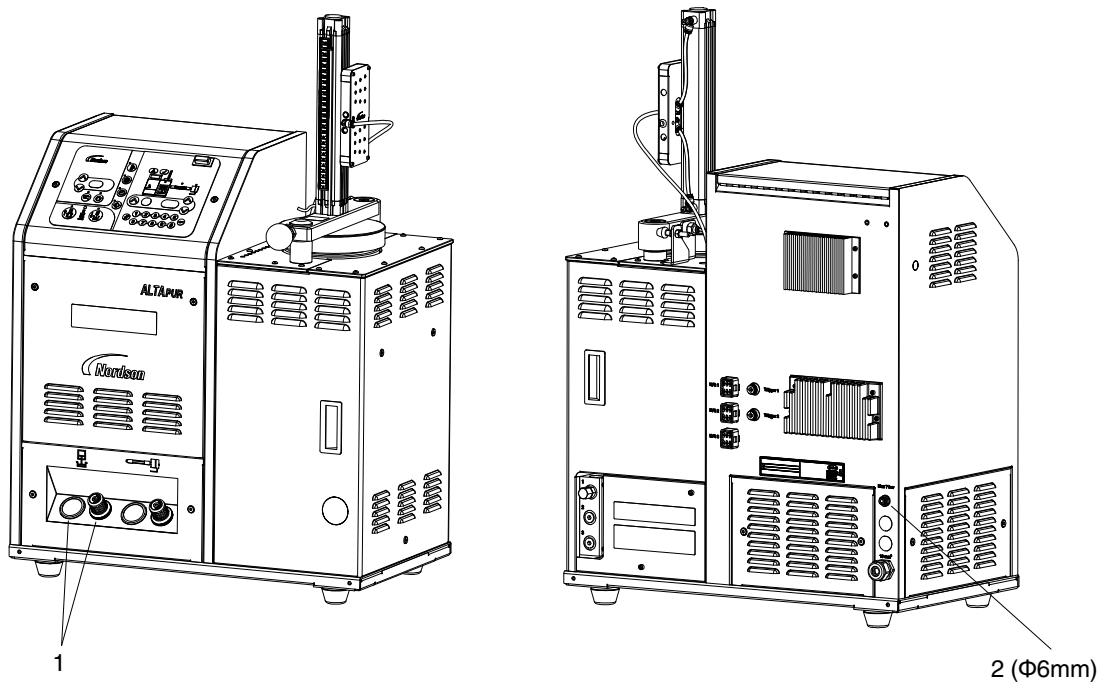


Figure 3-7 Location of the air supply input port

1. Piston air regulator and gauge
2. Air supply inlet

Connecting a Pressure Control Signal

If your melter has either the automatic pressure control option or the flow control bypass option, make the electrical connections shown below. Refer to *Pressure Control Options* in Section 2, *Introduction*, for a detailed description of the pressure control options. To determine the configuration of your melter, refer to *Melter Part Numbers* in Section 7, *Parts*.

To connect wiring for the automatic pressure control option

See Figure 3-8. Connect a customer-supplied 0-10VDC supply control signal to the I/P transducer (1) located on the inside of the drive cover assembly (2). Refer to Table 3-4 for the wiring connections.

The output pressure supplied to the pneumatic PCV (3) is automatically regulated from 0.01-5-bar (0-70 PSI) when the supply pressure to the melter is a minimum of 7.0 bar (102 PSI).

Table 3-4 I/P Transducer Connections for the Automatic Pressure Control Option

Terminal Block	Signal
XT1-3	24VDC
XT1-5	0-10VDC
XT1-4	GND (common)

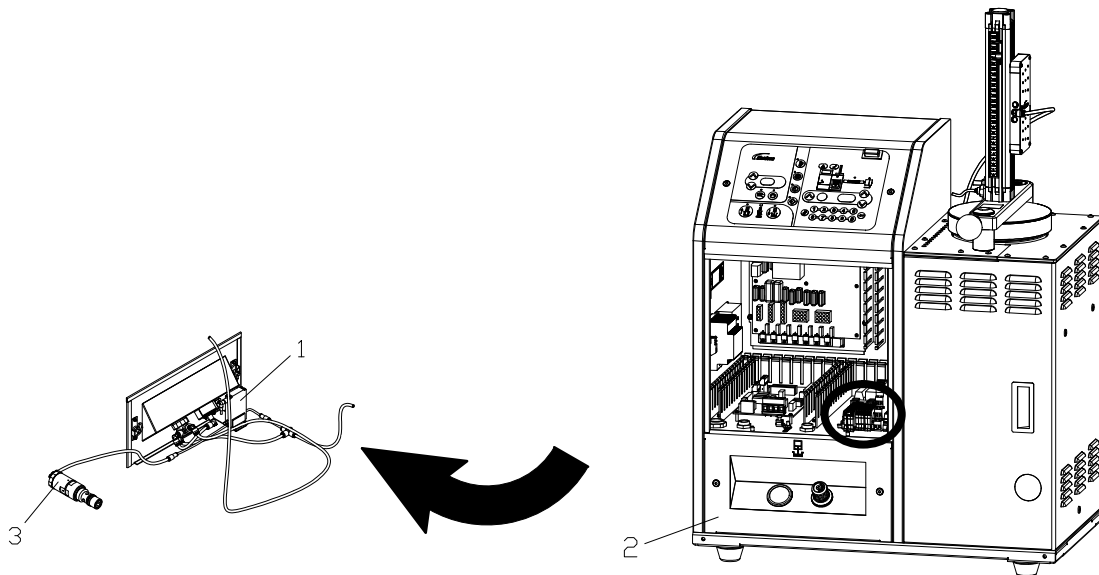


Figure 3-8 Connecting a signal to the I/P transducer for the pressure control P option

- 1. I/P transducer
- 2. Drive cover assembly

- 3. Pneumatic PCV

To connect wiring for the flow control bypass option

See Figure 3-9. Connect a customer-supplied 24V control signal to the pressure control terminal block (1) located inside the electrical enclosure XT1-3:24VDC+; XT1-4:24DC-.

With this pressure control option, the output pressure supplied to the pneumatic PCV is controlled with the air pressure regulator (2) when no signal is provided to the solenoid. When a signal is provided to the solenoid valve, the output pressure to the pneumatic PCV corresponds to the melter supply pressure.

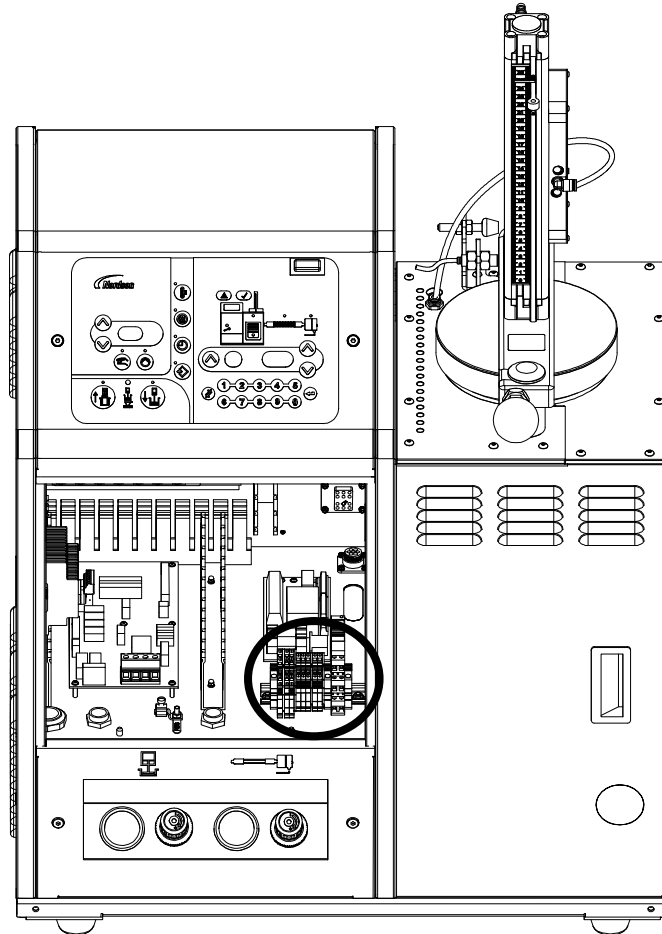


Figure 3-9 Connecting a signal to the pressure control terminal block for the pressure control option

Setting Up the Melter

After physically installing the melter, it must be set up to support your manufacturing process. Melter setup consists of enabling or making changes to factory-set operating parameters that affect the use and function of the melter. The operating temperature (setpoint) of the reservoir and each hose and applicator is also established during melter setup.

The melter is shipped from the factory with the most commonly used operating parameters already set up. The factory setup can be modified at any time to suit your manufacturing process.

Quick Setup

Table 3-5 describes the most commonly used operating parameters and their factory settings. Review the table to determine if the factory settings for each parameter will support your manufacturing process. If the default values for each of these operating parameters are appropriate for your manufacturing process, then no melter setup is required. Go directly to *Setpoint Temperature of the Reservoir, Hoses, and Applicators* later in this section to complete the installation process.

If you need to make changes to the factory setup or if you want to learn about other operating parameters, go to the next part in this section, *Operating Parameters*.

Quick Setup *(contd)*

Table 3-5 Common Operating Parameters

Parameter	Parameter Name	Purpose	Default Value
4	Ready Delay Time	A timer that delays the activation of the ready LED for a pre-defined time period after the reservoir, hoses, and applicators are at the desired setpoint temperature. The ready delay timer will only activate if the temperature of the reservoir, at the time the melter is turned on, is below its assigned setpoint temperature by 27 °C (50 °F) or more.	15 minutes
5	Service Interval Time	A timer that turns on a service LED when the value set for the timer equals the number of hours that the heaters have been on. The service LED is used to signal the need for maintenance.	500 hours
7	Motor Off Delay	If the switch receptacle is used, this parameter determines the amount of time the motor will remain on after the switched device is turned off.	0 seconds
8	Automatic Pump On	Allows the pump to start automatically when system ready is reached, provided that the pump has been enabled by pressing the pump enable key.	Enabled
11	Create Password	Sets a password that must be entered before any melter operating parameter or setpoint temperature can be changed.	5000
20	Temperature Units	Sets the units of the temperature display to degrees Celsius (C) or to degrees Fahrenheit (F).	C
21	Over Temperature Delta	Sets the number of degrees that any heated component can exceed its assigned setpoint temperature before an over temperature fault occurs.	15 °C (25 °F)
22	Under Temperature Delta	Sets the number of degrees that any heated component can drop below its assigned setpoint temperature before an under temperature fault occurs.	25 °C (50 °F)
23	Standby Delta	Sets the number of degrees that the temperature of all heated components will be decreased when the melter is placed into the standby mode.	50 °C (100°F)
26	Manual Standby Time	Sets the amount of time the melter will remain in the standby mode after the standby key is pressed.	Disabled
50 to 77	Seven-day Clock	A group of parameters that control the melter's clock. The clock is used to automatically turn the heaters on and off and to place the melter into the standby mode.	Disabled

Operating Parameters

The melter uses operating parameters to store noneditable and editable values. Noneditable values are those that provide information about the historical performance of the melter. Editable values are either a numeric setpoint or a control option setting. Control option settings affect the display of information or the function of the melter.

Operating parameters are stored in the melter's firmware in the form of a sequentially numbered list. The list is organized into the logical groups described in Table 3-6.

Table 3-6 Parameter Groups

Group	Parameter Numbers	Group Description
Standard	0 to 8 and 10 to 14	Frequently used parameters
Pressure Control	15 to 17	Configure pressure settings
Temperature Control	20 to 29	Control heater function
Input Setup	30 to 39	Configure the standard and optional inputs
Output Setup	40 to 46	Configure the standard and optional outputs
PUR Timer	49	Set the PUR timer
Seven-day Clock	50 to 77	Configure the clock feature
Automatic Fill Timer	78	Configure the external motor control switch
PID Selection	80 to 91	Configure the PID settings

In addition to the ability to read and edit parameter values, you can also save and restore the current value of every operating parameter and review a log of the last ten changes that were made to editable parameters.

Selecting Operating Parameters

Table 3-7 provides a complete list of the operating parameters. Review the list to determine which operating parameters would best support your manufacturing process. Refer to Appendix B, *Operating Parameters*, for detailed information about each parameter. Appendix B contains a complete description of each parameter, including its affect on the melter, default value, and format.

NOTE: Parameters that are used to configure optional equipment or that are otherwise reserved in the firmware are excluded from Table 3-7.


NOTE: Motor control parameters are set differently from operating parameters. Refer to *Setting up the Motor Control* later in this section. Some applications will require a change to one or more motor control parameters.

Reading or Editing Operating Parameters

Regardless of whether a parameter's value is editable or not, the procedure for accessing each parameter in order to read or edit its current value is the same.


To read or edit a parameter

1. Switch the melter on.
The melter performs a start-up check.

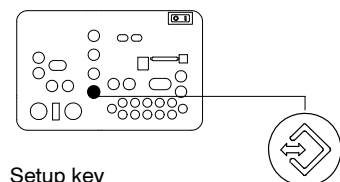

Setup key

2. Press the **Setup** key.
The left display flashes parameter 1.
3. Use the numeric keypad to enter the number of the desired parameter.
Refer to Table 3-7 for a complete list of parameters.

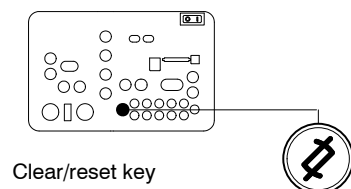


Clear/reset key

NOTE: If you incorrectly enter the parameter number, press the **Clear/Reset** key to return to parameter 1 and then re-enter the correct parameter number.

When you have finished entering the one- or two-digit parameter number, the right display indicates the parameter's current value.

4. Do *one* of the following:
 - If the value is noneditable, refer to *Monitoring the Melter* in Section 4, *Operation*.
 - If the value is editable go to step 5.

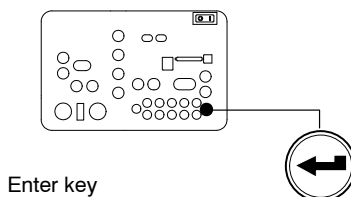

Enter key

5. Press the **Enter** key.
The right display flashes.
6. Use the keypad to enter the desired numeric setpoint or control option into the right display. Refer to Appendix B, *Operating Parameters*, for information about the numeric value or control option choices for each parameter.

NOTE: If the keypad has no affect on the right display, the melter is password protected. You must enter a valid password before you can edit parameters. Refer to *Entering the Melter Password* in Section 4, *Operation*.

To read or edit a parameter *(contd)*

7. Press the **Enter** key.

The melter checks that the new value or control option is acceptable.

- If the numeric setpoint or control option is accepted, the left and right displays index to the next sequential parameter number and value.
- If the numeric setpoint or control option is not accepted, the right display will indicate dashes (----) for three seconds and then it will change back to the original value.

8. Repeat step 5 through step 7 to read or change the next sequential parameter number or press the **Setup** key to exit the setup mode.

Table 3-7 Operating Parameters

Parameter	Name	Range of Values	Default Value
<i>Standard</i>			
0	Enter Password	0 to 9999	4000
1	Total Hours with Heaters On (noneditable)	0 to 9999	0
2	Fault Log (noneditable)	—	_F0 (empty)
3	Change History Log (noneditable)	—	P-_ (empty)
4	Ready Delay Time	10 to 60 minutes	15 minutes
5	Service Interval Time	0 to 8736 hours	500 hours
6	Service LED Heater Hours	0 to 9999 hours	0
7	Motor Off Delay	0 to 360 seconds	0 seconds
8	Automatic Pump On	0 (disabled) or 1 (enabled)	1 (enabled)
10	Enable or Disable Password	0 (disabled) or 1 (enabled)	0 (disabled)
11	Create Password	0 to 9999	5000
12	Change Hose 1 Output to Electric Applicator Activation	0 (disabled) or 1 (enabled)	0 (disabled)
13	Change Hose 2 Output to Electric Applicator Activation	0 (disabled) or 1 (enabled)	0 (disabled)
14	External Communications Lock-out	0 or 1	0 (disabled)

Continued...

Table 3-7 Operating Parameters (contd)

Parameter	Name	Range of Values	Default Value
<i>Temperature Control</i>			
20	Temperature Units (degrees °C or °F)	C (degrees Celsius) or F (degrees Fahrenheit)	C (degrees Celsius)
21	Over Temperature Delta	5 °C (10 °F) to 60 °C (110 °F)	15 °C (25 °F)
22	Under Temperature Delta	5 °C (10 °F) to 60 °C (110 °F)	25 °C (50 °F)
23	Standby Delta	5 °C (10 °F) to 190 °C (350 °F)	50 °C (100 °F)
24	Automatic Standby Timeout	30 to 1440 minutes	180 minutes
25	Automatic Heaters Off Time	0 to 1440 minutes	0 (disabled)
26	Manual Standby Time	0 to 180 minutes	0 (disabled)
27	Hose Standby Delta	1 °C (1 °F) to 190 °C (350 °F)	0 (disabled)
28	Applicator Standby Delta	1 °C (1 °F) to 190 °C (350 °F)	0 (disabled)
29	Internal Zone Temperate Offset	0 °C (0 °F) to -15 °C (-30 °F)	0 (disabled)
<i>Input Setup</i>			
30	Standard Input 1	0-9, 13-14, 19-20	0 (disabled)
31	Standard Input 2 (non-editable)	0-9, 13-14, 19-20	20 (hopper empty)
32	Standard Input 3 (non-editable)	0-9, 13-14, 19-20	19 (melt demand)
33	Standard Input 4	0-9, 13-14, 19-20	0 (disabled)
34	Optional Input 5	0-9, 13-14, 19-20	0 (disabled)
35	Optional Input 6	0-9, 13-14, 19-20	0 (disabled)
36	Optional Input 7	0-9, 13-14, 19-20	0 (disabled)
37	Optional Input 8	0-9, 13-14, 19-20	0 (disabled)
38	Optional Input 9	0-9, 13-14, 19-20	0 (disabled)
39	Optional Input 10	0-9, 13-14, 19-20	0 (disabled)
<i>Output Setup</i>			
40	Standard Output 1	0-6	1 (Ready)
41	Standard Output 2	0-6	3 (Fault)
42	Standard Output 3	0-6	6 (Alert)
43	Optional Output 4	0-6	0 (disabled)
44	Optional Output 5	0-6	0 (disabled)
45	Optional Output 6	0-6	0 (disabled)
46	Optional Output 7	0-6	0 (disabled)
<i>PUR Timer</i>			
49	PUR timer	10-120 minutes	30 minutes
<i>Continued...</i>			

Reading or Editing Operating Parameters (contd)

Table 3-7 Operating Parameters (contd)

Parameter	Name	Range of Values	Default Value
<i>Seven-day Clock</i>			
50	Current Day	1 to 7 (1 = Monday)	—
51	Current Hour	0000 to 2359	—
55	Schedule 1 Heaters On	0000 to 2359	06:00
56	Schedule 1 Heaters Off	0000 to 2359	17:00
57	Schedule 1 Enter Standby	0000 to 2359	—:—
58	Schedule 1 Exit Standby	0000 to 2359	—:—
60	Schedule 2 Heaters On	0000 to 2359	—:—
61	Schedule 2 Heaters Off	0000 to 2359	—:—
62	Schedule 2 Enter Standby	0000 to 2359	—:—
63	Schedule 2 Exit Standby	0000 to 2359	—:—
65	Schedule 3 Heaters On	0000 to 2359	—:—
66	Schedule 3 Heaters Off	0000 to 2359	—:—
67	Schedule 3 Enter Standby	0000 to 2359	—:—
68	Schedule 3 Exit Standby	0000 to 2359	—:—
71	Schedule for Monday	0-7	0
72	Schedule for Tuesday	0-7	0
73	Schedule for Wednesday	0-7	0
74	Schedule for Thursday	0-7	0
75	Schedule for Friday	0-7	0
76	Schedule for Saturday	0-7	0
77	Schedule for Sunday	0-7	0
<i>Automatic Fill Timer</i>			
78	Automatic Fill Timer	0-99 seconds	0 (Disabled)
<i>PID Selection</i>			
80-91	PID Selection for Hose/Applicator Receptacles	0-3	0 or 1

NOTE: Motor control parameters are set differently from operating parameters. Refer to *Setting Up the Motor Control* later in this section. Some applications will require a change to one or more motor control parameters.

Setpoint Temperature of the Reservoir, Hoses, and Applicators

The melter is shipped from the factory with the reservoir setpoint temperature at 105 °C (220 °F) and the hose and applicator setpoint temperatures at 0 degrees (turned off).


Before the melter can be used, a setpoint temperature must be assigned to the reservoir, hoses, and applicators. Assign setpoint temperatures using any of the following methods:

- **Global**—The reservoir and all hoses and applicators are set to the same setpoint temperature.
- **Global-by-component group**—All of the hoses or all of the applicators are set to the same setpoint temperature.
- **Individual Component**—The setpoint temperature of the reservoir and each hose and applicator is set individually.


Since most manufacturing processes will require the reservoir, hoses, and applicators to be set to the same temperature, only the global method of assigning setpoint temperatures is described in this section. For information about the other two methods of assigning setpoint temperatures, refer to *Adjusting Component Temperatures* in Section 4, *Operation*.

As with operating parameters, you can also save and restore setpoint temperatures and review past changes that were made to setpoint temperatures.


To assign a global setpoint temperature

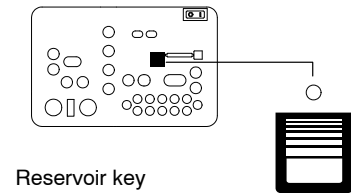

1. Press and hold the **Reservoir** key for three seconds.
The left display flashes 1.

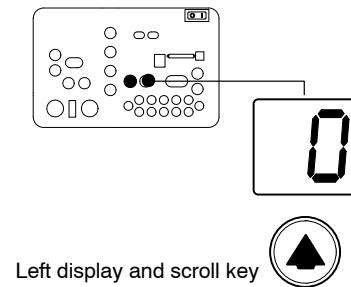


2. Scroll the left display to 0.
The right display indicates all dashes (---) and the LEDs on the reservoir, hose, and applicator keys turn green.

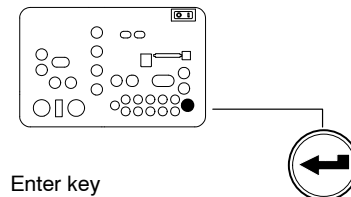


3. Press the **Enter** key.
The right display flashes.

4. Use the numeric keypad to enter the setpoint temperature recommended by the manufacturer of the hot melt.

Refer to the technical data sheet provided by the manufacturer of the hot melt to determine the optimal setpoint temperature.

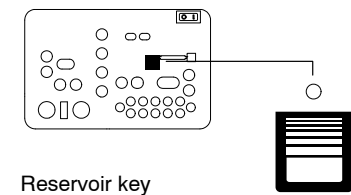

5. Press the **Reservoir** key.
Each component begins to heat or cool to the new global setpoint temperature and the melter returns to the automatic scan mode.

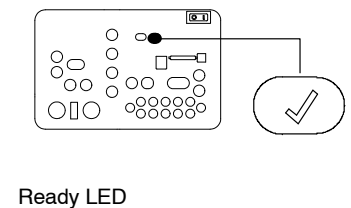

When all of the components reach the global setpoint temperature, the ready LED turns on (green).

Save and Restore Melter Settings


The current value of all editable operating parameters and the setpoint temperature of each component can be saved and, if necessary, restored at a later time. When saved settings are restored, they overwrite the settings that are presently in use.

This save-restore feature is useful in instances where the settings that are in use are deliberately or accidentally changed and you need to return the melter to its pre-change setup.

To save current settings

With the melter in the automatic scan mode, simultaneously press the number **1** key and the **Setup** key.

S-1 appears momentarily in the right display.

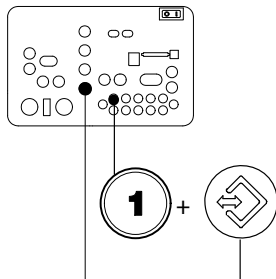


Saving current settings

To restore saved settings

CAUTION! All melter settings will be deleted! Before restoring saved settings, ensure that use of the restored settings will not disrupt the current process or create an unsafe operating condition.

With the melter in the automatic scan mode, simultaneously press the number **2** key and the **Setup** key.

S-2 appears momentarily in the right display.

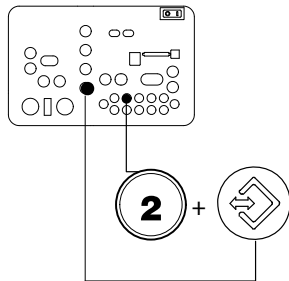

Restoring current settings



Review Parameter and Setpoint Temperature Changes

The melter stores in a change history log, a record of the last ten changes that were made to either operating parameters or setpoint temperatures. Since the log only stores ten changes, old log entries are overwritten beginning with the first log entry, by the eleventh and following log entries.

To review the change history log

1. Press the **Setup** key.

Operating parameter 1 flashes in the left display.

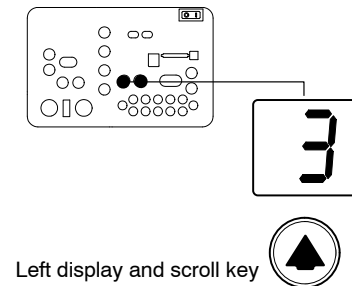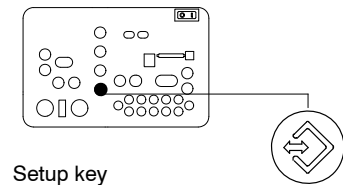

2. Press the left-display scroll key to change the display to parameter 3 (the change history log).

The following occurs:

- If the last change was to an editable parameter, all of the component key LEDs remain off.



or

- If the last change was to a setpoint temperature, the LED on the associated component key(s) turns on.

and

- The right display indicates the four-digit log entry associated with the *last* change that was made.

Table 3-8 provides the meaning, from left to right, of each digit in the log entry. Following the table are two example log entries.

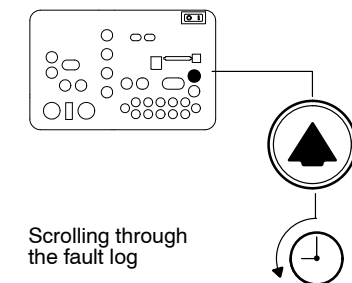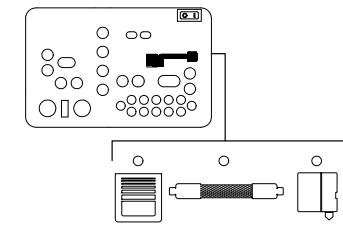


3. Press a right-display scroll key to review each of the remaining nine log entries. Each press of a scroll key displays a progressively older log entry.
4. Press the **Setup** key to return to the automatic scan mode.

Table 3-8 Change History Log

First Digit	Second Digit	Third and Fourth Digits			
P (Parameter)		<i>Indicates the number of the parameter that was changed</i>			
S (Setpoint)	-	<i>Are used in conjunction with the LEDs on the component keys to indicate the location and method of a setpoint temperature change.</i>			
		When this LED is on..	And the Fourth Digit Indicates..	The change was to..	And the Method of Change was..
		Reservoir Key	1	The reservoir	Individual
		Hose Key	1– 6	A single hose	Individual
		Applicator Key	1– 6	A single applicator	Individual
		All Keys	0	All components	Global
		Hose Key	0	All hoses	Global-by-component
		Applicator Key	0	All applicators	Global-by-component


Change History Log Examples

Example 1:



Parameter 4 (ready delay) was changed.

Example 2:



If the LED on the applicator key is on, then this display would indicate that the global-by-component method was used to change the temperature of the applicators.

Installing Melter Inputs

AltaPUR melters are equipped with two standard digital inputs. Each input is customer-wired to the melter and then set up to provide one of the following control options:


- Place the melter into the standby mode
- Turn the heaters on and off
- Enable or disable a specific hose or applicator
- Turn the motor on and off

The inputs require a 10 to 30 VDC signal voltage. The inputs are not polarity-sensitive.

NOTE: Additional input/outputs are available through an optional I/O expansion card kit. Refer to *Optional Equipment* in Section 7, *Parts*.



WARNING! The operator can override the melter inputs by using the control panel function keys. Ensure that the control logic for any external device that sends an input signal to the melter is programmed to prevent the creation of an unsafe condition in the event that the operator overrides an external input to the melter.

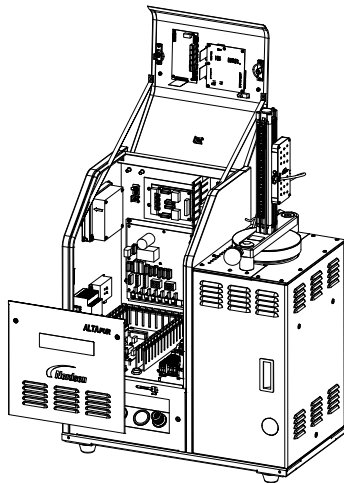

Opening the electrical enclosure


To wire digital inputs to the melter

1. Route a 2-, 4-, 6-, or 8-conductor signal cable from the control equipment to the melter and through a strain relief connector P/N 7407629 (available in installation kit) penetration on the back of the enclosure. Use rigid or flexible conduit or a suitable strain relief to protect the cable from the sharp edge of the conduit penetration.

NOTE: Use a signal cable suitable for NEC class 1 remote control and signaling circuits. To reduce the possibility of electrical shorting, route the cable so that it does not touch nearby circuit boards.

See Figure 3-10.

2. Connect each pair of input wires to the appropriate terminals (8 through 14) on connector P/N 277909. If input number four is used, terminal 7 on connector P/N 277908 (available in the installation kit) must also be used. Table 3-9 lists the terminal numbers that correspond to each input. Table 3-9 lists the terminal numbers that correspond to each input.

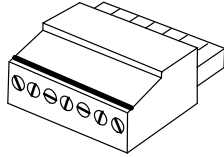

Connector P/N 277909

NOTE: Connector P/N 277909 is physically keyed to prevent it from being used in place of connector P/N 277908, which has terminals numbered 1 through 7.

3. Plug the connector (P/N 277909) into the bottom receptacle of terminal XT7, which is located on the expansion board. If input number four is used, plug connector P/N 277908 into the top receptacle on terminal XT7.

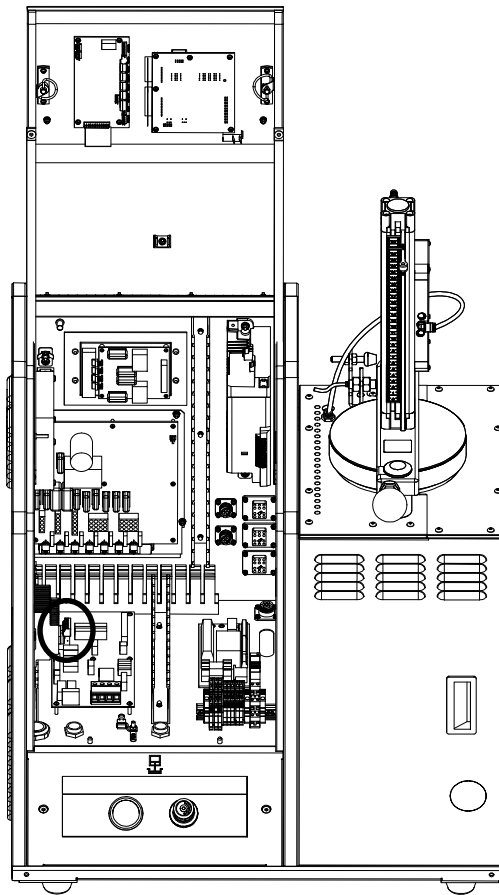


Figure 3-10 Wiring inputs

Installing Melter Inputs *(contd)*

To set up a digital input

Set up the parameter control option for each input that you connected to the melter. Table 3-9 lists the available control options. Refer to *Setting Up the Melter* earlier in this section, for information about how to select operating parameters and edit parameter control options.



With the exception of the pump enable/disable control option, all inputs are transition-based.

Input Setup in Appendix B

The input capacity of the melter may be increased from four inputs to a total of ten inputs by adding an optional I/O expansion card that is available from Nordson Corporation.

Section 7, *Parts*

Table 3-9 Digital Input Data

Input	Terminals	Operating Parameter	Control Option	Note
<i>Standard Inputs</i>				
1	8 and 9	30	0 - Input Disabled (Default) 1 - Standby On/Off 2 - Heaters On/Off 3 - Motor 1 Enable/Disable 4 - Hose/Applicator 1 Enable/Disable 5 - Hose/Applicator 2 Enable/Disable 6 - Hose/Applicator 3 Enable/Disable 7 - Hose/Applicator 4 Enable/Disable 8 - Hose/Applicator 5 Enable/Disable 9 - Hose/Applicator 6 Enable/Disable 11 - Motor 2 Enable/Disable 13 - Automatic Fill Timer No. 1 14 - Automatic Fill Timer No. 2	A
2	10 and 11	31	Not available	
3	12 and 13	32	Not available	
4	7 and 14	33	Same as parameter 30 (except for control option 10, which is not available) (Default=0)	
<i>Optional Inputs</i>				
5	11 and 12	34	Same as parameter 33 (Default=0)	B, C
6	13 and 14	35	Same as parameter 33 (Default=0)	B, C
7	15 and 16	36	Same as parameter 33 (Default=0)	B, C
8	17 and 18	37	Same as parameter 33 (Default=0)	B, C
9	19 and 20	38	Same as parameter 33 (Default=0)	B, C
10	9 and 10	39	Same as parameter 33 (Default=0)	B, C
NOTE	A: If control option 3 is selected, the motor will not turn on—even if you press the pump enable key—if voltage is not present on the input's contacts. B: Parameters 34 through 39 are reserved for the inputs created when either the optional I/O expansion card or optional I/O board is installed. Refer to Appendix B, <i>Operating Parameters</i> , for more information. C: Refer to the instruction sheet provided with the optional I/O expansion card or analog I/O board for wiring information.			

Installing Melter Outputs


The AltaPUR melter is equipped with three user-configurable digital outputs. Outputs are used to communicate with user-supplied production equipment or control hardware, such as a programmable logic controller.

Each output is customer-wired and then set up in the melter's firmware to provide one of the following outputs:

- The melter is ready
- The melter is ready *and* the motor is on
- A fault has occurred
- The reservoir is empty
- The service LED is on

All output contacts are rated for 30 VDC 2 A. All contacts are normally open when the melter is turned off.

NOTE: Additional input/outputs are available through an optional I/O expansion card kit. Refer to *Optional Equipment* in Section 7, *Parts*.

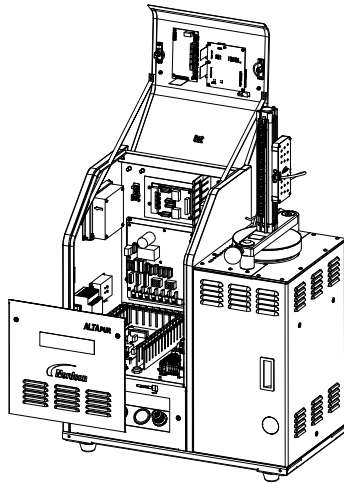

Opening the electrical enclosure

To connect a digital output to the melter


1. Route a 2-, 4, or 6-conductor signal cable from the control equipment to the melter, through a strain relief connector P/N 7407629 (available in installation kit) penetration on the back of the enclosure. Use rigid or flexible conduit or a suitable strain relief to protect the cable from the sharp edge of the conduit penetration.

NOTE: Use a signal cable suitable for NEC class1 remote control and signaling circuits. To reduce the possibility of electrical shorting, route the cable so that it does not touch nearby circuit boards.

See Figure 3-11.

2. Connect each pair of output wires to the appropriate terminals (1 through 7) on connector P/N 277908. The connector is provided in the installation kit. Table 3-10 lists the terminal numbers that correspond to each output.

NOTE: Terminal number 7 on connector P/N 277908 is reserved for input number four. Connector P/N 277908 is physically keyed to prevent it from being used as connector P/N 277909, which has terminals numbered 8 through 14.

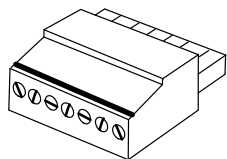

Output connector P/N 277908

3. Plug connector P/N 277908 into the top receptacle on terminal XT7, which is located on the expansion board.

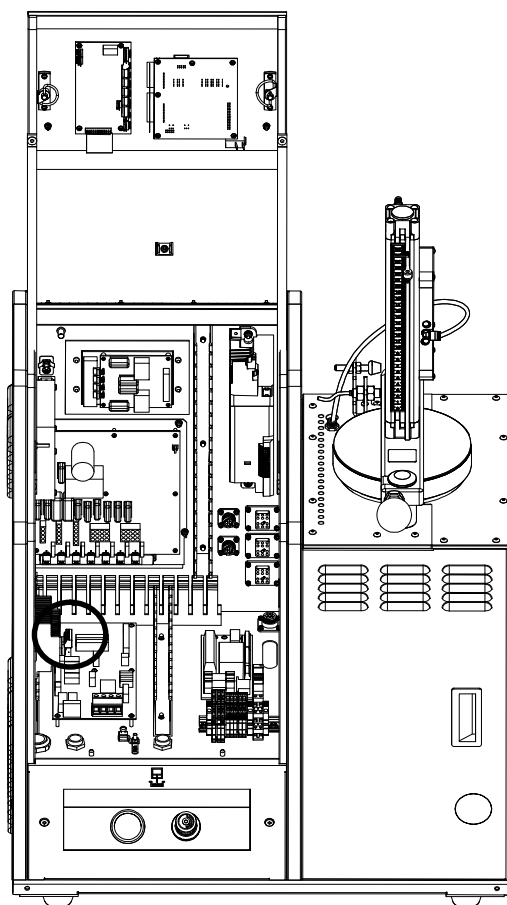


Figure 3-11 Wiring outputs

To set up a digital output

Set up the parameter control option for each output that you connected to the melter. Table 3-10 lists the available control options. Refer to *Setting Up the Melter* earlier in this section for information about how to select operating parameters and edit parameter control options.

To set up a digital output (contd)


Table 3-10 Digital Output Data

Output	Terminals	Operating Parameter	Control Options	Note
Standard Outputs				
1	1 and 2	40	0 - Output Disabled	
			1 - Ready (Default)	A
			2 - Ready and the Motor is On	A
			3 - Fault	B
			4 - Reservoir is empty	A, C
			5 - Service LED is On	A
			6 - Alert	B, D
2	3 and 4	41	Same as parameter 40 (Default=3)	
3	5 and 6	42	Same as parameter 40 (Default=6)	
Optional Outputs				
4	1 and 2	43	Same as parameter 40 (Default=0)	E, F
5	3 and 4	44	Same as parameter 40 (Default=0)	
6	5 and 6	45	Same as parameter 40 (Default=0)	
7	7 and 8	46	Same as parameter 40 (Default=0)	
NOTE	A: When this control option condition occurs, the contacts close. Contacts are normally open when power is off. To inverse this control option, press both the up and down arrow keys simultaneously until a dash is visible in front of the displayed control option. When an inverted control option condition occurs, the contacts open.			
	B: When this control option condition occurs, the contacts open. Contacts are normally open when power is off. To inverse this control option, press both the up and down arrow keys simultaneously until a dash is visible in front of the displayed control option. When an inverted control option condition occurs, the contacts close. Note that when an inverted control option is used, some conditions cannot be indicated, including loss of power, some types of damage to the display/CPU board, or an open melter thermostat.			
	C: For AltaPUR melters, a reservoir-empty state produces a melter fault after several seconds. When the fault occurs, the reservoir-empty output reverts back to its standard condition. In most cases, Nordson Corporation recommends the use of control option 3 (Fault), which will indicate a reservoir-empty state or any other condition that will stop production.			
	D: Control option 6 provides an output signal when a potential fault is detected. If control option 3 and 6 are both used, then both a fault output and an alert output signal will be present when the fault LED turns on.			
	E: Parameters 43 through 45 are reserved for the outputs created when either the optional I/O expansion card or optional I/O board is installed. Refer to Appendix B, <i>Operating Parameters</i> , for more information.			
	F: For wiring information, refer to the instruction sheet that is provided with the optional I/O expansion card or analog I/O board.			

This page intentionally left blank.

Setting Up Gear-to-Line Operation

The melter can be set up to deliver an adhesive output that is geared to the production line speed. The gear-to-line capability is enabled or disabled through the Manual mode key, the motor/pump speed scroll keys are used to adjust the scaled output, and the actual pump speed is displayed in rpms on the Pump speed display. When the melter is operating in the gear-to-line mode, the pump speed follows a 0-10 VDC analog input signal from the production line.

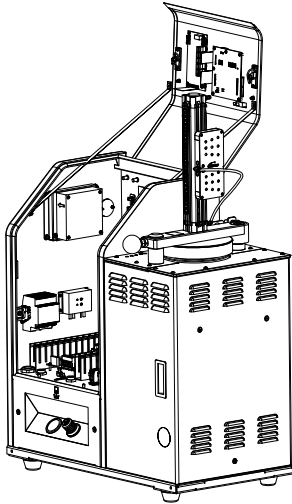

Opening the electrical enclosure

To connect a gear-to-line input to the melter

1. Route a 2-conductor signal cable from the control equipment to the melter and through a strain relief connector P/N 7407629 (available in installation kit) penetration on the back of the enclosure. Use rigid or flexible conduit or a suitable strain relief to protect the cable from the sharp edge of the conduit penetration.

NOTE: Use a signal cable suitable for NEC class 1 remote control and signaling circuits. To reduce the possibility of electrical shorting, route the cable so that it does not touch nearby circuit boards.

See Figure 3-12.

2. Connect a 0-10 VDC line speed reference signal to terminals XT1-6 (+) and XT1-7 (-) on the motor control assembly.

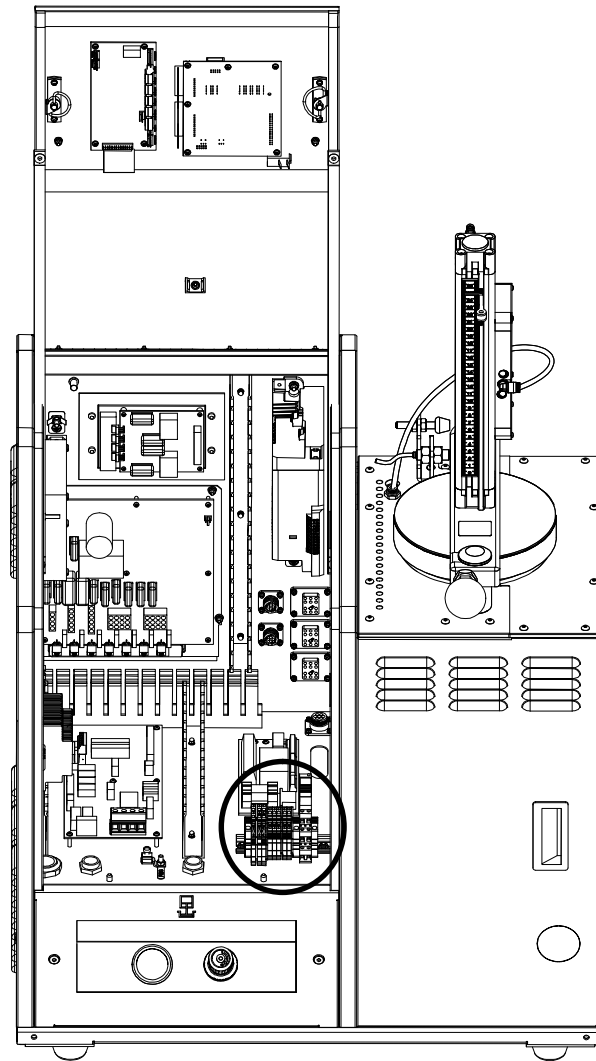



Figure 3-12 Connecting a line speed reference signal for gear-to-line operation

Setting Up the Motor Control


The motor control parameters are factory-set and may not need to be changed. Follow this procedure if your application requires a change to a motor control parameter.

To change a motor control parameter

1. Switch the melter off.

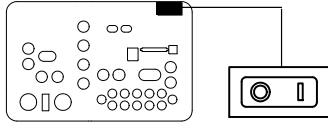


Control switch

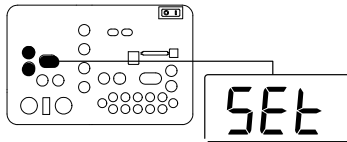

Pump speed display and arrow keys

2. Press and hold both **Pump speed arrow** keys and then switch the melter back on. When the motor control display indicates SEt, release the keys.
3. Use the **Pump speed arrow** keys to select a value for the parameter shown on the pump speed display. Refer to Table 3-11 for a parameter list.

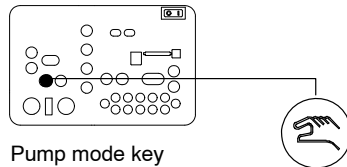

Pump mode key

4. Press the **Pump mode** key to save the value and move to the next parameter.
5. Repeat steps 3-4 for each parameter you want to change.
6. To exit the setup mode, press the **Pump mode** key one additional time after the last parameter has been displayed.

Table 3-11 Default Motor Control Parameter Settings

Parameter	Default Setting	Description	Explanation
SEt	80	Maximum pump rpm	This parameter controls the increment of change in motor speed that occurs on each press of the up or down key when the melter is operating in the manual mode. To change the rpm in increments of 1, set this parameter to the maximum pump rpm.
LoS	0	Minimum pump speed in gear-to-line mode	If the melter will be operated in the manual mode, enter 0. If the melter will operated in the gear-to-line mode, enter a minimum line speed. The motor speed will not fall below this value even if the signal drops to 0 V.
dLy	3	Revolutions pump will turn after reservoir empty	This parameter controls the number of revolutions the pump will turn after the reservoir-empty sensor signals a reservoir-empty state. After the set number of turns, the melter will shut down and display an F9/1 melter fault code. Refer to <i>Melter Faults</i> in Section 6, <i>Troubleshooting</i> , for more information on melter fault codes.

Installing Optional Equipment

Each item of optional equipment is shipped with instructions for installing and operating the equipment. Refer to Section 7, *Parts*, for equipment part numbers.

Connecting an Applicator Driver, Pattern Controller, or Timer

If applicable, complete the melter installation by connecting the applicators to the desired applicator driver, pattern control, or timer. Refer to the product manual provided with the device for information about installing and operating the equipment.

Flushing the Melter

Flush the melter before initial operation. Refer to *Flushing the Melter* in Section 5, *Maintenance*.

Refer to Section 4, *Operation*, for information about filling the hopper and operating the melter.

Section 4

Operation




WARNING! Allow only personnel with appropriate training and experience to operate or service the equipment. The use of untrained or inexperienced personnel to operate or service the equipment can result in injury, including death, to themselves and others, and damage to the equipment.

This section provides information about the following operator-level tasks:

- Loading an adhesive slug
- Starting the melter
- Adjusting the PCV
- Monitoring melter operation
- Adjusting the operating temperature of heated components
- Using the melter function keys
- Shutting the melter down

Most of the controls described in this section are located on the control panel. Refer to *Key Components* in Section 2, *Introduction*, for the location of the controls and indicators described in this section.

Melt Plate Operation and More about Heated Components

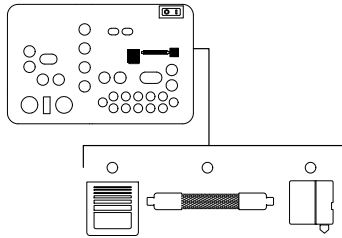

Component keys

The melter contains three groups of heated components. These are the reservoir group (which contains the reservoir, the melt plate, and the manifold), the hose group, and the applicator group. Component groups are represented on the control panel by the component keys shown to the left.

Heated components within each group are identified by their position number. The position of the reservoir and manifold is fixed at 1. The position of the melt plate is fixed at 2. Hose and applicator position numbers are automatically assigned based on the hose/applicator receptacle they are connected to. For example, the position number of a hose/applicator pair that is connected to the second receptacle would be hose position 2 and applicator position 2. The number of hose/applicator receptacles available on each melter depends on the configuration in which the melter was ordered.

NOTE: The melt plate temperature setpoint cannot be programmed. It is either the same as the reservoir (when the reservoir is not full) or off (when the reservoir is full). The following bullets supply additional important information about the melt plate:

- The piston always applies downward force on the adhesive slug in the hopper when the melt plate is on.
- Under normal operating conditions, when the system is warming up the melt plate also heats until it reaches setpoint. On reaching the setpoint the melt plate turns off until the system reaches setpoint.
- When the adhesive slug becomes empty, the melt plate turns off.
- The actual temperature of the melt plate can be displayed by pressing the Reservoir key and then 2.

Loading an Adhesive Slug

The AltaPUR melter is designed to work with PUR adhesive slugs in sealed foil bags. Before loading an adhesive slug, confirm that the hot melt material is compatible with the melter. Refer to *Intended Use* in Section 2, *Introduction*, for information about hot melt materials that should not be used in AltaPUR melters.



WARNING! Hot! Risk of burns! Never use your bare hands. Doing so may result in personal injury.




WARNING! Risk of personal injury. Closing the lid creates a pinching risk. Take care when closing the lid.

To Load an Adhesive Slug

1. Ensure that
 - the hopper empty LED is turned on
 - the expiration date of the adhesive slug is not exceeded
 - there are no tears or openings in the foil bag
2. Press the **Piston up** key to raise the piston. The LED illuminates when the piston is raising.

NOTE: The piston up key is an alternate action switch: when it is pressed, the piston will start to raise; when it is pressed again, the piston will stop.

3. See Figure 4-1. When the piston is fully raised, pull up on the handle to open the lid.

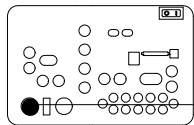

Piston up key

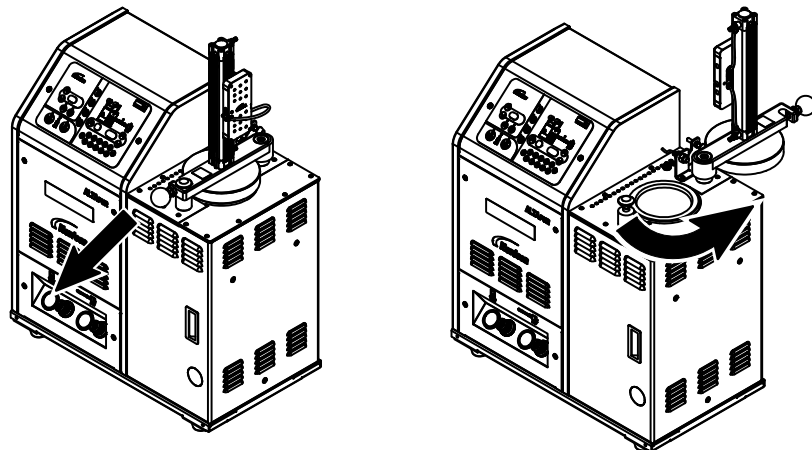


Figure 4-1 Opening the lid

To Load an Adhesive Slug (contd)

4. Remove the empty foil bag in the hopper and dispose it properly.

CAUTION! Do not remove an empty foil bag until a new bag is ready to load. An adhesive slug must always be in place so that the melter is sealed and the adhesive will not cure.

5. Inspect the melt plate for adhesive or debris on the outer diameter and, if necessary, clean the surface with a plastic or wooden scraper.


NOTE: The outside diameter of the melt plate must be clean in order to create a proper seal with the new slug's foil bag.

6. Cut a circle in the bottom of the foil bag to allow adhesive to flow into the melter. Size the hole according to adhesive usage rates, smaller holes for low usage, larger holes for high usage. Leave a minimum of 20 mm (0.8 in.) even at the highest flow rates so that a seal is able to form between the melt plate and bag.

7. Load the adhesive slug into the hopper and close the lid.

8. Press the **Piston down** key to lower the piston.

NOTE: The Piston down key only activates the piston if the piston is in place (PIP) over the hopper. If the piston is in place, it applies downward force for 30 seconds after the Piston down key is pressed. After 30 seconds, the downward force is turned on and off by the melt-on-demand sensor functionality.

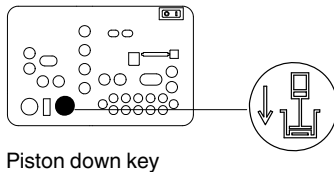

Piston down key


Starting the Melter

Before starting the melter for the first time, confirm that the

- melter is fully installed including any required inputs and outputs, applicator drivers, pattern controllers, or timers.
- melter's operating parameters are set up to support the current manufacturing process.

Refer to Section 3, *Installation*, if any of the items listed above are not complete.

To start the melter

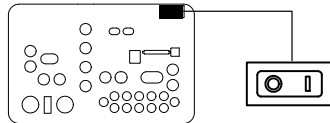

Control switch

1. Ensure that adhesive is present in the melter hopper. Refer to *Loading an Adhesive Slug* as needed.

2. Switch the melter on.

The melter:


- Tests the control panel LEDs.
- Turns on the heaters (the heaters LED turns green).
- Begins to automatically scan through and display the actual temperature of the reservoir and each hose and applicator that has a setpoint temperature that is greater than zero degrees. The sequence of the automatic scan is: reservoir, each hose and applicator pair, and then back to the reservoir.

NOTE: The melt plate and pneumatic cylinder are activated when the melt-on-demand sensor signals that adhesive is needed in the reservoir.


- Turns on the ready LED (green) when the reservoir and all of the hoses and applicators are within 3 °C (5 °F) of their assigned setpoint temperature.

NOTE: If the Ready Delay Time (parameter 4) is set to a value other than 0, then this additional time must pass before the ready state will be reached.


Operating in Manual Mode

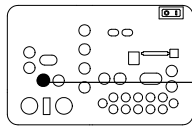

Pump mode key

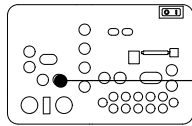

Pump enable key

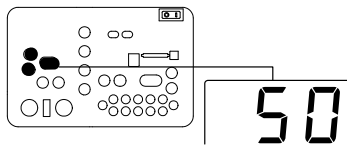

Pump speed display and arrow keys

1. Press the **Pump mode** key until the LED is turned on.
2. Press the **Pump enable** key until the LED is turned on.
3. Use the **Pump speed arrow** keys to change the pump speed to a setting greater than 10.

The pump speed display indicates the actual pump speed in rpms.

- If the system has not reached the system-ready state at the time that the pump enable key is pressed, the LED on the pump enable key will turn yellow, indicating that the pump is enabled, but not started. The pump will start automatically when the system-ready state is reached.
- If the system has reached the system-ready state at the time that the pump enable key is pressed, the pump will start and the LED on the pump enable key will turn green, indicating that the pump is running.
- If the melter is set up for foot/hand-held applicator switch pump activation, the pump enable LED will not turn on and the pump will not start until the pump is manually started using the switching device.
- When the reservoir is empty, the motor will stop after it has rotated the number of revolutions specified in the dLy (delay after empty) motor control parameter. To run the pump after it has been turned off by the control system, clear all melter faults and press the **Pump enable** key. The motor will run for the number of revolutions specified and then stop again.


NOTE: You can change the way the pump enable key operates by changing parameter 8 (automatic pump on). Refer to Appendix B, *Operating Parameters*.

NOTE: When the melter is operating in the manual mode, the pump speed is determined by the following equation. Refer to Section 8, *Technical Data*, for pump displacement values.


$$\text{Adhesive output (cc/min)} = \text{displayed rpm} \times \text{pump displacement}$$

Operating in Gear-To-Line Mode


The melter can be set up to deliver an adhesive output that is geared to the production line speed. The gear-to-line capability is enabled or disabled through the pump mode key, the pump speed arrow keys are used to adjust the scaled output, and the actual pump speed is displayed in rpms on the pump speed display. When the melter is operating in the gear-to-line mode, the pump speed follows the 0-10 VDC signal from the production line. To set up the melter for gear-to-line operation, refer to *Setting Up Gear-to-Line Operation* in Section 3, *Installation*.

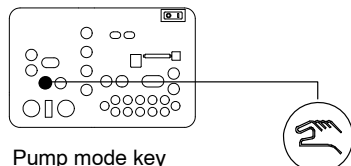

Pump mode key

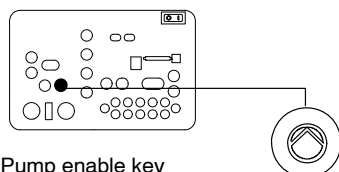

Pump enable key

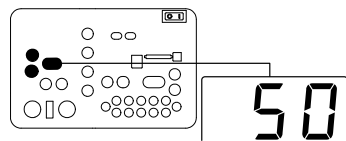

Pump speed display and arrow keys

1. Press the **Pump mode** key until the LED is turned off.
2. Press the **Pump enable** key until the LED is turned on.
3. Press the **Pump enable** key to enable the pump. If needed, use the **Pump speed arrow** keys to adjust the scaled adhesive output.

The pump speed display indicates the actual pump speed in rpms.

- If the system has not reached the system-ready state at the time that the pump enable key is pressed, the LED on the pump enable key will turn yellow, indicating that the pump is enabled, but not started. The pump will start automatically when the system-ready state is reached and when the production line starts.
- If the system has reached the system-ready state at the time that the pump enable key is pressed, the pump will start and the LED on the pump enable key will turn green, indicating that the pump is running.
- When the reservoir is empty, the motor will stop after it has rotated the number of revolutions specified in the dLy (delay after empty) motor control parameter. To run the pump after it has been turned off by the control system, press the **Pump enable** key. The motor will run for the number of revolutions specified and then stop again.

NOTE: You can change the way the pump enable key operates by changing parameter 8 (automatic pump on). Refer to Appendix B, *Operating Parameters*.

NOTE: When the melter is operating in the gear-to-line mode, the pump speed is determined by the following equation. Refer to Section 8, *Technical Data*, for pump displacement values.


$$\text{Adhesive output (cc/min)} = \text{displayed rpm} \times \text{pump displacement} \times \left[\frac{\text{input voltage}}{10} \right]$$

Adjusting the PCV

Your melter will have one of the following types of pressure control: manual PCV, automatic pressure control option, or flow control bypass option. Refer to *Pressure Control Options* in Section 2, *Introduction*, for a detailed description of the pressure control options. Refer to *Melter Parts List* in Section 7, *Parts*, to determine the configuration of your melter.

NOTE: If you want to change the type of pressure control, service kits for each option are available for field-retrofit. Refer to Section 7, *Parts*.

Manual PCV

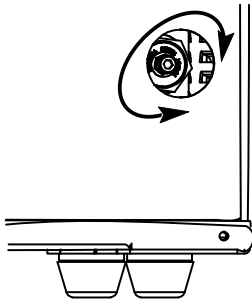

Adjusting the PCV

NOTE: The PCV screw is turned fully counterclockwise (at or near the valve's lowest pressure setting) at the factory and then the lock nut is tightened.

CAUTION! Do not exceed 2.7 N•m (24 in.-lb) of torque when adjusting the PCV.


To use the PCV to control adhesive output, loosen the lock nut and adjust the valve to achieve the desired adhesive output rate for your manufacturing process. With the melter at operating temperature, the line running, and the applicators dispensing adhesive, turn the adjustment screw on the PCV:

- clockwise to increase the adhesive output
- counterclockwise to decrease the adhesive output

Automatic Pressure Control

Use the customer-supplied 0-10VDC signal to control the air pressure. The 0-10VDC signal corresponds to a pneumatic pressure range of 0.01-5 bar (0-70 PSI).

Flow Control Bypass

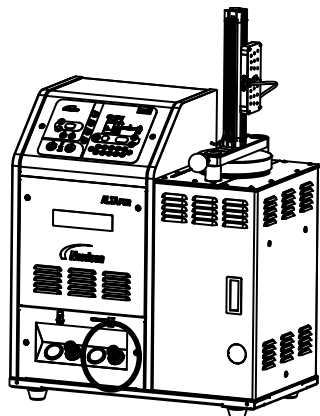


Location of the air regulator and gauge used with the flow control bypass option

If no signal is being supplied to the solenoid valve, use the air pressure regulator located on the drive cover assembly to adjust the output pressure to the pneumatic PCV. The gauge on the drive cover displays the air pressure provided to the pneumatic PCV.

NOTE: If a signal is being provided to the solenoid valve, the output pressure to the pneumatic PCV corresponds to the melter supply pressure.

Placing the System in Standby

To keep reactive materials from curing, perform the following actions before downtime or breaks:

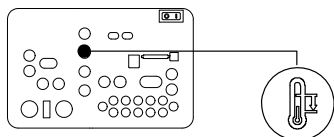

Standby key

1. Press the **Standby** key to reduce the system temperature and place the system in standby mode.
2. Cover the applicator nozzles with petroleum jelly or submerge them in a suitable oil.


Monitoring the Melter

The melter provides indicators that allow you to:

- Quickly confirm that the melter is operating correctly
- Monitor the actual temperature of the reservoir group and each hose and applicator
- Identify melter faults
- Determine when service is required

The melter automatically determines the number and location of all hoses and applicators that are connected to it. Refer to *Melt Plate Operation* and *More About Heated Components*, earlier in this section, for information about hose/applicator capacity and the identification of heated components.

Confirm that the Melter is Operating Correctly

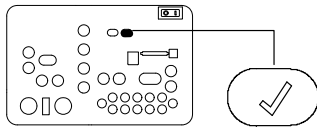

Ready LED


The ready LED turns on (green) when all of the heated components are within 3 °C (5 °F) of their setpoint temperature.

The ready LED will not turn on, or will turn off, if any of the following events occur:

- The ready delay is still counting down.
- The operator or a remote input places the melter in the standby mode.
- The seven-day clock places the melter in the standby mode.
- There is a fault (the fault LED will turn on).

Refer to *Monitor Melter Faults* and *Using Melter Function Keys* later in this section for information about melter faults and using the seven-day clock and standby functions. Refer to Appendix B, parameter 4, for information about the ready delay.

Monitor the Adhesive Level

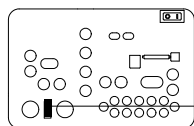

Hopper empty LED



The hopper empty LED turns on when it is time to load a new adhesive slug. Refer to *Loading an Adhesive Slug*.

The melter is also equipped with two identical capacitive adhesive level sensors:

- The melt-on-demand sensor keeps the reservoir full of molten adhesive by telling the melter when to melt adhesive in the hopper for transfer through the melt plate to the reservoir.
- When the reservoir becomes empty, the reservoir-empty monitor will stop the pump after it rotates the number of revolutions set in the dLy (delay after empty) motor control parameter. Refer to *Setting Up the Motor Control* in Section 3, *Installation*, to set this parameter.

NOTE: When dLy is displayed, the pump can be started again by pressing the Pump enable key. The pump will turn the set number of rotations again before it stops and the dLy message is shown again.

The melter is shipped with both level sensors calibrated for standard adhesive. If recalibration becomes necessary, refer to *Calibrating the Hopper-Empty Sensor* or *Calibrating the Reservoir Level Sensors* in Section 5, *Maintenance*.

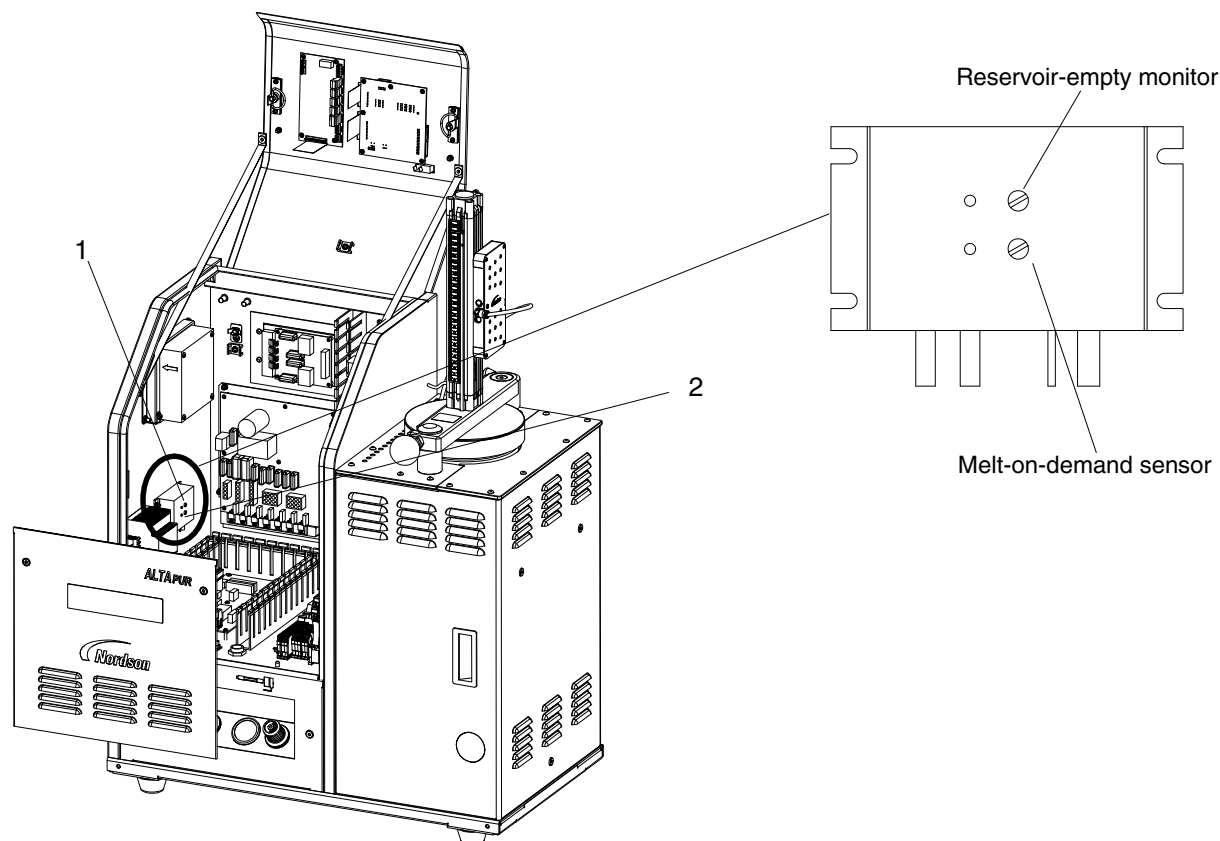


Figure 4-2 Location of the level sensors

1. Reservoir-empty monitor

2. Melt-on-demand sensor


Monitor Component Temperatures

You can check the actual temperature of each heated component—the reservoir and each hose and applicator—using the automatic scan mode or by manually selecting and checking each component.

By default, the melter remains in the automatic scan mode except when:

- The melter is placed into the setup mode
- The setpoint temperature of all hoses and applicators is set to zero degrees
- A fault occurs


To check component temperatures using the automatic scan mode

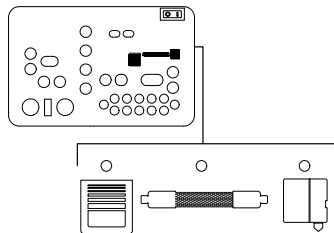

Component keys

1. When the ready LED is on, observe the LEDs on the component keys.
2. When the LED on the key that represents the desired component group (reservoir, hose, or applicator) turns on, observe the left display until it indicates the position number of the specific component you want to check.
3. When the position number of the desired component appears in the left display, observe the right display to determine the component's actual temperature.

NOTE: On AltaPUR melters, 1 is the pump temperature and 2 is the melt plate temperature when the reservoir LED is on.

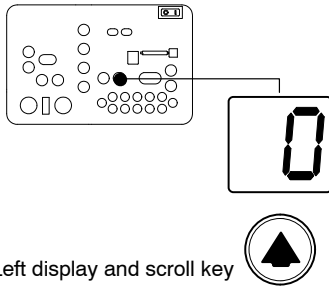To manually check a component's temperature


Left display and scroll key

1. Press the key (reservoir, hose, or applicator) that represents the component group you want to check.

The automatic scan stops and the left display indicates the number of the first sequential component in the selected component group. The right display indicates the component's actual temperature.

NOTE: When the reservoir key is pressed, the left display does not indicate a component number (blank display).


NOTE: On AltaPUR melters, 1 is the pump temperature and 2 is the melt plate temperature when the reservoir LED is on.

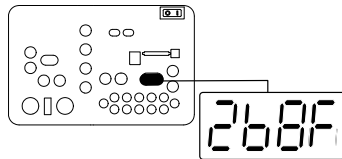

Component temperature display

2. If the first sequential component is not the component you want to check, use the left-display scroll key to change to the correct component number.

The right display indicates the actual temperature of the selected component.

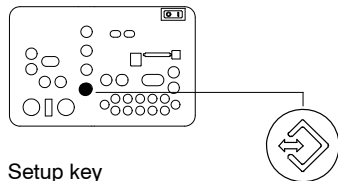

Setup key

3. Press the **Setup** key twice to return to the automatic scan mode.

Monitor Melter Faults

The melter alerts the operator to the faults listed in Table 4-1. Faults affect the melter in one of three ways: the heaters turn off; the heaters remain on, but the fault condition persists; or the melter stops functioning.

When a fault occurs, you must diagnose and correct the fault condition and then place the melter back into operation. You can use the fault log to determine the type, order, and relative time of the last ten faults.

Table 4-1 Melter Faults

Display Code/Sub-code	Name	Affect on Melter	Cause	Corrective Action
F1/None	RTD	Heaters turn off	The RTD for the component indicated has failed or the component was disconnected from the melter.	Replace RTD Check hose/applicator connections See flowchart T.2
F2/None	Under temperature	Heaters turn off	The actual temperature of the component indicated has dropped below the under temperature delta, which was set using parameter 22.	Check for conditions that may cause a drop in ambient temperature Replace RTD See flowchart T.2
F3/None	Over temperature	Heaters turn off	The actual temperature of the component indicated has increased beyond the over temperature delta, set in parameter 21.	Change parameter 21. If the problem persists, replace the RTD. See flowchart T.2
F4/1	RAM test	Melter stops functioning	Internal RAM failure	Replace CPU
F4/2	Internal Clock time	Heaters remain on, but fault condition persists	Internal clock failure	Replace CPU
F4/3	RAM backup battery	Clock does not function	Insufficient voltage from RAM backup battery	Replace CPU
F4/4	Internal clock battery backed RAM	Heaters remain on, but fault condition persists	Battery-backed RAM failure	Replace CPU
<i>Continued...</i>				

Table 4-1 Melter Faults (*contd*)

Display Code/Sub-code	Name	Affect on Melter	Cause	Corrective Action
F4/5	Internal clock battery	Heaters remain on, but fault condition persists	Battery-backed RAM battery dead	Replace CPU
F4/6	Analog-to-digital	Melter stops functioning	RTD analog-to-digital converter failed	Replace main board or CPU
F4/7	Analog-to-digital calibration	Melter stops functioning	Failed hose or applicator RTD analog-to-digital converter could not be calibrated (grounded RTD in system)	Replace hose or applicator. Note: Set setpoint to zero to avoid F1 fault. Replace main board or ribbon cable, or CPU
F4/8	Main board feedback	Melter stops functioning	Communication failure between main board and CPU	Replace main board, ribbon cable, or CPU
F4/A	Thermostat	Melter stops functioning	Reservoir or melt plate thermostat is open	Replace thermostat, XP6 harness, or main board
F4/C	Expansion board connection	Melter stops functioning	Ribbon cable P/N 1026662 is not connected at J1 on the main board and/or at J2 on the expansion board	Check the ribbon cable connections and make connections as applicable.
F4/d	Communications with optional I/O card	Heaters remain on, but fault condition persists	Communication failure between CPU and the optional I/O card	Replace the I/O card or CPU
F4/E	Fieldbus communications failure	Alert output (if output option 6 is selected) Melter continues to operate normally.	Fieldbus card failure	Replace the Fieldbus card
<i>Continued...</i>				

Monitor Melter Faults (contd)


Table 4-1 Melter Faults (contd)

Display Code/Sub-code	Name	Affect on Melter	Cause	Corrective Action
F9/1 (see Note A)	Reservoir empty	Pump turns off and fault output is generated, but heaters and READY light remain on	Reservoir empty then pump continues to turn the number of rotations set in motor control parameter dLy (refer to Table 3-11)	Ensure that adhesive is present in the hopper and allow time for the adhesive to melt into the reservoir. Unless it is critical that the unit turn off immediately when the reservoir is empty, set the dLy value higher to prevent this fault condition.
S1Cal (see Note B)	Melt-on-demand sensor calibration	Melter enters standby mode	A continuous melt plate-on condition occurred because the setting for parameter 49 was exceeded (refer to Table 3-11).	Check the melt-on-demand sensor calibration (refer to <i>Calibrating the Level Sensors</i> in Section 5, <i>Maintenance</i>) or adjust the setting for parameter 49.
<p>NOTE A: An F9/1 fault does not create a fault condition, but it does generate a fault output. This output is visible only if the digital fault output or optional light tower are being used and is the only situation in which both a red and green light may be on at the same time. In such cases, the heaters and motor are okay, but the melter will not run because there is no adhesive in the reservoir.</p> <p>B: For a detailed description of how the melt-on-demand functionality of this melter works, refer to <i>Modes of Operation</i> in Section 2, <i>Introduction</i>.</p>				

How F1, F2, and F3 Faults are Handled

When the melter detects an F1, F2, or an F3 fault:

1. The automatic scan stops and the melter begins to monitor the potential fault for up to two minutes. The ready and heater LEDs remain on during the two-minute time period. If, at any time during the two-minute period, the melter detects that the fault condition no longer exists, the melter will return to the automatic scan mode.
2. The LED on the affected component key (reservoir, hose, or applicator) turns on to indicate the type of component that has, or is, failing.
3. The right display indicates the type of fault (F1, F2, or F3).
4. The left display indicates, as follows, the component that has, or is, failing.
 - If the LED on the reservoir key is on, the left display will indicate either 0 for the reservoir, 1 for the pump, or 2 for the melt plate.
 - If the LED on the hose or applicator key is on, the left display will indicate the number of the affected hose or applicator.
5. If the fault condition still exists at the end of the two-minute monitoring period, the ready LED will turn off, the red fault LED will turn on, the heaters turn off, and the melter records the fault in the fault log. Refer to *To review the fault log* later in this section.

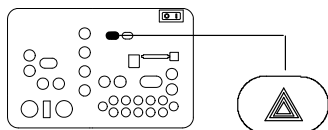

Fault LED

How F4 Faults are Handled

When the melter detects an F4 fault:

1. The ready LED turns off and the red fault LED turns on.
2. All of the component key LEDs (reservoir, hose, and applicator) turn off.
3. The right display indicates F4.
4. The left display indicates a sub-code. Sub-codes classify the fault as being fatal or nonfatal. The affect on the melter of each of these two classes of F4 faults is:

Fatal—The fault LED turns on and stays on and the melter stops functioning completely.

Nonfatal—The fault LED turns on for five seconds, but the heaters and pump continue to operate normally. Nonfatal faults affect the internal clock and the optional I/Os.

Refer to Section 6, *Troubleshooting*, for information about diagnosing F4 faults.


5. The melter records the fault in the fault log. Refer to *To review the fault log* later in this section.

To put the melter back into operation


1. Diagnose and correct the fault condition. Refer to Section 6, *Troubleshooting*, for information about diagnosing and correcting fault conditions.

NOTE: When a fatal F4 fault exists, the control switch will not function. Remove power to the melter at the local disconnect switch.


2. Return the melter to the automatic scan mode by pressing the **Setup** key twice.

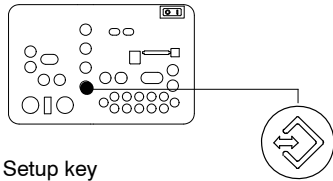

Setup key

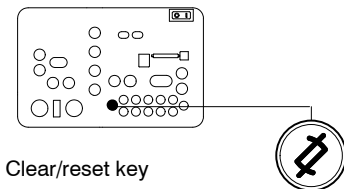


Clear/reset key

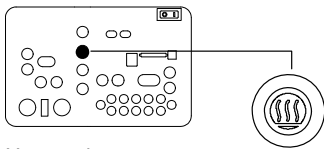

Heaters key

4. Press the **Heaters** key to turn on the heaters.

To review the fault log

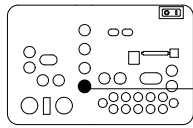


Setup key



1. Press and hold the **Setup** key.

The automatic scan stops and operating parameter 1 appears in the left display.

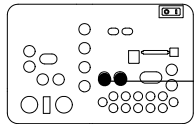


Left display and scroll key




2. Scroll the left display to parameter 2 (the fault log).

The right display indicates the last fault that occurred as follows:

- If the last fault was an F1, F2, or F3 fault, then the LED on the affected component key turns yellow.
- If the last fault to occur was an F4 fault, then the LEDs on all of the component keys turn off.
- The right display indicates the log entry for the last fault to occur. Table 4-2 provides the meaning of each digit in the log entry. Following the table are two example fault log entries.

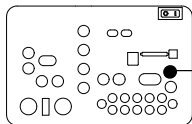

Scrolling through the fault log



3. Press the right-display scroll key to review each of the remaining nine log entries. Each press of the scroll key displays a progressively older log entry.

NOTE: The fault log only stores the last ten faults. After ten faults occur, the existing log entries are overwritten, beginning with the oldest entry, by the eleventh and following log entries.


4. Press the **Setup** key to return to the automatic scan mode.

Table 4-2 Fault Log

First Digit	Second and Third Digits	Fourth Digit
Component: 0 = Reservoir 1 = Reservoir or Hose/ Applicator 1 2 = Pump or hose/Applicator 2 3 = Melt Plate or Hose/ Applicator 3	- F	Type of fault: 0 = Unused log entry 1 = RTD (open or short) 2 = Component under temperature 3 = Component over temperature 4 = Processor or electrical failure


Fault Log Examples

Example 1:



An unused log entry.

Example 2:




If the LED on the reservoir key were on, this log entry would indicate that the reservoir is under temperature. If the LED on the hose key were on, this log entry would indicate that hose 1 is under temperature.


Monitor Motor/Piston Control or Motor Drive Faults

The pump speed display and the display on the motor drive located inside the electrical enclosure alert the operator to abnormal motor/piston-related faults. These faults may cause the pump to stop. Refer to *Motor/Piston Control Faults* or *Motor Drive Faults* in Section 6, *Troubleshooting*.

Monitor the Service Interval

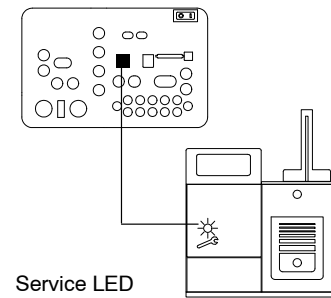

The melter can be set up so that the service LED located on the left side of the control panel turns on after a customer-defined time period has elapsed. The service LED may be used to signal the need to change the hot melt filter or to complete any other customer-specified maintenance activity. Once the specified maintenance is performed, the service LED must be reset.

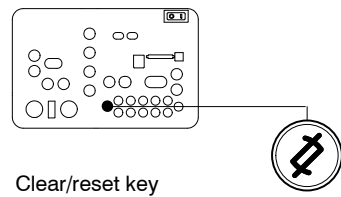

To reset the service LED

With the melter in the scan mode, press the **Clear/Reset** key to turn off the service LED and reset the service interval time.


Adjusting Component Temperatures

You can adjust the setpoint temperature of heated components using the following methods:


- **Global**—The reservoir and all hoses and applicators are set to the same setpoint temperature.
- **Global-by-component group**—All of the hoses or all of the applicators are set to the same setpoint temperature.
- **Individual Component**—The setpoint temperature of the reservoir and each hose and applicator is adjusted independently.

Before adjusting setpoint temperatures, confirm that each hose/applicator pair is connected to the correct hose/applicator receptacle. For example, hose/applicator pair 1 should be connected to the receptacle 1. Refer to *More About Heated Components* earlier in this section for information about hose/applicator positions.


To adjust setpoint temperatures using the global method

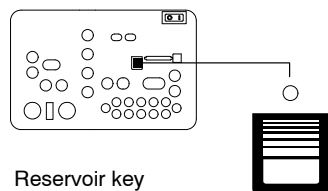

1. Press and hold the **Reservoir** key for three seconds.
The left display flashes 1.

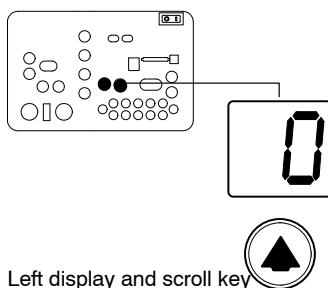

2. Scroll the left display to 0 (flashing).
The right display indicates all dashes (----) and the LEDs on all of the component keys turn green.

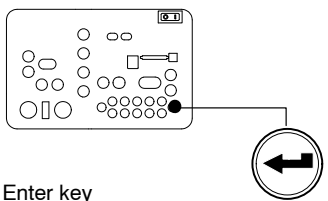


3. Press the **Enter** key.
The right display flashes.

To adjust setpoint temperatures using the global method *(contd)*


4. Use the keypad to enter the setpoint temperature recommended by the manufacturer of the hot melt. Refer to the technical data sheet provided by the manufacturer of the hot melt to determine the optimal setpoint temperature.

NOTE: If the keypad or the right-display scroll keys have no affect on the right display, the melter is password protected. You must enter a valid password before you can change setpoint temperatures. Refer to *Enter the Melter Password*, later in this section.

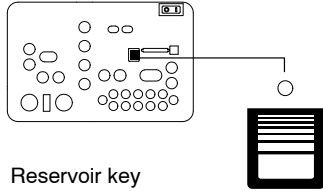


5. Press the **Reservoir** key.

All components begin to heat or cool to the new global setpoint temperature. When all of the components reach their setpoint temperature, the ready LED turns on (green).

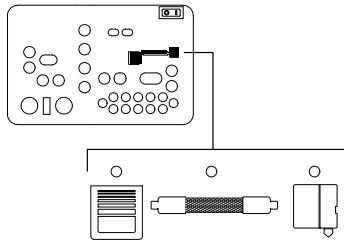To adjust the setpoint temperature using the global-by-component method

Component keys

1. Press and hold the **Hose** or **Applicator** key for three seconds.
The left display indicates the number of the first sequential hose or applicator. The right display indicates the current setpoint temperature of the hose or the applicator.
2. Scroll the left display to 0.
The right display indicates all dashes (- - -).
3. Press the **Enter** key.
The right display flashes.
4. Use the keypad to enter the setpoint temperature recommended by the manufacturer of the hot melt. Refer to the technical data sheet provided by the manufacturer of the hot melt to determine the optimal setpoint temperature.
NOTE: If the keypad or the right-display scroll keys have no effect on the right display, the melter is password protected. You must enter a valid password before you can change setpoint temperatures. Refer to *Entering the Melter Password* later in this section.
5. Press the **Enter** key.
The hoses or the applicators begin to heat or cool to their new setpoint temperature.

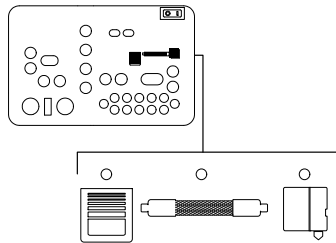

Component keys

To adjust the setpoint temperature of an individual component

1. Press and hold the **Reservoir**, **Hose**, or **Applicator** key for three seconds.

If the reservoir key was pressed, the left display indicates 1 (Flashing). If a hose or applicator key was pressed, the left display indicates the number of the first sequential hose or applicator (Flashing). The right display indicates the current setpoint temperature of the component indicated in the left display.

2. Scroll the left display to the number of the desired component.
The right display indicates the current setpoint temperature of the component that you selected in the left display.

3. Press the **Enter** key.

The right display flashes.

4. Use the keypad to enter the setpoint temperature recommended by the manufacturer of the hot melt. Refer to the technical data sheet provided by the manufacturer of the hot melt to determine the optimal setpoint temperature.

NOTE: If the keypad or the right-display scroll keys have no effect on the right display, the melter is password protected. You must enter a valid password before you can change setpoint temperatures. Refer to *Entering the Melter Password* later in this section.

5. Do *one* of the following:

- To register the new setpoint temperature and then move on to change the setpoint temperature of the next sequential component, press the **Enter** key and then repeat steps 4 and 5.
- To register the new setpoint temperature and return to the automatic scan mode, go to step 6.


6. Press any component key (reservoir, hose, or applicator).

The selected component begins to heat or cool to its new setpoint temperature.

Entering the Melter Password

If the melter is password protected, a valid password must be entered before any setpoint temperature or melter parameter can be changed.


To enter a melter password

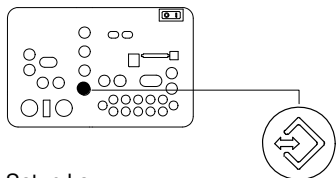

Setup key

1. Press the **Setup** key.

The left display indicates parameter 0 (flashing) and the right display indicates 4000.

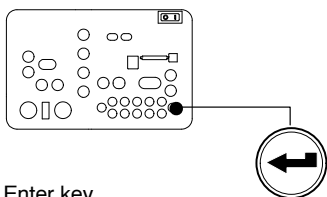

Enter key

2. Press the **Enter** key.

The right display begins flashing.

3. Use the keypad to enter the melter password.

4. Press the **Enter** key.

One of the following occurs:

- If the password is correct, the left display indicates parameter 1.
- If the password is incorrect, the left display remains at 0 and the right display momentarily indicates dashes (----) and then returns to 4000.

If the password is incorrect, re-enter it and then press the **Enter** key.

Using Melter Function Keys

The control panel provides the following standard and special function keys:

Standard function keys

- Heaters
- Pump enable
- Pump mode key
- Setup


Special function keys

- Seven-day clock
- Standby



CAUTION: Unintentionally activating function keys can, under the correct circumstances, have undesirable effects on the melter or the manufacturing process. Only personnel who are familiar with the melter's setup and its connection with the manufacturing process should use the function keys. Improper use of the function keys can result in erratic process behavior or personal injury.

Heaters Key

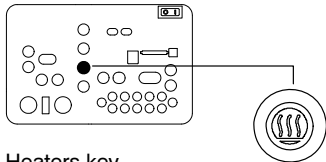


Heaters key

Use the **heaters** key to manually turn the component heaters on and off. Pressing the heaters key overrides the control (on or off) of the heaters by either the seven-day clock feature or a remote input. The LED on the heater key illuminates when the heaters are on.

When a fault occurs (refer to *Monitor Melter Faults* earlier in this section) the heaters automatically turn off. The heaters key is used to turn the heaters back on after correcting a fault condition.

Pump Enable Key

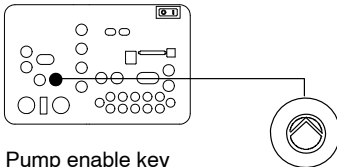


Pump enable key

Use the **pump enable** key to enable and stop the pump. The LED on the pump enable key is green when the pump is enabled.

If the automatic pump on feature (parameter 8) is disabled, then the pump key must be used to start the pump when the melter is ready.

If any of the inputs are set up to use the pump enable/disable control option, the pump motor will not start until the pump is enabled *and* the correct voltage is applied to the input contacts. If the pump is enabled, but the input voltage is not present, the pump LED will flash green.

Pump Mode Key

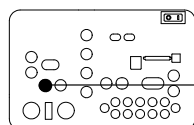


Pump mode key



Use the **pump mode** key to toggle between the manual and gear-to-line modes. The LED on the pump mode key is green when the melter is in the manual mode.

When the melter is operating in the gear-to-line mode, a 0-10 VDC signal must be supplied. Refer to *Setting Up Gear-to-Line Operation* in Section 3, *Installation*.

Setup Key

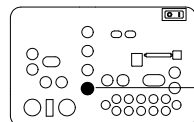


Setup key



Use the **setup** key to place the melter into and take the melter out of the setup mode. When the melter is placed into the setup mode, the automatic scan stops and the left and right displays are used to select and read or edit operating parameters.

Seven-Day Clock Key

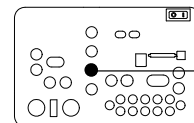

Seven-day clock key




Use the **seven-day clock** key to turn the melter's clock feature on and off. When the clock is on, the temperature of each heated component is automatically regulated based on a set of user-defined schedules.

To accommodate daily shift work and non-working days, four clock schedules are available. Schedules 1, 2, and 3 are used to specify when the heaters should turn on and off or when the melter should enter and exit the standby mode. Schedule 0 is used to keep the melter in the last condition dictated by the clock (heaters on or off, or standby).

When a clock schedule calls for the heaters to be on, the heaters are regulated at their pre-assigned setpoint temperatures. When the clock activates the standby mode, the setpoint temperature of each component is temporarily reduced by a pre-set standby delta.

Refer to Appendix B, *Operating Parameters, Seven-day Clock*, for information about setting up the seven-day clock and the standby delta.

Standby Key

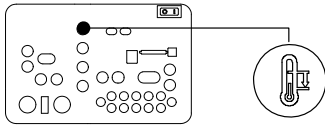

Standby key

Use the standby key to manually place the melter into, and take it out of, the standby mode. Using the standby mode during periods of time when the melter is inactive helps conserve energy and allows heated components to quickly return to their setpoint temperatures when the melter is once again needed.

When the melter is placed into the standby mode, the temperatures of all components are reduced down from their setpoint temperature by a pre-set standby delta. The melter will remain in the standby mode until the standby key is pressed or the function of one of the operating parameters takes the melter out of the standby mode.

If the melter was set up to use the manual standby timer (parameter 26), pressing the standby key will place the melter in the standby mode for the period of time specified by the timer. After the manual standby time has elapsed, the melter will once again begin heating all of the components to their assigned setpoint temperature.

Using the standby key overrides the control of the melter (on or off) by the seven-day clock or a remote input.

Refer to Section 3, *Installation, Setting Up the Melter*, and to Appendix B, *Operating Parameters*, for information about setting the standby delta and the standby timer.

Switching the Melter Control Mode


The AltaPUR melter default control mode is Pur mode. The platen heating is controlled by the melt-on-demand sensor. Exit PUr mode whenever there is a need to turn off the melt-on-demand function to clean the cured platen.

NOTE: Please switch back to PUr mode after servicing so that the melter can work normally.

To switch the melter control mode


1. Press and hold down the **Tank** and **Clear** keys.

The melter reboots and comes up in Grid mode.

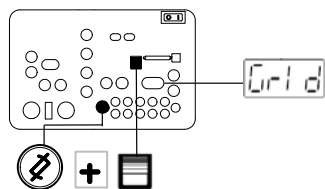


2. Press and hold down the **Tank** and **Setting Up** keys.

The melter enters into Etr mode. In Etr mode, the platen heating is not controlled by the melt-on-demand sensor. It can be heated as Hose 1.

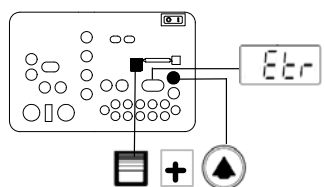


3. Press and hold down the **Seven Day** and **Setting Down** keys.

The melter reboots and enters into PErF mode.

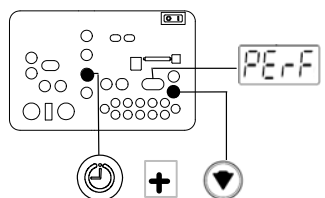

4. Press and hold down the **Seven Day** and **Setting Down** keys again.


The melter reboots and returns to PUr mode.

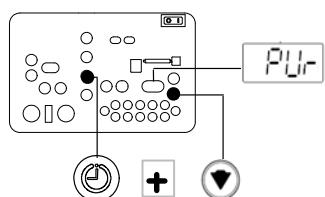

Shutting Down the Melter

Shut the melter down when it will not be used for an extended period of time.

To shut the melter down

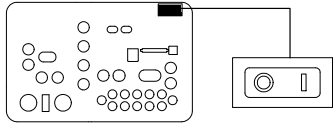

Control switch

1. Switch the melter off.
2. Relieve system pressure. Refer to *Relieving System Pressure* in Section 5, *Maintenance*, as needed.
3. Disable the applicators as follows:
 - Air-operated applicators: Turn off the air supply to the applicators and cover the nozzles.
 - Electric applicators: Turn off the applicator driver, pattern controller, or timer.

Ensure that material connections are closed such that they are airtight.

4. If the system will be shut down for a longer period of time, rinse it with a suitable cleaning agent. Use only a cleaning agent recommended by the material manufacturer.



Maintenance

Section 5

Maintenance



WARNING! Allow only personnel with appropriate training and experience to operate or service the equipment. The use of untrained or inexperienced personnel to operate or service the equipment can result in injury, including death, to themselves and others, and damage to the equipment.

Preventive Maintenance Tasks

Table 5-1 describes the preventive maintenance tasks required to keep AltaPUR melters operating within their specified limits and to prevent equipment malfunctions. For information about maintaining optional equipment that was supplied by Nordson, refer to the instructions provided with the equipment.

If the melter stops operating or is operating incorrectly, refer to Section 6, *Troubleshooting*, for information about diagnosing common problems and performing corrective maintenance.

Preventive Maintenance Tasks *(contd)*

Table 5-1 Preventive Maintenance Tasks


Task	Frequency	Reference
Relieving system pressure	Before performing any maintenance task that requires opening a hydraulic connection or port	<i>Relieving System Pressure</i>
Cleaning the exterior of the melter, hoses, and applicators	Daily	<i>Cleaning the Melter</i>
Cleaning the hopper, melt plate, reservoir, piston, and level sensor probes	Weekly or as needed depending on the adhesive type	<i>Cleaning the Hopper and Melt Plate, Cleaning the Reservoir and Level Sensors, and Cleaning the Piston</i>
Cleaning or replacing the electrical enclosure fan filter	Depending on dust accumulation; daily if necessary	
Calibrating sensors	As needed throughout the life of the melter (sensors are factory-calibrated)	<i>Calibrating the Hopper-Empty Sensor or Calibrating the Level Sensors</i>
Calibrating the pump speed display	As needed throughout the life of the melter (the pump speed display is factory-calibrated)	<i>Calibrating the Pump Speed Display</i>

Relieving System Pressure

Before disconnecting any hydraulic fitting or opening any pressurized port, always complete the following procedure to safely relieve hydraulic pressure that may be trapped inside the melter, hoses, and applicators.

To relieve system pressure

1. Press the **Pump enable** key to stop the pump.
2. Trigger the applicators until hot melt no longer flows from the applicators.

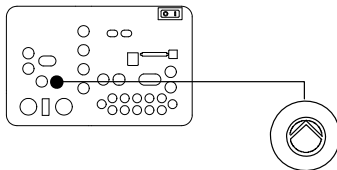


Pump enable key

Locking Out External Communications



WARNING! Disable external inputs and fieldbus communications with the melter before performing maintenance. Failure to disable external inputs or fieldbus communications with the melter can result in personal injury due to unexpected operation of the melter while performing maintenance.

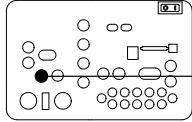

Pump mode key



To lockout external communications with the melter

1. Ensure that the **Pump mode** key LED is on.
2. Set the control option for parameter 14 to 1 (enabled).
3. When the service activity is complete, return parameter 14 to 0 (disabled).

Refer to *Setting Up the Melter* in Section 3, *Installation*, for information about changing operating parameters.

Flushing the Melter

Flush the melter at the following times to remove residue:

- before first-time operation of a new melter
- whenever the adhesive type is changed
- if a PUR adhesive is being used, before a melter shutdown that will last longer than two days



WARNING! Risk of burns! New melters contain a small quantity of low-viscosity test fluid. Test fluid may splatter when discharged under high pressure. Before flushing the melter, ensure that the PCV is set to low pressure.

Process a minimum of one reservoir volume of hot melt or flushing material through the melter, hoses, and applicators. At some point, set the pressure control to a low value and close the applicator(s) to flush the pressure control recirculation loop.

Manually Lifting the Cylinder Plate

Keep the temperature of the heat plate above the operating temperature and lift the hook manually by the M8 thread as shown.

Only lift hook of cylinder plate during the following events:

- Cylinder plate can't be lifted up by cylinder
- No air input for melter
- Failure of solenoid valve on cylinder



WARNING! Risk of injury! Before operation, ensure that the cylinder will not move up or please decrease the cylinder speed to prevent injury to hand.

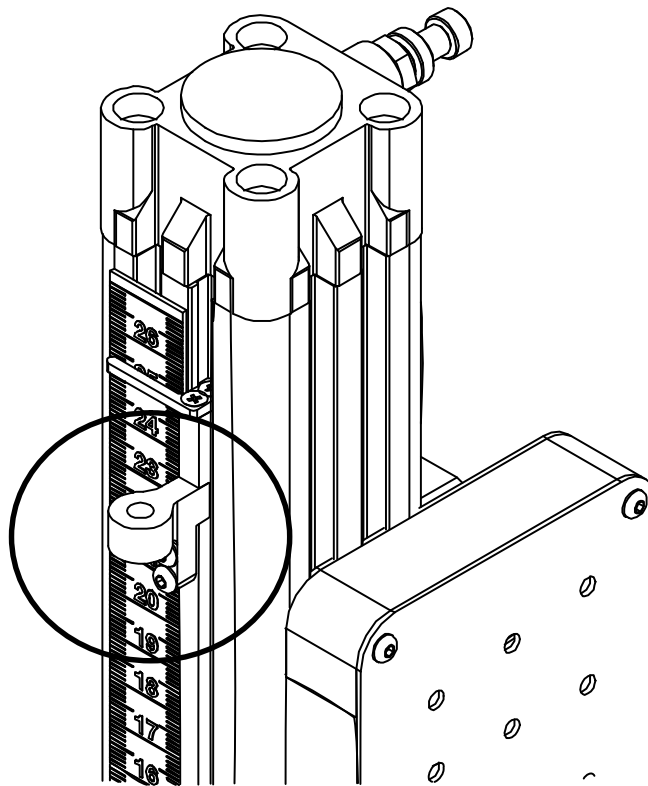


Figure 5-3 Location of the hopper-empty sensor

This page intentionally left blank.

Cleaning the Melter

To prevent components from overheating due to heat build-up or loss of air circulation, regularly remove any hot melt that collects on the exterior of the melter, hoses, and applicators.

If hot melt inadvertently spills inside the melter's interior spaces, the side covers can be removed in order to clean out the spilled hot melt.



WARNING! Risk of electrocution and fire! Do not clean the melter with a direct stream of water or steam. Use only water or an appropriate, non-flammable cleaning solution that is applied using a clean cloth. Cleaning the melter using a direct stream of water or steam or a flammable solvent can result in property damage and personal injury, including death.

To clean the exterior of the melter

- Use only cleaning compounds that are compatible with polyester.
- Apply cleaning compounds using a soft cloth.
- Do not use pointed or sharp tools to clean the exterior surface.

To remove and replace the service covers

See Figure 5-1.

1. De-energize the melter. Refer to Section 1, *Safety*.
2. Use a 4-mm ($\frac{5}{32}$ -in.) hex-head wrench to turn the $\frac{1}{2}$ -turn fasteners on each cover counterclockwise.
3. Disconnect all ground wires from the covers.
4. Lift the covers out of the melter's frame.
5. Reverse steps 2-4 to reinstall each cover.

To clean the electrical enclosure

- After covers are removed, inspect the fan area and ensure that the air flow path for both side covers is clear. Remove excessive dust from inside the cabinet.

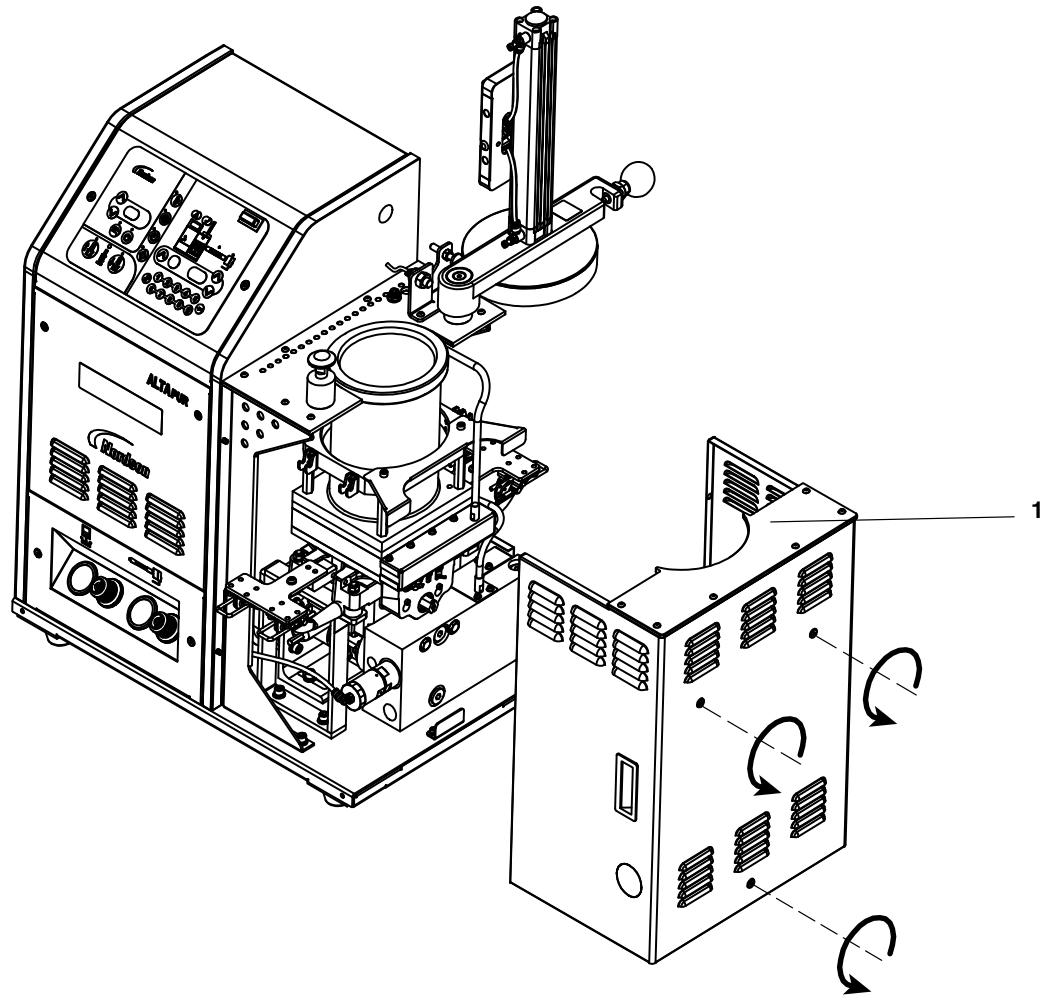


Figure 5-1 Removing the service covers

1. Service cover

Cleaning the Hopper and Melt Plate



WARNING! Risk of injury. Wear proper protective gear.

1. Open the lid.

CAUTION! Risk of equipment damage. The inside of the melter is release-coated. Do not use metallic tools or wire brushes to clean the reservoir.


2. Wipe/remove any residual hot melt from the inside of the hopper and the top of the melt plate. When the melter is cool, adhesive can typically be peeled from the release-coated parts. If the adhesive cannot be peeled off, heat the melter to the softening point of the adhesive and use a wooden or plastic scraper to remove the adhesive.
3. Remove all debris from the flat portion of the outer diameter of the melt plate.

NOTE: It is particularly important to remove the adhesive from the flat portion of the outer diameter of the melt plate. This surface must be clear so that a good seal with the adhesive slug foil bag is possible.

4. Restore the system to normal operation.

Cleaning the Reservoir and Level Sensors

NOTE: If you are using a flushing material to clean the reservoir, ensure that the material is compatible with both the previous adhesive and the new adhesive, if applicable.

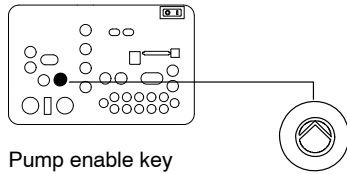

1. Operate the melter normally until the reservoir is empty.
2. Press the **Pump enable** key to stop the pump.
3. Allow the melter to cool to the temperature recommended by the manufacturer of the adhesive or flushing material.
4. Remove the service covers. Refer to *To remove and replace service covers* earlier in this section as needed.
5. Disconnect the melt plate heater.
6. See Figure 5-2. Disengage the four hopper/melt plate assembly clamps.
7. Lift the hopper/melt plate assembly above the clamps and remove it through the open side of the melter.
8. If the adhesive is cool, try to peel it from the release-coated parts. If the adhesive is hot, use a wooden or plastic scraper to remove it.
9. See Figure 5-2. Clean the melt demand and reservoir empty sensor probes at the back of the reservoir.
10. Restore the system to normal operation.

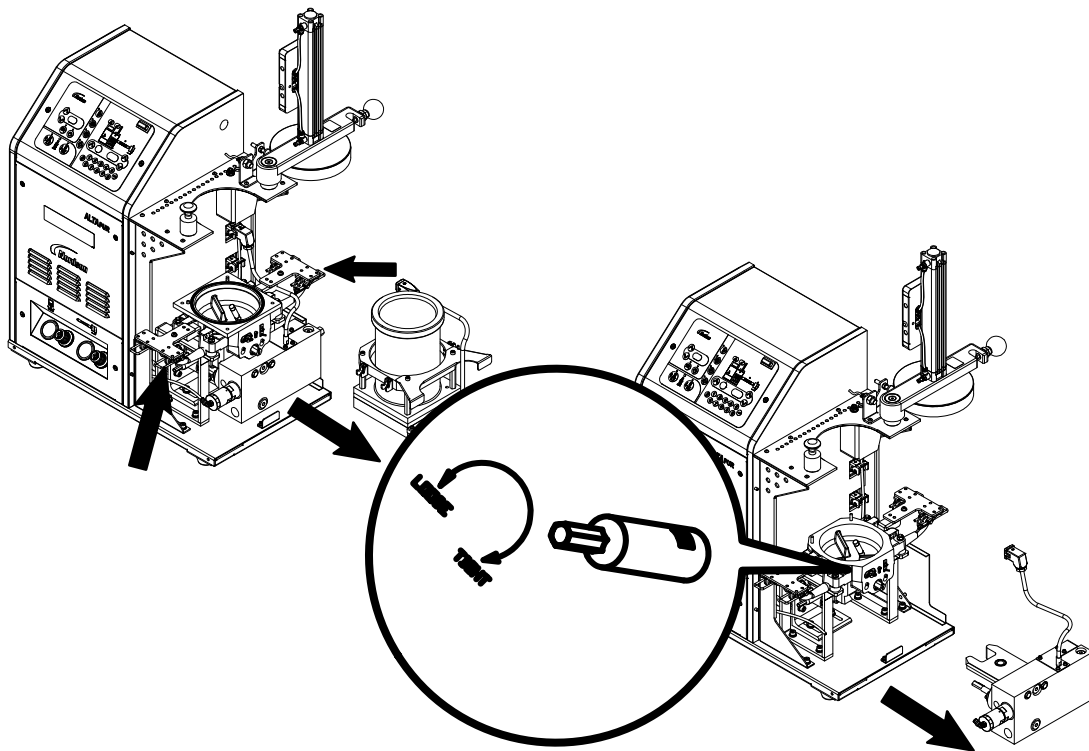



Figure 5-2 Hopper/melt plate assembly removal and the location of the level sensor probes

Cleaning the Piston

1. Operate the melter normally until the reservoir is empty.
2. Press the **Pump enable** key to stop the pump.
3. Allow the melter to cool to the temperature recommended by the manufacturer of the adhesive or flushing material.
4. Remove the service covers. Refer to *To remove and replace service covers* earlier in this section as needed.
5. Disconnect the melt plate heater.
6. See Figure 5-2. Disengage the four hopper/melt plate assembly clamps.
7. Lift the hopper/melt plate assembly above the clamps and remove it through the open side of the melter.



WARNING! Risk of personal injury. Keep hands away from the moving piston.

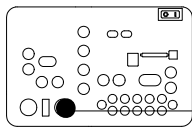

Piston down key



8. Close the lid.
9. Use the manual cylinder override on the top solenoid valve to lower the piston.
10. If the adhesive is cool, try to peel it from the release-coated parts. If the adhesive is hot, use a wooden or plastic scraper to remove it.
11. Restore the system to normal operation.

Calibrating the Hopper-Empty Sensor

The melter is shipped with the hopper-empty sensor calibrated for standard PUR adhesive. If recalibration becomes necessary, follow this procedure.

See Figure 5-3.

1. Operate the melter normally until the reservoir is empty, but leave the empty foil bag in place in the hopper.
2. Loosen the hopper-empty sensor (1) and move it to the lowest position on the piston (2).
3. Move the sensor up until its LED illuminates and then secure the sensor at this location.

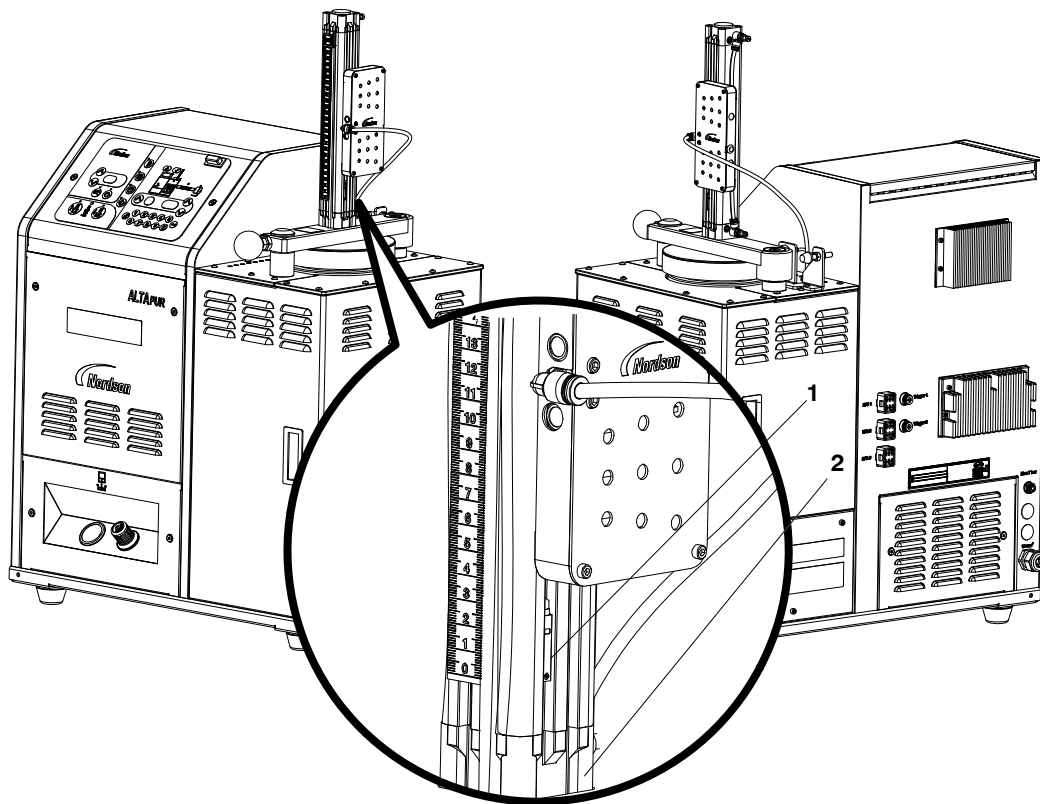


Figure 5-3 Location of the hopper-empty sensor

1. Hopper-empty sensor

2. Piston

Calibrating the Reservoir Level Sensors

The melter is shipped with both level sensors calibrated for standard PUR adhesive. If recalibration becomes necessary, follow this procedure.

1. Operate the melter normally until the reservoir is empty. If the slug in the hopper is not empty, lift out the solid slug before pumping the adhesive from the reservoir.
2. Remove all debris or cured adhesive from the sensor probes. Refer to *Cleaning the Reservoir and Level Sensors* earlier in this section, then return here to continue.
3. Ensure that the melter is switched on.
4. See Figure 5-4. Open the electrical enclosure and locate the sensor amplifiers (items 1 and 2 in Figure 5-5).



WARNING! Risk of equipment damage, personal injury, or death. This procedure requires you to perform work inside the electrical enclosure with the power on. Follow electrical safety procedures and observe all high-voltage indicators.

5. Remove the plugs that cover the sensor adjustment screws.
6. Turn each adjustment screw as follows:

Refer to Figure 5-5.

- Clockwise will turn the LED from green to yellow
- Counterclockwise will turn the LED from yellow to green

NOTE: When an LED turns yellow, the system believes that adhesive is present.




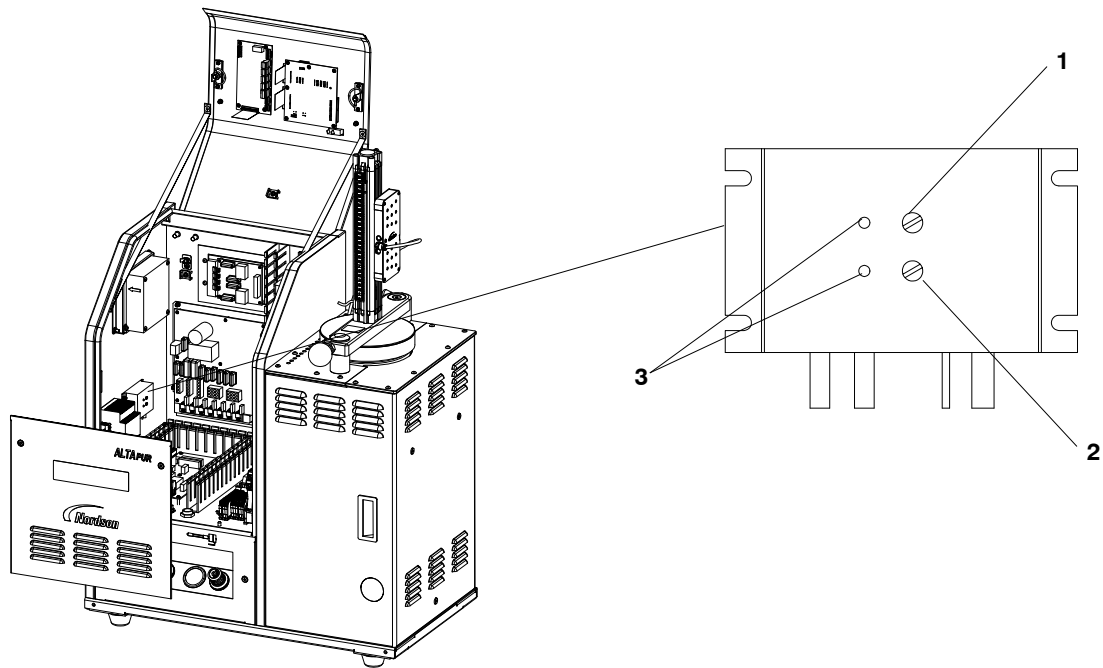


Figure 5-4 Location of the level sensor adjustment screws and LEDs

- | | | |
|---|---|--|
| 1. Reservoir-empty monitor adjustment screw (behind screw plug) | 2. Melt-on-demand sensor adjustment screw (behind screw plug) | 3. Level Sensor LED (Green=empty; Yellow=full) |
|---|---|--|

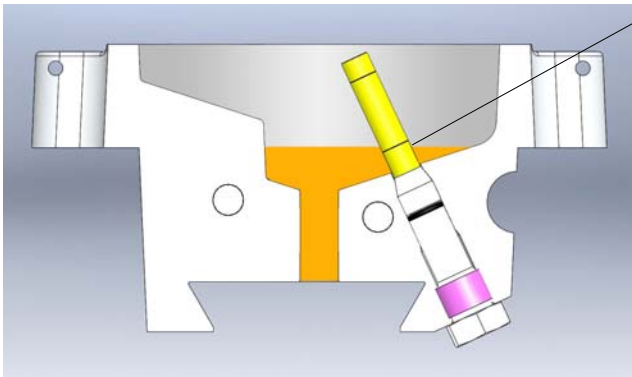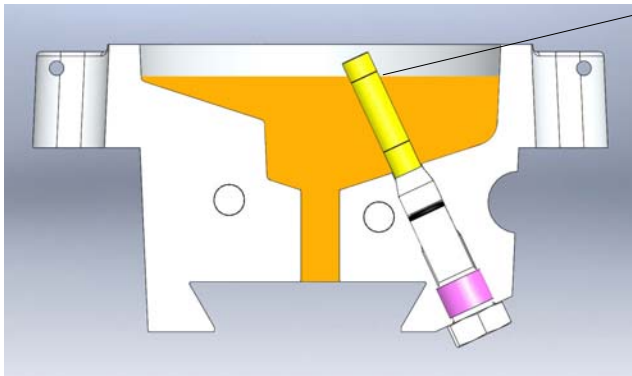

Critical region for reservoir-empty sensor switching point. Set the LED to turn from green to yellow.

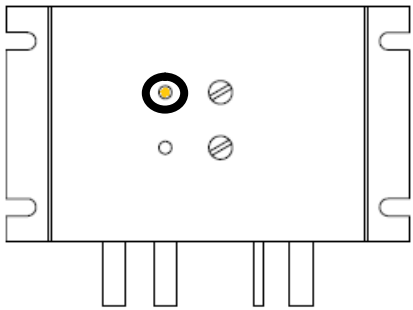

Critical region for melt-on-demand sensor switching point. Set the LED to turn from green to yellow.



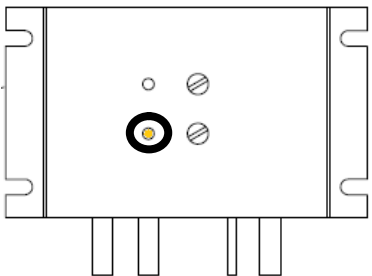


Figure 5-5 Calibration for level sensors

Calibrating the Pump Speed Display

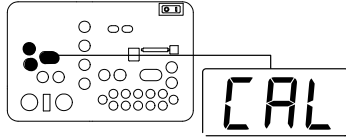

Pump speed display and arrow keys

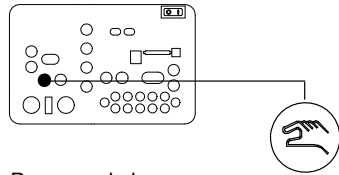

Pump mode key

The melter is shipped with the pump speed display calibrated to show the pump rpm. If recalibration becomes necessary, follow this procedure.

1. Ensure that the motor is running at 50 percent speed or higher.
2. Press and hold both **Pump speed arrow** keys.
3. When the motor control display indicates CAL, release the keys.
4. Enter the actual pump rpm.
5. Press the **Pump mode** key.

Troubleshooting

Section 6

Troubleshooting



WARNING! Allow only personnel with appropriate training and experience to operate or service the equipment. The use of untrained or inexperienced personnel to operate or service the equipment can result in injury, including death, to themselves and others, and damage to the equipment.

This section provides quick-reference information for diagnosing melter faults and pump operating variables as well as comprehensive melter diagnostic information that is provided in flowchart format.

If you cannot resolve the problem using the troubleshooting flowchart, contact your Nordson representative for technical assistance.

Safety

- Never disconnect cables from, or reconnect cables to, any circuit board while the melter is energized.
- Before breaking any hydraulic connection, always relieve system pressure. Refer to *Relieving System Pressure* in Section 5, *Maintenance*.
- Refer to the safety information provided with optional equipment.

Melter Faults

Table 6-1 lists the four types of melter faults, potential causes, and expected corrective actions.


Table 6-1 Melter Faults

Display Code/Sub-code	Name	Affect on Melter	Cause	Corrective Action
F1/None	RTD	Heaters turn off	The RTD for the component indicated has failed or the component was disconnected from the melter.	Replace RTD Check hose/applicator connections See flowchart T.2
F2/None	Under temperature	Heaters turn off	The actual temperature of the component indicated has dropped below the under temperature delta, which was set using parameter 22.	Check for conditions that may cause a drop in ambient temperature Replace RTD See flowchart T.2
F3/None	Over temperature	Heaters turn off	The actual temperature of the component indicated has increased beyond the over temperature delta, set in parameter 21.	Change parameter 21. If the problem persists, replace the RTD. See flowchart T.2
F4/1	RAM test	Melter stops functioning	Internal RAM failure	Replace CPU
F4/2	Internal Clock time	Heaters remain on, but fault condition persists	Internal clock failure	Replace CPU
F4/3	RAM backup battery	Clock does not function	Insufficient voltage from RAM backup battery	Replace CPU
F4/4	Internal clock battery backed RAM	Heaters remain on, but fault condition persists	Battery-backed RAM failure	Replace CPU
F4/5	Internal clock battery	Heaters remain on, but fault condition persists	Battery-backed RAM battery dead	Replace CPU
F4/6	Analog-to-digital	Melter stops functioning	RTD analog-to-digital converter failed	Replace main board or CPU
Continued...				

Table 6-1 Melter Faults (contd)

Display Code/Sub-code	Name	Affect on Melter	Cause	Corrective Action
F4/7	Analog-to-digital calibration	Melter stops functioning	Failed hose or applicator RTD analog-to-digital converter could not be calibrated (grounded RTD in system)	Replace hose or applicator. Note: Set setpoint to zero to avoid F1 fault. Replace main board or ribbon cable, or CPU
F4/8	Main board feedback	Melter stops functioning	Communication failure between main board and CPU	Replace main board, ribbon cable, or CPU
F4/A	Thermostat	Melter stops functioning	Reservoir or melt plate thermostat is open	Replace thermostat, XP6 harness, or main board
F4/C	Expansion board connection	Melter stops functioning	Ribbon cable P/N 1026662 is not connected at J1 on the main board and/or at J2 on the expansion board	Check the ribbon cable connections and make connections as applicable.
F4/d	Communications with optional I/O card	Heaters remain on, but fault condition persists	Communication failure between CPU and the optional I/O card	Replace the I/O card or CPU
F4/E	Fieldbus communications failure	Alert output (if output option 6 is selected) Melter continues to operate normally.	Fieldbus card failure	Replace the Fieldbus card
F9/1 (see Note A)	Reservoir empty	Pump turns off and fault output is generated, but heaters and READY light remain on	Reservoir empty then pump continues to turn the number of rotations set in motor control parameter dLy (refer to Table 3-11)	Ensure that adhesive is present in the hopper and allow time for the adhesive to melt into the reservoir. Unless it is critical that the unit turn off immediately when the reservoir is empty, set the dLy value higher to prevent this fault condition.
S1Cal (see Note B)	Melt-on-demand sensor calibration	Melter enters standby mode	A continuous melt plate-on condition occurred because the setting for parameter 49 was exceeded (refer to Table 3-11).	Check the melt-on-demand calibration (refer to <i>Calibrating the Level Sensors</i> in Section 5, <i>Maintenance</i>) or adjust the setting for parameter 49.
<p>NOTE A: An F9/1 fault does not create a fault condition, but it does generate a fault output. This output is visible only if the digital fault output or optional light tower are being used and is the only situation in which both a red and green light may be on at the same time. In such cases, the heaters and motor are okay, but the melter will not run because there is no adhesive in the reservoir.</p> <p>B: For a detailed description of how the melt-on-demand functionality of this melter works, refer to <i>Modes of Operation</i> in Section 2, <i>Introduction</i>.</p>				

Motor/Piston Control Faults

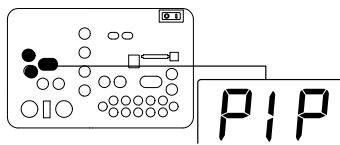

Pump speed display showing a fault code

Table 6-2 provides a list of motor- and piston-control related faults and problems. Fault codes are displayed on the pump speed display.

Table 6-2 Motor/Pistol Control Faults and Troubleshooting

Fault	Affect on Melter	Possible Cause	Corrective Action
dIS (Pump Disable)	Pump and heaters turn off; F9/1 melter fault code displayed on right display	Reservoir empty but pump continues to turn the number of rotations set in motor control parameter dLy (refer to <i>Setting Up the Motor Control</i> Section 3, <i>Installation</i>).	Ensure that adhesive is present in the hopper and allow time for the adhesive to melt into the reservoir. Unless it is critical that the unit turn off immediately when the reservoir is empty, set the dLy value higher to prevent this fault condition.
FLt (Motor Thermostat Fault)	Motor turns off	Motor cable disconnected or motor temperature too high	Ensure that motor cable is connected. Ensure that motor is not operating above maximum rpm, hydraulic pressure, or ambient temperature.
no P1P (Lid Not Closed)	Piston cannot be lowered	Lid not closed	Close the lid.
N/A	Displayed rpms do not match motor speed	Pump speed display not calibrated	Calibrate the pump speed display. Refer to <i>Calibrating the Pump Speed Display</i> in Section 5, <i>Maintenance</i> .
N/A	Motor control not operating as expected	Improper motor control parameter settings	Check motor control parameter settings. Refer to <i>Setting Up the Motor Control</i> in Section 3, <i>Installation</i> .
N/A	Piston stuck in down position	Excessive downward air pressure [greater than 2 bar (30 psi)] on a slug or foil bag torn or damaged	Press the Piston up key, increase the piston air pressure to the maximum, and wait 5 minutes. If after 5 minutes the piston has not lifted, increase the melter temperature to the maximum safe limit recommended by the material supplier. Allow the temperature to stabilize for 30 minutes (with the maximum air pressure still applied).

Motor Drive Faults

The display on the motor drive located inside the electrical enclosure alerts the operator to abnormal motor drive/motor operation. Motor drive faults cause the pump to stop, refer to the motor drive *Error Messages* given later.

To clear a motor drive fault, correct the problem that caused the fault and then remove power from the motor drive by turning the heaters off and wait until the motor drive display is completely blank.

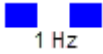










Figure 6-1 Motor drive power LED and display

- | | |
|--------------------------------|--------------------------------|
| 1. Motor drive Ready (RDY) LED | 2. Motor drive Error (ERR) LED |
|--------------------------------|--------------------------------|

LED Status Display

The motor drive has two LEDs, READY (RDY) and ERROR (ERR), see LED location on Figure 6-1. Refer to the following table to identify the motor drive state:

RDY (Blue)	ERR (Red)	Motor Drive State
–	–	No supply voltage
	–	STO active
		STO active, warning active
	–	Motor drive inhibited
		Motor drive inhibited, DC Voltage not On OR Reset
		Motor drive inhibited, Warning active
		Motor drive inhibited, Fault active
	–	Motor drive released, drive running OR Quick Stop
		Motor drive released, drive running, Warning active
		Motor drive released, Trouble reaction active

Motor Drive Error History

Error History

The motor driver keypad is not shipped with the melter, to view the error history you will need to order the keypad service kit (P/N 7411739) separately.

Any time the motor drive experiences an Error condition during operation it is captured in the motor drive non-volatile memory. For historical Error tracking purposes the Errors can be viewed in P155.00. This parameter contains the actual Error codes, the time (in running hours) that the Error occurred and the count of Errors (in case of multiple instances of the same Error condition). The Error History will retain the 32 most recent Errors.

The following figure explains each component in the Error History data:

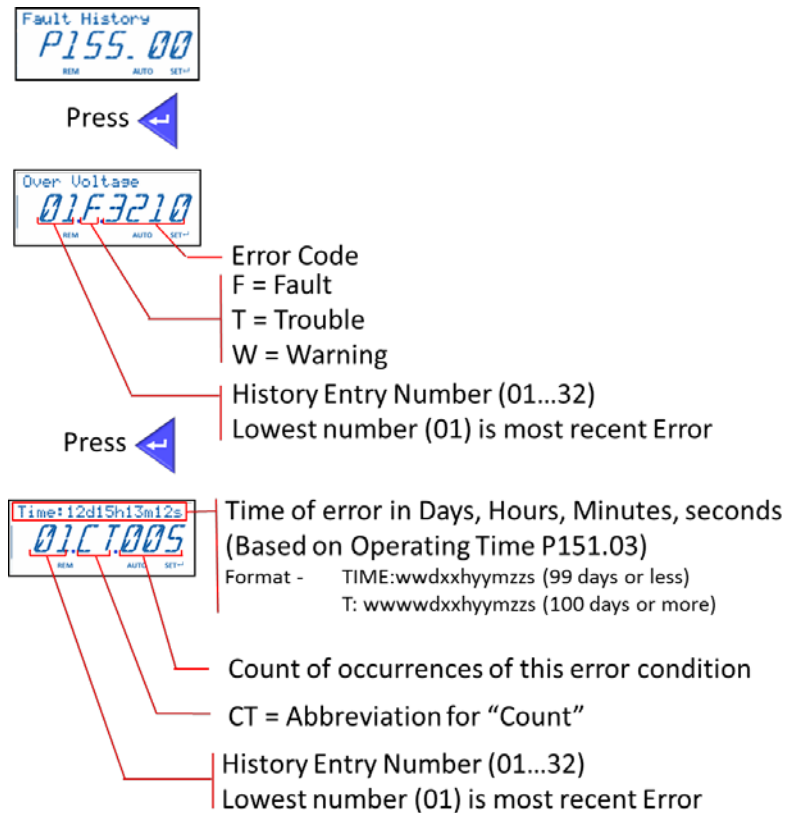





Figure 6-2 Explanation of the Error History data

Error History (contd)

NOTES:

Press  to toggle between two screens.

Press  and  to navigate from Error 01 to Error 32.

The following is an example of how to navigate Error History :

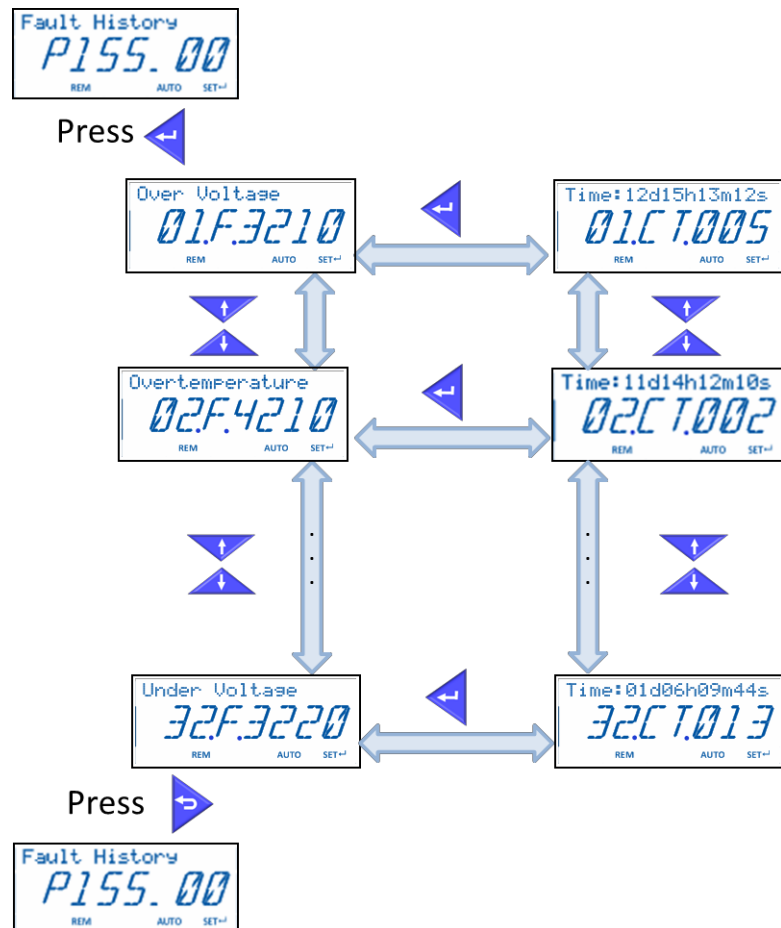


Figure 6-3 Navigating Error History

Error Messages

Error Code (Hex)	Error Code (Dec)	Fault Type	Keypad	Description
0x2220	8736	Fault	OC power mod.	CiA: Continuous over current (device internal)
0x2230	8752	Fault	F.Ground short	CiA: Short circuit/earth leakage (device internal)
0x2250	8784	Fault	OC pm short	CiA: Short circuit (device internal)
0x2351	9041	Configurable	OL i2t motor	CiA: Load level fault (I2t, thermal state)
0x2382	9090	Configurable	F.ixt	Ixt fault
0x2383	9091	Warning	W.ixt	Ixt warning
0x3000	12288	Fault	F.Su02	Single phase fault
0x3210	12816	Fault	F.OU	DC link circuit over-voltage
0x3220	12832	Trouble	F.LU	DC link circuit under-voltage
0x4210	16912	Fault	F.OH1	Power module overtemperature fault
0x4211	16913	Warning	W.OH1	Power module overtemperature warning
0x4310	17168	Configurable	OT motor	Motor temperature has reached error level
0x4481	17537	Fault	sens. heatSink	Heat sink temperature sensor fault
0x5003	20483	Fault	F.ID1	Motor parameter identification fault
0x5112	20754	Warning	W.24V supply	24V supply level critical
0x5581	21889	Fault	Programming err	Power unit programming fault
0x5582	21890	Fault	EPM full	EPM full
0x5584	21892	Fault	Eeprom fault	On-board eeprom access failure
0x5585	21893	Fault	EPM store E	EPM data was not completely saved before power down
0x6104	24836	Warning	Watchdog reset	Watchdog time-out
0x610A	24842	Fault	F.dF12	Math error
0x6181	24961	Fault	OL 125us task	Calculation time overrun in 125us task
0x6182	24962	Fault	OL 250us task	Calculation time overrun in 250us task
0x6183	24963	Fault	OL 1ms task	Calculation time overrun in 1ms task
0x6184	24964	Fault	OL 8ms task	Calculation time overrun in 8ms task
0x6200	25088	Fault	User set fault 1	Digital connection list user fault 1
0x6201	25089	Fault	User set fault 2	Digital connection list user fault 2
0x6307	25351	Fault	F.AL	Assertion level fault
0x8100	33024	Configurable	CAN bus off	CAN bus off
0x8101	33025	Configurable	CAN bus warning	CAN warning
0x8109	33033	Configurable	Stack init error	Fieldbus communication stack initialization error

Continued...

Error Messages *(contd)*

Error Code (Hex)	Error Code (Dec)	Fault Type	Keypad	Description
0x8111	33041	Configurable	TO RxPDO1	CAN time-out Rx PDO 1
0x8112	33042	Configurable	TO RxPDO2	CAN time-out Rx PDO 2
0x8113	33043	Configurable	TO RxPDO3	CAN time-out Rx PDO 3
0x8131	33073	Configurable	CAN hbeat C1	CAN heartbeat time-out consumer 1
0x8132	33074	Configurable	CAN hbeat C2	CAN heartbeat time-out consumer 2
0x8133	33075	Configurable	CAN hbeat C3	CAN heartbeat time-out consumer 3
0x8134	33076	Configurable	CAN hbeat C4	CAN heartbeat time-out consumer 4
0x8141	33089	Configurable	WD exprd	Fieldbus watchdog expired
0x8142	33090	Configurable	Cycl data left	Fieldbus disruption of cyclic data exchange
0x8143	33091	Configurable	Inval cycl data	Fieldbus invalid cyclic process data
0x8190	33168	Configurable	TO Modbus	Modbus network time-out
0x8191	33169	Warning	Modbus EC	Modbus wrong request from master
0x8192	33170	Fault	FLBS new module	Fieldbus new module detected fault
0x8193	33171	Fault	FLBS cfg error	Fieldbus module configuration mismatch fault
0x8286	33414	Configurable	F.PDO mapping	Fieldbus PDO mapping error
0xFF06	65286	Configurable	OS motor	Motor over speed
0xFF09	65289	Configurable	F.VolPhases	Motor phase failure
0xFF0A	65290	Configurable	F.VolPhaseU	Motor phase failure phase U
0xFF0B	65291	Configurable	F.VolPhaseV	Motor phase failure phase V
0xFF0C	65292	Configurable	F.VolPhaseW	Motor phase failure phase W
0xFF0D	65293	Configurable	OC motor	Motor over current
0xFF10	65296	Configurable	F.AIn01	Analog input 1 fault
0xFF13	65299	Configurable	F.AIn02	Analog input 2 fault
0xFF15	65301	Warning	W.UV dc link	DC link circuit under-voltage warning
0xFF16	65302	Warning	F.AOut01	Analog output 1 fault
0xFF18	65304	Warning	W.OV dc link	DC link circuit over-voltage warning
0xFF19	65305	Warning	F.AOut02	Analog output 2 fault
0xFF40	65344	No response	TMO no reaction	Test monitor generated no reaction
0xFF41	65345	Warning	TMO warning	Test monitor generated warning
0xFF42	65346	Trouble	TMO trouble	Test monitor generated trouble
0xFF43	65347	Fault	TMO fault	Test monitor generated fault
0xFF44	65348	Fault	TMO fault delay	Test monitor generated fault with fault reset delayed
0xFF45	65349	Fault	TMO fault block	Test monitor generated fault with fault reset blocked
0xFF48	65352	Fault	Safety fault	Safety supervision fault
0xFF49	65353	Fault	EPM invalid data	EPM contains invalid user data
0xFF50	65360	Fault	EPM not present	EPM not present

Continued...







Error Code (Hex)	Error Code (Dec)	Fault Type	Keypad	Description
0xFF51	65361	Fault	id tag error PU	Load error of the id tag calibration data power unit
0xFF52	65362	Fault	id tag error CU	Load error of the id tag calibration data control unit
0xFF53	65363	Fault	Improper connect	Connection list wrong connected
0xFF54	65364	Configurable	F.fdb open circ	Feedback system open circuit
0xFF56	65366	Warning	OL modbus tx	Modbus transmit message ring buffer error
0xFF57	65367	Configurable	OL diag. rx	Diagnosis receive message ring buffer error
0xFF58	65368	Configurable	OL diag. tx	Diagnosis transmit message ring buffer error
0xFF59	65369	Fault	EPM access fault	EPM access failure
0xFF60	65376	Warning	F.fan heatsink	Heat sink fan fault
0xFF61	65377	Warning	F.fan internal	Internal fan fault
0xFF62	65378	Warning	Reverse protect	Reverse direction protection warning
0xFF63	65379	Fault	F. pole ident	Pole position identification fault
0xFF64	65380	Trouble	Sync error CU PU	Power stage communication is out of synchronization
0xFF65	65381	Fault	PSCOM mismatch	Power stage communication protocol version mismatch
0xFF66	65382	Trouble	Rx error CU	Power stage communication receive error on control unit
0xFF67	65383	Fault	rx error PU	Power stage communication receive error
0xFF68	65384	Fault	PSCOM SDO abort	Power stage communication SDO abort
0xFF69	65385	Fault	F.PU generic	Power unit generic fault
0xFF70	65392	Fault	F.PU uC supply	Power unit uC supply voltage drop down
0xFF71	65393	Configurable	W.OC12	Brake resistor overload warning
0xFF72	65394	Configurable	F.OC12	Brake resistor overload fault
0xFF73	65395	Fault	Auto run inhibit	Automatic start inhibited
0xFF74	65396	Warning	TO.OBEE	OBEE job timer overrun
0xFF75	65397	Warning	TO.EEPROM.EPM	EPM job timer overrun
0xFF76	65398	Warning	I2C conn lost	I2C connection lost
0xFF77	65399	Warning	I2C bus error	I2C bus error
0xFF80	65408	Fault	Trouble overflow	Maximal allowed troubles exceeded
0xFF81	65409	Warning	W. powUp voltage	DC link voltage to low for power up
0xFF82	65410	Warning	EPM is blank	Installed EPM is blank
0xFF83	65411	Fault	Keypad removed	Keypad removed fault
0xFF84	65412	Fault	AC user fault	AC control user fault
0xFF85	65413	Fault	Netwrk user flt1	Network user fault 1
0xFF86	65414	Fault	Netwrk user flt2	Network user fault 2
0xFF87	65415	Fault	NetWordIN1 Setup	NetwordIN1 duplicate bit connection fault

Changing a Motor Drive Parameter

Keypad


The motor drive parameters are pre-set at the factory. You need the motor drive keypad with display to view and change the motor drive parameters. Install the keypad on the front of the motor drive.

An explanation of the keypad button functions is given in the following table.

Keypad	Buttons	Description
		<ul style="list-style-type: none"> Menu navigation Adjust parameter values
		<ul style="list-style-type: none"> Enter (sub-) menu/parameter Confirm parameter
		Exit (sub-) menu/parameter
		Stop motor drive
		Release motor drive

Display

An explanation of the display parameters is given in the following table.

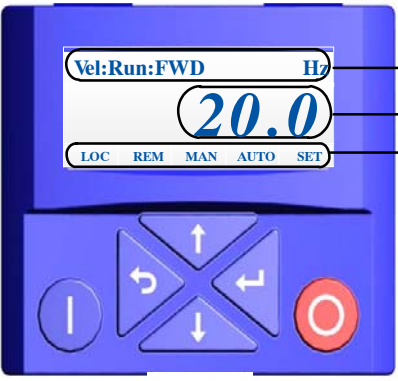Display	Item	Description
	1	Status and unit
	2	Speed, Parameter value, and Fault code
	3	<ul style="list-style-type: none"> LOC – Local start button on keypad is active (stop button is always active)
		<ul style="list-style-type: none"> REM – Local start button is inactive (start is initiated remotely)
		<ul style="list-style-type: none"> MAN – Up/Down arrows are active and control speed AUTO – Up/Down arrows are inactive (speed control is external) SET ← – The blinking indicates that a setting or value has changed and needs to be entered. Once the settings are saved, the icon is steady

Every parameter has a hexadecimal address. Parameters which are visible on the keypad also have a display code. In the *Easy Starter Display Code* and hexadecimal address are visible. Every parameter can have sub-parameters.

Example	Display code	Address
V/f base frequency	P302.02	0x2B01:002
Start control	P200.00	0x2824:000

The parameters are organized into groups 0 through 7:

Group	Name	Group	Name
0	Favorites menu	4	Function and I/O menu
1	Diagnostics	5	Network setup menu
2	Basic setup	6	Process control menu
3	Motor setup	7	Auxiliary function menu




The favorites menu contains links to the most commonly used parameters for initial commissioning and monitoring of the motor drive for general applications.

Favorites Group Navigation

Screen Type	Display Parameters	Keypad Button Selection
Operating Screen		Press
Groups Screen		Press
Parameter Screen		Press ten (10) times
Parameter Screen		Press
Setting Screen		Press until 87.0 is displayed
Setting Screen		Press
Parameter Screen		Press NOTE: Use the Up and Down buttons to navigate to other parameters in Group 0. In this example, the BACK button is used to return to Group list.
Groups Screen		Press NOTE: Use the Up and Down buttons to navigate to other groups. In this example, the BACK button is used to return to the Operating Screen.
Operating Screen		We are at the Operating Screen.

Saving the Settings

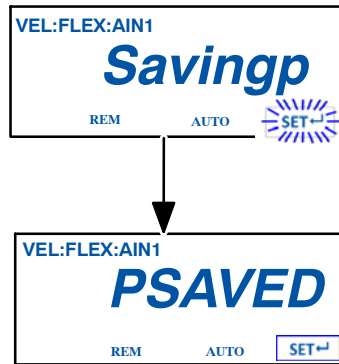














After the adjustments are complete, press

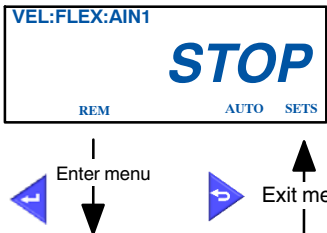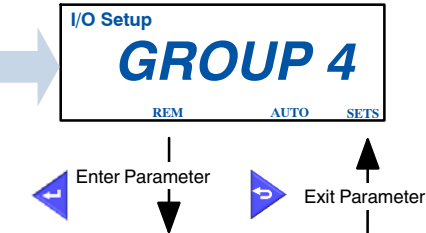

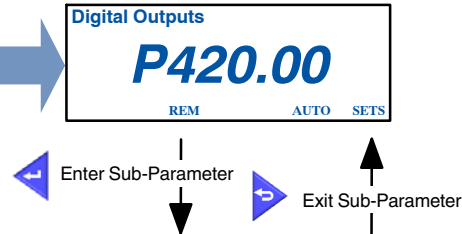
for three (3) seconds to save all the settings to memory.

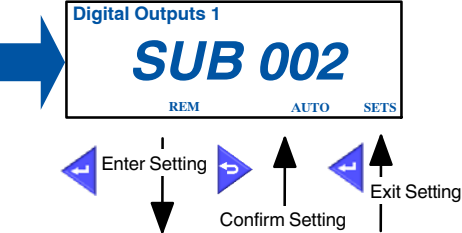
The **SET** icon blinks when the settings are not saved. Once the settings are saved, the icon is steady.


Navigation Group 1-7

Screen Type	Display Parameters	Keypad Button Selection
Operating Screen		
Groups Screen		Press  or  to select Group.
Parameter Screen		Press  or  to select Parameter.
Sub-Parameter Screen	<p>NOTE: If Sub-Parameter screen is not available, the Direct Setting Screen will display.</p> 	Press  or  to select Sub-Parameter.
Setting Screen		Press  or  to change parameter value.

Saving the Settings

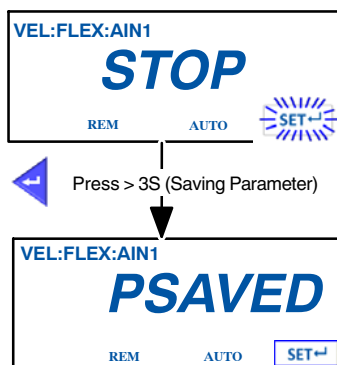


After all the adjustments are complete, press  for three (3) seconds to save all the settings to memory.

The  icon blinks when the settings are not saved. Once the settings are saved, the icon is steady.

Motor Drive Parameter Factory Settings

Code	Pr.	Description	Setting
GROUP2	P211:00	Max Frequency	102Hz
GROUP3	P303:01	Base Voltage	230V
GROUP3	P303:02	Base Frequency	102Hz
GROUP3	P315:01	Slip Compensation	5%
GROUP3	P320:04	Motor Speed	1350
GROUP3	P320:05	Motor Frequency	102
GROUP3	P320:06	Motor Power	0.25
GROUP3	P320:07	Motor Voltage	230
GROUP3	P320:08	Motor cos PHi	0.6
GROUP4	P430:03	Frequency at max signal	102Hz

Pump Operational Status

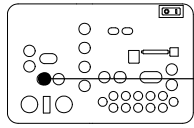

Pump mode key



NOTE: To use the pump operating variables table, ensure that the **Pump mode** key LED is on and that the motor speed is at a setting other than 0. In addition, ensure that the reservoir is not empty.

When diagnosing apparent melter malfunctions, it is helpful to understand the following variables that control the status of the pump—enabled or disabled—and the associated indication that is provided by the pump LED.


- Use/activation of a remote input to control the motor
- Use of parameter 8, *Automatic Pump On*
- Ready status of the melter
- Activation of a switched input (hand-held applicator or footswitch)
- Activation of the pump key

Table 6-3 provides the status of the pump LED for each combination of the pump operating variables.

Table 6-3 Pump Operating Variables

Pump LED Status	Remote Motor Input Assigned (See Note A)	Remote Motor Input Status (See Note B)	Automatic Pump On (Parameter 8)	Hand-held applicator/ Footswitch	Hand-held applicator/ Footswitch Input Status	Unit Ready Status	Pump Key Press Status (See Note C)	Motor Rotating
Single green flash, then off	Not Assigned	N/A	Disabled	Not present	N/A	No	Ignored	No
Off	Not Assigned	N/A	Disabled	Not present	N/A	Yes	Off	No
Green	Not Assigned	N/A	Disabled	Not present	N/A	Yes	On	Yes
Off	Not Assigned	N/A	Enabled	Not present	N/A	No	Off	No
Yellow	Not Assigned	N/A	Enabled	Not present	N/A	No	On	No
Off	Not Assigned	N/A	Enabled	Not present	N/A	Yes	Off	No
Green	Not Assigned	N/A	Enabled	Not present	N/A	Yes	On	Yes
Single green flash, then off	Not Assigned	N/A	Disabled	Present	On/Off	No	Ignored	No
Off	Not Assigned	N/A	Disabled	Present	On/Off	Yes	Off	No
Yellow	Not Assigned	N/A	Disabled	Present	Off	Yes	On	No
Green	Not Assigned	N/A	Disabled	Present	On	Yes	On	Yes
Off	Not Assigned	N/A	Enabled	Present	On/Off	No	Off	No
Yellow	Not Assigned	N/A	Enabled	Present	On/Off	No	On	No
Off	Not Assigned	N/A	Enabled	Present	On/Off	Yes	Off	No
Green	Not Assigned	N/A	Enabled	Present	On	Yes	On	Yes
Yellow	Not Assigned	N/A	Enabled	Present	Off	Yes	On	No
Single green flash, then off	Assigned	On/Off	Disabled	Not present	N/A	No	Ignored	No
Off	Assigned	On	Disabled	Not present	N/A	Yes	Off	No
Flashing Green	Assigned	Off	Disabled	Not present	N/A	Yes	On	No
Green	Assigned	On	Disabled	Not present	N/A	Yes	On	Yes
Off	Assigned	On/Off	Enabled	Not present	N/A	No	Off	No
Off	Assigned	On/Off	Enabled	Not present	N/A	Yes	Off	No
Yellow	Assigned	On/Off	Enabled	Not present	N/A	No	On	No
Flashing Green	Assigned	Off	Enabled	Not present	N/A	Yes	On	No
Green	Assigned	On	Enabled	Not present	N/A	Yes	On	Yes
<p>NOTE A: If any of Parameters 30-39 are set to 3 or 11, then the remote motor input is assigned.</p> <p>B: If the remote motor input is assigned, then its status is described in this column.</p> <p>C: “On” means the pump key was pressed and the unit accepted the key press. “Ignored” means that the pump key will not respond to a key press.</p>								

Using the Troubleshooting Flow Chart

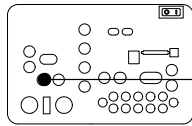


Pump mode key



NOTE: To use the pump operating variables table, ensure that the **Pump mode** key LED is on and that the motor speed is at a setting other than 0. In addition, ensure that the reservoir is not empty.

The flowchart, which is provided at the end of this section, is designed to assist you in diagnosing and correcting a complete or partial stop in hot melt output from the applicators. The chart is organized in a simple question-action block format. If your response to a question is yes (+), continue downward in the chart to the next question or action block. If your response is no (-), continue to the right to the next question or action block. All diagnostic paths within the chart end with an action block that specifies one of the following courses of action:

- Refer to information provided elsewhere in this manual
- Replace a component

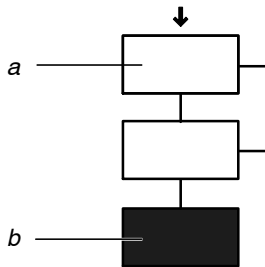

Troubleshooting question and action blocks

a) Question b) Action

To return your melter to service as quickly as possible, the chart is designed under the assumption that it is preferable to immediately replace a faulty assembly as opposed to conducting detailed diagnostics and repair of the assembly while the melter is out of service.

Use of the chart assumes that the melter is installed correctly and that it is set up to support the current manufacturing process. Refer to Section 3, *Installation*, for information about installing and setting up the melter.

Troubleshooting Quick-Checks

Before using the troubleshooting charts confirm:

- whether or not service was recently performed on the melter or the melter's settings were recently adjusted.
- the correct voltage plug is installed on connector X1 and/or X2. Refer to Section 3, *Installation*, for information about selecting the correct voltage plug.
- external inputs (if used) are functioning properly.
- the standby or clock functions are not turned on (if not required or expected at the current time).

Returning the Melter Setup to Factory Settings

By returning the melter to its factory setting many common melter problems can be isolated to either a problem with the melter settings or the melter hardware.

To return the melter to its factory settings, switch the melter off, simultaneously press the **Setup** and **Right Display Scroll Down** keys, and then switch the melter back on, holding the **Setup** and **Right Display Scroll Down** keys until the letters PUR appear on the right display.

NOTE: If PUR does not appear upon a first attempt at factory reset, switch the melter off, simultaneously press the **Reservoir** and **Clear/reset** keys, and then switch the melter back on, holding the **Reservoir** and **Clear/reset** keys until the letters PUR appear on the right display. This will reset the melter as a PUR melter.

Identifying Electrical Components

Tables 6-4 through 6-8 provide detailed descriptions of the circuit board indicators, connection points, and test points that are referred to in the troubleshooting chart. Refer to the wiring diagram in Section 8, *Technical Data*, for the location of each of these circuit board components.

Table 6-4 Main Board Components

Item Number	Type	Description
<i>Indicators</i>		
DS2	Neon	Power to reservoir heater
DS3	Neon	Power to manifold heater
DS4	Neon	Power to 5 VDC and 24 VDC power supplies
DS5	Neon	Power to melt plate heaters
DS6	Neon	Power to hose/applicator 1 heaters
DS8	LED	Control signal for melt plate heater
DS9	LED	Not used
DS10	LED	Control signal for reservoir heaters
DS11	LED	Control signal for motor
DS12	LED	Control signal for applicator 1 heater
DS13	LED	Control signal for hose 1 heater
DS14	LED	Control signal for manifold heater
DS15	LED	+5 VDC control voltage present
DS17	LED	Trigger closure present at XP3 or XP4
<i>Fuses</i>		
F1/F2	--	Reservoir heaters (10 A, 250 V, fast-acting)
F3/F4	--	5 VDC and 24 VDC power supplies (2A, 250 V, slow-blow)
F5/F6	--	Manifold heater (5 A, 250 V, fast-acting, 5 x 20 mm)
F7/F8	--	Melt plate heaters (6.3 A, 250 V, 5 x 20 mm)
F9/F10	--	Hose/applicator 1 heaters (6.3 A, 250 V, 5 x 20 mm)
F11/F12	--	Motor start (6.3 A, 250 V, 5 x 20 mm)
<i>Continued...</i>		

Table 6-4 Main Board Components (contd)

Item Number	Type	Description
<i>Connection Points</i>		
XT1	Input	High-voltage power connection to board
J1	Input/output	Signal ribbon cable between main board and CPU
XP1	Output	Control voltage to applicator solenoid 1
XP2	Output	Control voltage to applicator solenoid 2
XP3	Input	Switch closure from hand-held applicator 1
XP4	Input	Switch closure from hand-held applicator 2
XP5	Input	Manifold RTD
XP6	Input	Reservoir RTD and reservoir overtemperature thermostat
X1	Output	High-voltage to manifold heater
X2	Output	High-voltage to reservoir heaters
X3	Output	High-voltage to motor
X4	Output	High-voltage and control voltage out to melt plate heaters
X5	Output	High-voltage and control voltage out to hose/applicator 1
X6	Output	24 VDC to expansion board
X7	Input	Unit on/off control switch
<i>Test Points</i>		
TP7	Contact	+5 VDC control voltage present
TP2	Contact	Circuit common of low-voltage power supply

Table 6-5 Expansion Board Components

Item Number	Type	Description
<i>Indicators</i>		
DS1	LED	24 VDC present at X3
<i>Connection Points</i>		
XT1	Input	AC power into board
XT2	Output	AC power out to power module (hoses/applicators 2 and 3)
XT3	Output	AC power out to main board
XT7	Output/Input	Positions 1–6 are control outputs; positions 7–14 are control inputs
X1/X2	Jumper	Input voltage configuration plugs
X3	Input	24 VDC in from main board
X4	Input/output	Ribbon cable connection between expansion board and power module (hoses/applicators 2 and 3)
J2	Input/output	Ribbon cable connection between expansion board and main board

Identifying Electrical Components *(contd)*

Table 6-6 Power Module Components

Item Number	Type	Description
<i>Indicators</i>		
N1	Neon	Hose 3 is turned on
N2	Neon	Applicator 3 is turned on
N3	Neon	Hose 2 is turned on
N4	Neon	Applicator 2 is turned on
<i>Connection Points</i>		
J1	Input/output	Ribbon cable connection between power module and expansion board
J2	Input/output	Connection point for the wire harness between hose/applicator 3 and the power module
J3	Input/output	Connection point for the wire harness between hose/applicator 2 and the power module
J4/J5	Input	AC power input from XT2 on the expansion board
<i>Fuses</i>		
F1, F2	--	Hose 3 and applicator 3
F3, F4	--	Hose 2 and applicator 2

Table 6-7 Piston/Motor Control Board Components


Item Number	Type	Description
<i>Indicators</i>		
DS5	LED	Status
DS7	LED	Reservoir empty
DS8	LED	Motor enable input
DS9	LED	Piston in place
DS10	LED	Melt on demand
DS12	LED	Hopper empty
DS15	LED	Motor thermostat
DS16	LED	Power switch
DS14	LED	Serial port fault
<i>Connection Points</i>		
X1	Input/output	Expansion serial port connection
X2	Input/output	Serial port connection to melter CPU
X3	Data	CPU debug connector
X4	Input	Membrane key pad
X5	Signal input/output	Connections to motor drive
X6	Signal input	DIN rail board connections
X8	Signal input/output	Melter I/O connections
X9	Signal input/output	Power switch connections
X10	Signal output	Membrane panel LEDs
TB1	Output	Piston solenoid connections
TB4	Sensor input	Piston-in-place sensor connection
TB5	Sensor input	Melt on demand sensor connection
TB6	Sensor input	Reservoir empty sensor connection
TB7	Sensor input	Hopper empty sensor connection
SW1	Switch	Switch to put motor control CPU into software upgrade mode

Identifying Electrical Components *(contd)*


Table 6-8 Relay Board Components

Item Number	Type	Description
<i>Connection Points</i>		
X1	Input	Power
X2	Output	Power
X3	Output	Motor drive and 24V power supply
X4	Output	Motor piston control
X5	Input	Customer-supplied motor run-up input signal
X6	Output	240V fan power (option C)
X7	Input	Motor relay power
X8	Input	24 VDC power to board
J1	Input	Solenoid signals from main board
J2	Test	Test
J3	Test	Test
J4	Output	Solenoid 1
J5	Output	Solenoid 2
<i>Fuses</i>		
F1	Fuse	Fuse for fan, motor drive, 24VDC power supply
F2	Fuse	Same as above
F3	Fuse	Fuse for 24 VDC power to and through board


No adhesive output from one or more applicators

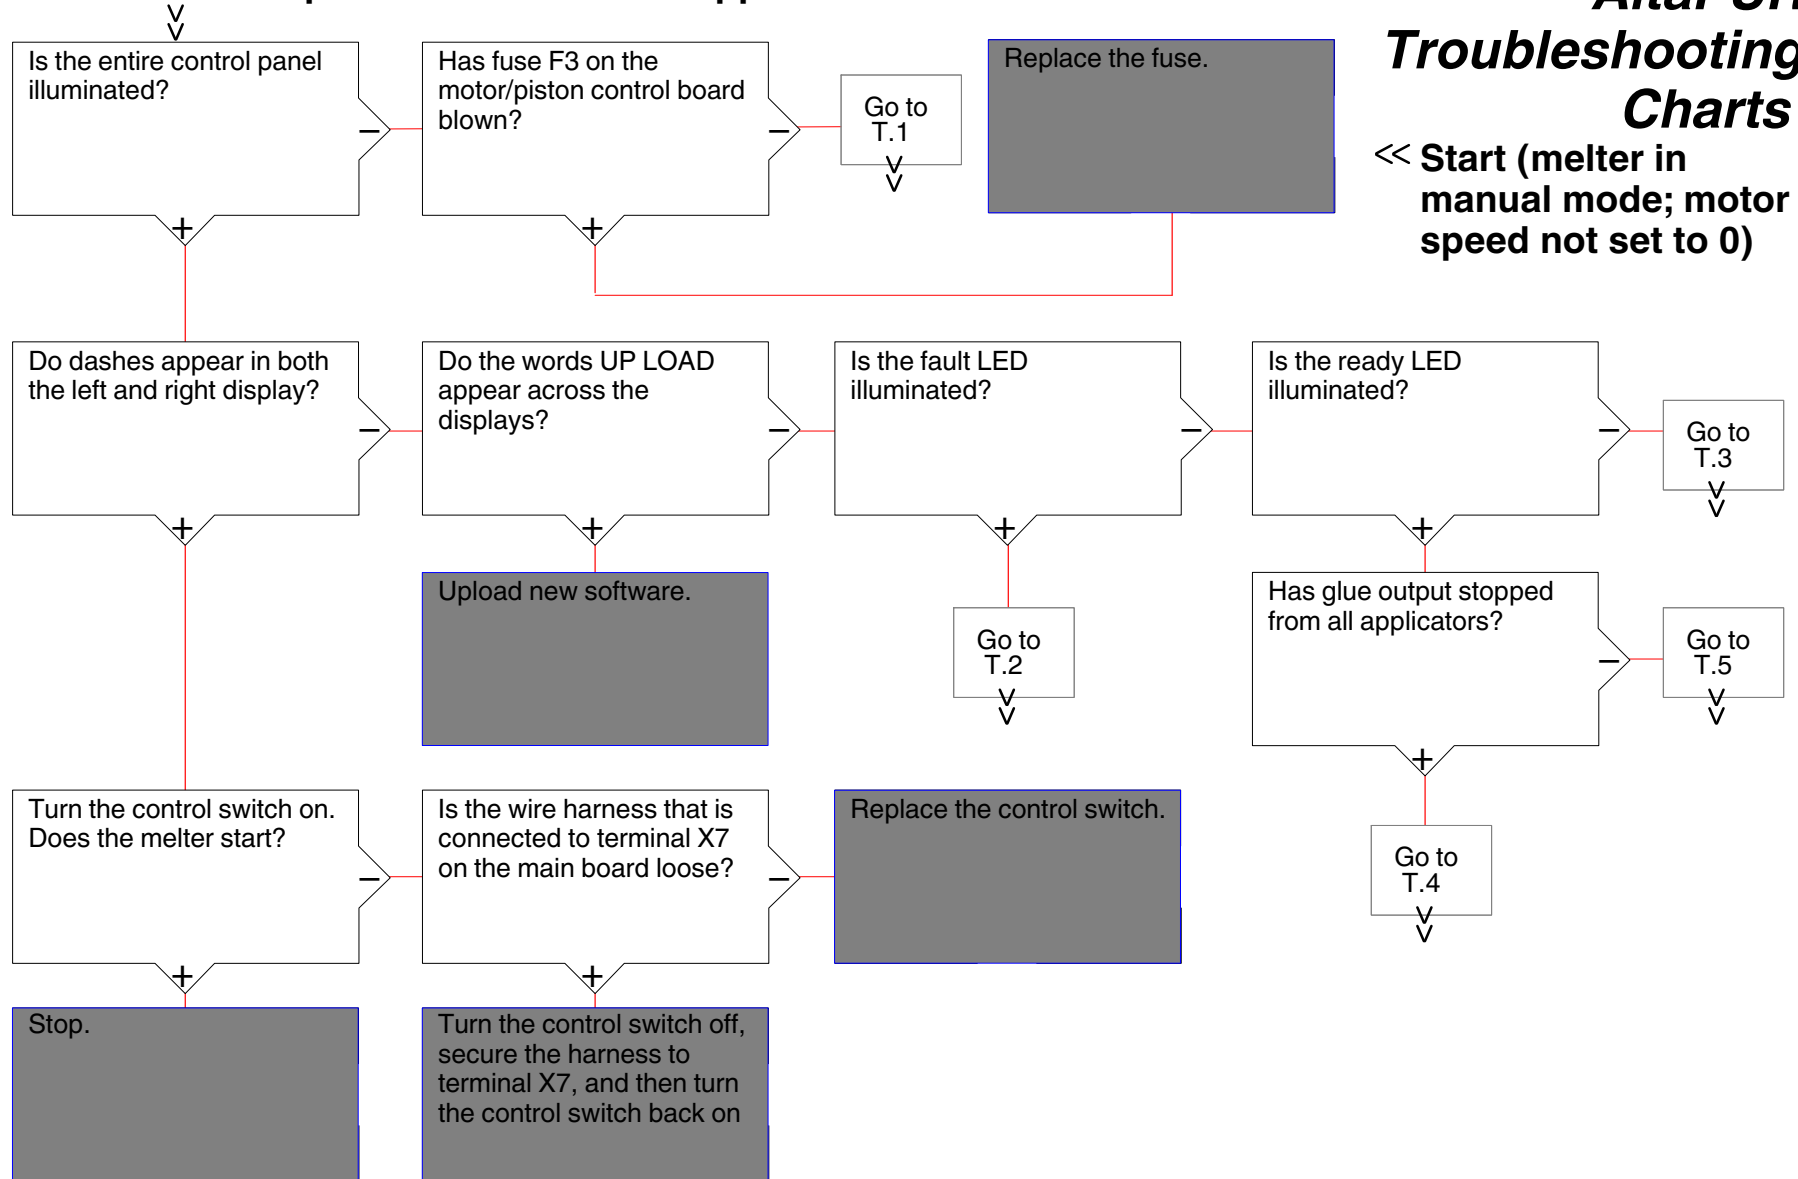


This page intentionally left blank.

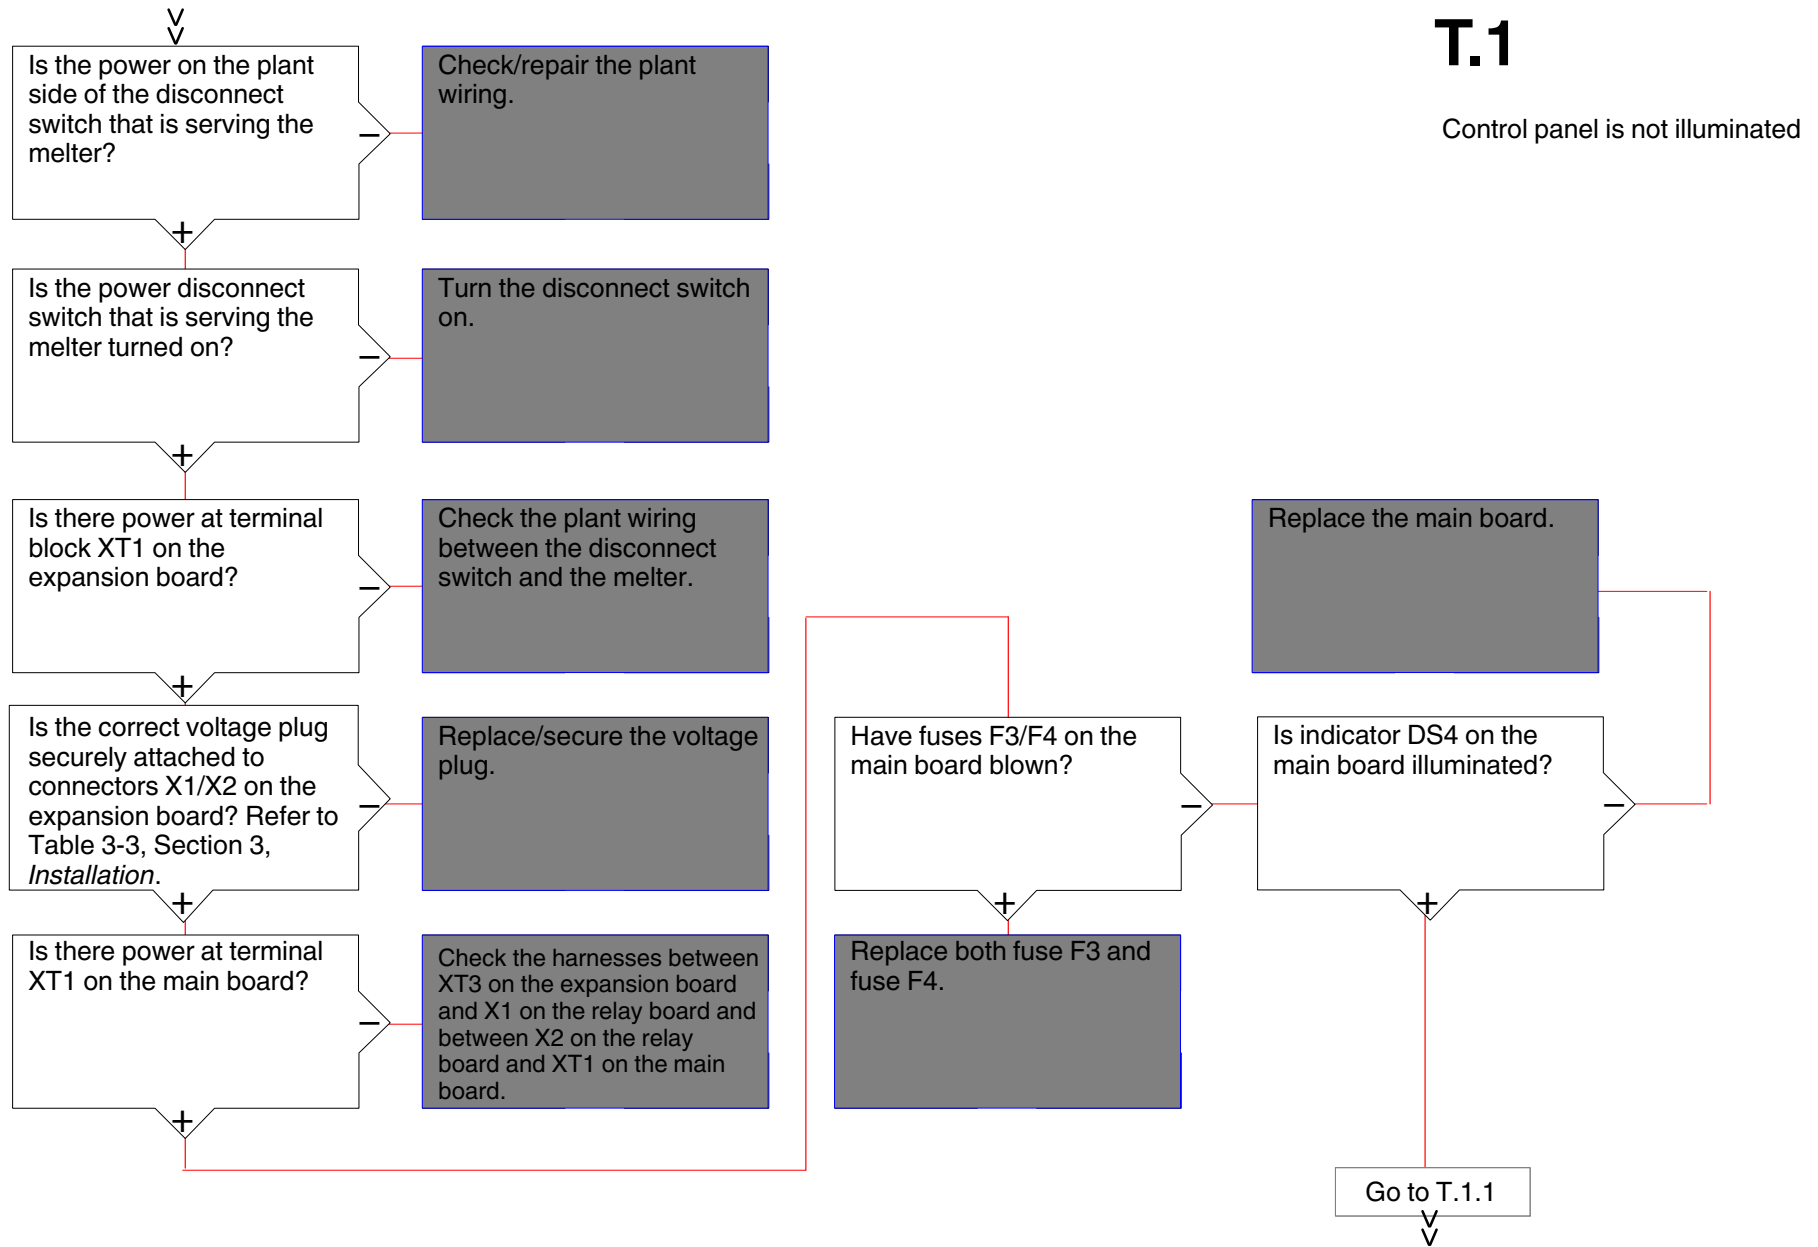

This page intentionally left blank.

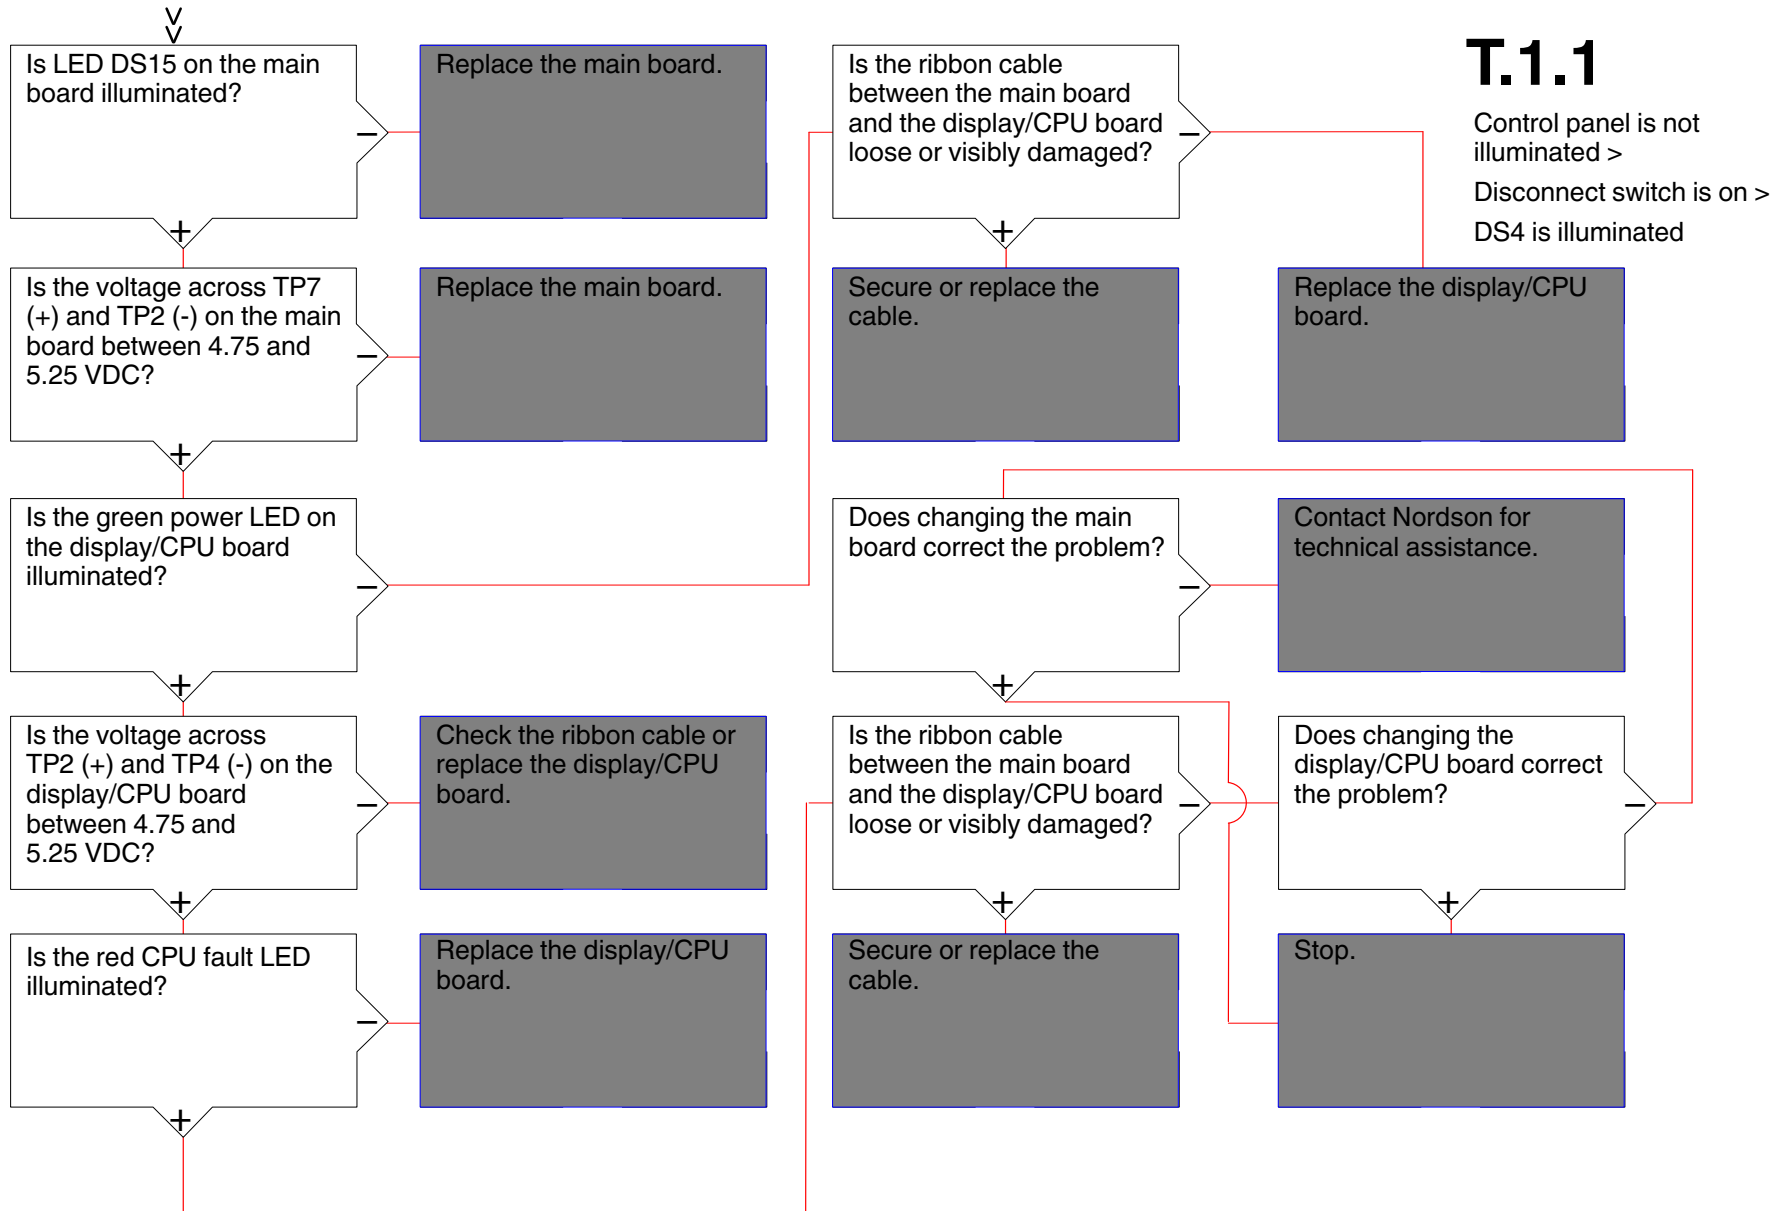

This page intentionally left blank.

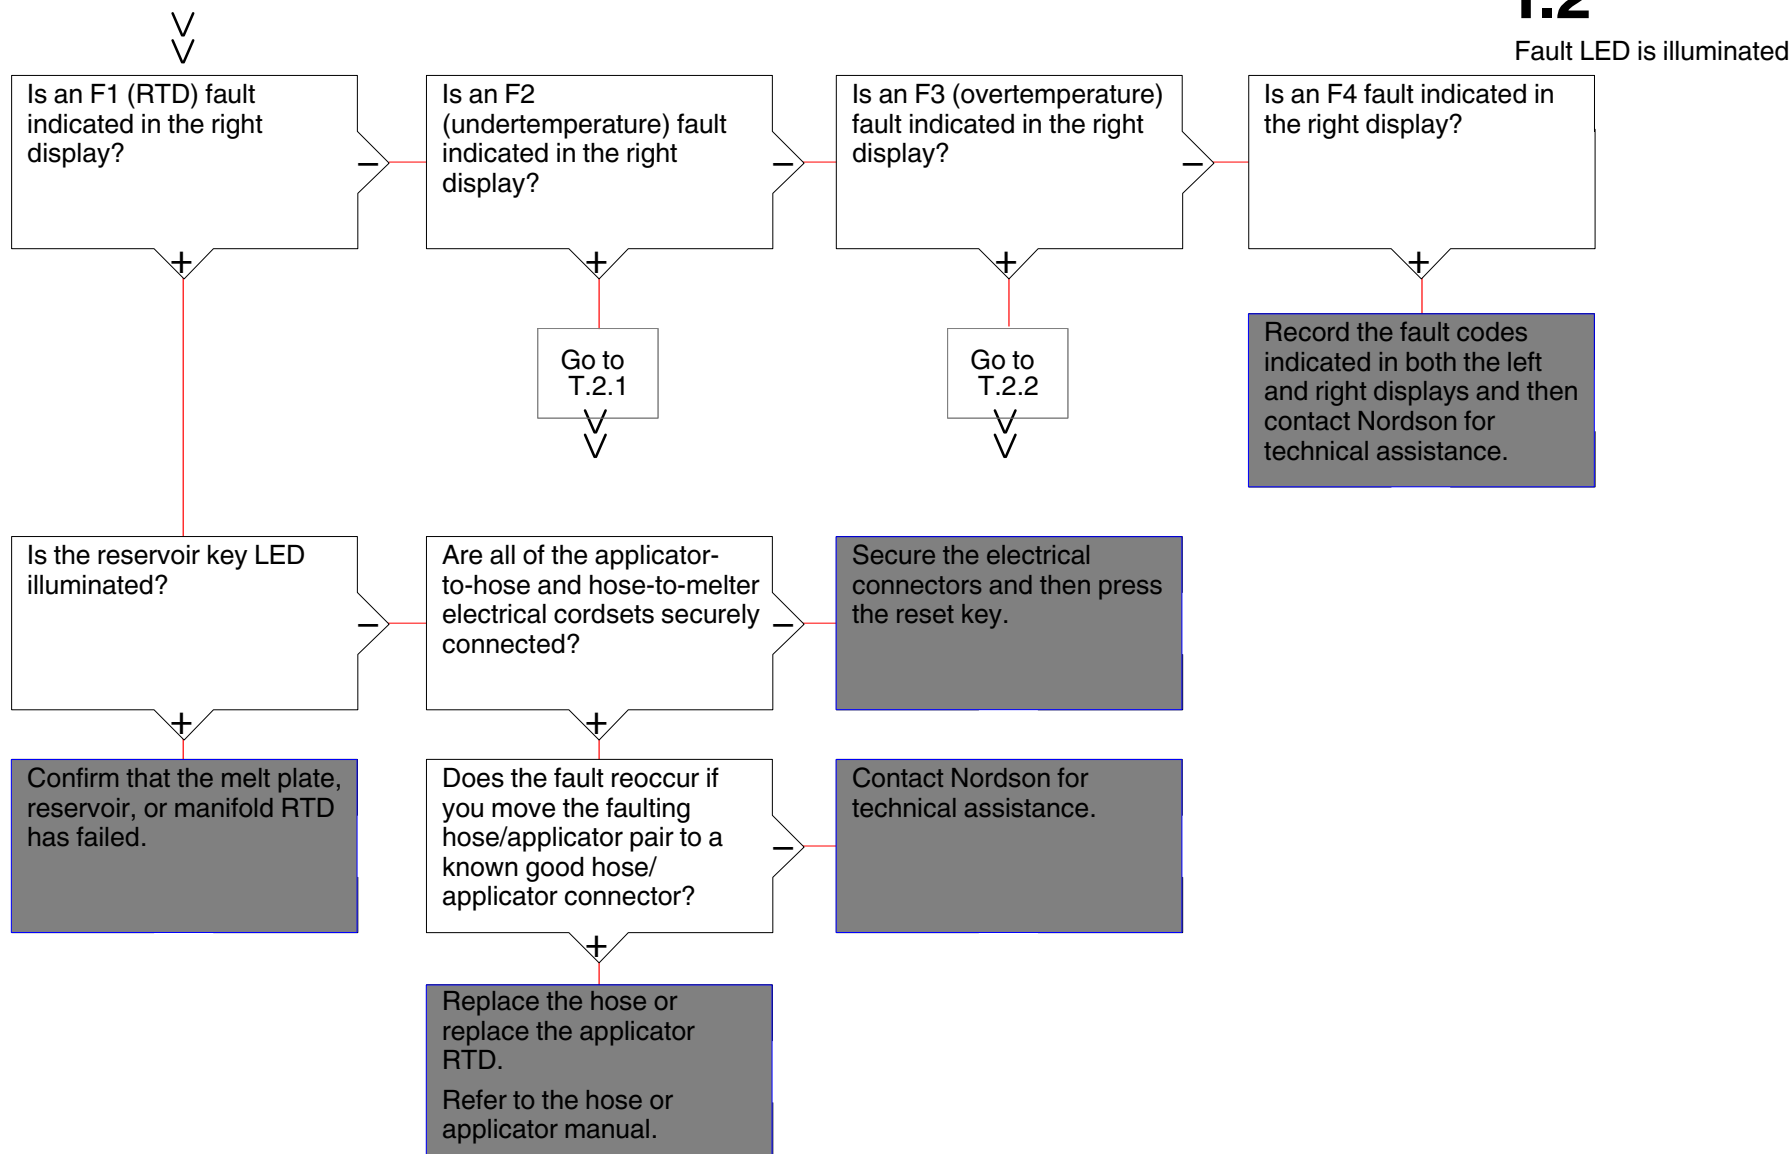


This page intentionally left blank.

Reset the melter and turn the heaters back on

T.2.1

Fault LED is illuminated >
F2 fault exists

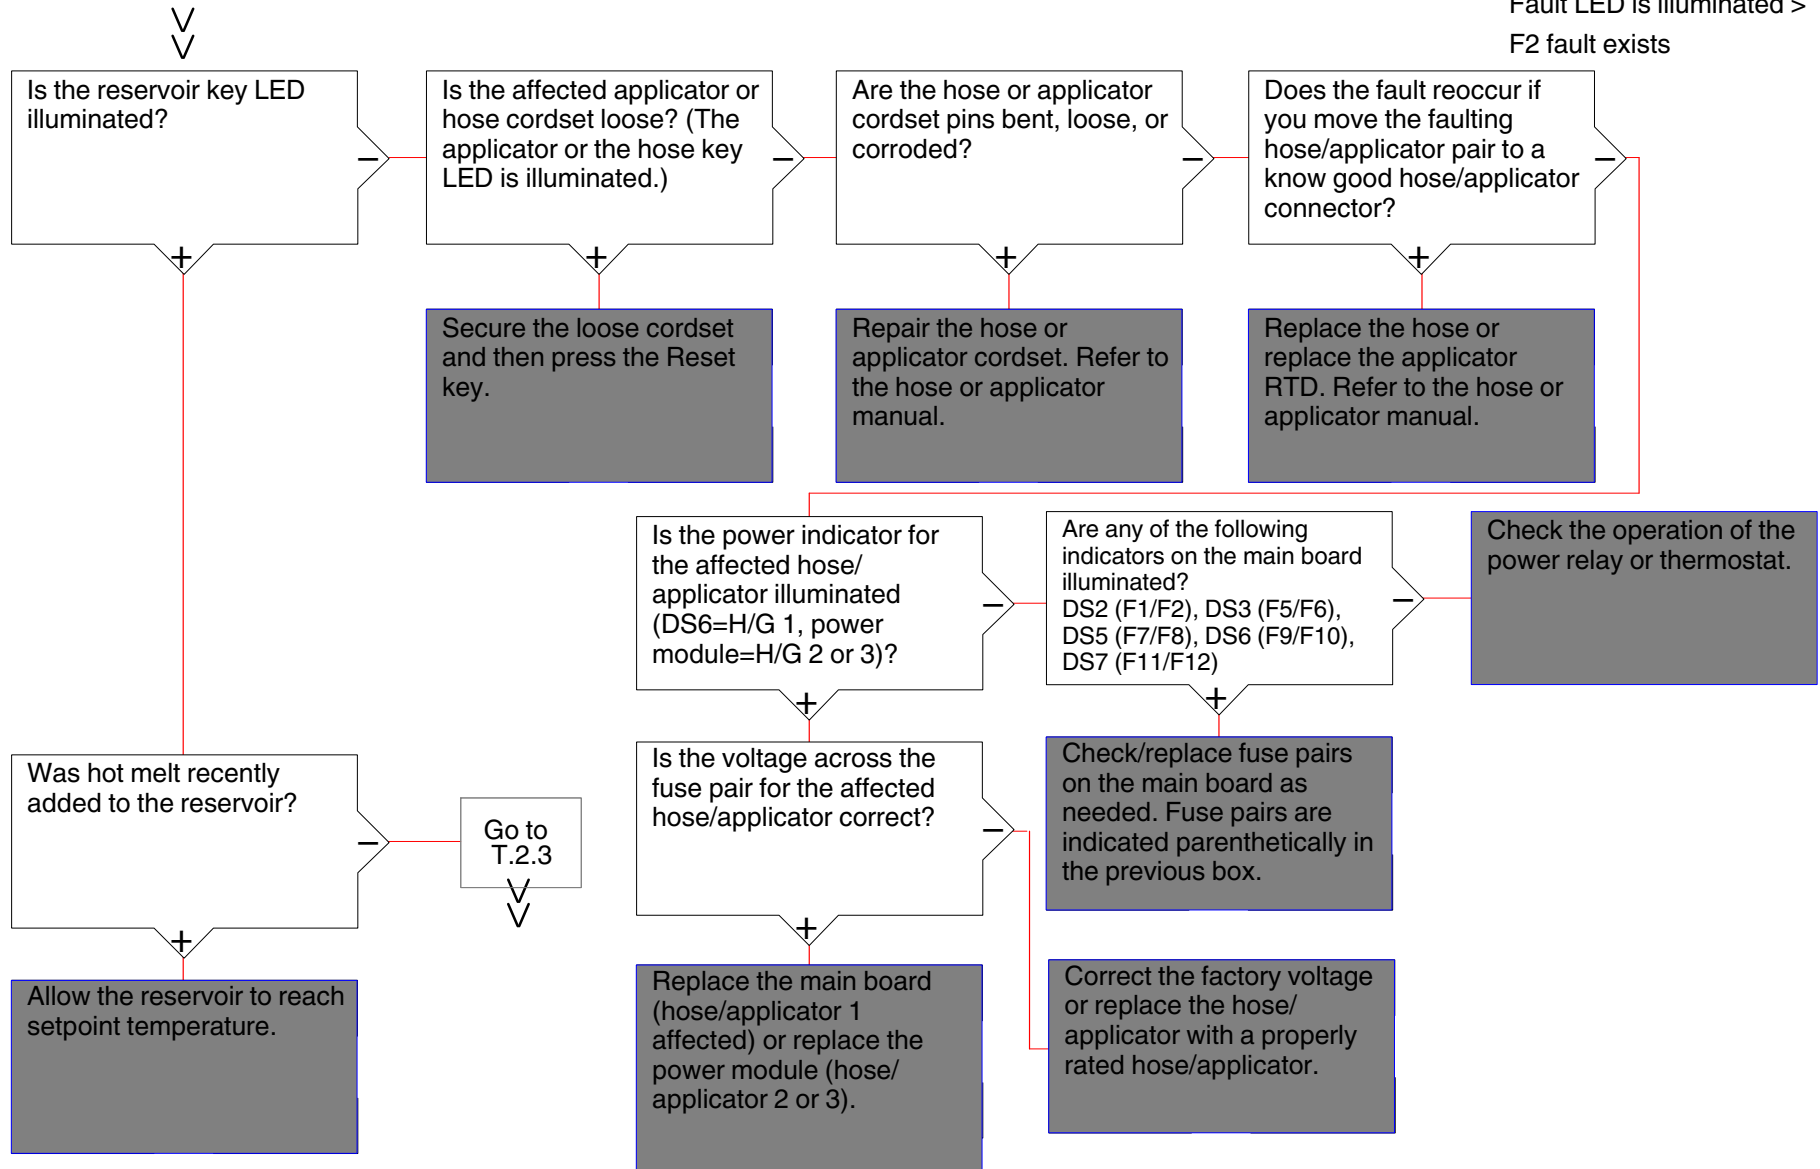


This page intentionally left blank.


Reset the melter and turn the heaters back on

T.2.2

Fault LED is illuminated >
F3 fault exists

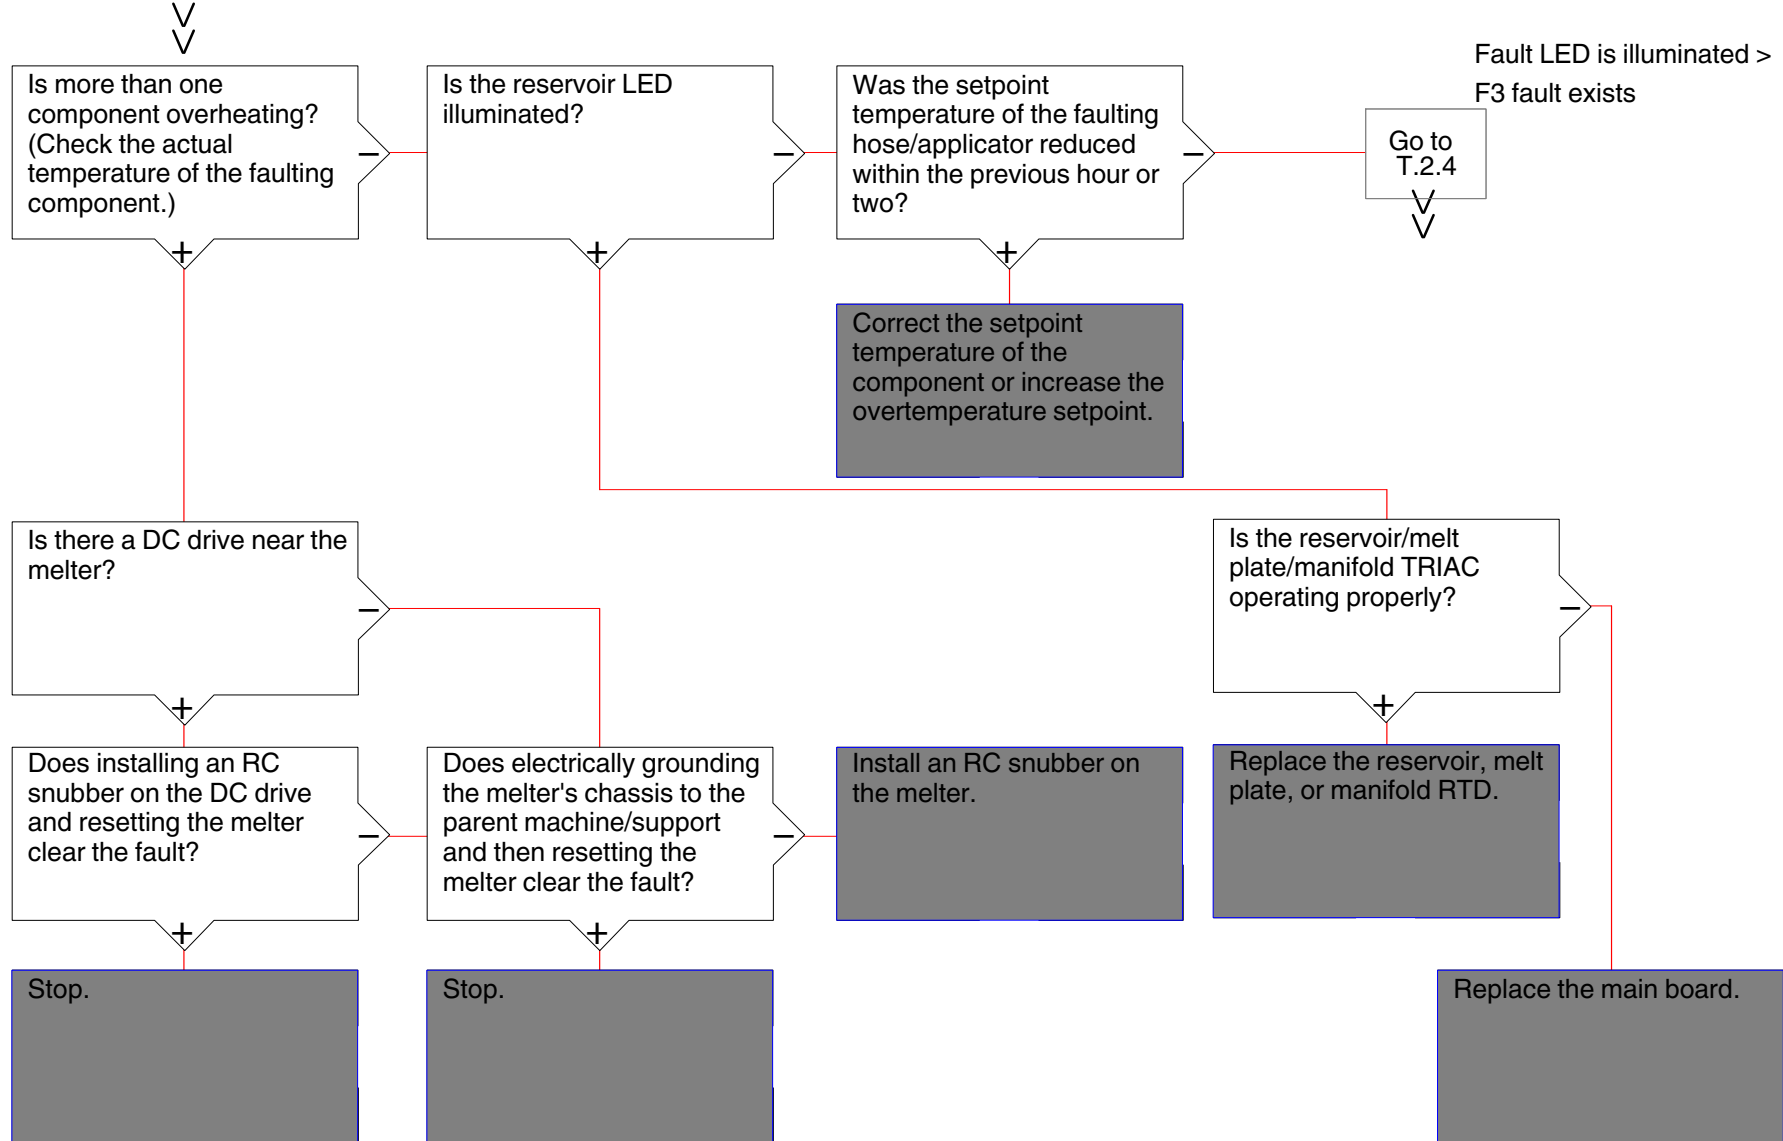

This page intentionally left blank.

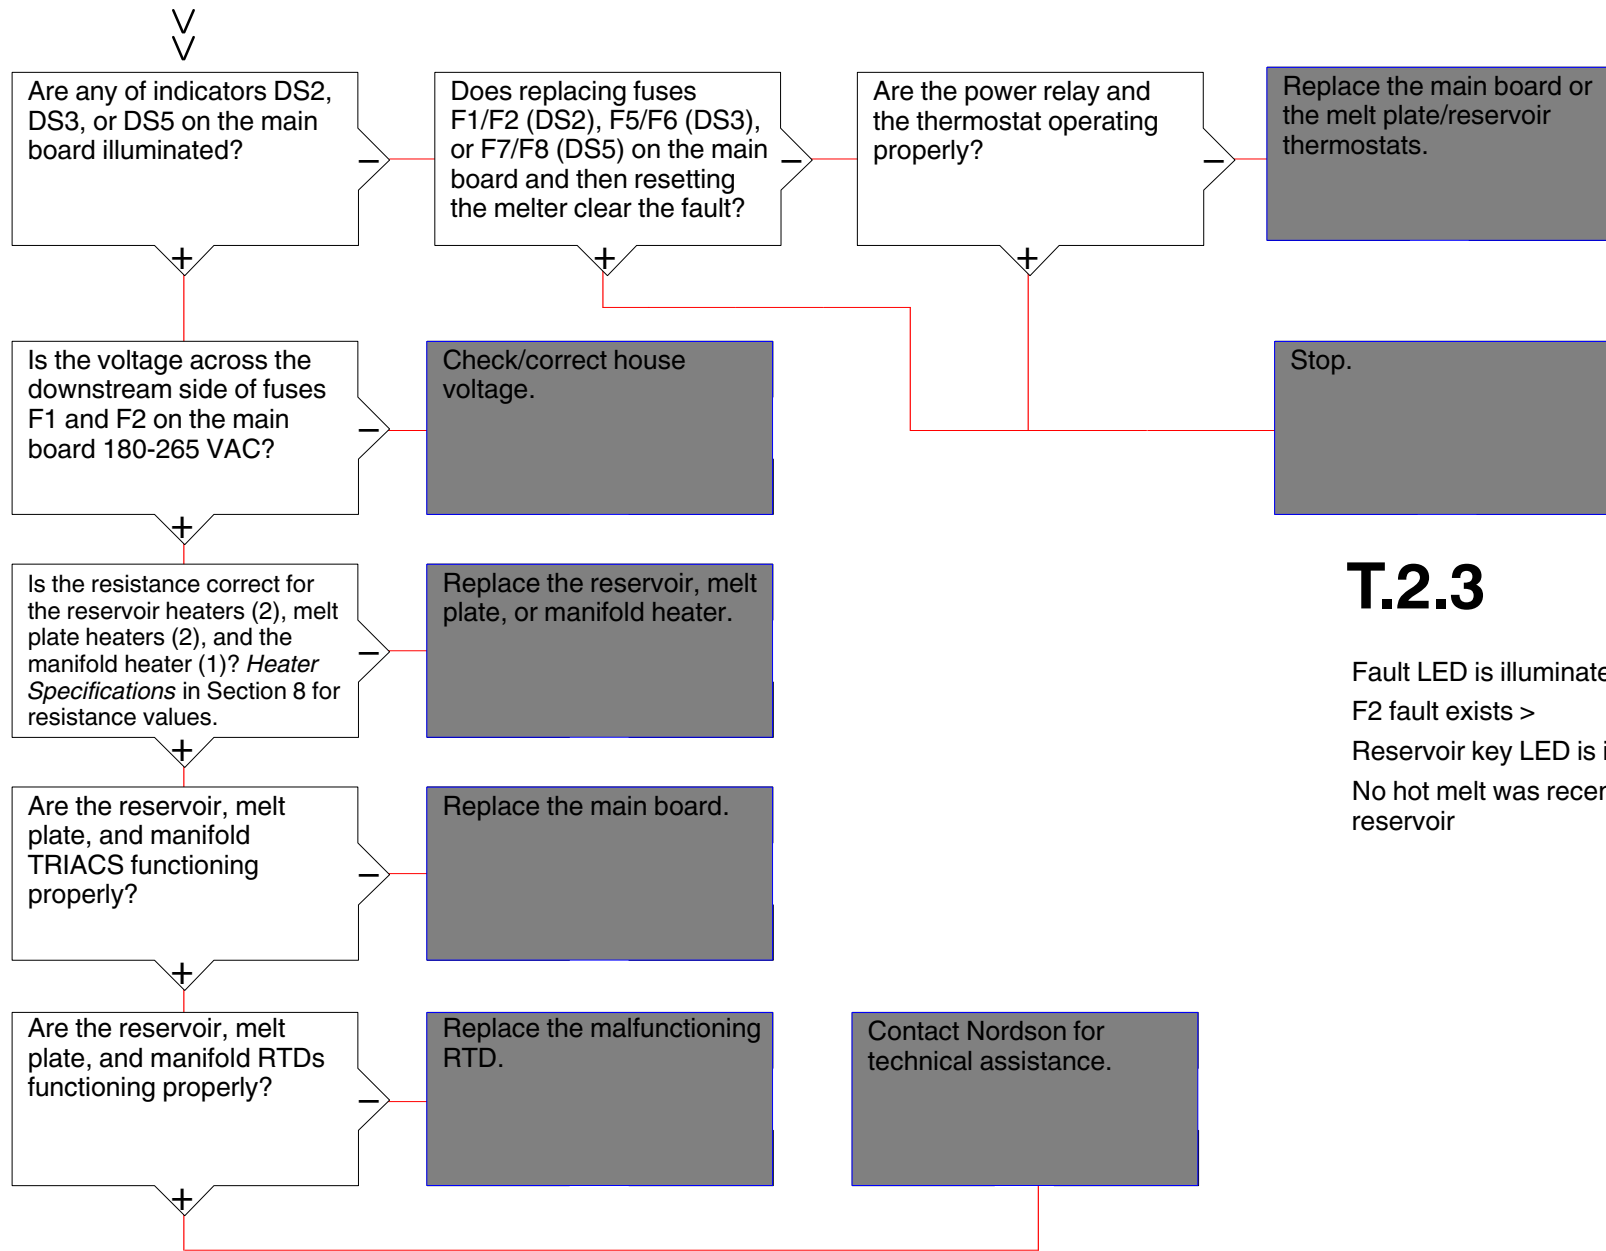

T.2.3


Fault LED is illuminated >

F2 fault exists >

Reservoir key LED is illuminated >

No hot melt was recently added to the reservoir

This page intentionally left blank.

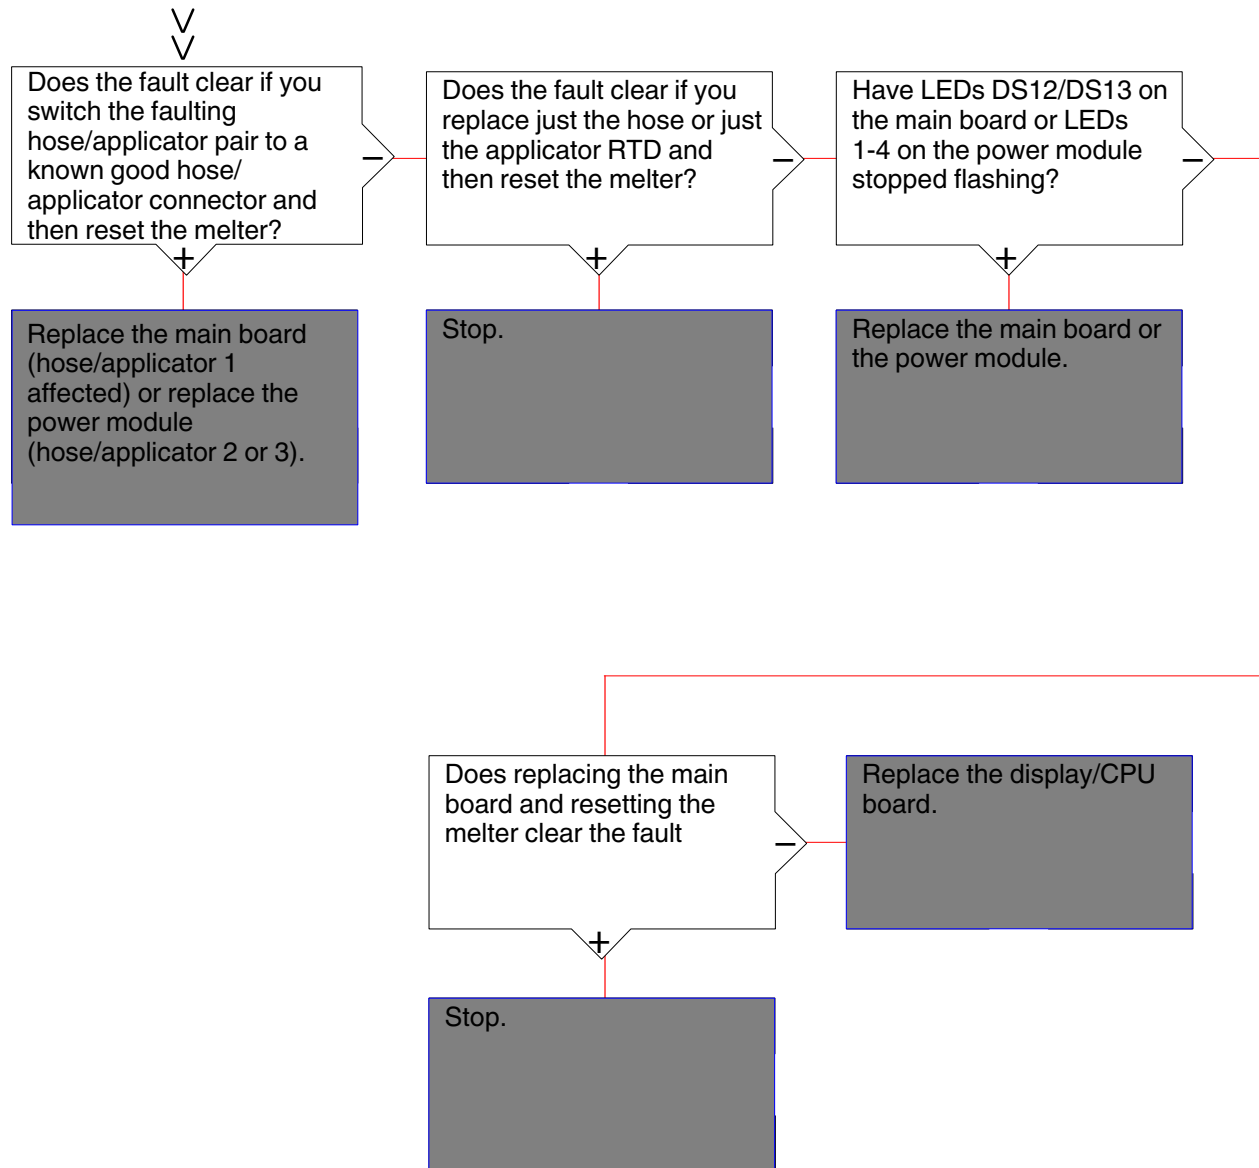


T.2.4

Fault LED is illuminated >


An F3 fault exists on a hose or applicator >

The setpoint temperature was not changed


This page intentionally left blank.

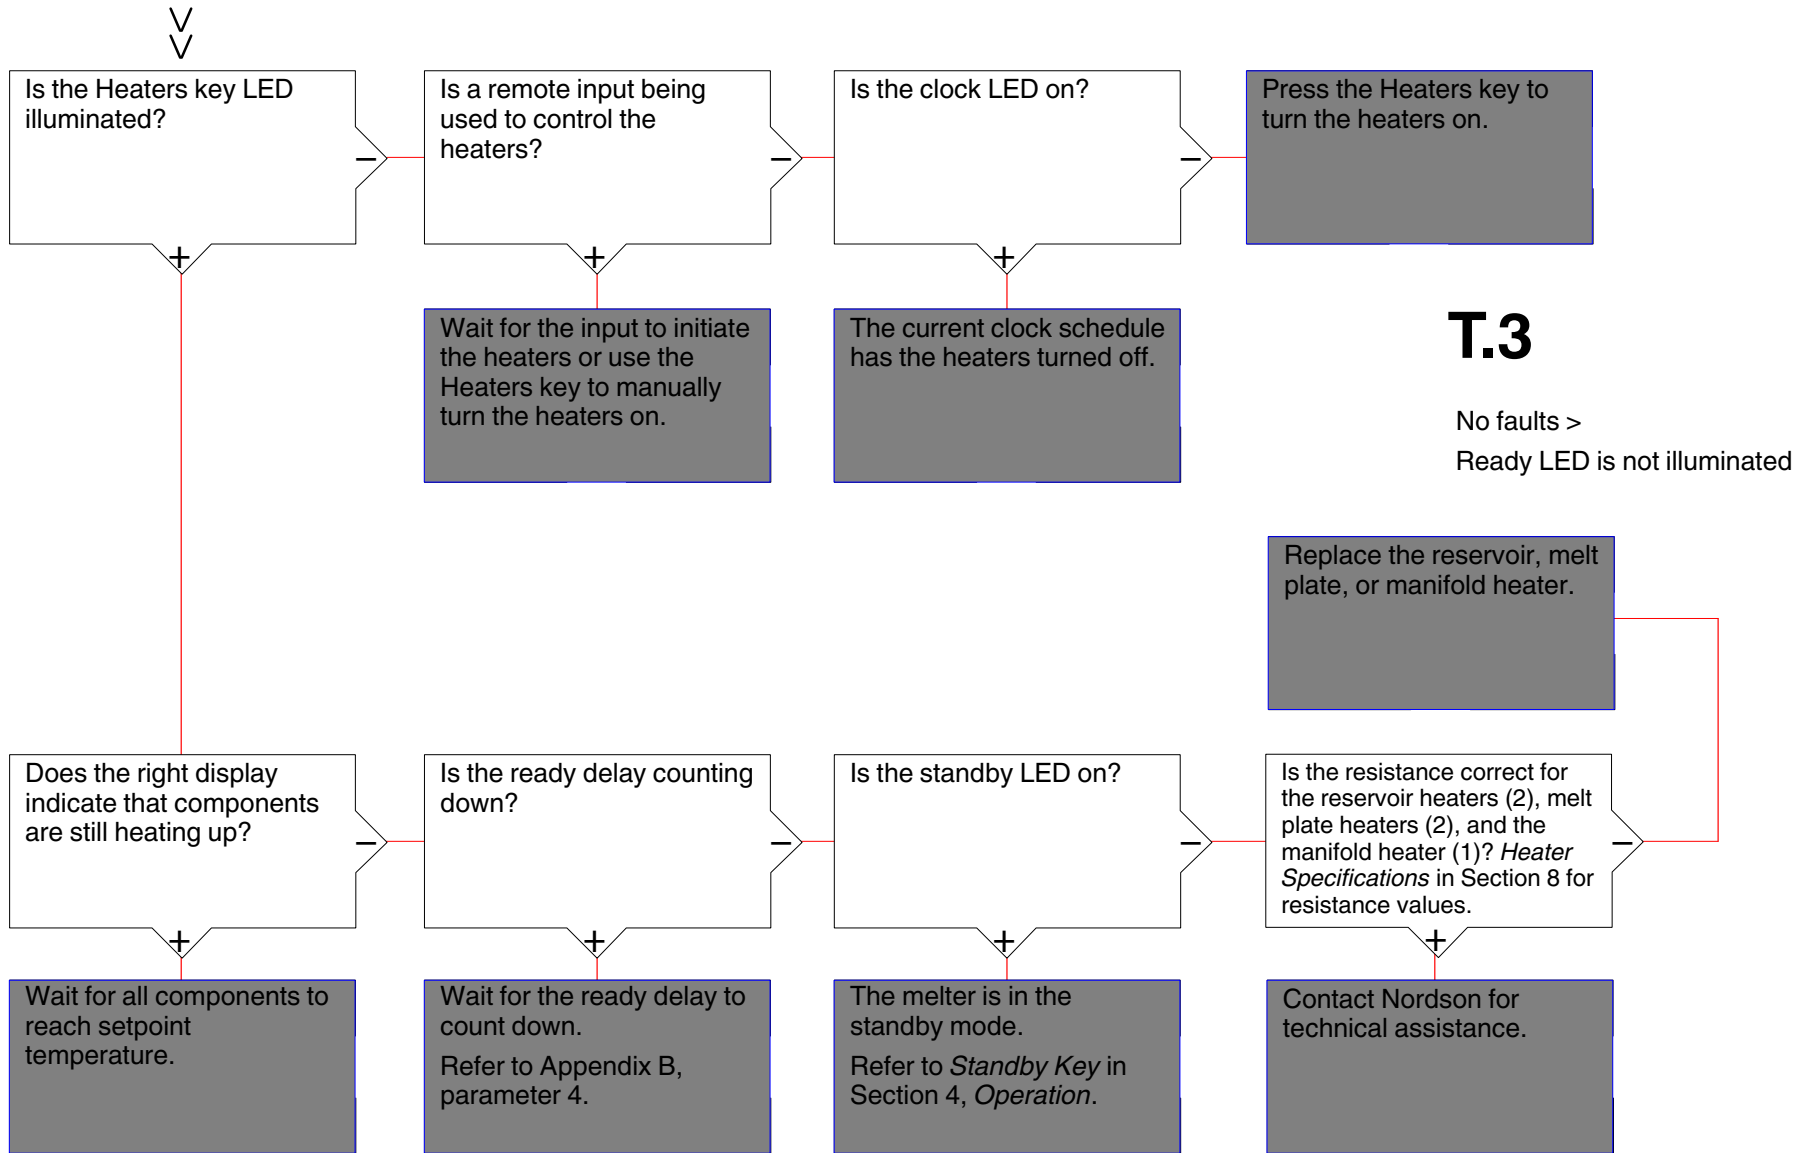

This page intentionally left blank.

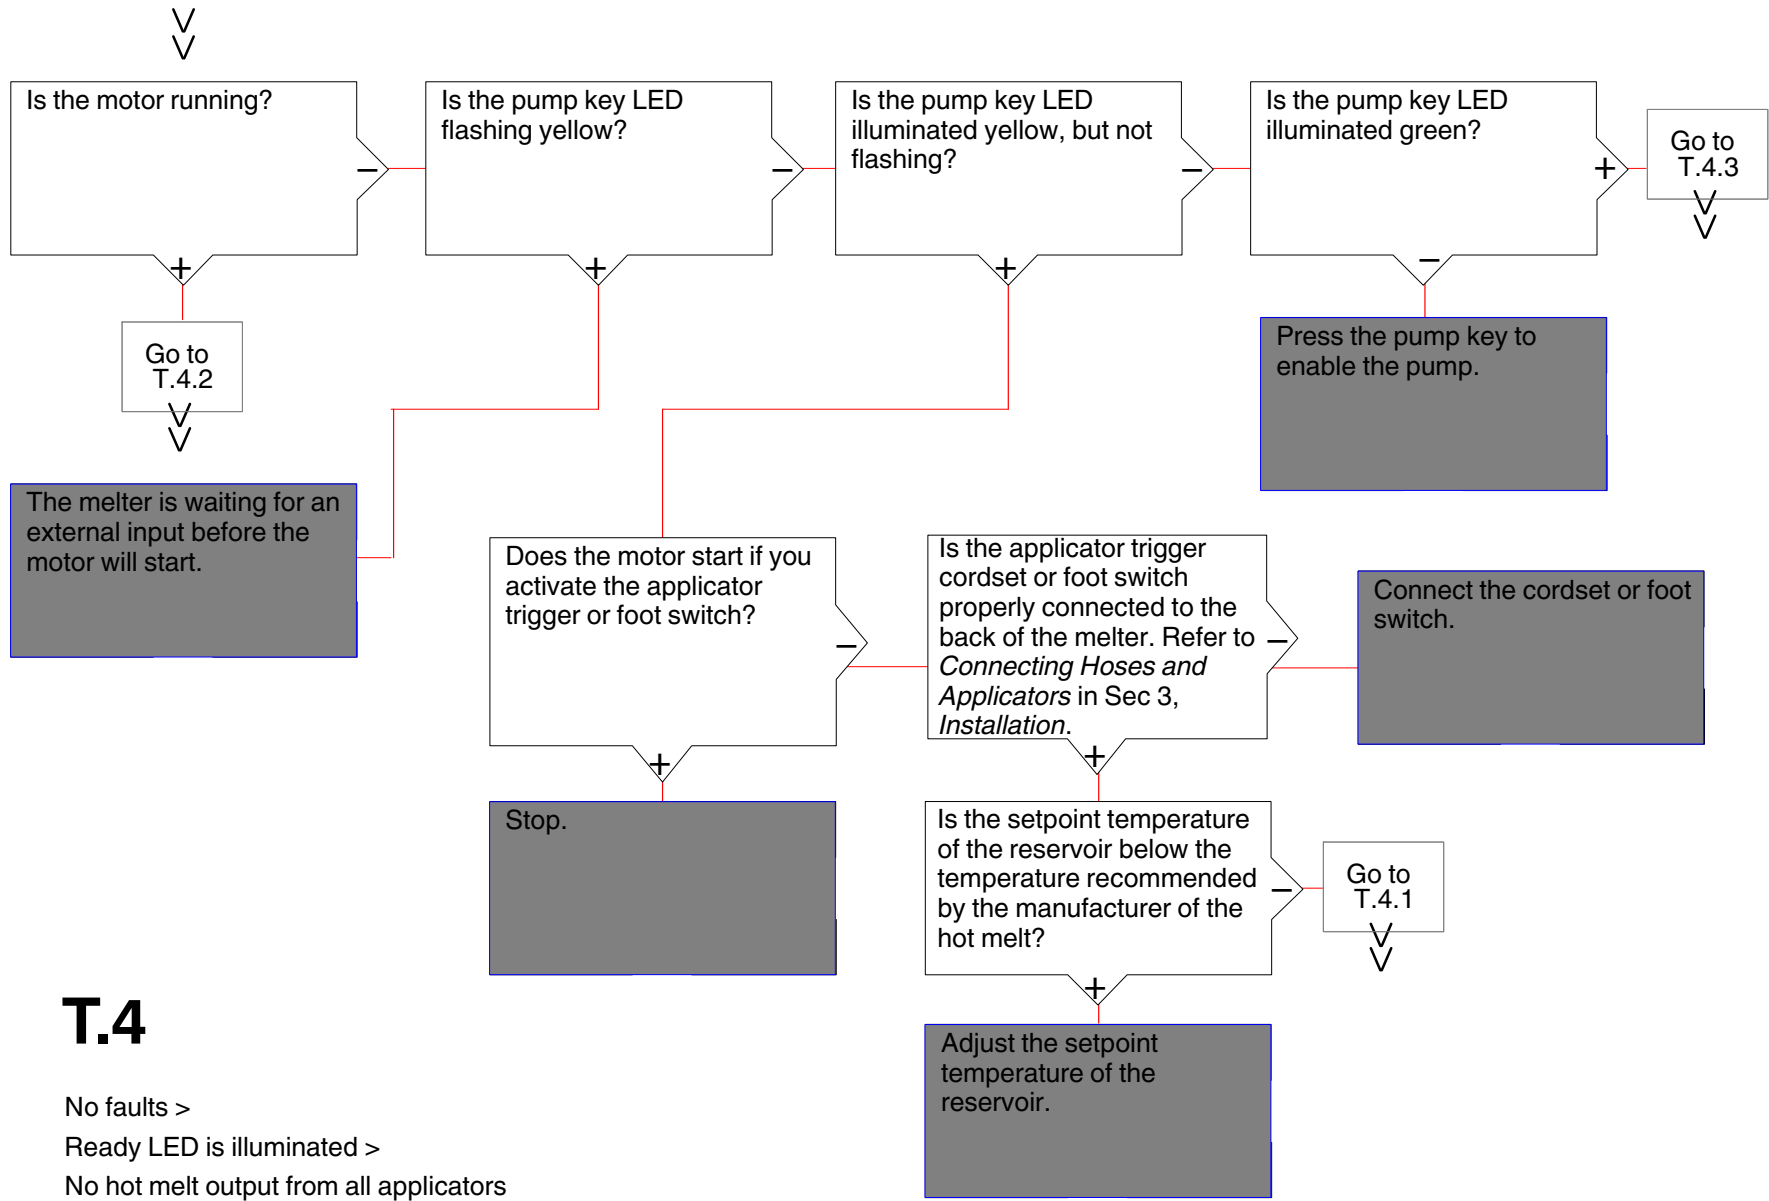

This page intentionally left blank.

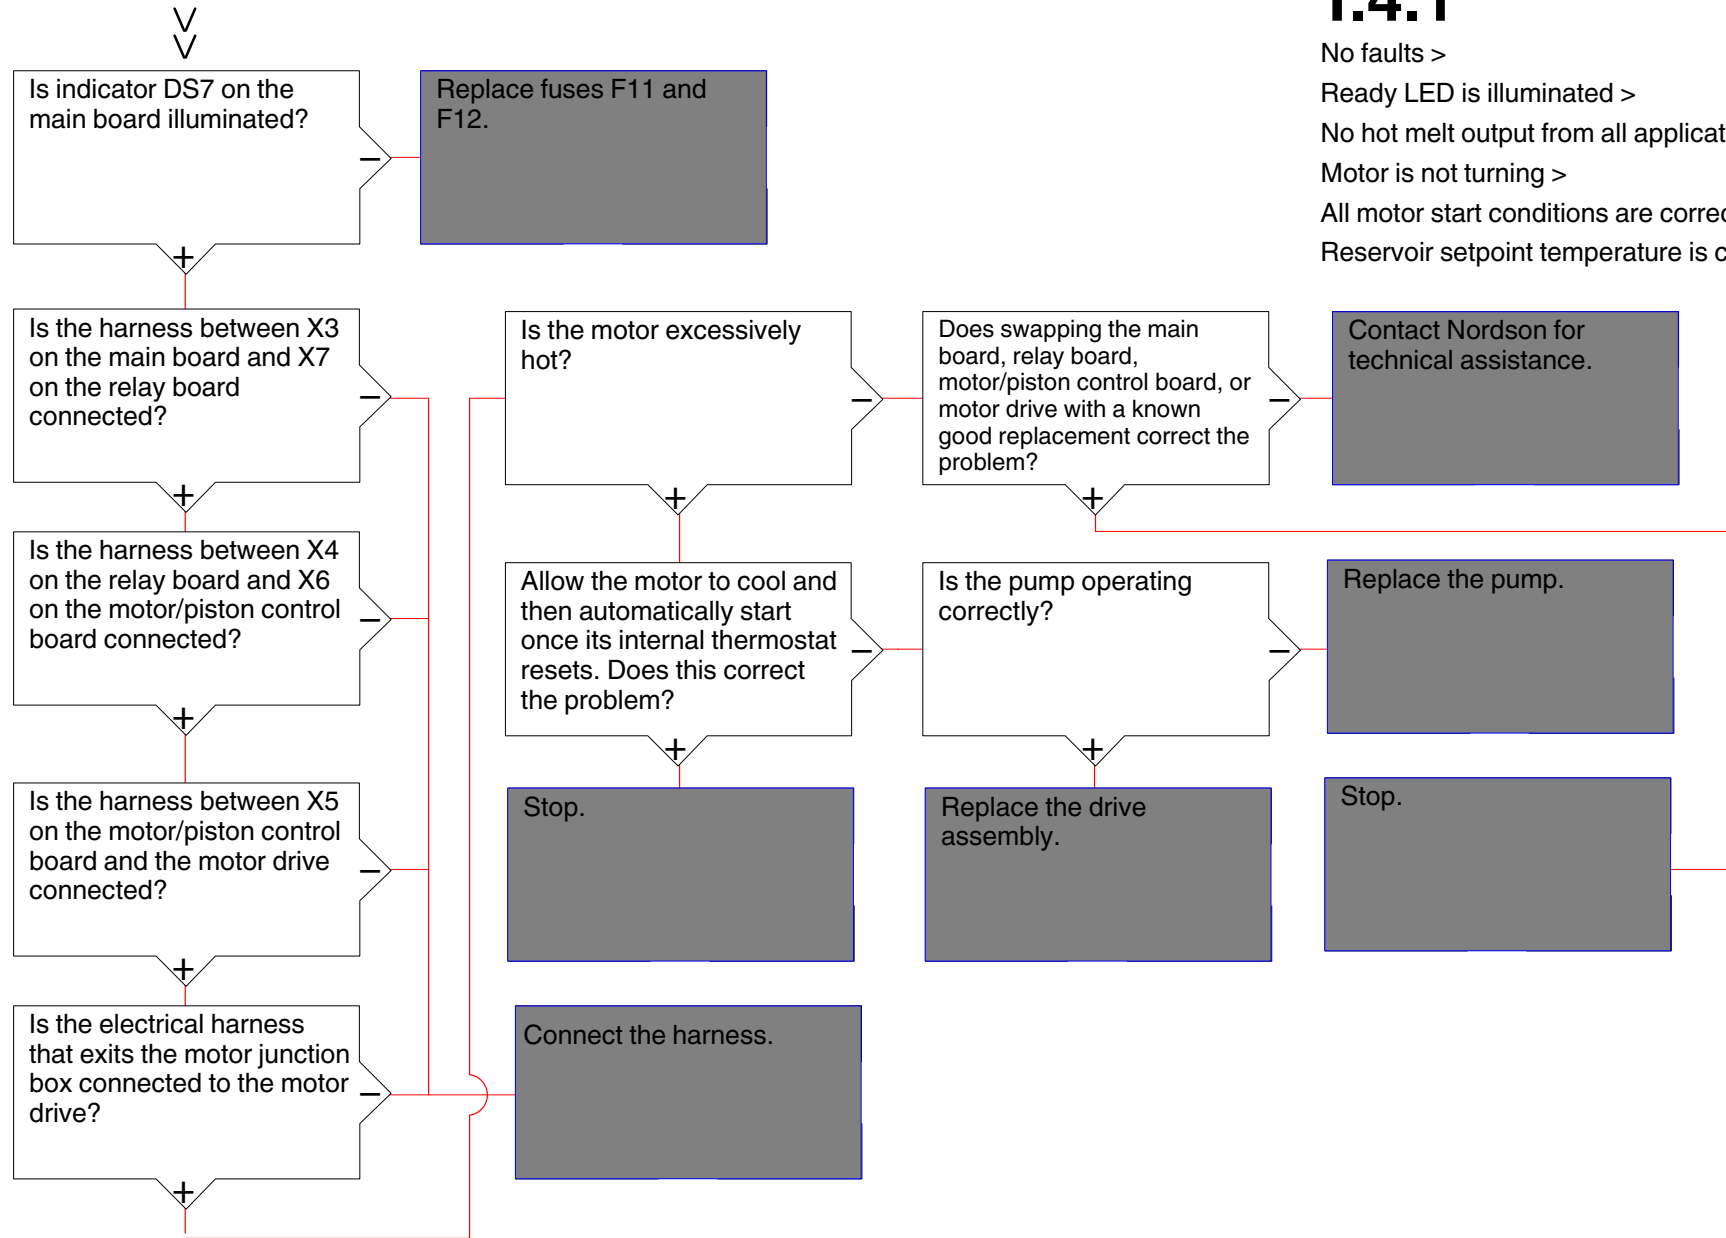

T.4.1

No faults >

Ready LED is illuminated >


No hot melt output from all applicators >

Motor is not turning >

All motor start conditions are correct >

Reservoir setpoint temperature is correct

This page intentionally left blank.

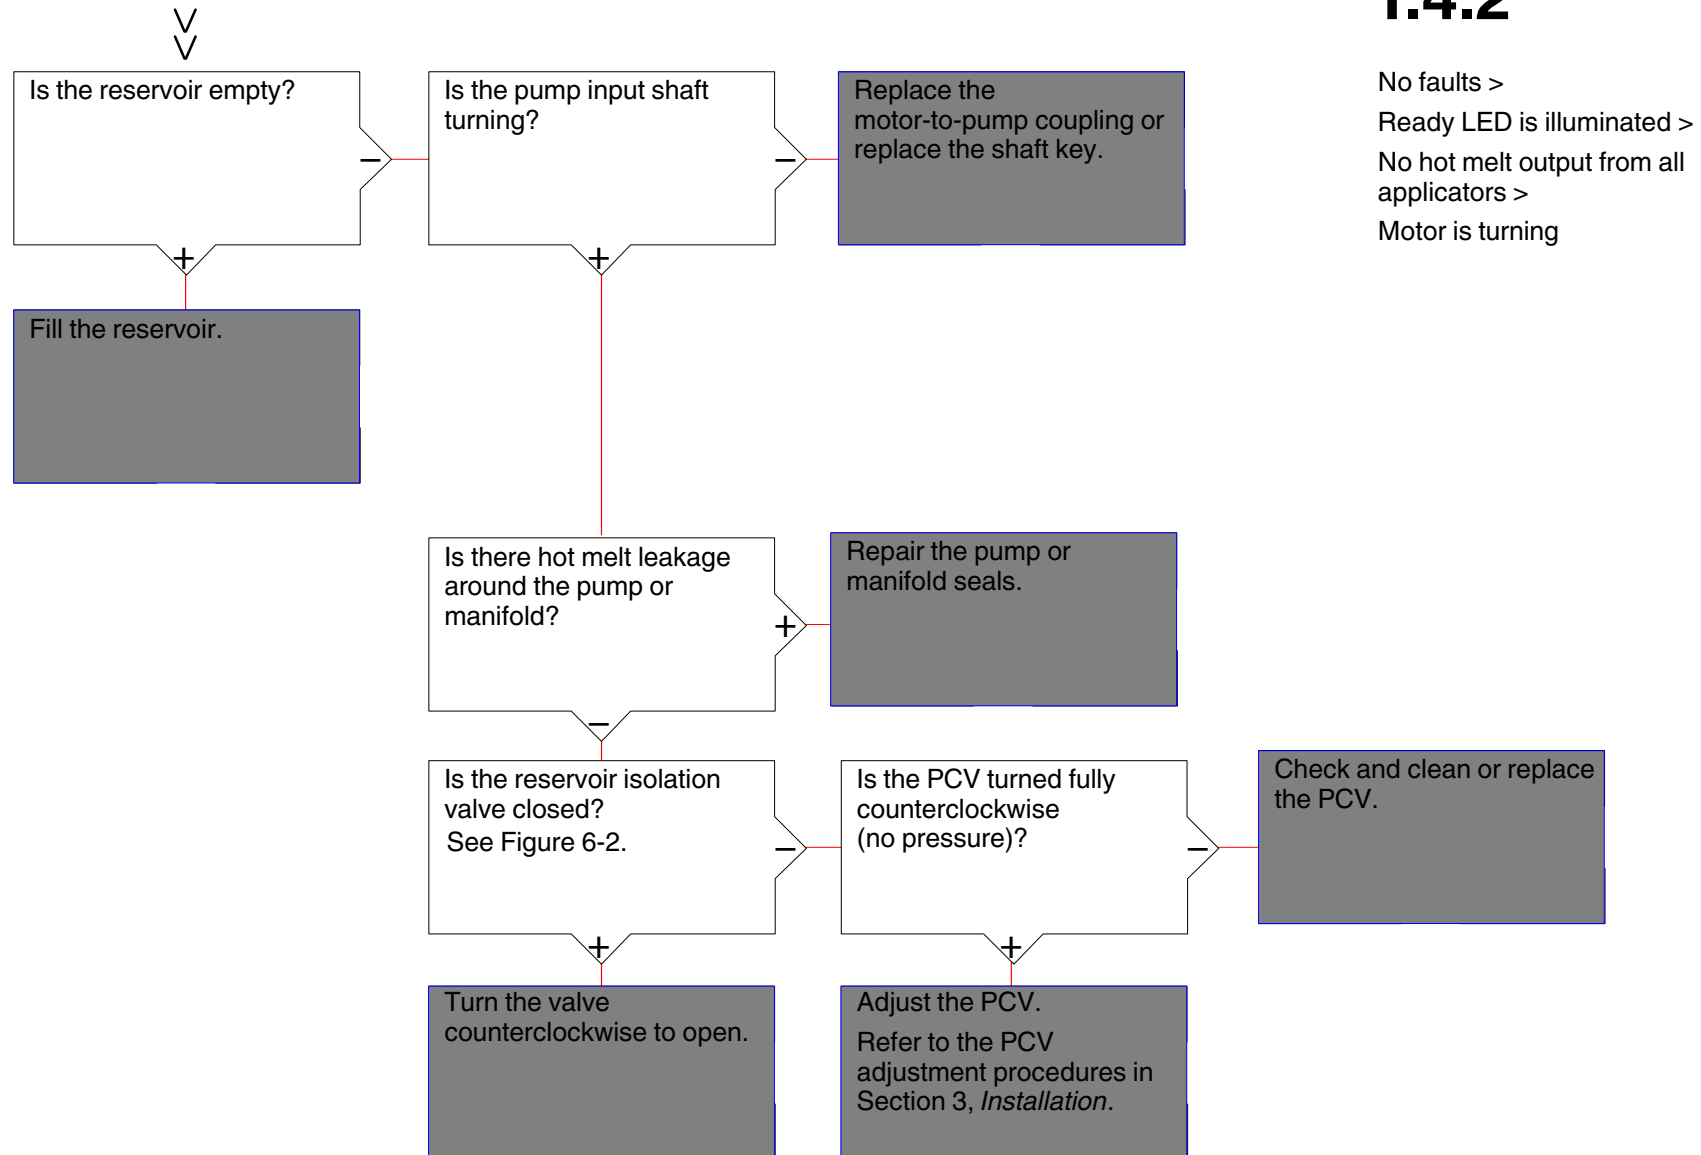


T.4.2

No faults >
 Ready LED is illuminated >
 No hot melt output from all applicators >
 Motor is turning


This page intentionally left blank.

T.4.3

No faults >
Ready LED is illuminated >
No hot melt output from all applicators >
Motor is not turning >
Pump key LED is illuminated green

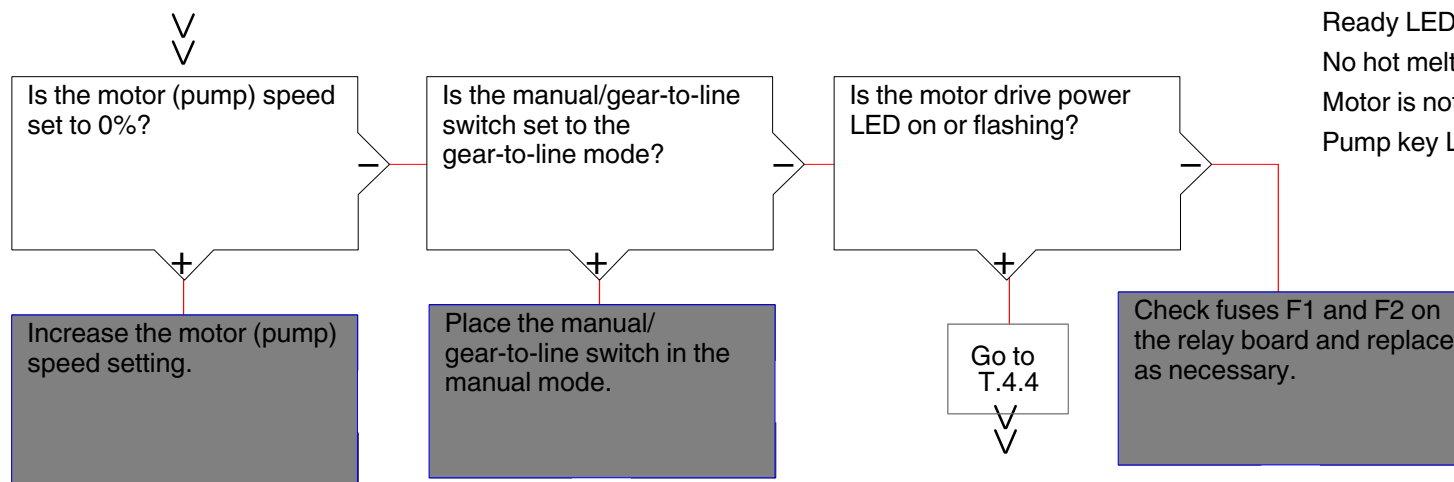


This page intentionally left blank.

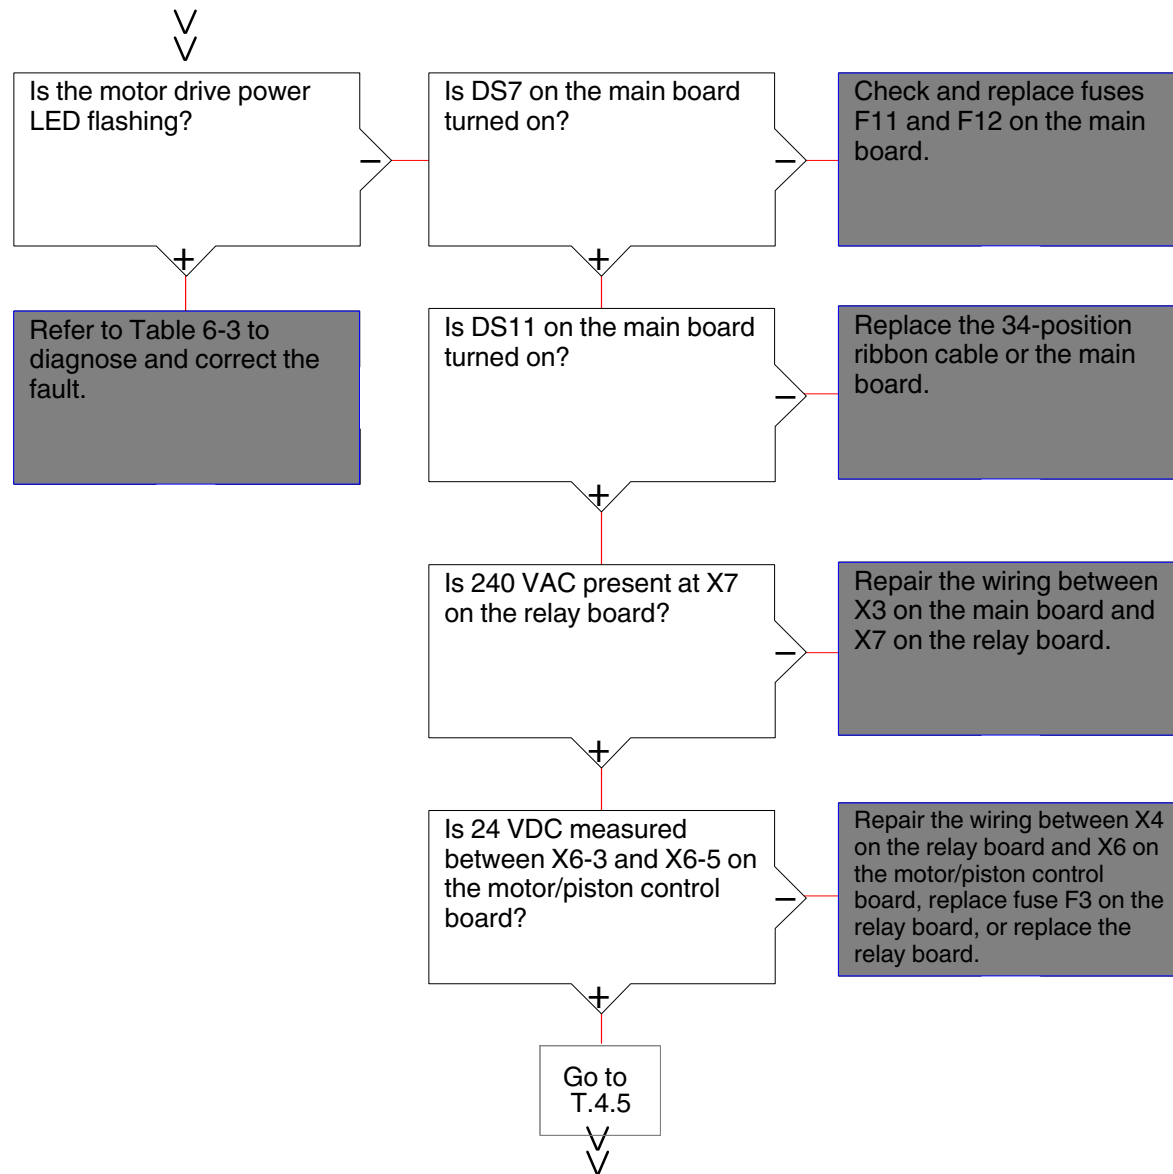

T.4.4

No faults >
 Ready LED is illuminated >
 No hot melt output from all applicators >
 Motor is not turning


This page intentionally left blank.

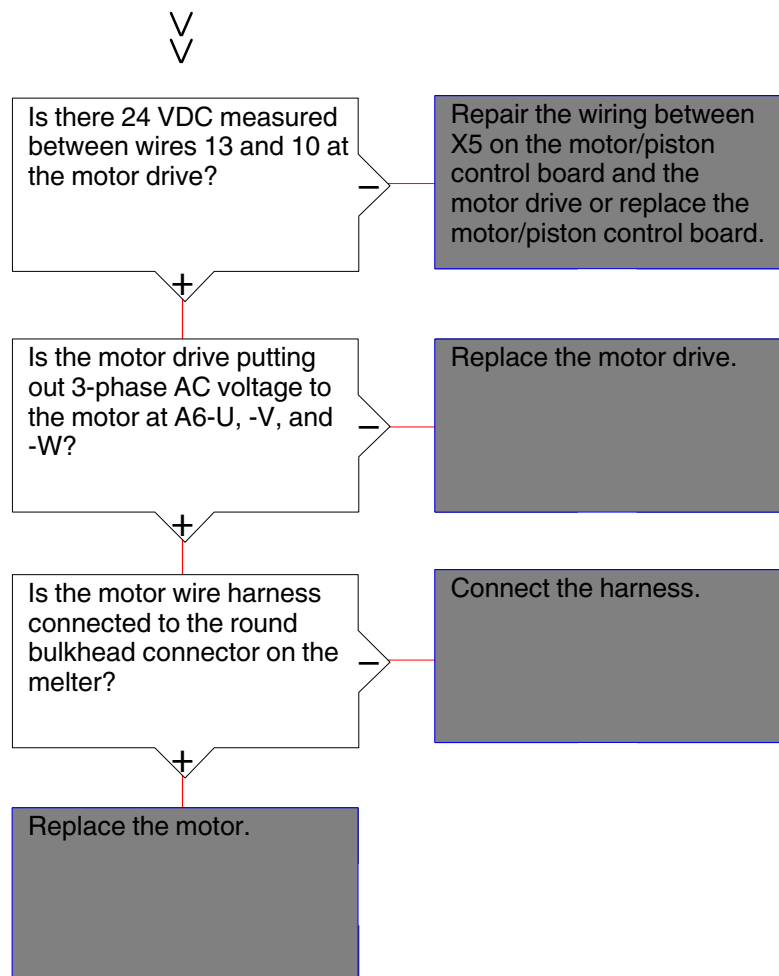

T.4.5

No faults >
Ready LED is illuminated >
No hot melt output from all applicators >
Motor is not turning

This page intentionally left blank.

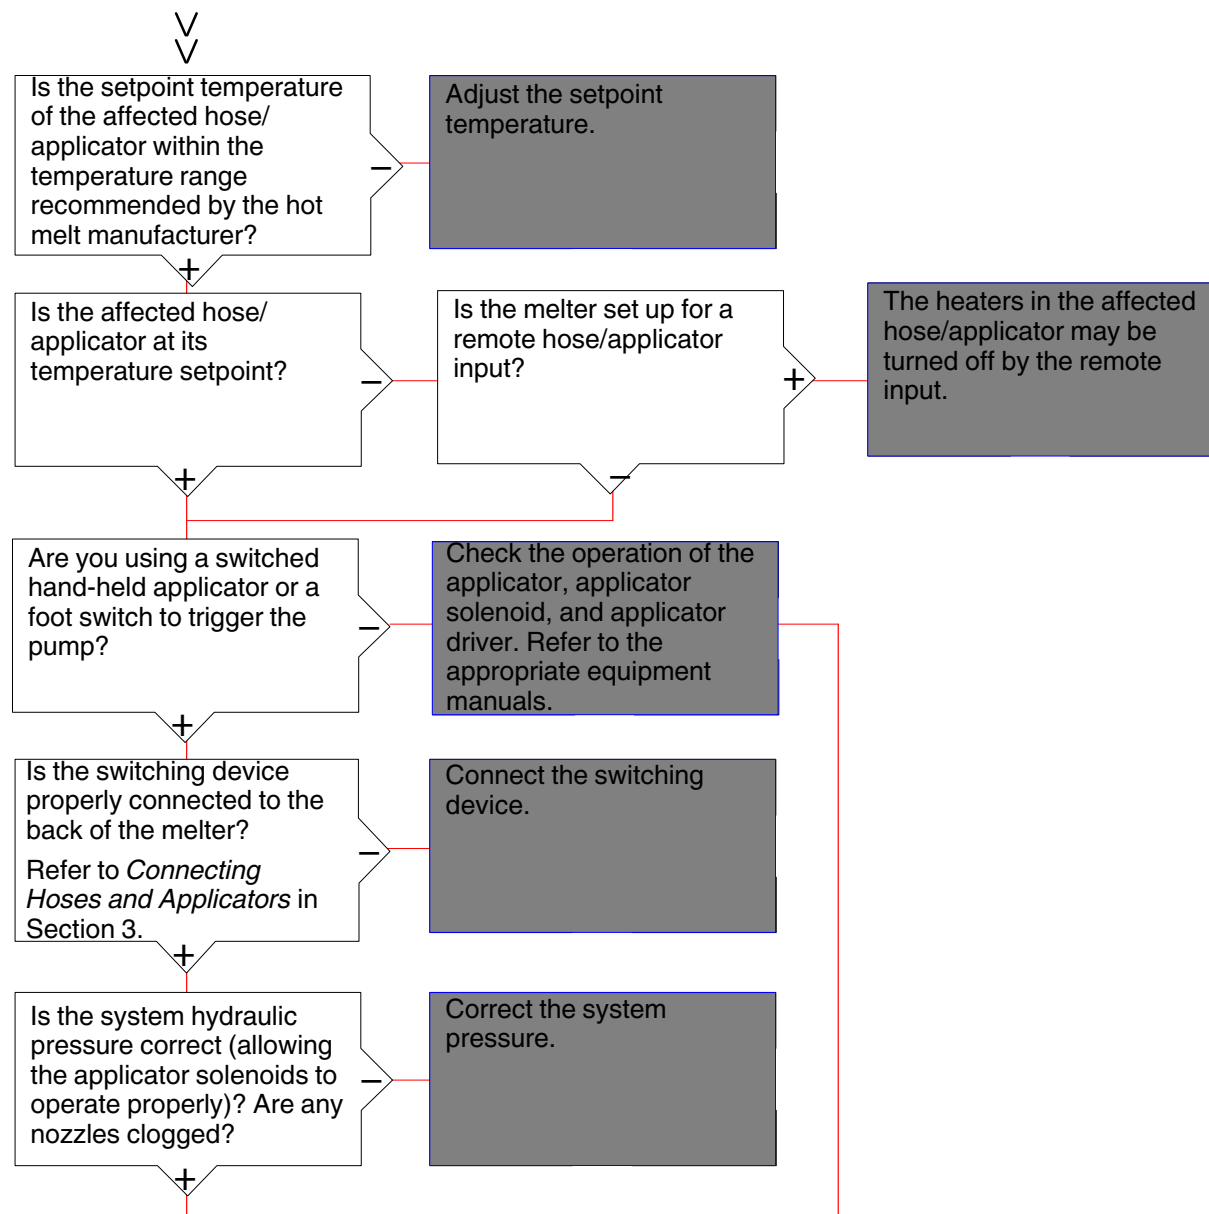

T.5

No faults >

Ready LED is illuminated >

No hot melt output from some applicators

This page intentionally left blank.

Refer to *AltaPUR Troubleshooting Chart T.4.2.*

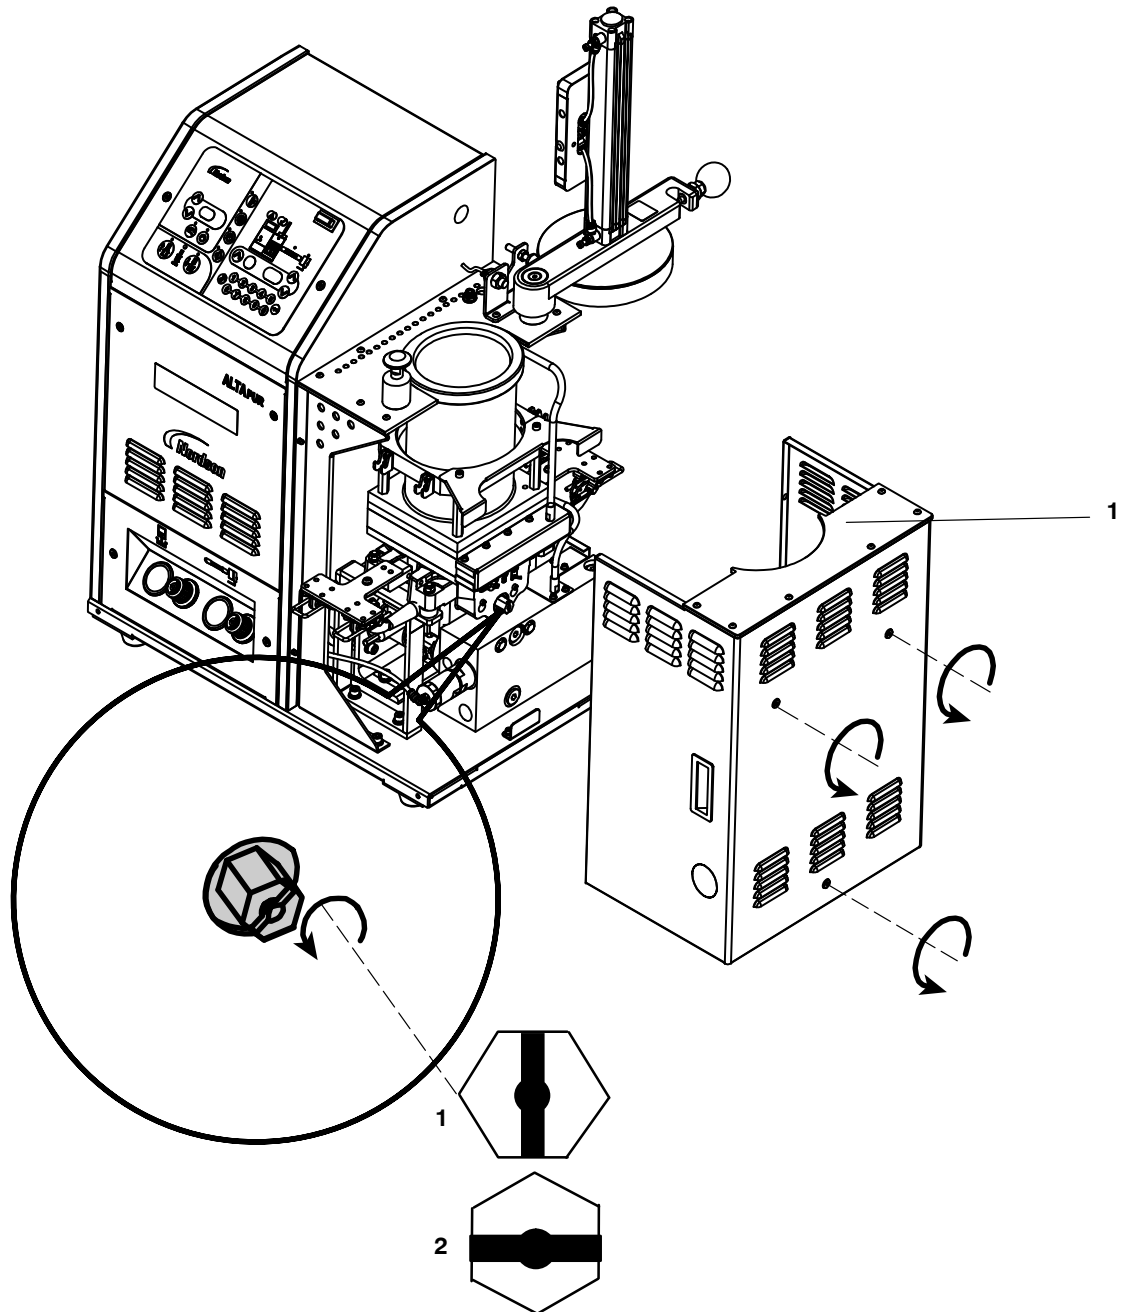


Figure 6-2 Opening the reservoir isolation valve

1. Open

2. Closed

This page intentionally left blank.

Section 7

Parts

Using the Illustrated Parts Lists

To order parts, call the Nordson Customer Service Center or your local Nordson representative. Use these five-column parts lists, and the accompanying illustrations, to describe and locate parts correctly. The following chart provides guidance for reading the parts lists.

The number in the *Item* column corresponds to the circled item number in the parts list illustration. A dash in this column indicates that the item is an assembly.

The number in the *Part* column is the Nordson part number you can use to order the part. A series of dashes indicates that the part is not saleable. In this case, you must order either the assembly in which the part is used or a service kit that includes the part.

The *Description* column describes the part and sometimes includes dimensions or specifications.

The *Note* column contains letters that refer to notes at the bottom of the parts list. These notes provide important information about the part.

The *Quantity* column tells you how many of the part is used to manufacture the assembly shown in the parts list illustration. A dash or AR in this column indicates that the amount of the item required in the assembly is not quantifiable.

Item	Part	Description	Quantity	Note
—	0000000	Assembly A	—	
1	000000	• Part of assembly A	2	A
2	-----	• • Part of item 1	1	
3	0000000	• • • Part of item 2	AR	
NS	000000	• • • • Part of item 3	2	
NOTE A: Important information about item 1				
AR: As Required				
NS: Not Shown				

Melter Part Numbers

See Figure 7-1. You will need to know the configuration of your melter when requesting service or ordering spare parts and optional equipment. The melter part number is stamped on the melter identification plate. Refer to this parts list and to *Melter Configuration Code* in Section 8, *Technical Data*, as needed to determine the configuration of your melter.

NOTE: The following table is not a complete list of melter configurations. As new configurations are ordered, additional melter part numbers will be created. Contact your Nordson representative for information on configuring an AltaPUR melter.

Part Number	Description
7413450	ALTAPUR,134MM,SN0093,MPCV,240V/400V
7413451	ALTAPUR,134MM,SN0371,FCB,240V/400V
7413452	ALTAPUR,134MM HO,SN0371,FCB,240V/400V
7413453	ALTAPUR,134MM HO,SN0371,FCB,I/O,240V/400V
7413454	ALTAPUR,134MM HO,SN0186,FCB,I/O,240/400V
7413455	ALTAPUR,134MM,SN0186,MPCV,240/400V

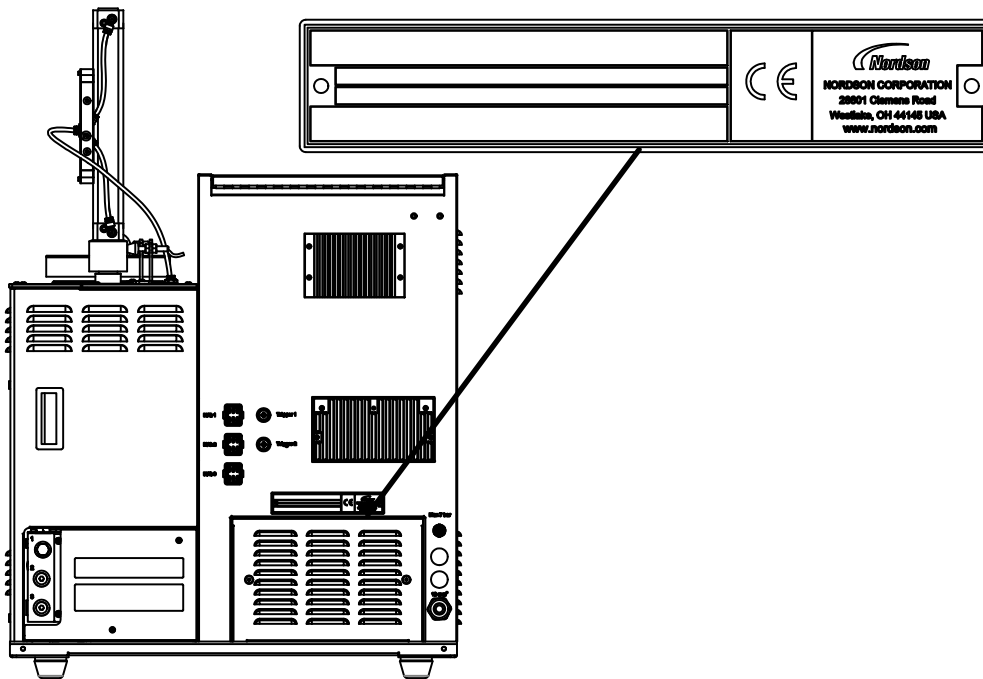


Figure 7-1 Unit identification plate

This page intentionally left blank.

Reservoir/Manifold Assembly Parts

See Figure 7-2.

Item	Part	Description	Quantity	Note
—	-----	MODULE,MANIFOLD,RESERVIOR,ALTAPUR	—	
101	-----	• RESERVOIR ASSY,ALTAPUR	1	A
102	-----	• SPACER,BOTTOM, TANK	4	
103	-----	• BRACKET,RESEVOIR SUPPORT	2	
104	-----	• WASHER,FLT,M,REG,M8,STL,ZN	10	
105	-----	• WASHER,LK,M,SPT,M8,STL,ZN	8	
106	-----	• SCR,SKT,M8X1.25X25,BL	4	
107	-----	• BRACKET, PUMP MANIFOLD, ALTAPUR	1	
108	-----	• PIN,DOWEL,M6X16MM,H&G	2	
109	-----	• MANIFOLD ASSY, PR12M2, ALTAPUR	1	B
110	-----	• SCR,HEX,CAP,M8X90,304 SS,GR A2,CL 70	2	
111	940024	• ORING,-118,VITON,.862X.103,BR	2	
112	-----	• NUT,HEX,M8,STL,ZN	4	
113	-----	• LUBRICANT,NEVER-SEEZ,NSF-H1,FOOD GRADE	1	
114	1120201	• LUBRICANT,O-RING,NSF-H1,10 ML TUBE	1	
NOTE A: Refer to Reservoir Assembly later in this section.				
B: Refer to Manifold Assembly later in this section.				

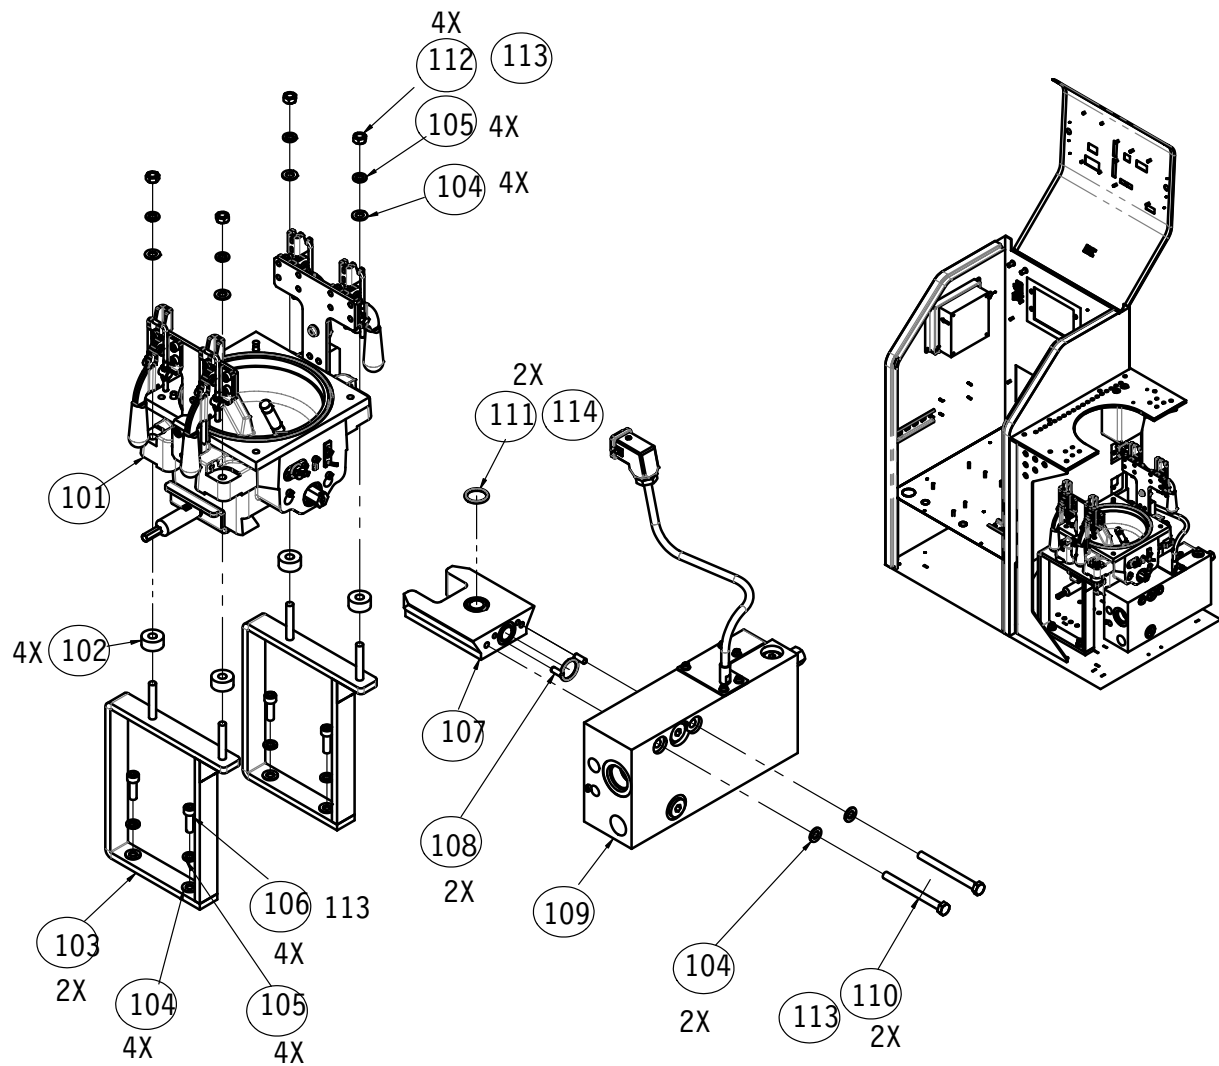


Figure 7-2 Reservoir/manifold assembly parts

Reservoir Assembly Parts

See Figure 7-3.

Item	Part	Description	Quantity	Note
—	-----	RESERVOIR ASSY,ALTAPUR	—	
1	7413327	• CLAMP ASSY, RESERVOIR, ALTAPUR	2	
2	7413328	• INSULATOR ASSY, 154 ID, ALTAPUR	1	
3	-----	• PIN,DOWEL,6MM X 28MM LONG (DIN 6325-M6)	2	
4	-----	• RESERVOIR,MACHINING, ALTAPUR	1	
5	-----	• DRIVE BLOCK ASSY,ALTAPUR	1	
6	-----	• WASHER,LK,M,SPT,M6,STL,ZN	2	
7	-----	• SCR,SKT,M6X16,ZN	2	
8	250253	• O-RING 12x2 VITON	1	A
9	-----	• LEVEL CONTROL SENSOR 2 POINT, L128	1	A
10	1021670	• VALVE,SHUTOFF,TANK	1	B
11	-----	• RETAINING RING,INT,112,BASIC	1	
12	-----	• SCR,SKT,M4X10MM,BL	8	
13	-----	• PLATE, CAPTURE, RTD	3	
14	7413421	• HARNESS,RESERVOIR RTD&TSTAT, ALTAPUR	1	D
15	940201	• O RING,VITON, .875X1.000X.063	1	B
16	1024618	• THERMOSTAT,OOR,500DEG F, PUSH-ON TERM	1	C
17	-----	• PIN,DOWEL,6MM X 60MM LONG (DIN 6325-M6)	2	
18	-----	• SCR,SET,CUP,M5X5,BL	2	
19	-----	• LUBRICANT,NEVER-SEEZ,NSF-H1,FOOD GRADE	1	
20	1120201	• LUBRICANT,O-RING,NSF-H1,10 ML TUBE	1	
21	900298	• COMPOUND,HEAT SINK,5 OZ TUBE,11281	1	C
22	7413492	• KIT,SVCE,HEATER,200V,425W, .50DIA X6.38LG	AR	
	7413493	• KIT,SVCE,HEATER,240V,425W, .50DIA X6.38LG	AR	
<p>NOTE A: To replace level control sensor, order service kit 7413477. This kit includes item 8.</p> <p>B: To replace shutoff valve, check these related parts recommended and noted before order.</p> <p>C: Check these related parts recommended and noted before order.</p> <p>D: Harness 7413421 does not have thermostat (item 16) included.</p> <p>AR: As Required</p>				

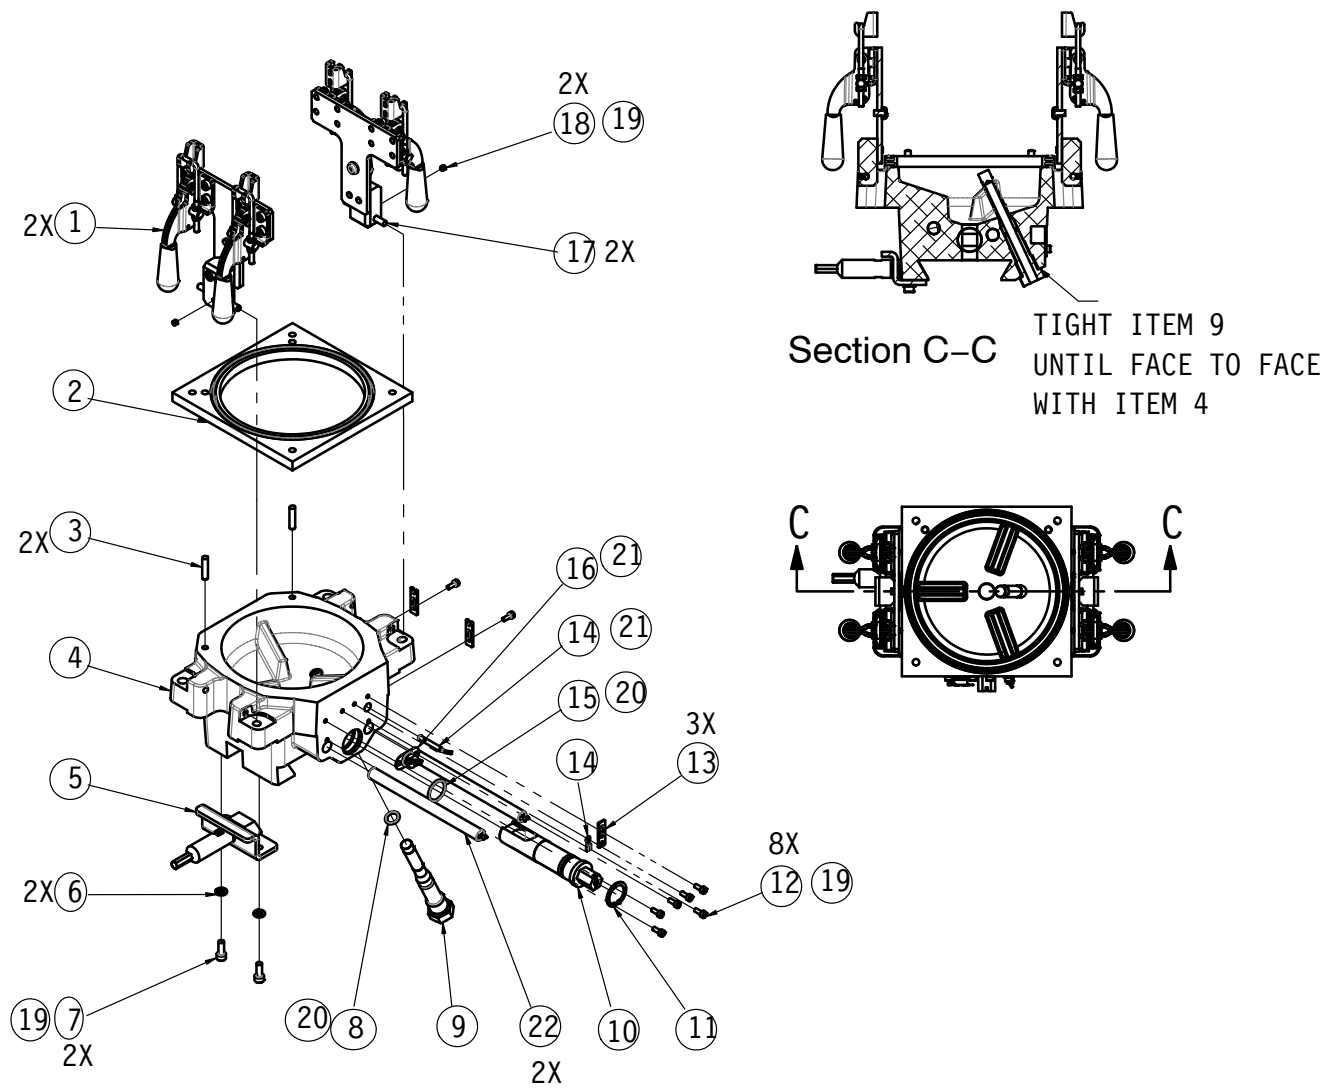


Figure 7-3 Reservoir assembly parts

Manifold Assembly Parts

See Figure 7-4.

Item	Part	Description	Quantity	Note
—	-----	MANIFOLD ASSY, ALTAPUR	—	A
1	-----	• MANIFOLD,3 HOSE,ALTAPUR	1	
2	-----	• PLUG,O RING,STR THD,3/4-16,STL	2	
3	-----	• NUT,PANEL MOUNTING	1	
4	-----	• PLUG,O RING,STR THD,9/16-18	5	
5	-----	• PLUG,O RING,STR THD,5/16-24	2	
6	-----	• WASHER,LK,M,EXT,M10,ZN	1	
7	7413385	• MANIFOLD CORDSET,WITH RTD,ALTAPUR	1	
8	-----	• COVER,ELEC,MANIFOLD	1	
9	-----	• WASHER,FLT,M,NARROW,M4,STL,ZN	9	
10	-----	• SCR,SKT,M4X10MM,BL	9	
11	972657	• CONN W/O RING,HOSE,9/16-18	1	
12	-----	• CONNECTOR,PLASTIC,2 STA.	1	
13	-----	• CAP,TUBE,37,9/16-18,STL,ZN	1	
14	-----	• LUBRICANT,NEVER-SEEZ,NSF-H1,FOOD GRADE	1	
15	-----	• LUBRICANT,O-RING,NSF-H1,FOOD GRADE,4L	1	
16	900298	• COMPOUND,HEAT SINK,5 OZ TUBE,11281 KIT,SVCE,HEATER,200V,600W,.496DIAx8.5LG	1	
17	7413490	• KIT,SVCE,HEATER,200V,600W,.496DIAx8.5LG	1	
	7413491	• KIT,SVCE,HEATER,240V,600W,.496DIAx8.5LG	1	
18	1120104	• KIT,SERVICE,PCV,1100 PSI,DURA_ALTA_DRUM	1	B
	7411877	• RUN UP PCV,1100PSI, DURABLU,PA	1	B
<p>NOTE A: To replace this manifold, order service kit 7413478 (200V melters) or 7413479 (240V melters). PCV (Item 18) is not include in these manifold kits.</p> <p>B: To order this part, refer to Manual PCV and Cylinder Pressure Control Assembly Parts, Automatic Pressure Control and Cylinder Pressure Control Assembly Parts, and Flow Control Bypass and Cylinder Pressure Control Assembly Parts later in this section.</p>				

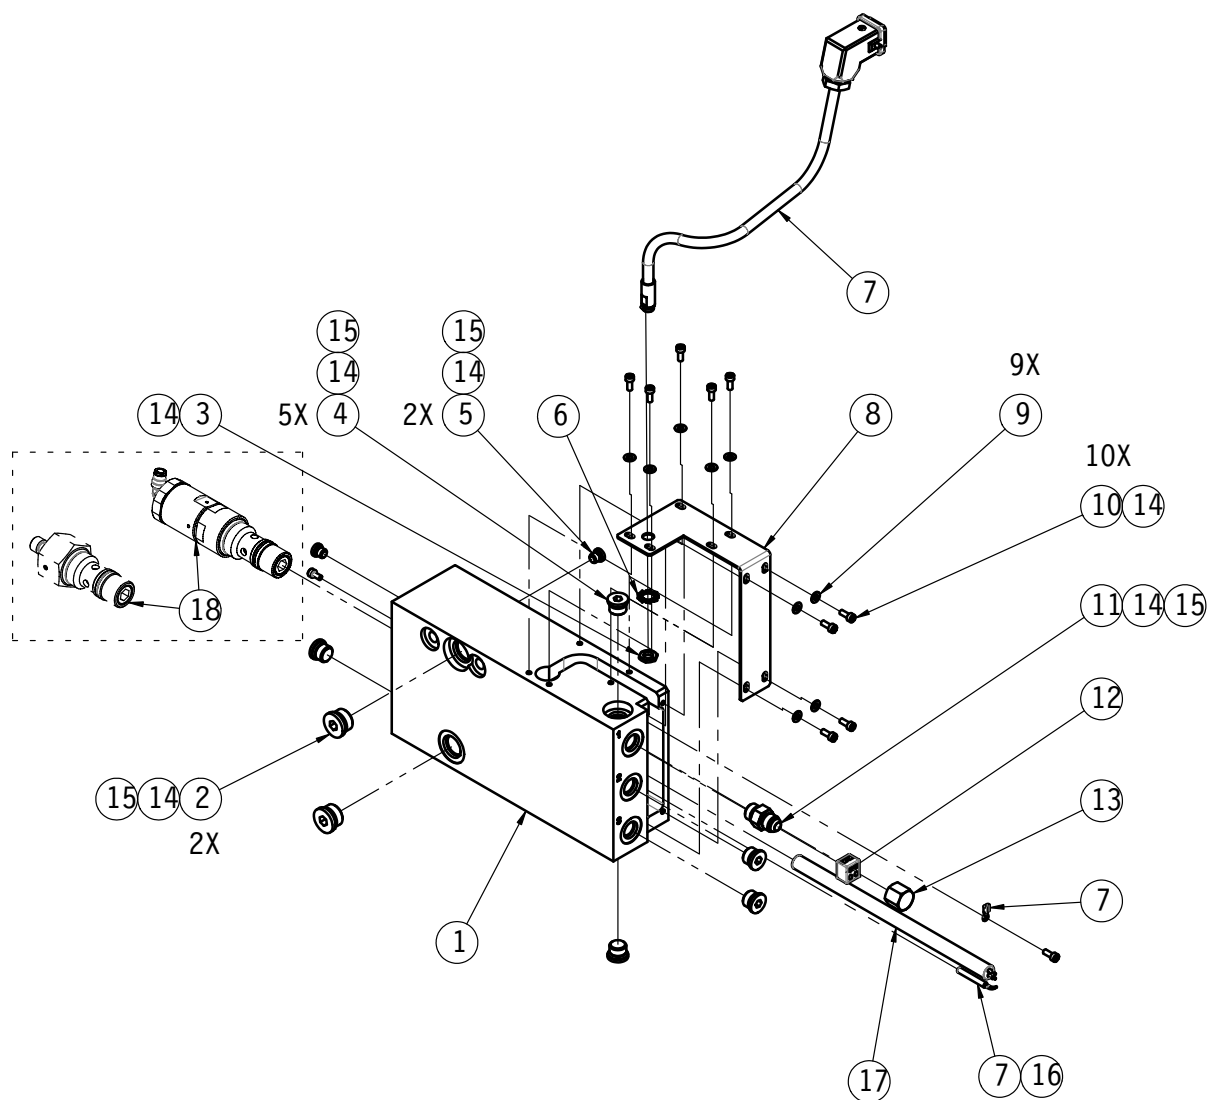


Figure 7-4 Manifold assembly parts

Pivot Lid/Plunger 154/Hopper (154) Assembly Parts

See Figure 7-5.

Item	Part	Description	Quantity	Note
—	-----	MODULE, HOPPER, SLUG, D154, ALTAPUR	—	
201	-----	• LID ASSY, W/CYLINDER&SENSOR, ALTAPUR	1	A
202	-----	• PLUNGER ASSY, 152MM, ALTAPUR	1	B
203	-----	• HOPPER ASSY, D154MM, ALTAPUR	1	B

NOTE A: Refer to Pivot Lid Assembly later in this section.

B: Cooperate use of plunger and hopper. Refer to Plunger Assembly and Hopper Assembly later in this section.

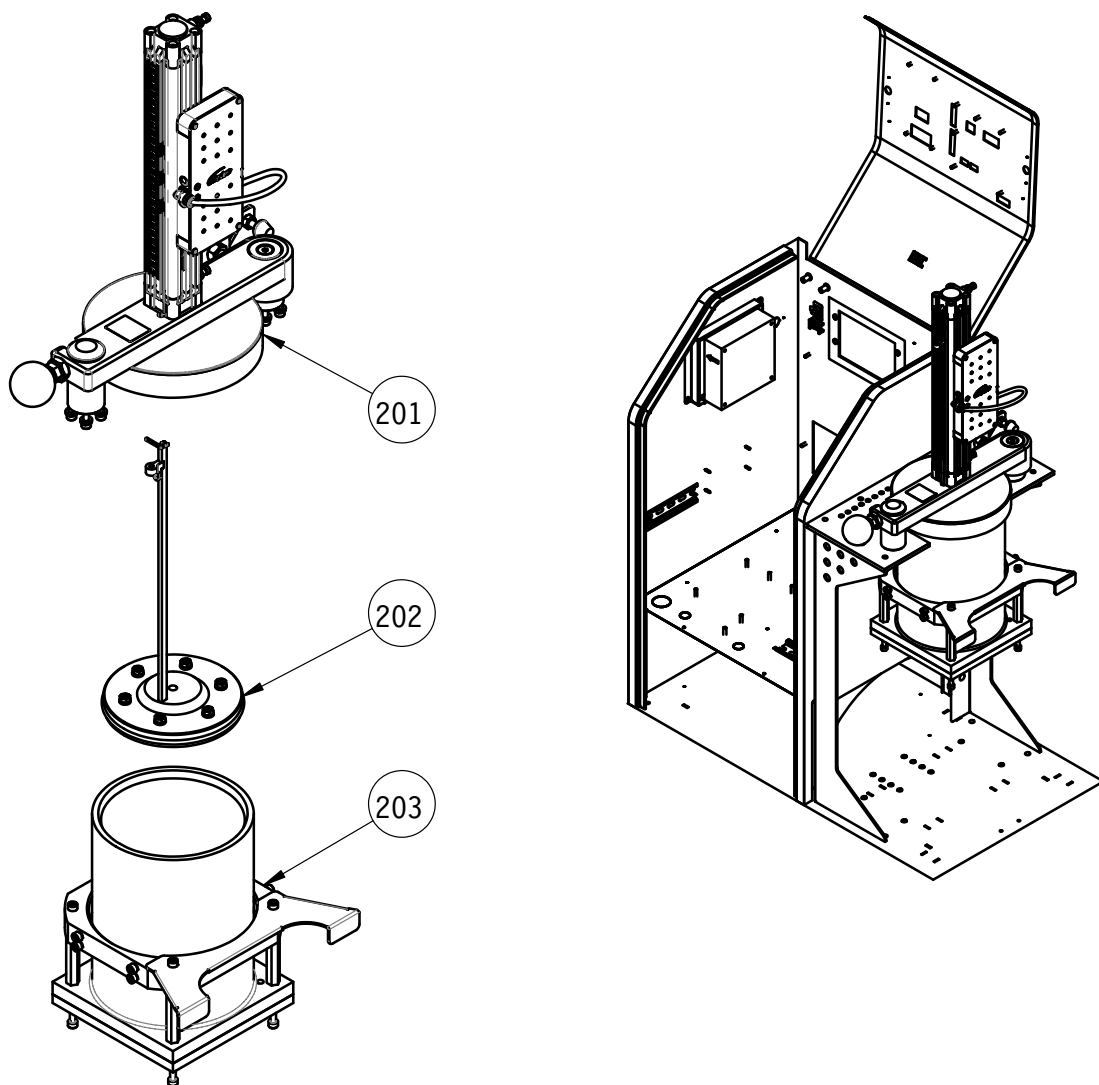


Figure 7-5 Pivot lid/plunger 154/hopper (154) assembly parts

This page intentionally left blank.

Pivot Lid Assembly Parts

See Figure 7-6.

Item	Part	Description	Quantity	Note
—	-----	LID ASSY,W/CYLINDER&SENSOR,ALTAPUR	—	
1	-----	• CYLINDER,W/SOLENOID,ALTAPUR	1	A
2	-----	• INDICATOR SCALE,ADH-BACKED,19X275	1	A
3	-----	• TAG,WARNING,CRUSH HAZARD,ISO 1159	1	
4	-----	• FIXING BOLT ASSY,BALL HANDLE,M16-M8	1	
5	-----	• HANDLE,BALL,48MM DIA X M8 THREAD	1	
6	-----	• PRESSURE SCREW,M8X63	1	
7	7413333	• PROXSENSOR,INDUCTIVE,3MM,M12, W-CABLE	1	
8	-----	• BRACKET,SENSOR,ALTAPUR	1	
9	-----	• SLEEVING,SPIRAL WRAP,BLK,8MM O.D.	0.45	
10	-----	• STANDOFF,STOP,SWING LATCH,ALTAPUR	1	
11	-----	• WASHER,LK,M,SPT,M6,STL,ZN	8	
12	-----	• SCR,SKT,M6X20,BL	8	
13	-----	• WASHER,FLT,M,REG,M6,STL,ZN	8	
14	-----	• BASE,PIVOT,SWING LATCH,ALTAPUR	1	
15	-----	• SCR,BTN,SKT,M5X10,BL	6	
16	-----	• COVER,PLUNGER PLATE,ALTAPUR	1	
17	-----	• SCR,SKT,M6X25,BL	4	
18	-----	• LATCH,SWING,LID,ALTAPUR	1	
19	-----	• WASHER, COUNTERSUNK, M8, D35	1	
20	-----	• FLAT HEAD SCREW M8x20 DIN7991	1	
21	-----	• COVER ASSY,SOLENOID VALVE,ALTAPUR	1	A
22	-----	• TUBING,PFA,6MM ODX 1 MM WALL	1.7	
NS	-----	• CABLETIE,3.9 IN,185F/85C,NYLON,NATURAL	1	
24	-----	• LUBRICANT,NEVER-SEEZ,NSF-H1, FOOD GRADE	1	
25	-----	• ADHESIVE,LOCTITE 272,RED,HI TEMP,50ML	1	
NOTE A: To replace these parts, order service kit 7413480. This kit includes solenoid cable, item 2 and item 21.				

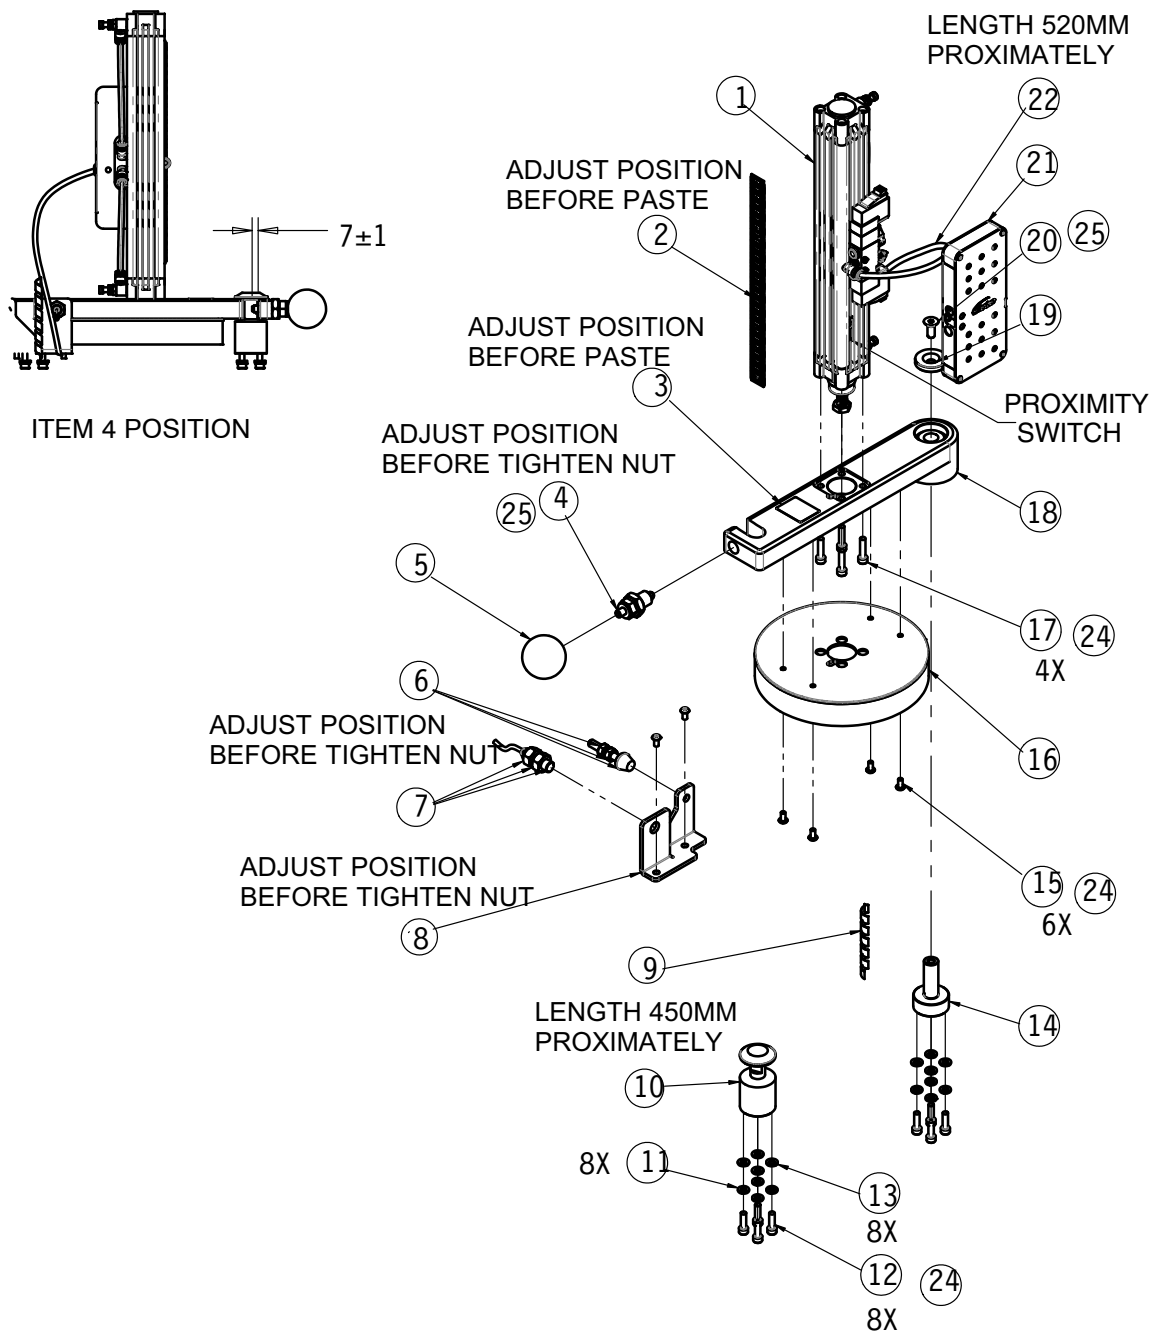


Figure 7-6 Pivot lid assembly parts

Plunger Assembly Parts

See Figure 7-7.

Item	Part	Description	Quantity	Note
—	-----	PLUNGER ASSY,152MM,ALTAPUR	—	
1	-----	• PLATE,PLUNGER,152MM,ALTAPUR	1	
2	-----	• ROD,LEVEL INDICATE,ALTAPUR	1	
3	-----	• BLOCK,LIFT HOOK,ALTAPUR	1	
4	-----	• SCR,BTN,SKT,M3 X 0.5 X 10,ZN	1	
5	7413441	• O-RING,-357,PTFE,5.475DX.21W	1	A
6	7413148	• DISK,ORING RETAINER,152MM PLUNGER	1	A
7	-----	• WASHER,LK,M,SPT,M6,STL,ZN	6	
8	-----	• NUT,HEX,M6,STL,ZN	6	
9	-----	• POINTER,LEVEL INDICATE,ALTAPUR	1	
10	-----	• SCREW,FLAT HEAD PHLLIPS,M2-8,SST	2	
11	-----	• LUBRICANT,NEVER-SEEZ,NSF-H1, FOOD GRADE	1	
NOTE A: Check these related parts recommended and noted before order.				

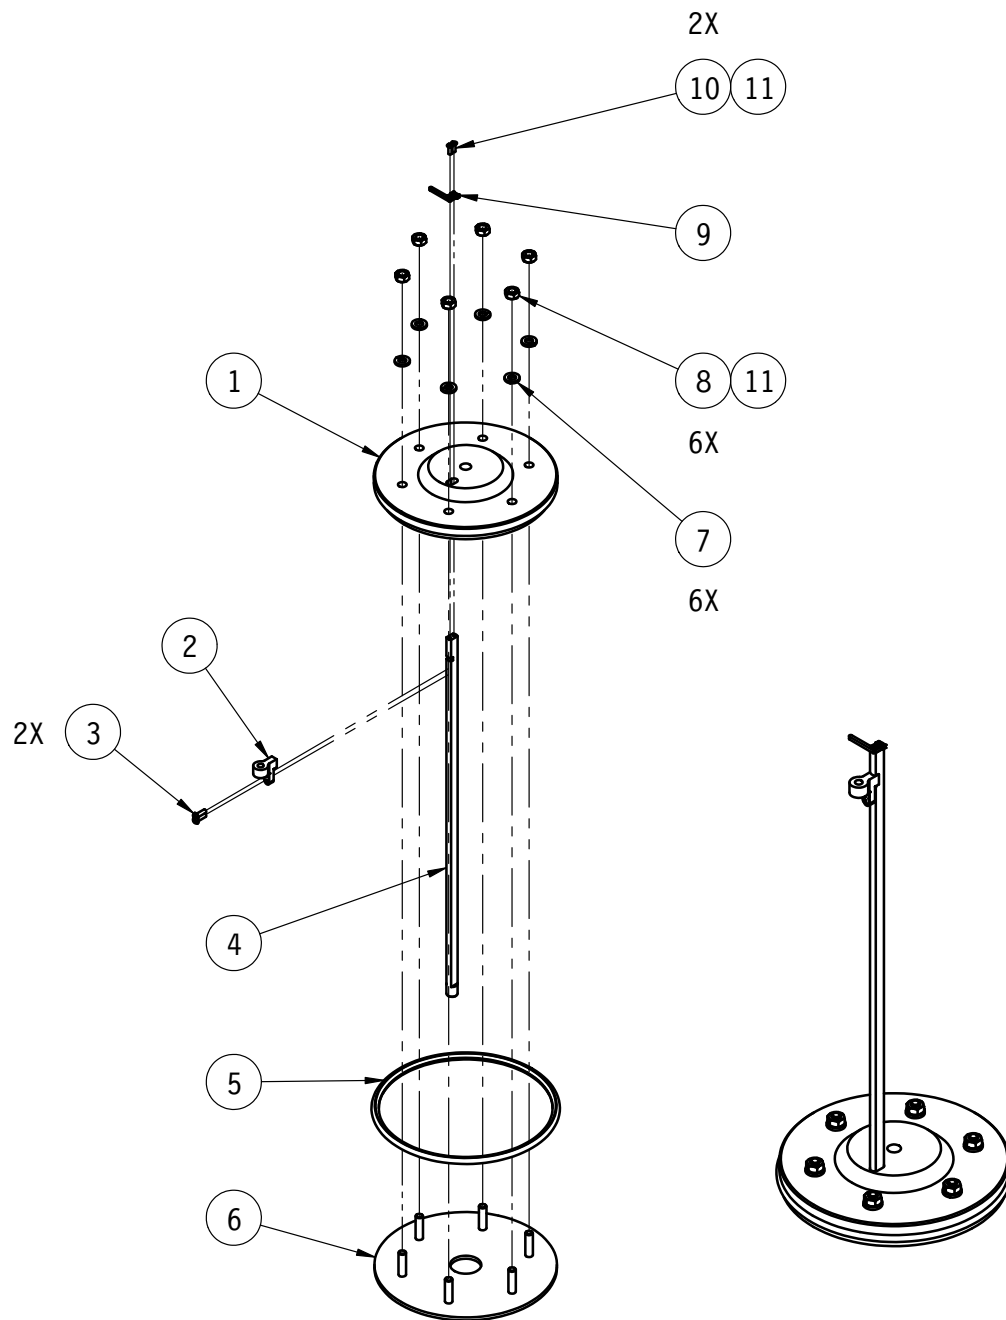


Figure 7-7 Plunger assembly parts

Hopper (154) Assembly Parts

See Figure 7-8.

Item	Part	Description	Quantity	Note
—	-----	HOPPER ASSY, D154MM,ALTAPUR	—	
1	-----	• HOPPER, MACHINING, 152 ID, ALTAPUR	1	
2	7413328	• INSULATOR ASSY, 154 ID, ALTAPUR	1	
3	-----	• SCR,SKT,M6X60,BL	4	
4	-----	• STAND-OFF, HEX10, M6X70	4	
6	-----	• BLOCK, CLAMP, HOPPER, ALTAPUR	1	
5	-----	• BRACKET,PANEL MOUNTING,ALTAPUR	1	
7	-----	• SCR,SKT,M6X20,BL	8	
8	-----	• SCR,SKT,M6X35,BL	4	
9	-----	• LUBRICANT,NEVER-SEEZ,NSF-H1, FOOD GRADE	1	

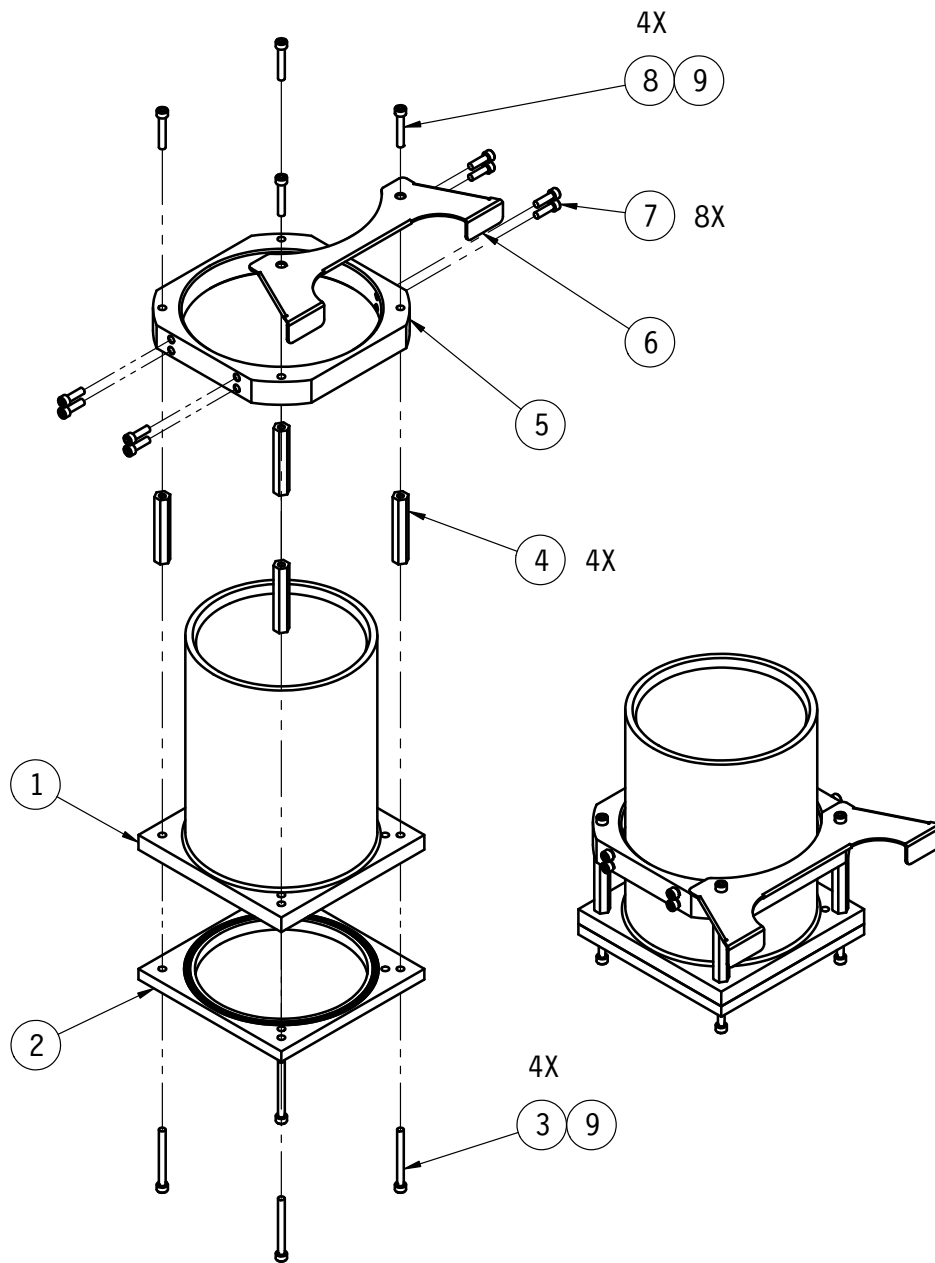


Figure 7-8 Hopper (154) assembly parts

Pivot Lid/Plunger (134)/Hopper (134) Assembly

See Figure 7-9.

Item	Part	Description	Quantity	Note
—	-----	MODULE, HOPPER, SLUG,D134,ALTAPUR	1	
201	-----	• LID ASSY,W/CYLINDER&SENSOR,ALTAPUR	1	A
202	-----	• PLUNGER ASSY,133MM,ALTAPUR	1	B
203	-----	• HOPPER ASSY, D134MM,ALTAPUR	1	B

NOTE A: Refer to Pivot Lid Assembly earlier in this section.
 B: Cooperate use of plunger and hopper. Refer to Plunger Assembly and Hopper Assembly later in this section.

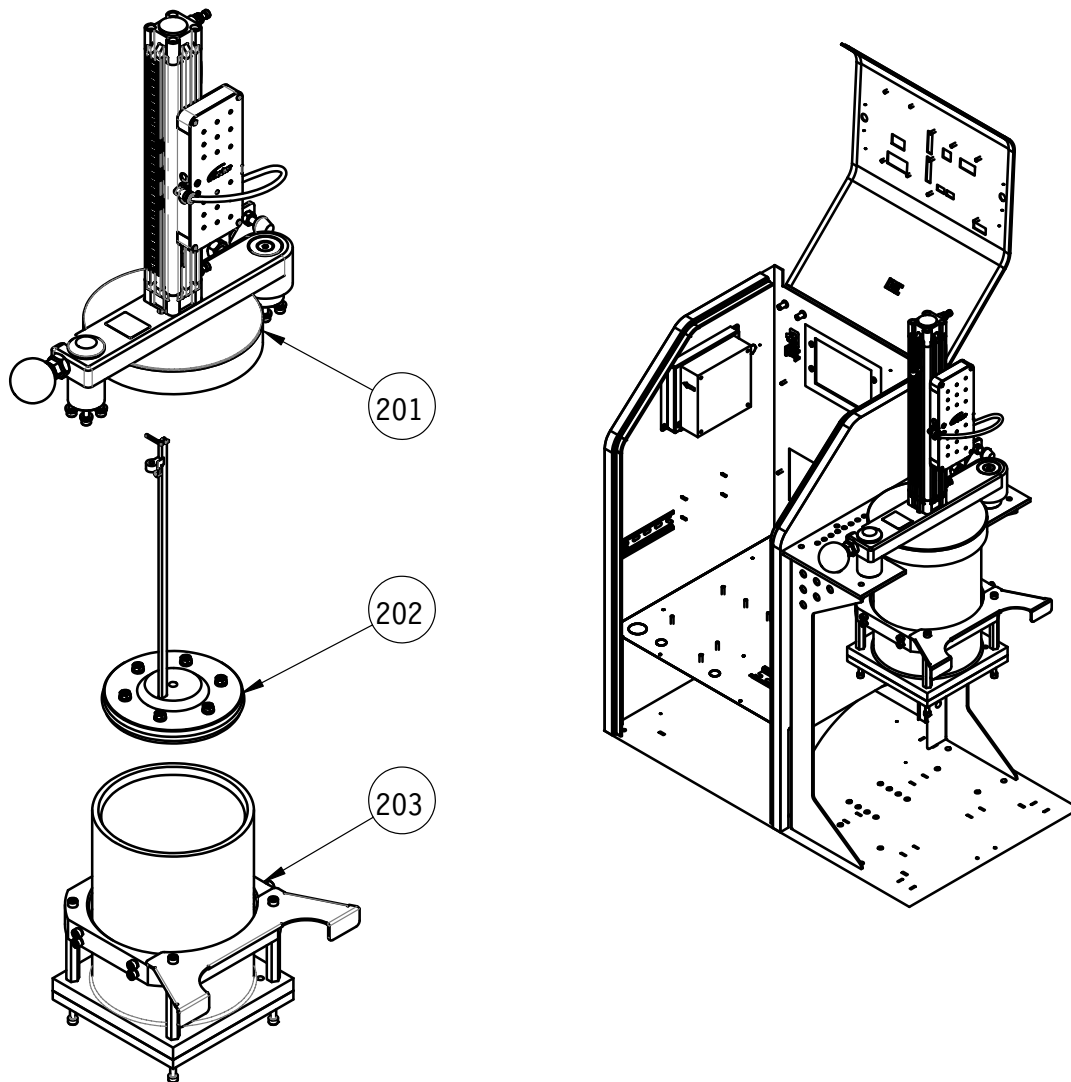


Figure 7-9 Pivot lid/plunger (134)/hopper (134) assembly

This page intentionally left blank.

Plunger (134) Assembly Parts

See Figure 7-10.

Item	Part	Description	Quantity	Note
—	-----	PLUNGER ASSY,133MM,ALTAPUR	—	
1	-----	• PLATE,PLUNGER,133MM,ALTAPUR	1	
2	-----	• ROD,LEVEL INDICATE,ALTAPUR	1	
3	-----	• BLOCK,LIFT HOOK,ALTAPUR	1	
4	-----	• SCR,BTN,SKT,M3 X 0.5 X 10,ZN	1	
5	7413440	• O-RING,-351,PTFE,4.725DX.21W	1	A
6	7413149	• DISK,ORING RETAINER,133MM PLUNGER	1	A
7	-----	• WASHER,LK,M,SPT,M6,STL,ZN	6	
8	-----	• NUT,HEX,M6,STL,ZN	6	
9	-----	• POINTER,LEVEL INDICATE,ALTAPUR	1	
10	-----	• SCREW,FLAT HEAD PHLLIPS,M2-8,SST	2	
11	-----	• LUBRICANT,NEVER-SEEZ,NSF-H1, FOOD GRADE	1	
NOTE A: Check these related parts recommended and noted before order.				

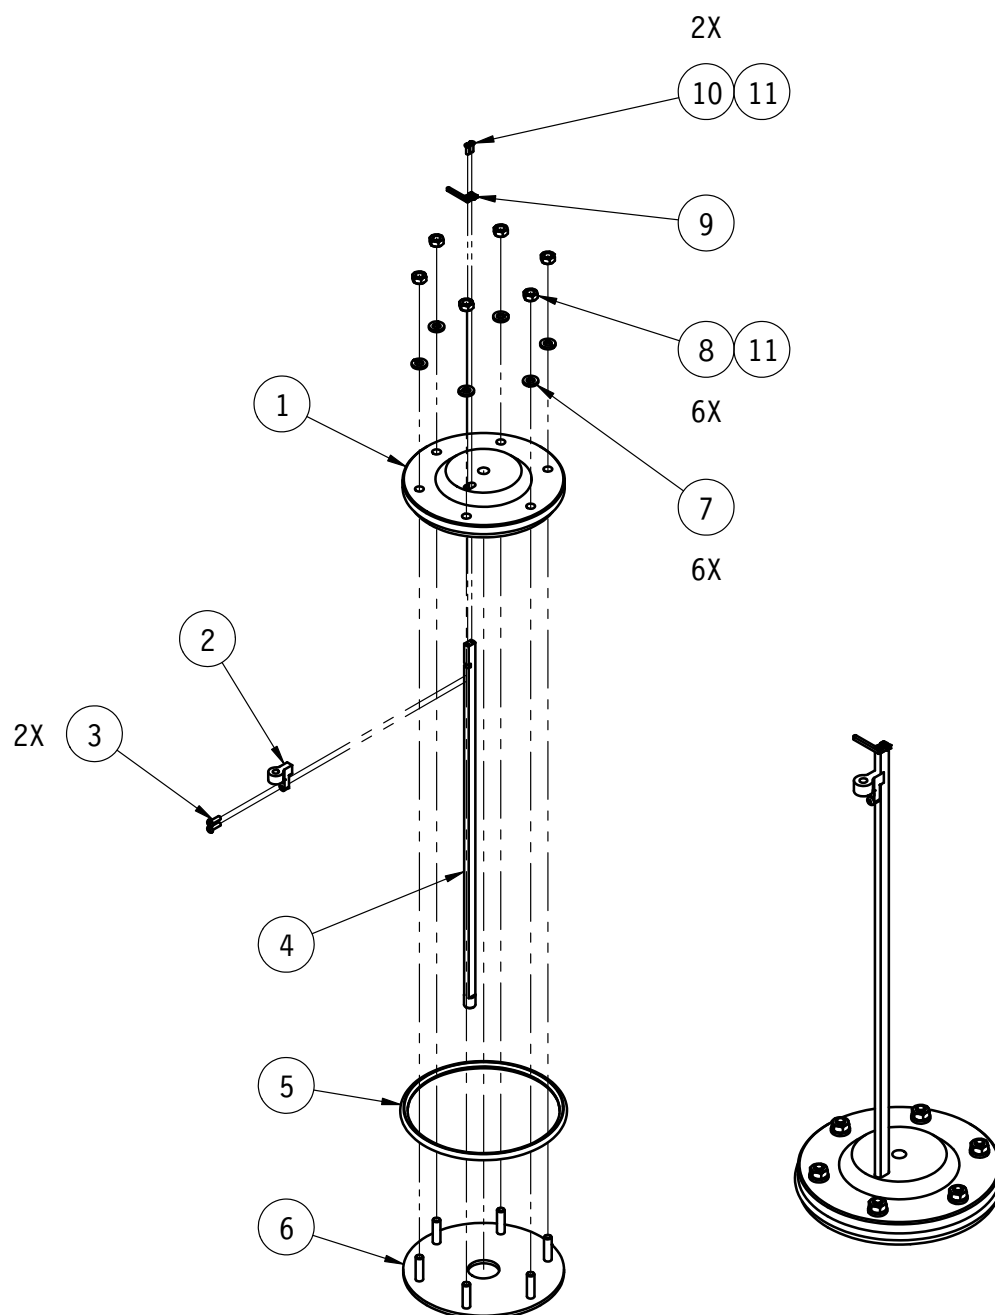


Figure 7-10 Plunger (134) assembly parts

Hopper (134) Assembly Parts

See Figure 7-11.

Item	Part	Description	Quantity	Note
—	-----	HOPPER ASSY, D134MM,ALTAPUR	—	
1	-----	• HOPPER, MACHINING, 133 ID, ALTAPUR	1	
2	7413329	• INSULATOR ASSY, 134 ID, ALTAPUR	1	
3	-----	• SCR,SKT,M6X60,BL	4	
4	-----	• STAND-OFF, HEX10, M6X70	4	
5	-----	• BLOCK, CLAMP, HOPPER, ALTAPUR	1	
6	-----	• BRACKET,PANEL MOUNTING,ALTAPUR	1	
7	-----	• SCR,SKT,M6X20,BL	8	
8	-----	• SCR,SKT,M6X35,BL	4	
9	-----	• LUBRICANT,NEVER-SEEZ,NSF-H1, FOOD GRADE	1	

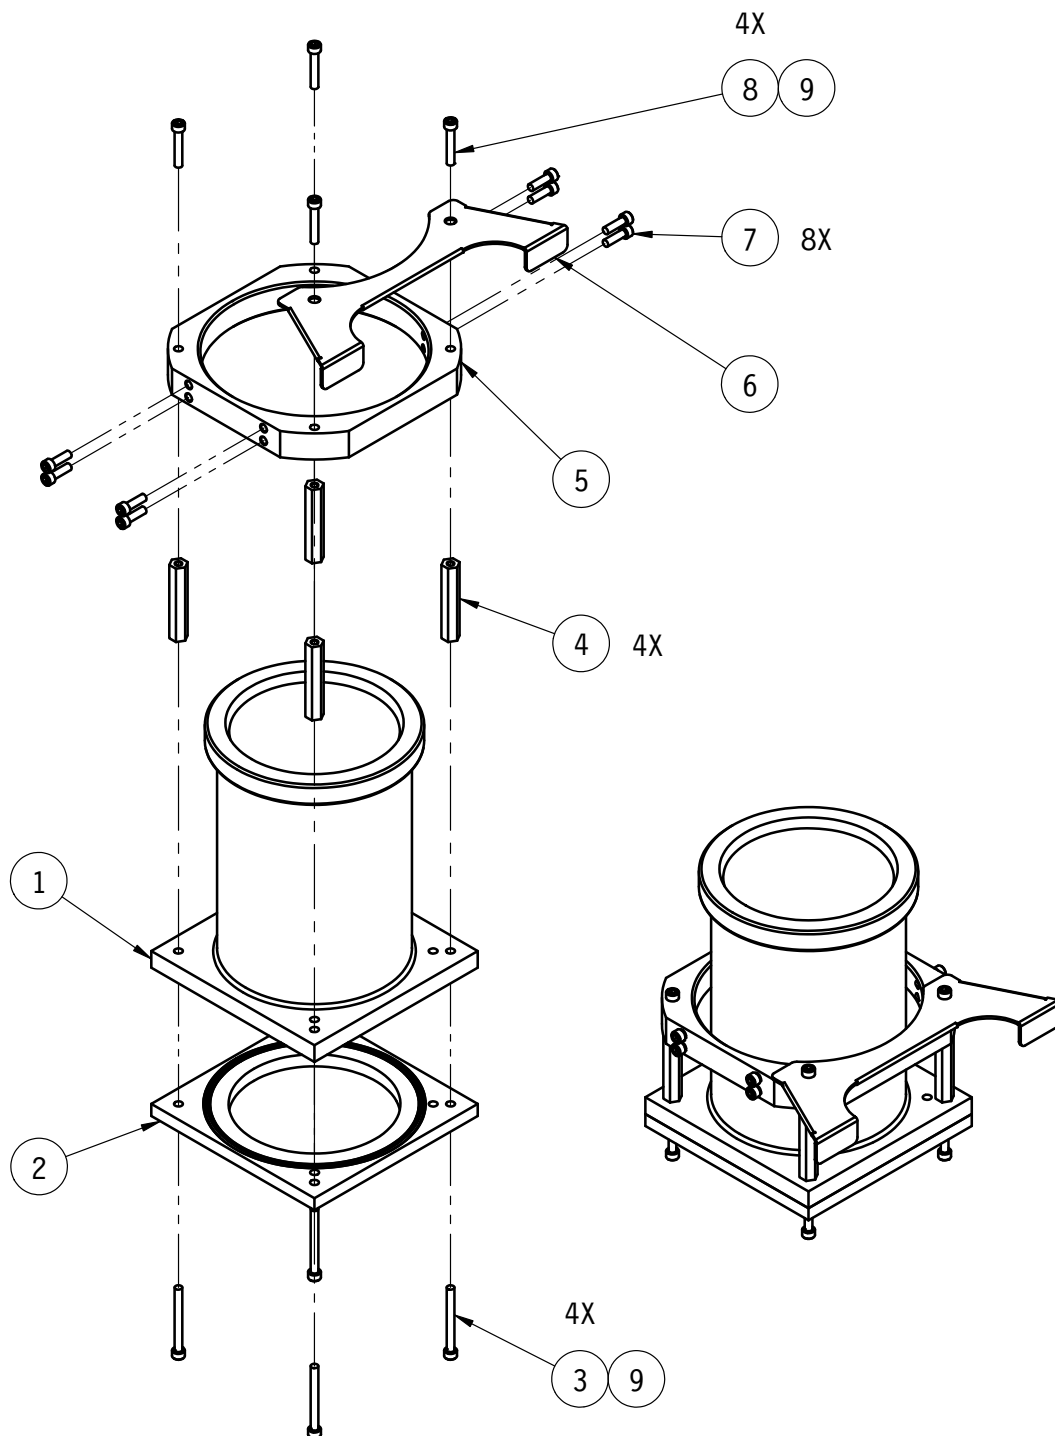


Figure 7-11 Hopper (134) assembly parts

Platen (Standard) Assembly Parts

See Figure 7-12.

Item	Part	Description	Quantity	Note
—	-----	MODULE, PLATEN, STANDARD, ALTAPUR	—	A
301	-----	• PLATE, HEATED, STD, ALTAPUR	1	
302	7413383	• GRID CORDSET, WITH RTD, ALTAPUR	1	B
303	-----	• PLATE, CAPTURE, RTD	1	
304	-----	• WASHER, LK, M, EXT, M10, ZN	1	
305	-----	• NUT, PANEL MOUNTING	1	
306	-----	• COVER, ELECT, MELT PLATE	1	
307	-----	• WASHER, FLT, M, NARROW, M4, STL, ZN	3	
308	-----	• SCR, SKT, M4X10MM, BL	9	
309	1024618	• THERMOSTAT, OOR, 500DEG F, PUSH-ON TERM	1	
310	-----	• CONNECTOR, PLASTIC, 2 STA.	1	
311	-----	• PIN, DOWEL, 6MM X 28MM LONG (DIN 6325-M6)	2	
312	-----	• LUBRICANT, NEVER-SEEZ, NSF-H1, FOOD GRADE	1	
313	900298	• COMPOUND, HEAT SINK, 5 OZ TUBE, 11281	1	
314	7413488	• KIT, SVCE, HEATER, 200V, 400W, .496DIA X 6.5LG	AS	
	7413489	• KIT, SVCE, HEATER, 240V, 400W, .496DIA X 6.5LG	AS	
NOTE A: To replace this part, order service kit 7413481 (200V melters) or 7413482 (240V melters). The kit includes all parts of this module.				
B: Harness 7413383 does not include thermostat (item 309).				

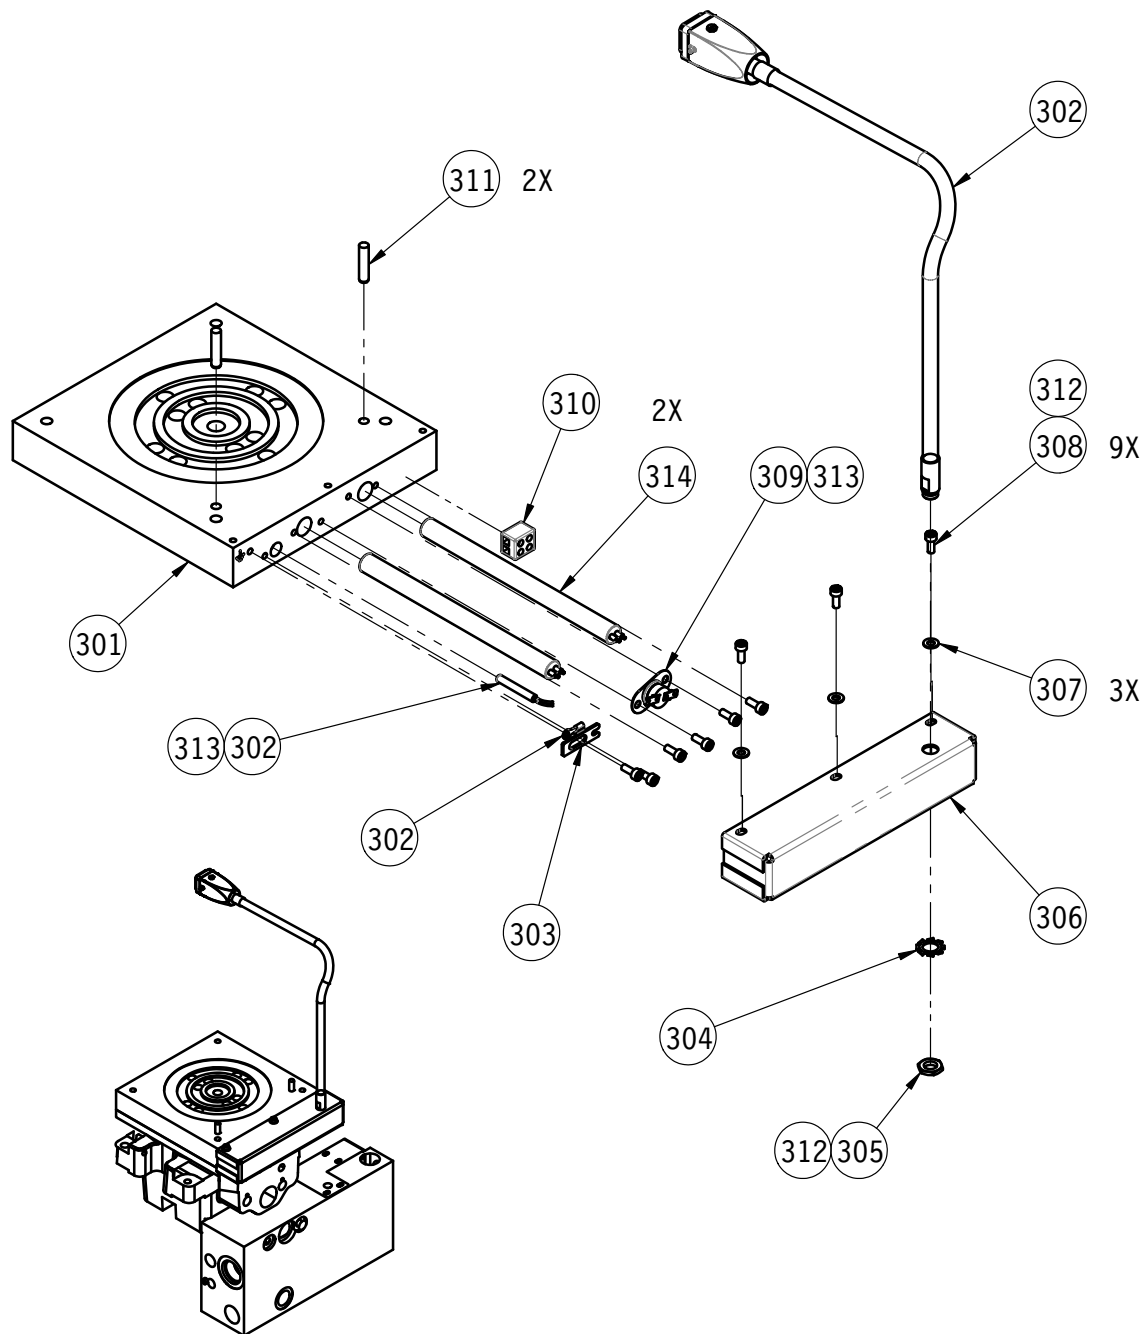


Figure 7-12 Platen (standard) assembly parts

Platen (HO) Assembly Parts

See Figure 7-13.

Item	Part	Description	Quantity	Note
—	-----	MODULE, PLATEN, STANDARD, ALTAPUR	—	A
301	-----	• PLATE, HEATED, HO, ALTAPUR	1	
302	7413383	• GRID CORDSET, WITH RTD, ALTAPUR	1	B
303	-----	• PLATE, CAPTURE, RTD	1	
304	-----	• WASHER, LK, M, EXT, M10, ZN	1	
305	-----	• NUT, PANEL MOUNTING	1	
306	-----	• COVER, ELECT, MELT PLATE	1	
307	-----	• WASHER, FLT, M, NARROW, M4, STL, ZN	5	
308	-----	• SCR, SKT, M4X10MM, BL	11	
309	1024618	• THERMOSTAT, OOR, 500DEG F, PUSH-ON TERM	1	
310	-----	• CONNECTOR, PLASTIC, 2 STA.	1	
311	-----	• PIN, DOWEL, 6MM X 28MM LONG (DIN 6325-M6)	2	
312	-----	• LUBRICANT, NEVER-SEEZ, NSF-H1, FOOD GRADE	1	
313	900298	• COMPOUND, HEAT SINK, 5 OZ TUBE, 11281	1	
314	7413486	• KIT, SVCE, HEATER, 200V, 200W, .375DIA X 7LG	AS	
	7413487	• KIT, SVCE, HEATER, 240V, 200W, .375DIA X 7LG	AS	
NOTE A: To replace this part, order service kit 7413483 (200V melters) or 7413484 (240V melters). This kit includes all parts of this module.				
B: Harness 7413383 does not include thermostat (item 309).				

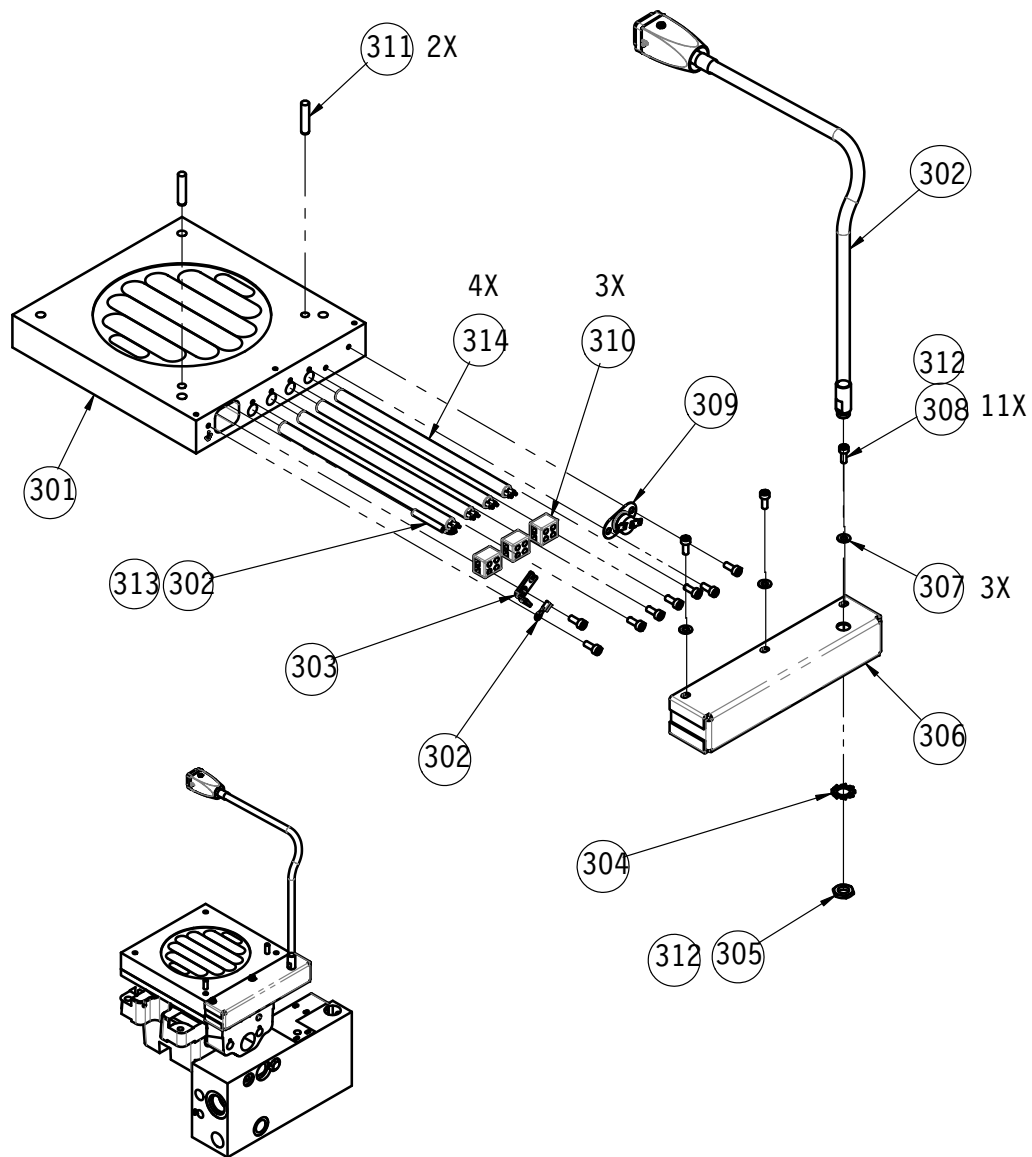


Figure 7-13 Platen (HO) assembly parts

Motor Drive Assembly Parts

See Figure 7-14.

Item	Part	Description	Quantity	Note
—	-----	MODULE,MOTOR DRIVE,STANDARD,ALTAPUR	—	
401	7402295	• SERVICE KIT,MOTOR,BG06-31/D06LA4TOF	1	
402	-----	• BRACKET,MOTOR MOUNTING,150X90	1	
403	-----	• SCR,SKT,M8X1.25X25,BL	6	
404	-----	• WASHER,LK,M,SPT,M8,STL,ZN	6	
405	-----	• WASHER,FLT,M,NARROW,M8,STL,ZN	6	
406	7402299	• COUPLING,M24,DAN/NORMAL	1	
407	-----	• LUBRICANT,NEVER-SEEZ,NSF-H1, FOOD GRADE	1	

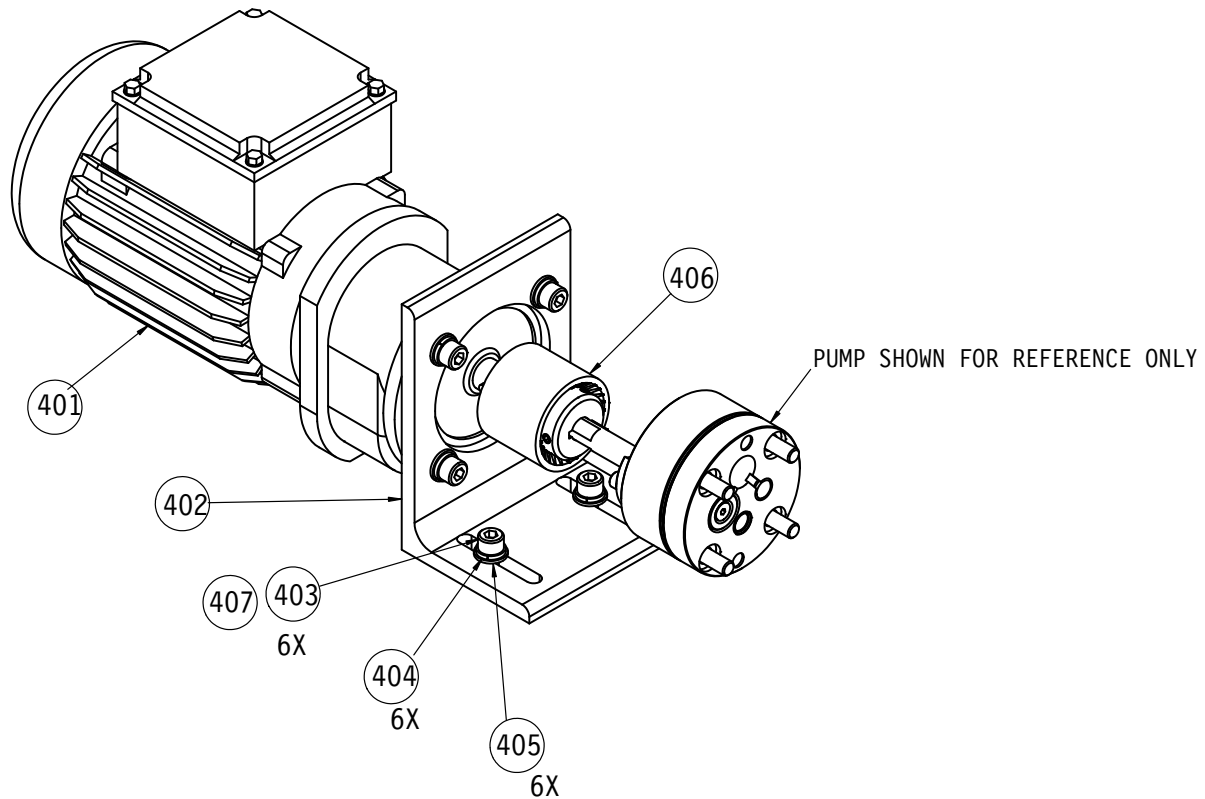


Figure 7-14 Motor drive assembly parts

Motor Drive (1710) Assembly Parts

See Figure 7-15.

Item	Part	Description	Quantity	Note
—	-----	MODULE,MOTOR DRIVE,1710 PUMP,ALTAPUR	—	
401	7402295	• SERVICE KIT,MOTOR,BG06-31/D06LA4TOF	1	
402	-----	• BRACKET,MOTOR MOUNTING,150X90	1	
403	-----	• SCR,SKT,M8X1.25X25,BL	10	
404	-----	• WASHER,LK,M,SPT,M8,STL,ZN	6	
405	-----	• WASHER,FLT,M,NARROW,M8,STL,ZN	6	
406	7402293	• COUPLING,M24,DAN/SN1710	1	
407	-----	• ADAPTER PLATE,PUMP STL,PR100M3,ALTAPUR	1	A
408	-----	• PIN,DOWEL,M6X16MM,H&G	1	A
409	941220	• O RING,VITON, 1.125X1.313X.094	2	A
410	-----	• LUBRICANT,NEVER-SEEZ,NSF-H1,FOOD GRADE	1	
411	1120201	• LUBRICANT,O-RING,NSF-H1,10 ML TUBE	1	

NOTE A: To replace these parts, order service kit 7413485.

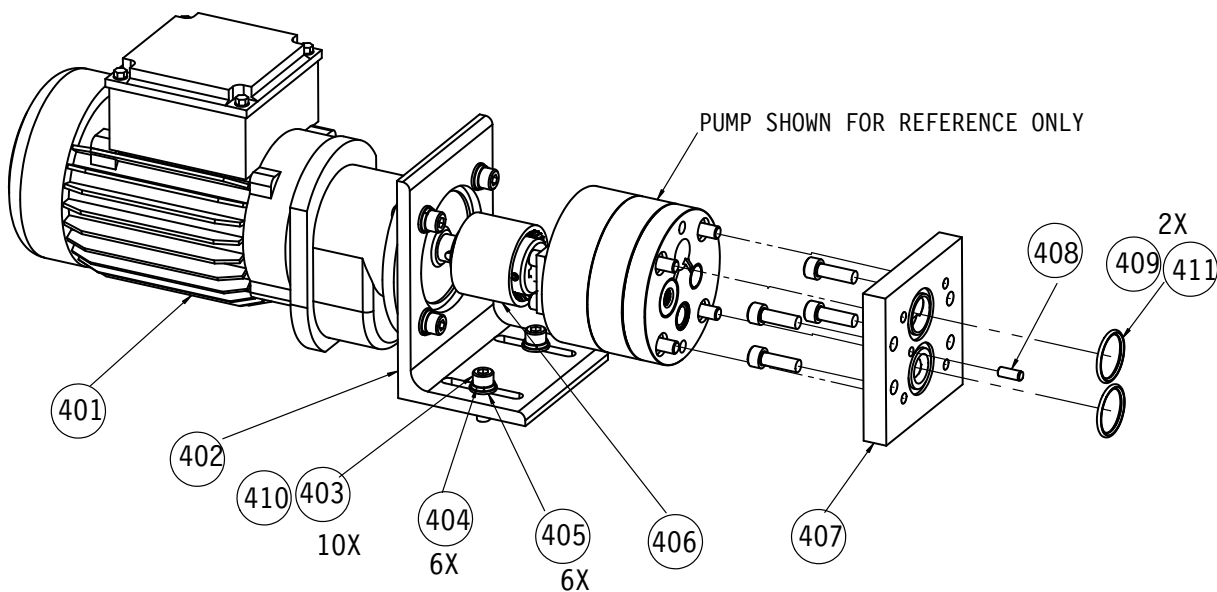


Figure 7-15 Motor Drive (1710) assembly parts

Pump Assembly Parts

See Figure 7-16.

Item	Part	Description	Quantity	Note
1	7162959	gear pump SN0015-S	1	
—	7109715	gear pump SN0030	1	
—	729105	gear pump SN0046	1	
—	7116270	gear pump SN0062	1	
—	7104514	gear pump SN0093	1	
—	213708	gear pump SN0186	1	
—	729106	gear pump SN0371	1	
—	720107	gear pump SN0773	1	
—	7130225	gear pump SH0371	1	
—	7131840	gear pump SH0773	1	
—	7116829	gear pump SN1710	1	
NS	-----	SERVICE KIT, PUMP SEALS	1	A
NS	-----	SERVICE KIT, TOOLS, PUMP SEAL KIT	1	A

NOTE A: Refer to Tables 7-1 and 7-2 for these parts lists.
NS: Not Shown

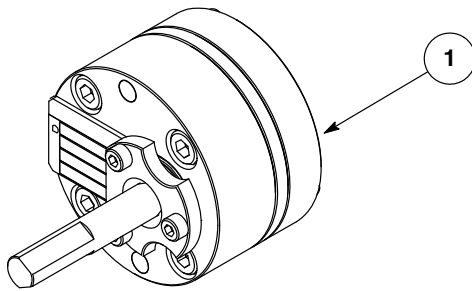


Figure 7-16 Pump assembly parts

Table 7-1 Variseal Pump Service Kits (Except PR100M3/SN1710)

Item	Part	Description	Quantity	Note
NS	7136920	SEALING KIT,PUMP F.SHAFT D12,7 (pump seal service kit)	—	
NS	-----	• O-RING 22X3 VITON 70 SHORE A BLACK	2	
NS	-----	• RING ID 12,7	1	
NS	-----	• TURCON-ROTO-VARISEAL D12,7 INSIDE SEAL	1	
NS	-----	• ALLEN HEAD CAP SCREW M5X16 DIN912 A2-70	3	
NS	-----	• HIGH-TEMP. GREASE GLS 595/N2 CAN:10G	1	
NS	7146229	• IN-ASSEMBLY TOOLS 7136915, 7136918, EN/GE	1	A
NS	7136915	ASSY TOOL F.SHAFT SEALING D12,7 (assembly tool service kit)	—	
NS	-----	• ASSY MANDREL F.SHAFT SEALING D12,7	1	
NS	-----	• ASSY BUSHING F.SHAFT SEALING D12,7	1	
NS	7146229	• IN-ASSEMBLY TOOLS 7136915, 7136918, EN/GE	1	A
NOTE A: This instruction may be obtained from the Adhesives Digital Library at https://www.revbase.com/TagTeam/Client/Login.asp?dbid=1534 , or contact your Nordson representative.				
NS: Not Shown				

Table 7-2 Variseal Pump PR100M3/SN1710 Service Kit

Item	Part	Description	Quantity	Note
—	7136921	SEALING KIT, PUMP F.SHAFT D16 (pump seal service kit)	—	
NS	-----	• O-RING 28X3 VITON 70 SHORE A SCHWARZ	2	
NS	-----	• BUFFER RING ID 16	1	
NS	-----	• TURCON-ROTO-VARISEAL D16 INSIDE SEAL	1	
NS	-----	• ALLEN HEAD CAP SCREW M6X20 DIN912 SST	4	
NS	-----	• HIGH-TEMP.GREASE GLS 595/N2 CAN:10G	1	
—	7136918	ASSY TOOL F.SHAFT SEALING D16 (assembly tool service kit)	—	
NS	-----	• ASSY MANDREL F.SHAFT SEALING D16	1	
NS	-----	• ASSY BUSHING F.SHAFT SEALING D16	1	
NS	7146229	• IN-ASSEMBLY TOOLS 7136915, 7136918, EN/GE	1	A
NOTE A: This instruction may be obtained from the Adhesives Digital Library at https://www.revbase.com/TagTeam/Client/Login.asp?dbid=1534 , or contact your Nordson representative.				
NS: Not Shown				

Manual PCV and Cylinder Pressure Control Assembly Parts

See Figure 7-17.

Item	Part	Description	Quantity	Note
—	-----	MODULE,PRESSURE CONTROL,MANUAL,ALTAPUR	—	
501	-----	• PANEL ASSY,PNEUMATIC FRONT,STD,ALTAPUR	1	
502	1088395	• REGULATOR,AIR,1/8NPT,5-100 PSI,SELF-REL	1	A
503	1018810	• GAGE,PRESSURE,PANEL MOUNT	1	B
504	-----	• TUBING,POLYURETHANE,6/4MM,BLUE	0.89	
505	972310	• CONN,MALE,UNIVERSAL ELBOW,6MM T X M5	1	B
506	1124115	• CONN, MALE, ELBOW, 6MM T X 1/8 NPT	3	A
507	1120104	• KIT,SERVICE,PCV,1100 PSI,DURA ALTADURUM	1	
508	-----	• TUBING,PFA,6MM ODX 1 MM WALL	4.46	
509	941230	• O RING,VITON, 1.188X1.388X.094	1	A
510	-----	• NUT, PANEL, METAL, AIR REGULATOR	1	
NS	-----	• CABLETIE,3.9 IN,185F/85C,NYLON,NATURAL	5	
512	1120201	• LUBRICANT,O-RING,NSF-H1,10 ML TUBE	1	

NOTE A: Check these related parts recommended and noted before order.
 B: Check these related parts recommended and noted before order.
 NS: Not Shown

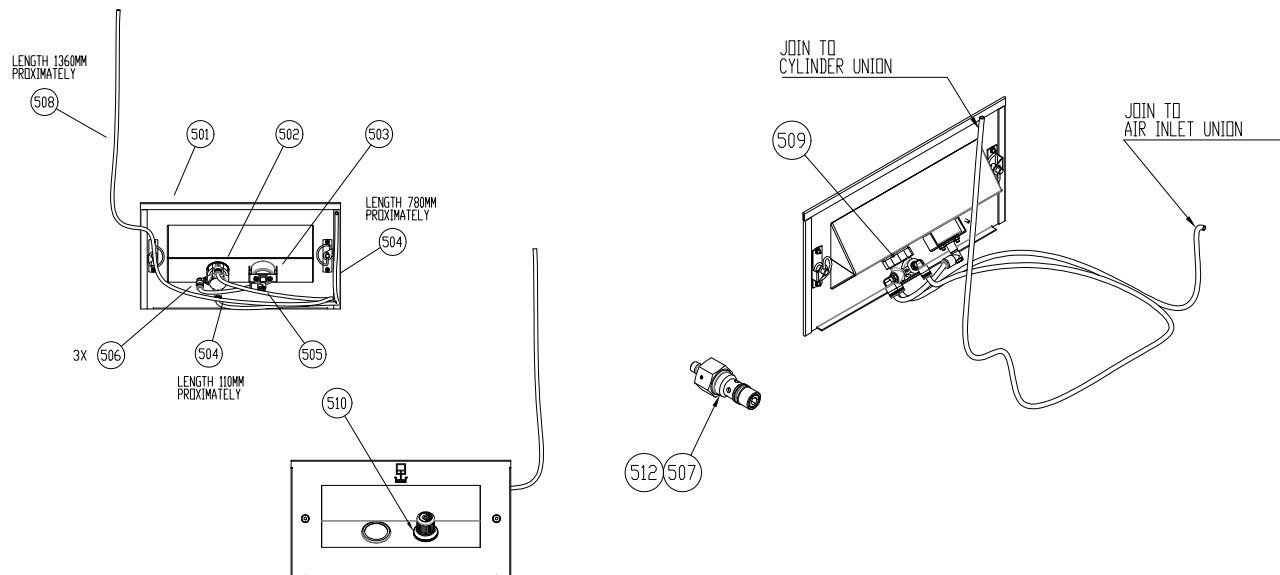


Figure 7-17 Manual PCV and Cylinder Pressure Control Assembly Parts

This page intentionally left blank.

Automatic Pressure Control and Cylinder Pressure Control Assembly Parts

See Figure 7-18.

Item	Part	Description	Quantity	Note
—	-----	MODULE,AUTO PRESSURE CONTROL, ALTAPUR	—	
501	1088395	• REGULATOR,AIR,1/8NPT,5-100 PSI, SELF-REL	1	A
502	1124115	• CONN, MALE, ELBOW, 6MM T X 1/8 NPT	3	A
503	1018810	• GAGE,PRESSURE,PANEL MOUNT	1	B
504	972310	• CONN,MALE,UNIVERSAL ELBOW,6MM T X M5	1	B
510	7411877	• RUN UP PCV,1100PSI, DURABLU,PA	1	
511	-----	• PANEL ASSY,PNEUMATIC FRONT, STD, ALTAPUR	1	
512	-----	• NUT, PANEL, METAL, AIR REGULATOR	1	A
513	941230	• O RING,VITON, 1.188X1.388X.094	1	A
514	7412846	• KIT,TRANSDUCER,0-10V,0-5.0 BAR	1	
515	-----	• NUT,HEX,M3,W/EXT TOOTH,WSHR	2	
516	-----	• PANEL,BRACKET,PROPORTIONAL, ALTAPUR	1	
517	-----	• SCR,SKT,M3X8,BL	4	
NS	-----	• CABLETIE,3.9 IN,185F/85C,NYLON,NATURAL	5	
519	1120201	• LUBRICANT,O-RING,NSF-H1,10 ML TUBE	1	
NOTE A: Check these related parts recommended and noted before order.				
B: Check these related parts recommended and noted before order.				
NS: Not Shown				

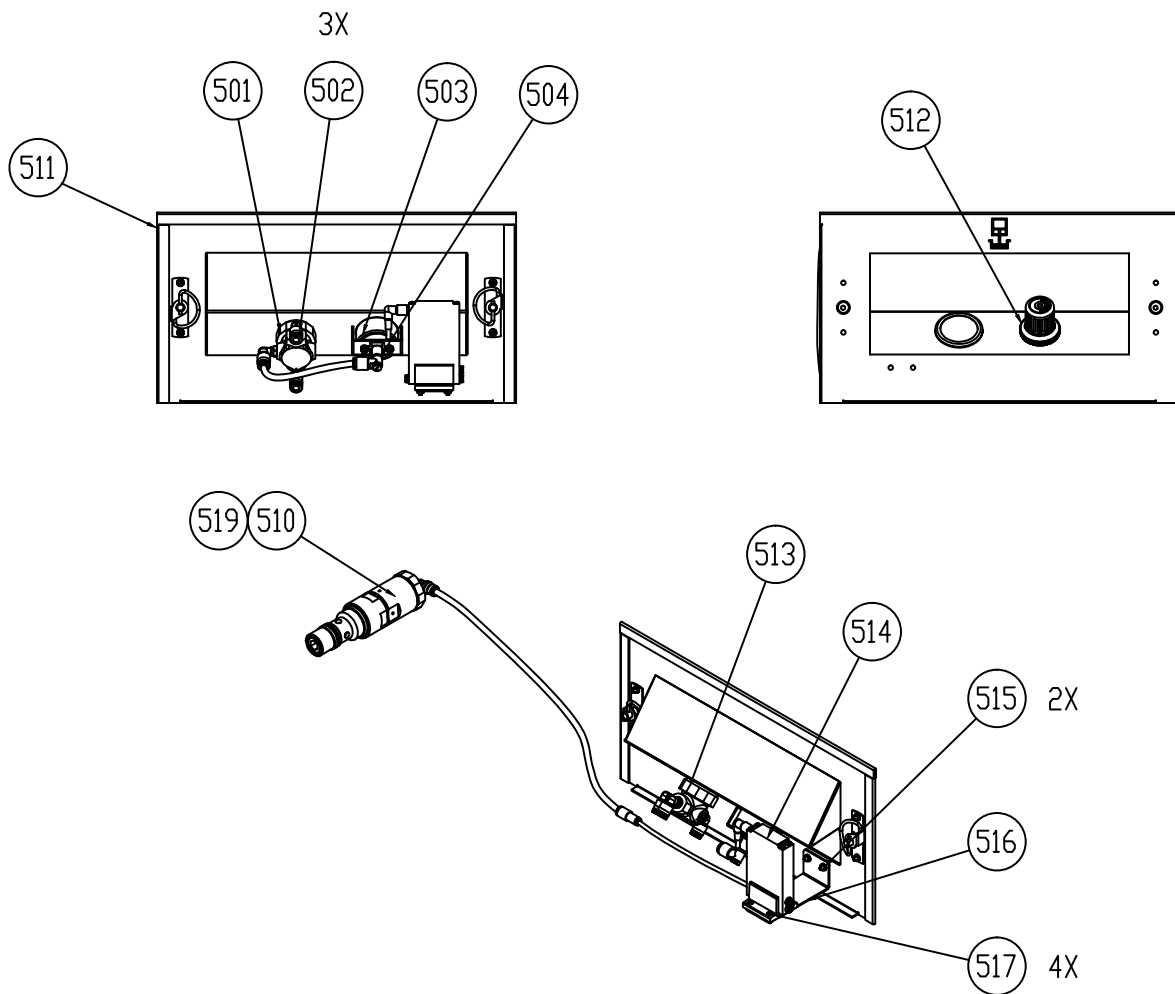


Figure 7-18 Automatic Pressure Control and Cylinder Pressure Control Assembly Parts

Flow Control Bypass and Cylinder Pressure Control Assembly Parts

See Figure 7-19.

Item	Part	Description	Quantity	Note
—	-----	MODULE, FLOW CONTROL BYPASS, ALTAPUR	—	
501	-----	• PANEL ASSY, PNEUMATIC FRONT, FCB, ALTAPUR	1	
502	-----	• MUFFLER, POLY, 1/8" NPT, SATURN	1	A
503	1506727	• VALVE, QUICK EXHAUST, 1/8 NPT	1	A
504	7413448	• CONN, MALE, 1/8 NPT X 1/8 NPT	1	A
507	1124115	• CONN, MALE, ELBOW, 6MM T X 1/8 NPT	5	B
509	972310	• CONN, MALE, UNIVERSAL ELBOW, 6MM T X M5	2	C
510	1018810	• GAGE, PRESSURE, PANEL MOUNT	2	C
511	7413405	• CONN, MALE, ELBOW, 6MM T, PT1/8	3	D
512	941230	• O RING, VITON, 1.188X1.388X.094	2	B
513	1088395	• REGULATOR, AIR, 1/8 NPT, 5-100 PSI, SELF-REL	2	B
514	7411877	• RUN UP PCV, 1100PSI, DURABLU, PA	1	
515	7413170	• SOLENOID, 3/2WAYS, 24VDC, PT1/8	1	D
520	-----	• NUT, PANEL, METAL, AIR REGULATOR	2	B
NS	-----	• CABLETIE, 3.9 IN, 185F/85C, NYLON, NATURAL	5	
522	1120201	• LUBRICANT, O-RING, NSF-H1, 10 ML TUBE	1	
NOTE A: Check these related parts recommended and noted before order. B: Check these related parts recommended and noted before order. C: Check these related parts recommended and noted before order. D: Check these related parts recommended and noted before order. NS: Not Shown				


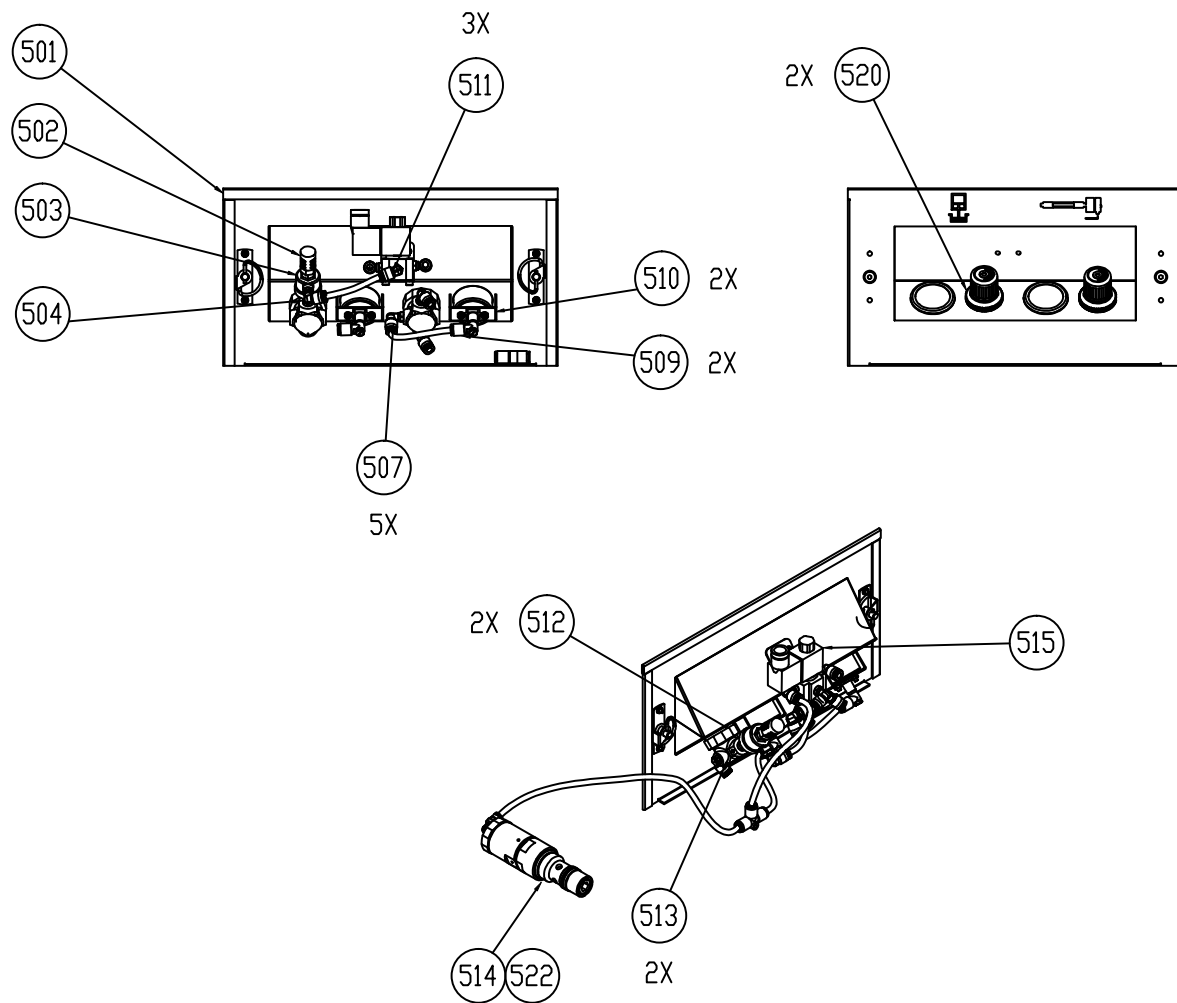


Figure 7-19 Flow Control Bypass and Cylinder Pressure Control Assembly Parts

Back Panel Assembly Parts

See Figure 7-20.

Item	Part	Description	Quantity	Note
—	-----	ELEC ASSY, BACK PANEL, 240V, ALTAPUR	—	
1	1122064	• KIT, SVCE, MAIN, PCA, IP54 & IP32	1	
2	-----	• SCR, LOW, SKT, M4X10, SS	4	
3	1031175	• SVCE KIT, DURABLU, 2H TO 4H CONVERSION	1	
4	-----	• HEXNUT, FLANGED, SERRATED, M5	2	
5	7413494	• SERVICE KIT, MOTOR CONTROL, ALTAPUR	1	
6	-----	• HARNESS, APPLICATOR TRIGGER, ALTAPUR	2	
7	7413368	• HARNESS, HOSE/APPLICATOR, 240V, ALTAPUR	3	
8	-----	• NUT, HEX, M4, STL, ZN	4	
9	-----	• WASHER, LK, M, SPT, M4, STL, ZN	4	
10	-----	• WASHER, FLT, M, NARROW, M4, STL, ZN	4	
11	-----	• NUT, HEX, M3, W/EXT TOOTH, WSHR	20	

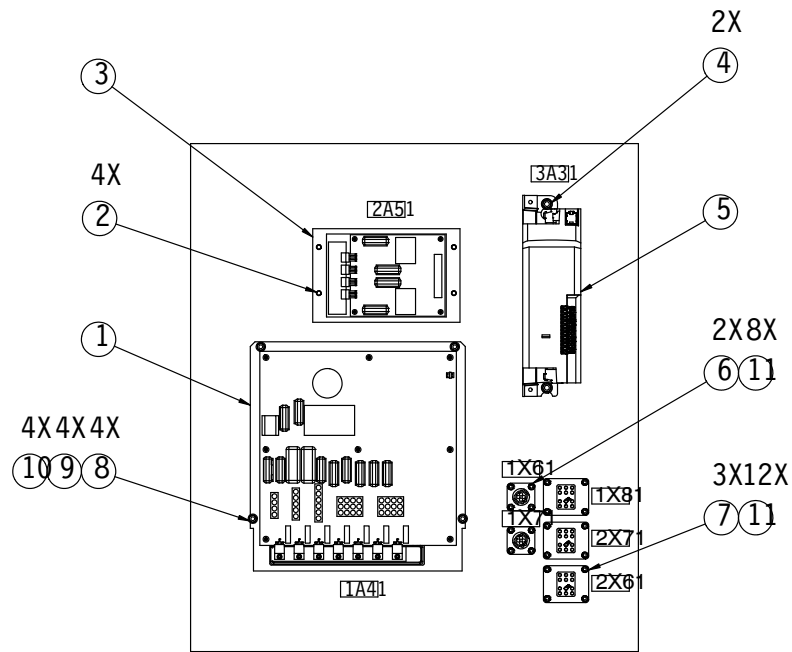

BACK PANEL

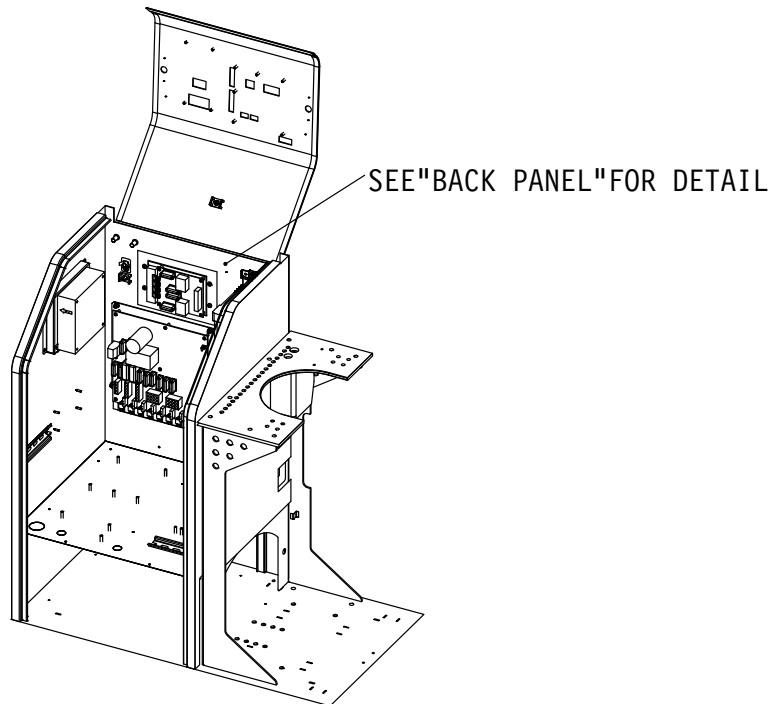


Figure 7-20 Back panel assembly parts

Main Board Fuses

See Figure 7-21.

Item	Part	Description	Quantity	Note
—	1031203	SERVICE KIT, FUSES, MAIN BOARD	—	
1	105419	• FUSE, FAST, 10 A, 250 VAC, 1/4 X 1 1/4 IN., F1-F2	2	
2	939955	• FUSE, SLOW, 2 A, 250 VAC, 5 X 20 MM, F3-F4	2	
3	-----	• FUSE, FAST, 5 A, 250 VAC, 5 X 20 MM, F5-F6	2	
4	939683	• FUSE, 6.3 A, 250 VAC, 5 X 20 MM, F7-F12	6	


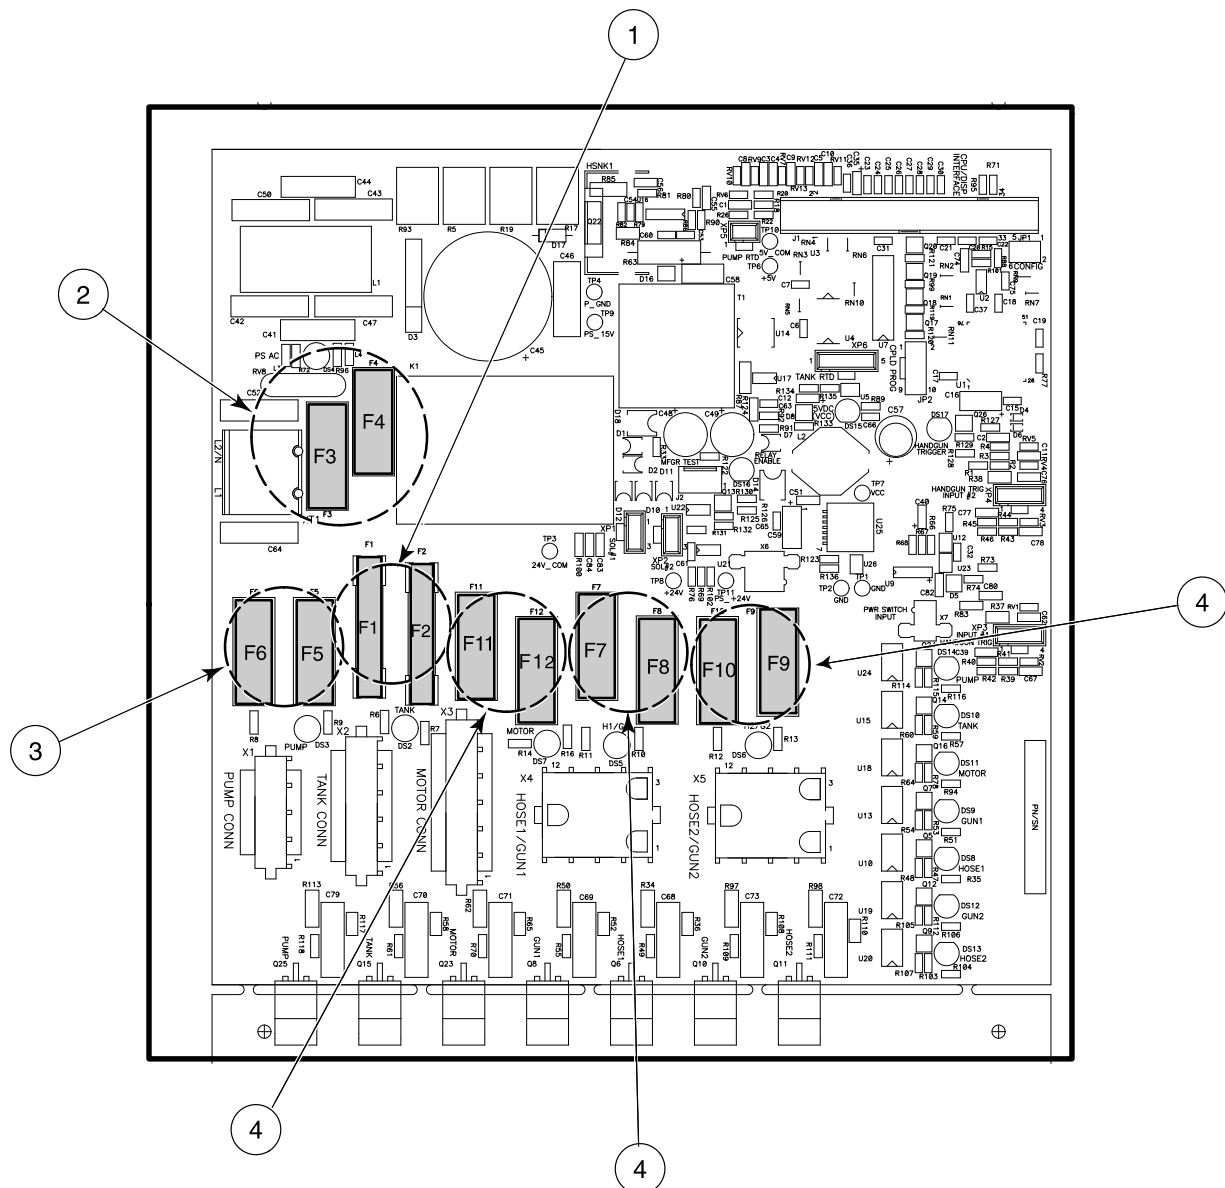


Figure 7-21 Fuse service kit parts

Left Panel Assembly Parts

See Figure 7-22.

Item	Part	Description	Quantity	Note
—	-----	ELEC ASSY, LEFT PANEL, 240V, ALTAPUR	—	
1	7413427	• POWER SUPPLY, 24VDC, 48W, 2A	1	
2	-----	• BRACKET, END, DIN RAIL, ASIC	2	
3	7413331	• SENSOR, CAPACITIVE, 2POINTS, RECHNER	1	
4	-----	• NUT, HEX, M3, STL, ZN	4	
5	-----	• WASHER, LK, M, SPT, M3, STL, ZN	4	
6	-----	• WASHER, FLT, M, NARROW, M3, STL, ZN	4	
7	-----	• TERMINAL BLOCK ZPE 2,5/4AN	1	
8	-----	• TERMINAL BLOCK, END PLATE ZAP/TW3	1	
9	7413496	• KIT, SVCE, FAN, ALTAPUR	1	

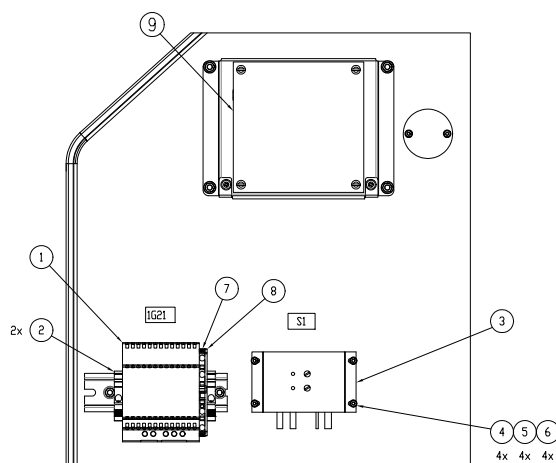

LEFT PANEL

SEE "LEFT PANEL" FOR DETAIL

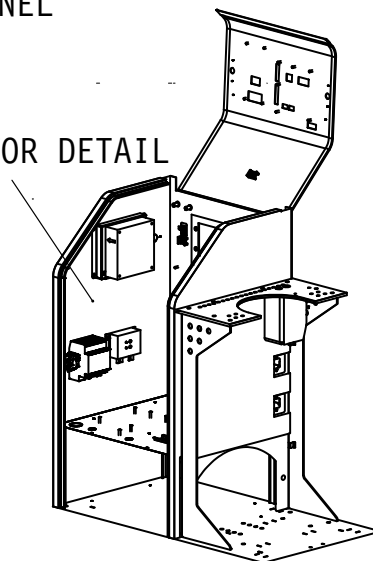


Figure 7-22 Left panel assembly parts

Top Panel Assembly Parts

See Figure 7-23.

Item	Part	Description	Quantity	Note
—	-----	ELEC ASSY, TOP PANEL, 240V, ALTAPUR	—	
1	1093146	• KIT, SERVICE, MOTOR/PISTON CNTL BD, PB4	1	
2	-----	• SCR, PAN, REC, M3X8, ZN	10	
3	-----	• WASHER, LK, M, INT, M3, STL, ZN	10	
4	7413495	• KIT, SVCE, PCA, DISPLAY/CPU, BLUE SERIES	1	
5	1017947	• SWITCH, ROCKER, SPST, 250V, 16A, GOLD	1	
6	-----	• MEMBRANE PANEL, ALTAPUR	1	


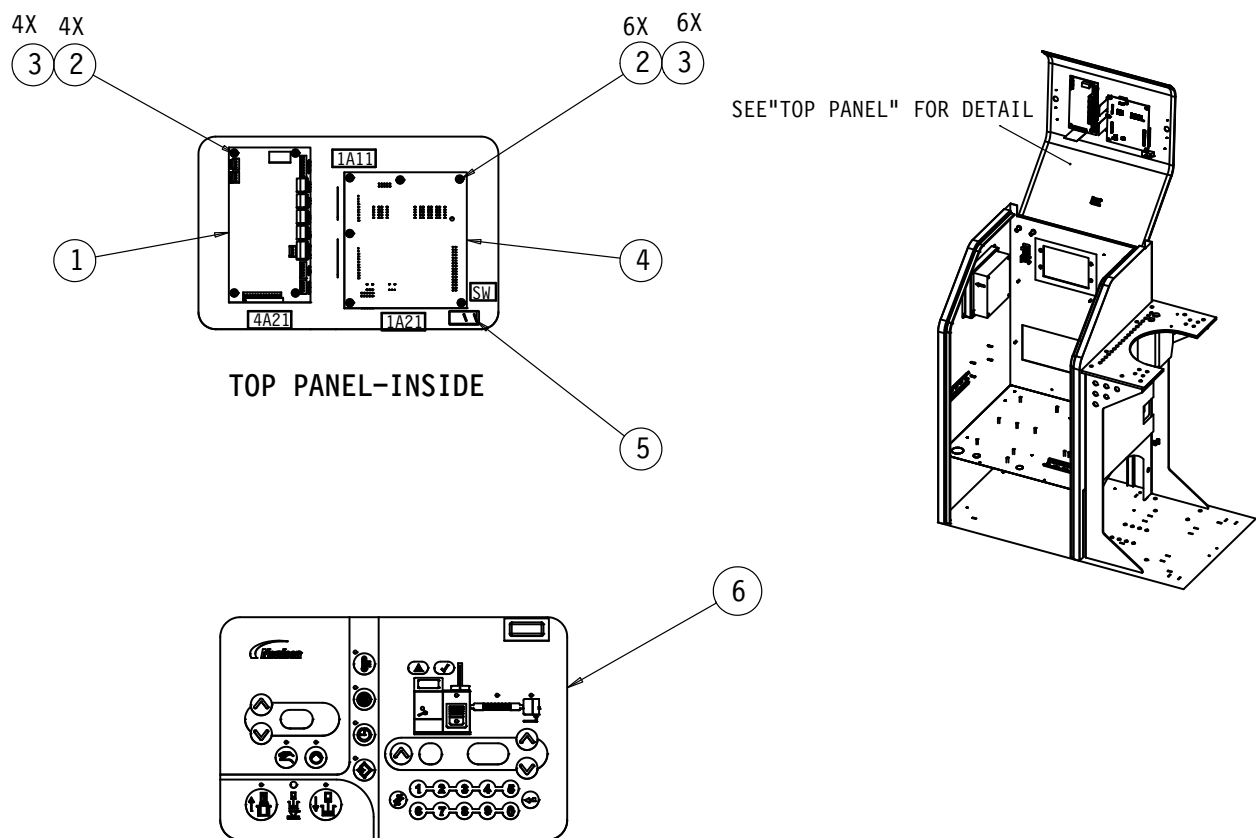


Figure 7-23 Top panel assembly parts

Bottom Panel Assembly Parts

See Figure 7-24.

Item	Part	Description	Quantity	Note
—	-----	ELEC ASSY, TOP PANEL, 240V, ALTAPUR	—	
1	1031201	• SVCE KIT, DURABLU, EXPANSION PCA	1	
2	-----	• SCR, PAN, REC, M3X8, ZN	11	
3	-----	• WASHER, LK, M, INT, M3, STL, ZN	11	
4	-----	• WIRE GRP, MTR DRIVE TO MTR CONN, ALTAPUR	1	
5	-----	• NUT, HEX, M3, W/EXT TOOTH, WSHR	4	
6	1104490	• KIT, SERVICE, RELAY BOARD, ALTA TT	1	
7	-----	• BRACKET, END, DIN RAIL, ASIC	3	
8	-----	• TERMINAL BLOCK ZPE 2,5/4AN	1	
9	-----	• TERMINAL BLOCK, END PLATE ZAP/TW3	2	
10	-----	• TERMINAL BLOCK ZDU 2,5/4AN	2	
11	-----	• TERMINAL BLOCK ZDU 2,5	5	
12	-----	• TERMINAL BLOCK, END PLATE ZAP/TW1	2	
13	7409469	• RELAY MODULE, 24VDC, 2 NO/NC	1	
14	-----	• -----	—	
15	-----	• TAG, PE/G, INPUT POWER, GROUND	1	
16	-----	• NUT, HEX, M5, STL, ZN	1	
17	-----	• TERMLUG, GROUND, 6-14AWG	1	

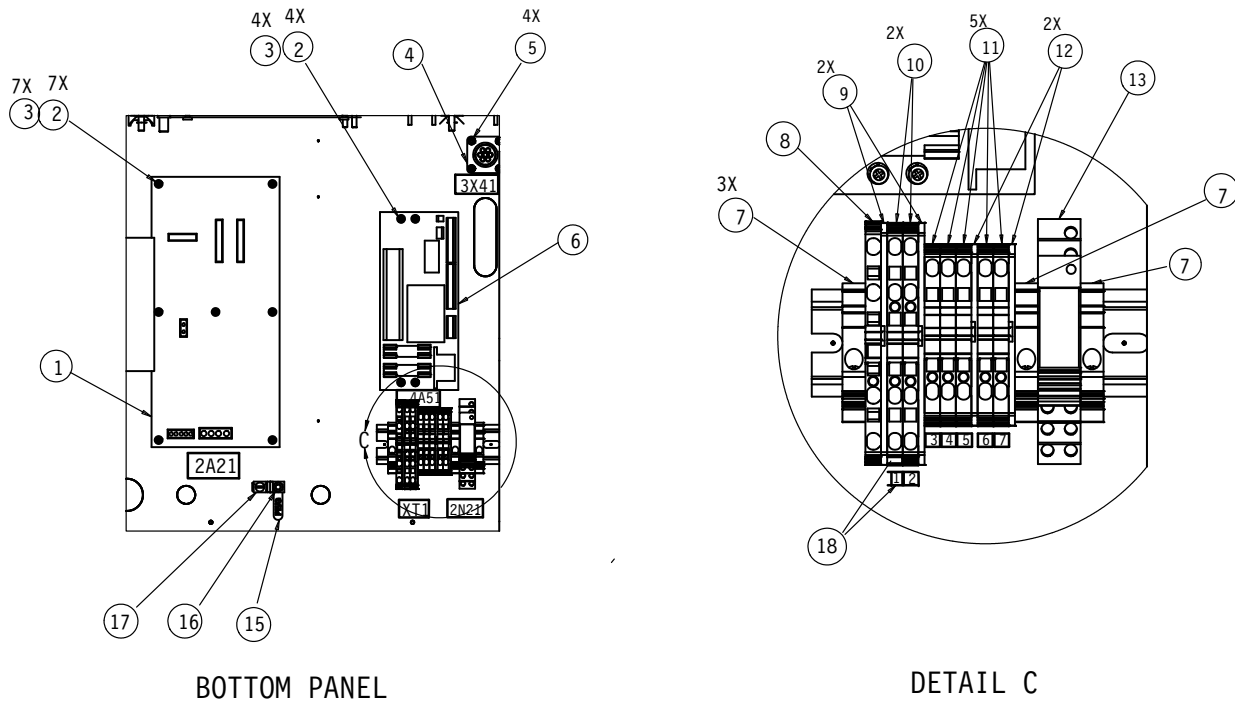

SEE "BOTTOM PANEL" FOR DETAIL

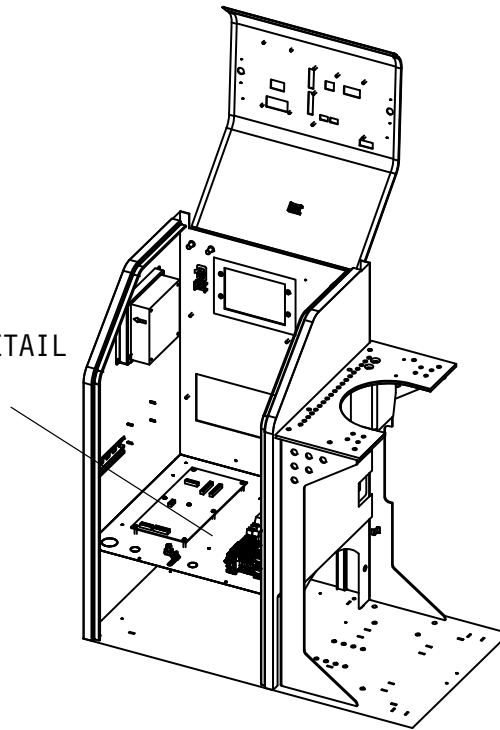


Figure 7-24 Bottom panel assembly parts

Light Tower Service Kit

The light tower (PN7413172) can be purchased as an accessory.

The light tower indicates the following slug melter operating modes:

- **Green** – Ready. All temperatures are within the setpoint range.
- **Blue** – Slug Empty. The slug is used up and needs replacing.
- **Yellow** – Alert. The melter detected an alert condition. It continues to work, but maintenance may be required.
- **Red** – Fault. The melter detected a fault condition. The heater and motor are off.

The proper digital outputs for the light tower are listed in the table below.

Output	Terminals	Operating Parameters	Control Options	Note
<i>Standard Outputs</i>				
1	1 and 2	40	1 - Ready (Default)	
2	3 and 4	41	2 - Fault (Default)	
3	5 and 6	42	3 - Alert (Default)	

To connect the light tower:



WARNING! Risk of electrocution or equipment damage! Disconnect the melter from the line voltage before install the light tower. Failure to install or properly service the melter can result in personal injury, including death.

1. Mount the bracket with screw and washer on the melter. Refer to figure 7-25.
2. Route the cable through the strain relief connector on the side of melter enclosure.
3. Wire the light tower. Refer to figure 7-26.

Light Tower Assembly Parts

See Figure 7-25.

Item	Part	Description	Quantity	Note
—	7413172	KIT, LIGHT TOWER,ALTAPUR	1	
1	-----	• LIGHT TOWER,24VDC,24FT,ALTAPUR	1	
2	-----	• SCR,BTN,SKT,M6X12,BL	6	
3	-----	• WASHER,FLT,M,REG,M6,STL,ZN	6	
4	-----	• WASHER,LK,M,SPT,M6,STL,ZN	6	
5	-----	• BRACKET,LIGHT TOWER,ALTAPUR	1	
6	-----	• STRAIN RELIEF,MG16A-10B	1	

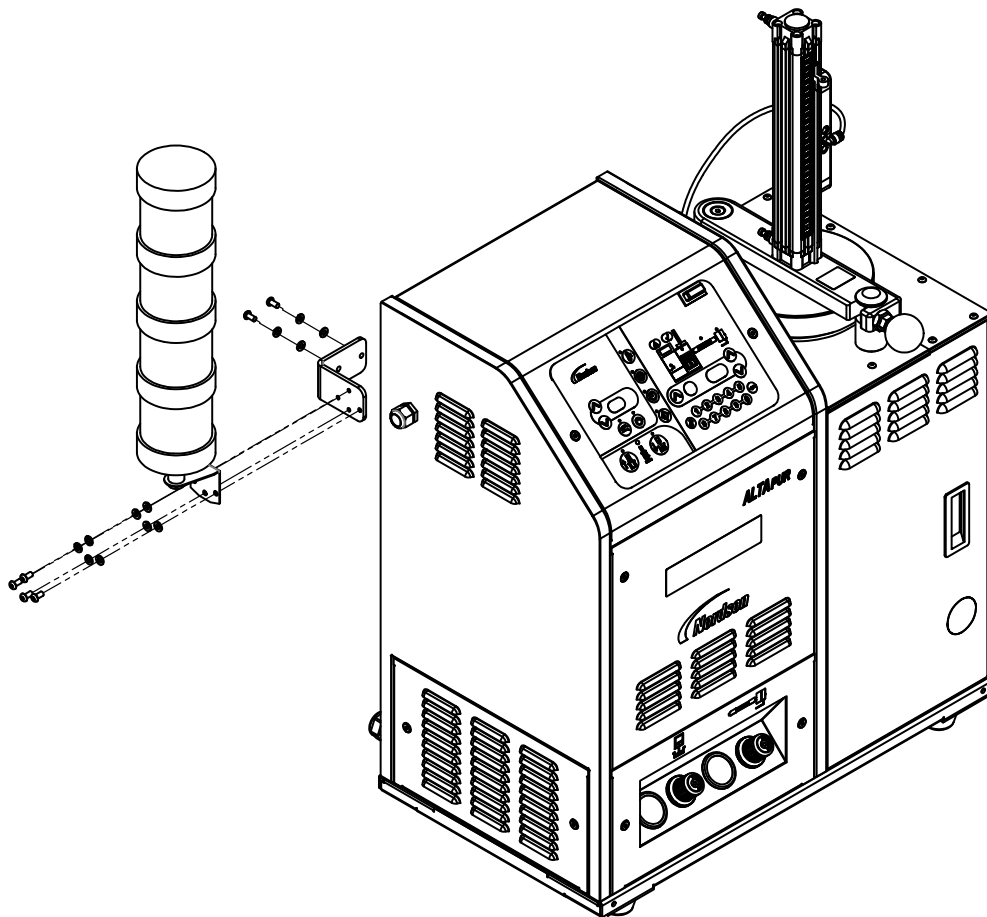


Figure 7-25 Light tower mounting

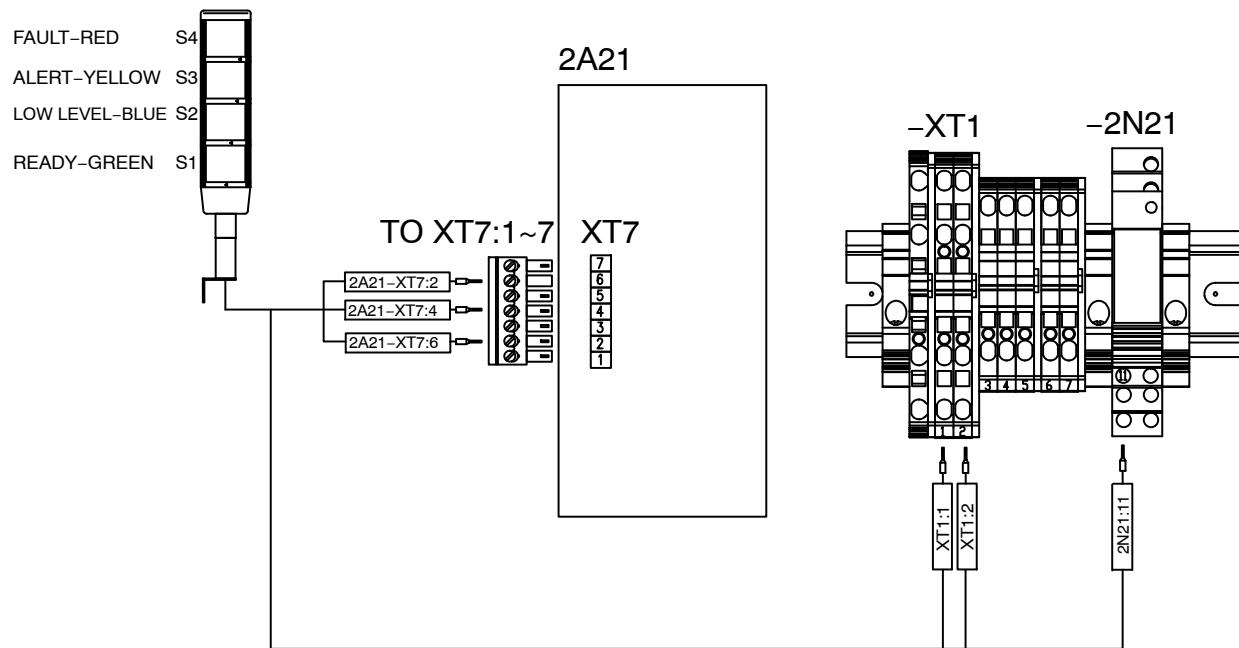


Figure 7-26 Light tower wiring

Recommended Spare Parts

Nordson Corporation recommends stocking these service kits and other components for a complete spare parts inventory.

Assembly	Part	Description	Note
Top support plate	7413333	PROXSENSOR,INDUCTIVE,3MM,M12,W-CABLE	
Reservoir/Hopper	7413328	INSULATOR ASSY, 154 ID, ALTAPUR	A
	7413329	INSULATOR ASSY, 134 ID, ALTAPUR	A
	7413477	KIT,SVCE,LEVEL CONTROL SENSOR,ALTAPUR	
	7413492	KIT,SVCE,HEATER,200V,425W,.50DIAx6.38LG	B
	7413493	KIT,SVCE,HEATER,240V,425W,.50DIAx6.38LG	B
Pivot lid	7413480	KIT,SVCE,CYLINDER SOLENOID ASSY,ALTAPUR	
Melt Plate	7413488	KIT,SVCE,HEATER,200V,400W,.496DIAx6.5LG	B
	7413489	KIT,SVCE,HEATER,240V,400W,.496DIAx6.5LG	B
	7413486	KIT,SVCE,HEATER,200V,200W,.375DIAx7LG	B
	7413487	KIT,SVCE,HEATER,240V,200W,.375DIAx7LG	B
Drive/pump/manifold	7402295	SERVICE KIT,MOTOR,BG06-31/D06LA4TOF	
	7402299	COUPLING,M24,DAN/NORMAL	C
	7402293	COUPLING,M24,DAN/SN1710	C
	941220	O RING,VITON, 1.125X1.313X.094	
	7413490	KIT,SVCE,HEATER,200V,600W,.496DIAx8.5LG	B
	7413491	KIT,SVCE,HEATER,240V,600W,.496DIAx8.5LG	B
	940024	ORING,-118,VITON,.862X.103,BR	
Thermostats	1024618	THERMOSTAT,OOR,500DEG F,PUSH-ON TERM	
Control	1017947	SWITCH,ROCKER,SPST,250V,16A,GOLD	
	1122199	PCA, MTR/PISTON CNTL, RX MELTER	
	7413495	KIT,SVCE,PCA,DISPLAY/CPU,BLUE SERIES	
	-----	OTHER CIRCUIT BOARDS AND ELECTRICAL COMPONENTS	D
<p>NOTE A: Choose the right diameter before ordering.</p> <p>B: Choose the right voltage before ordering.</p> <p>C: Choose the right coupling before ordering.</p> <p>D: Refer to <i>Other Circuit Boards and Electrical Components</i> earlier in this section. All items in this parts list are recommended spare parts.</p>			

Optional Equipment

Flow/Pressure Control and Pressure Indication

Part	Description	Note
1120104	KIT,SERVICE,PCV,1100 PSI,DURA_ALTA_DRUM	
7411877	RUN UP PCV,1100PSI, DURABLU,PA	
1030537	KIT, GAUGE, 1500 PSI	
7412846	KIT,TRANSDUCER,0-10V,0-5.0 BAR	

Expansion and Control Kits

Part	Description	Note
1036607	KIT, I/O EXPANSION CARD (DIGITAL)	
1063740	KIT, ANALOG I/O BOARD	
1053288	KIT, DEVICENET CARD	
1053289	KIT, ETHERNET CARD	
1053300	KIT, PROFIBUS CARD	
1030542	KIT, FOOTSWITCH	
1047093	KIT, REMOTE TRIGGER	
7403945	RIBBON CABLE,34POS,3 HEADERS,ALTAPAIL II	
7411739	KIT,SERVICE,KEYPAD,MOTOR DRIVER,EZ	

Cooling Fan and Light Tower

Part	Description	Note
7413496	KIT,SVCE,FAN,ALTAPUR	
7413172	KIT,LIGHT TOWER,ALTAPUR	

Line-Speed Signal Generator

To use the gear-to-line capability of the melter, you must install a device that measures the speed of the production line. The default type of line-speed signal input is 0-10 VDC, although other inputs can be accepted. Nordson Corporation offers the following 0-10 VDC generator.

Part	Description	Note
119560	GENERATOR, 0-10 VDC, WITH BRACKET AND CABLE	

Section 8

Technical Data

General Specifications

Item	Data	Note
Weight of empty melter	100 kg (221 lb)	
Weight of melter with full reservoir	104 kg (230 lb)	
Hydraulic hose ports	3	
Melt rate (at nominal voltage)	4 kg/hr (9 lb/hr)	A
Noise	64dB (A) at maximum pump speed	B
Workplace temperature	0 to 40°C (32 to 104 °F)	
Throughput rate (at nominal voltage)	5 kg/hr (11 lb/hr)	
Pump speed	0-80 rpm	C
NOTE A: Varies depending on the type of adhesive used. B: The noise level is measured at a distance of 1 m (3.3 ft.) from the surface of the melter. C: For displacement information, refer to <i>Motor and Pump Specifications</i> .		

Motor and Pump Specifications

Item	Data	Note
Viscosity range	45,000 cps	
Maximum hydraulic pressure	75 bar (1100 psi)	
Displacement	SN0015 – 0.7 kg/hr SN0030 – 1.4 kg/hr SN0046 – 2.2 kg/hr SN0062 – 2.9 kg/hr SN0093 – 4.5 kg/hr SN0186 – 8.9 kg/hr SN0371 – 17.8 kg/hr SN0773 – 37.1 kg/hr SN1710 – 82.1 kg/hr SH0371 – 17.8 kg/hr SH0773 – 37.1 kg/hr	

Electrical Specifications

NOTE: Refer to *Configuring the Electrical Service* in Section 3, *Installation*, for maximum amperage specifications.

Item	Data		Note
	Nominal	Allowable Range	
Voltage	200 VAC	180-220 VAC	A
	200-240 VAC	180-264 VAC	A
	400/230 VAC	312/180-457/264 VAC	A, B
Maximum melter power requirements	5700W		
Frequency	50/60 Hz		
Hose/applicator heating capacity	3 hose/applicator pairs		
Control temperature range	Minimum: 50 °C (120 °F) Maximum:190 °C (374 °F)		
Control temperature accuracy	± .5 °C (± 1 °F)		
IP rating	IP54		
NOTE A: Depends on the melter configuration and the voltage plug installed. Refer to <i>Melter Part Numbers</i> in Section 7, <i>Parts</i> , and to <i>Melter Configuration</i> later in this section to determine the configuration of your melter.			
B: 400/230 VAC is for electrical service with neutral (WYE) where the 400 VAC is a line-to-line voltage and the 230 VAC is a line-to-neutral voltage.			

Heater Specifications

NOTE: Refer to the hose and applicator manuals for hose/applicator heater specifications.

Location	Wattage (see Note A)	Voltage	Cold Resistance (see Note B)
Manifold	600	240 V	82-96 ohms
		200 V	57-67 ohms
Reservoir	2 x 400	240 V	137-160 ohms each
		200 V	85-100 ohms each
Melt plate	2 x 400	240 V	137-160 ohms each
		200 V	85-100 ohms each
NOTE A: Nominal wattage at 177-204 °C (350-400 °F). B: Measured at room temperature for a previously heated element.			

Dimensions

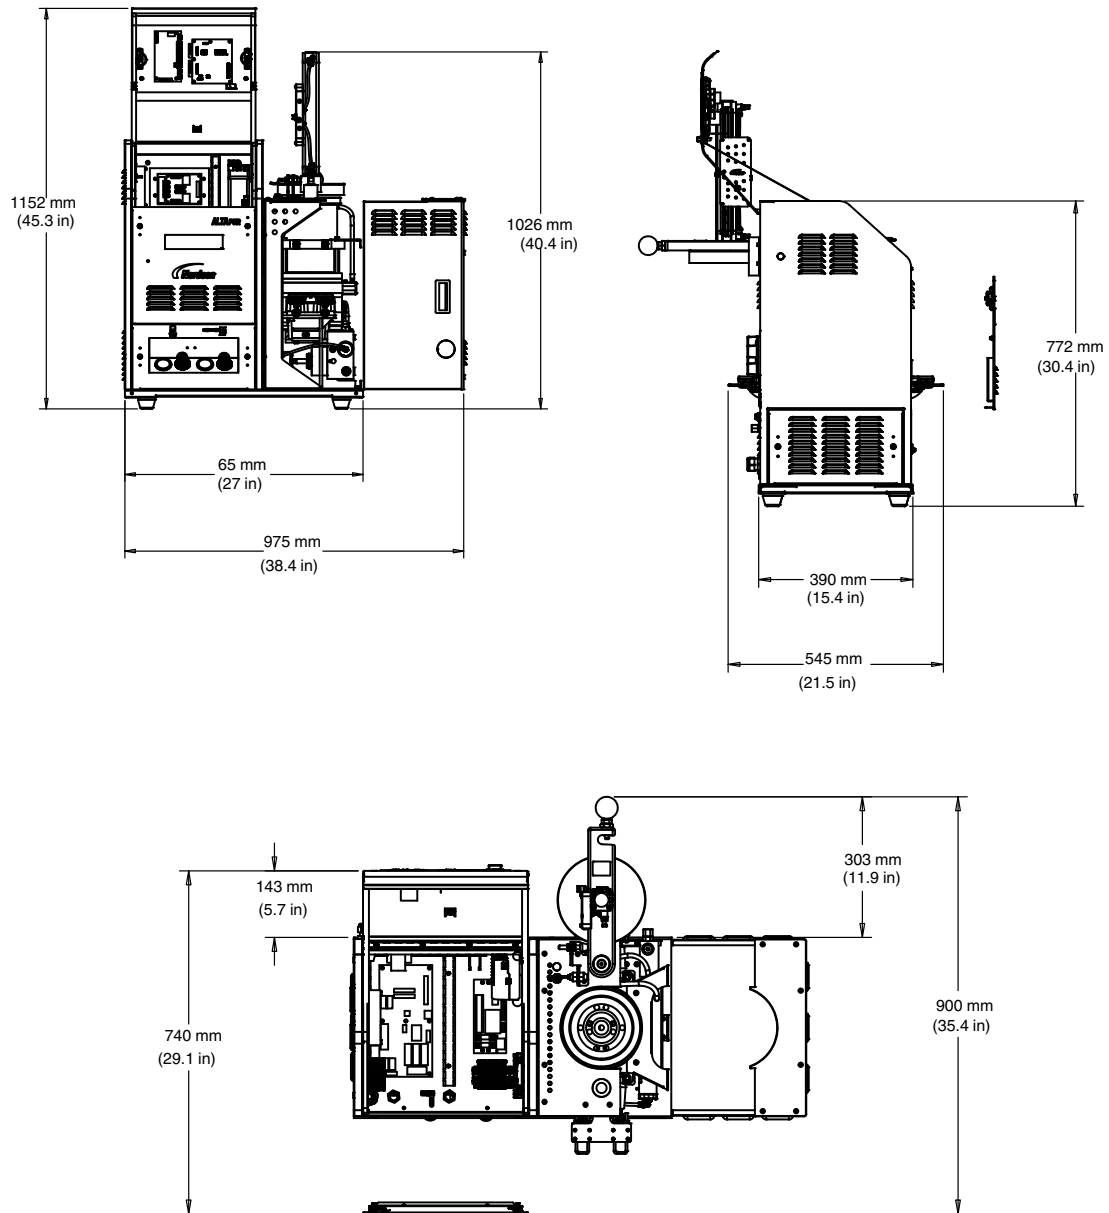


Figure 8-1 Melter dimensions

Conduit Penetration Sizes

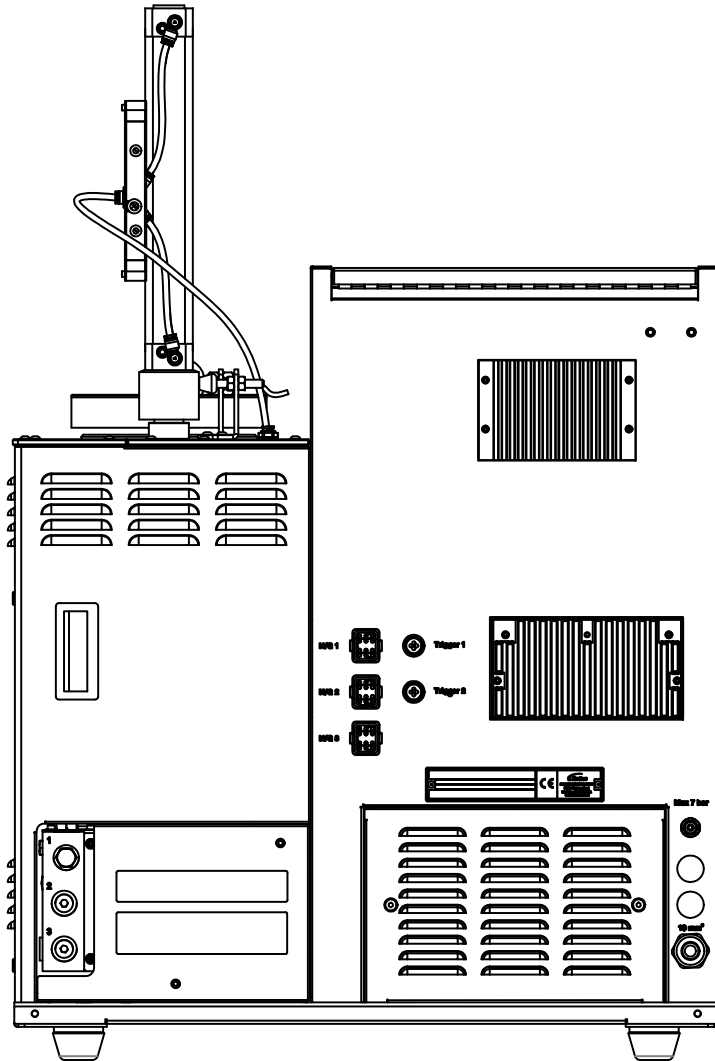


Figure 8-2 Conduit penetration sizes

Flow Control Bypass Pneumatic Schematic

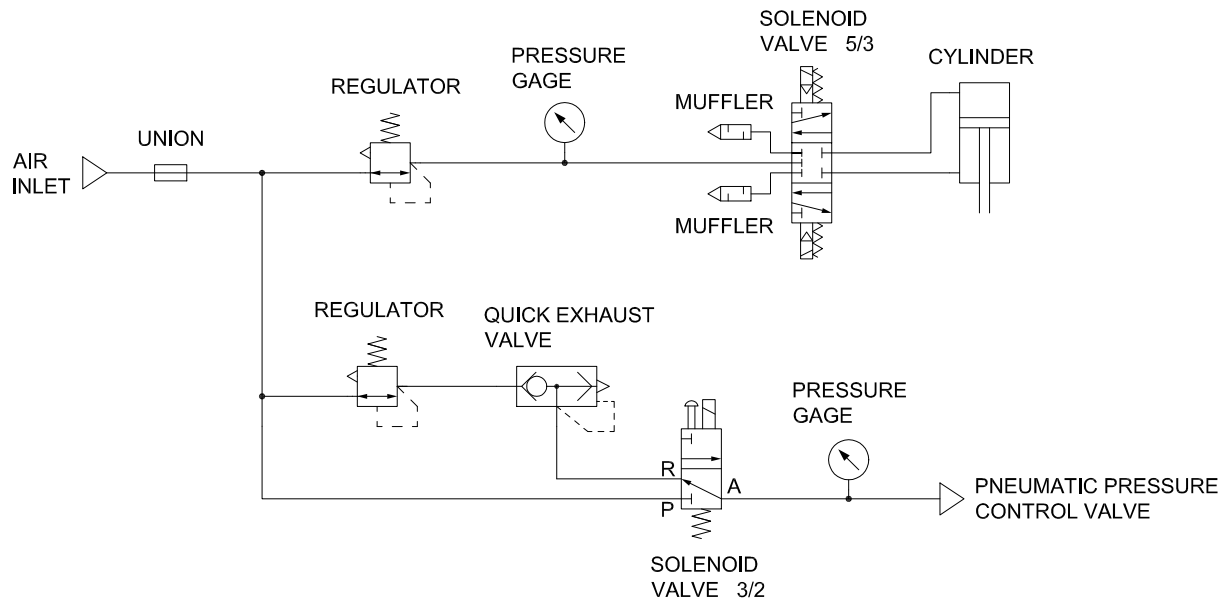


Figure 8-3 Flow control bypass option pneumatic schematic

Melter Configuration

See Figure 8-4. The configuration of the melter is stamped on the equipment identification plate. To determine the configuration of your melter, refer to Table 8-1.

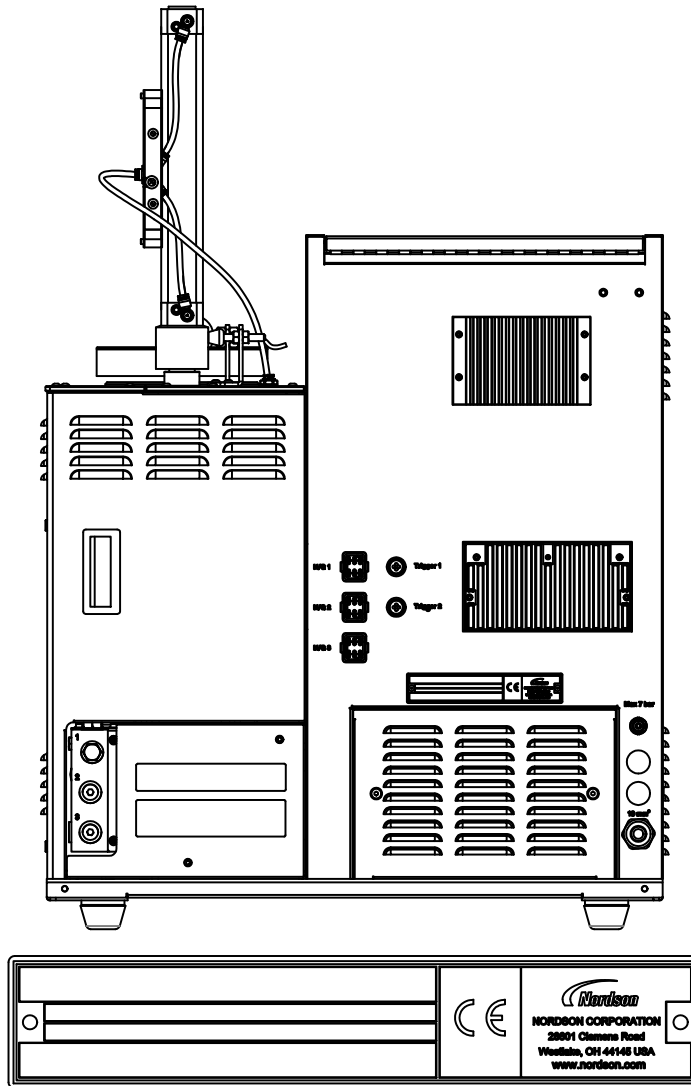


Figure 8-4 Unit identification plate

Table 8-1 Melter Configuration Description

Box	Description	Configuration
1	Identifies the equipment as an AltaPUR melter	AltaPUR = AltaPUR melter
2	Adhesive slug size	134 mm diameter (2 kg) 154 mm diameter (3 and 4 kg)
3	Pump	SN0015 – .7kg/hr SN0030 – 1.4 kg/hr SN0046 – 2.2 kg/hr SN0062 – 2.9 kg/hr SN0093 – 4.5 kg/hr SN0186 – 8.9 kg/hr SN0371 – 17.8 kg/hr SN0773 – 37.1 kg/hr SN1710 – 82.1 kg/hr SH0371 – 17.8 kg/hr SH0773 – 37.1 kg/hr
4	Pressure control	Manual PCV (MPCV) Automatic pressure control (APCV) Flow control bypass (FCB)
5	Voltage	240 VAC Delta or 400VAC Wye 200 VAC Delta

This page intentionally left blank.

Appendix A

Calculating Melter Power Requirements

Before locating the melter on the production floor or attaching hoses and applicators to the melter, you must calculate the electrical power required by the hoses and applicators and confirm that the required power does not exceed maximum allowable wattages. Properly calculating melter power requirements will prevent damage to the melter and identify the maximum allowable distance between the melter and the point at which the hot melt is dispensed.

The following three maximum wattages must be considered when calculating melter power requirements.

- **Single-component maximum**—The wattage of any single hose or applicator
- **Hose/applicator pair maximum**—The combined wattage of any hose and applicator (hose/applicator pair)
- **Two hose/applicator pair maximum**—The combined wattage of hose/applicator pair 1 or hose/applicator pairs 2 and 3

If your Nordson representative has already calculated the hose/applicator power requirements and confirmed that the maximum allowable wattages will not be exceeded, then no further calculation is necessary. However, you should re-evaluate the hose and applicator power requirements before you:

- add a new hose or applicator to the melter that was not factored into the original wattage evaluation
- replace an existing hose with a higher wattage hose or an existing applicator with a higher wattage applicator

To evaluate the hose/applicator power requirements

1. Identify all hose/applicator pairs based on the hose/applicator receptacle to which they are connected.
2. Examine the identification tag or plate on each hose and applicator and record the wattage of each in Column A of Table A-1. Enter a zero for any hose or applicator that is not installed.
3. Add the wattages of each hose/applicator pair and place the sum in Column B of Table A-1.
4. Add the wattages of hose/applicator pair 1 and hose/applicator pairs 2 and 3 and place the sum in Column C of Table A-1.
5. Compare each of the wattages tabulated in Columns A, B, and C of Table A-1 with the associated maximum allowable wattages in Table A-2.
6. Do *one* of the following:
 - If each of the wattages calculated in step 5 *do not* exceed the associated maximum allowable wattages listed in Table A-2, then the power required by the hoses and applicators is within acceptable limits.
 - If any of the wattages calculated in step 5 *does* exceed an associated maximum allowable wattage listed in Table A-2, then the configuration or position of the hose/applicator pairs must be rearranged, shorter hoses must be used, or lower power applicators must be used in order to reduce the power requirement.

Table A-1 Hose/Applicator Wattages

Component Number	Type/Size	A	B	C
		Component Wattage	Hose/Applicator Pair Wattage	Multi-Hose/Applicator Pair Wattage
Hose 1				
Applicator 1				
Hose 2				
Applicator 2				
Hose 3				
Applicator 3				

Table A-2 Maximum Allowable Hose/Applicator Wattages

Column in Table A-1	Component	Maximum Wattage
A	Any single hose or applicator	1000 W
B	Any hose/applicator pair	1200 W
C	Sum of hose/applicator pairs 2 and 3	2000 W

Appendix B

Operating Parameters

Operating parameters are organized in this appendix according to the logical groups listed in Table B-1. For information about selecting and editing operating parameters, refer to Section 3, *Installation, Setting Up the Melter*.

NOTE: Parameter numbers that are reserved or that are not used do not appear in this appendix.

Table B-1 Parameter Groups

Group	Parameter Numbers	Group Description
Standard	0 to 8 and 10 to 14	Frequently used parameters
Pressure Control	15 to 17	Configure pressure settings
Temperature Control	20 to 29	Control heater function
Input Setup	30 to 39	Configure the standard and optional inputs
Output Setup	40 to 46	Configure the standard and optional outputs
PUR Timer	49	Set the PUR timer
Seven-day Clock	50 to 77	Configure the clock feature
Automatic Fill Timer	78	Configure the external motor control switch
PID Selection	80 to 91	Configure the PID settings

Standard

0 Enter Password

Description:	A user-defined password that prevents unauthorized changes to setpoint temperatures and operating parameters.
Value:	0 to 9999
Resolution:	1
Default Value:	4000
Format:	—
Use:	This parameter only appears if a password is created using parameter 11 and then enabled using parameter 10. NOTE: The melter remains in the password-protected mode for two minutes after the last key press. After exiting the setup mode, attempting to re-enter the setup mode, even before two minutes has elapsed, will require you to re-enter the password.

1 Total Hours with Heaters On (Noneditable)

Description:	A noneditable value that indicates the total number of hours that the heaters have been on.
Value:	999,999 (using abbreviated convention described below)
Resolution:	1 hour
Default Value:	0
Format:	—
Use:	The right display indicates up to 9999 hours of heater operation. When the accumulated heater hours reaches 10,000, the display alternates every two seconds between the three left most digits (thousands) and the three right digits (hundreds). For example, 10,001 hours would be displayed as "10," for two seconds and then "001" for two seconds. The comma is present if parameter 20, <i>Temperature Units</i> , is set to degrees Fahrenheit. A period is present if parameter 20 is set to degrees Celsius.

2 Fault Log (Noneditable)

Description:	Stores a record of the last ten faults.
Value:	—
Resolution:	—
Default Value:	_F0 (unused log entry)
Format:	F1, F2, F3, and F4
Use:	Use the right-display scroll keys to review the log entries for the last ten faults. Empty log entries are indicated by "_F0." Refer to <i>Monitoring the Melter</i> in Section 4, <i>Operation</i> .

3 Change History Log**(Noneditable)**

Description:	Records the last ten changes made to either the setpoint temperatures or the operating parameters.
Value:	—
Resolution:	—
Default Value:	P-_ (unused log entry)
Format:	Refer to Section 3, <i>Installation, Review Parameter and Setpoint Temperature Changes</i> .
Use:	Use the right-display key to review the log entries for the last ten changes that were made to the operating parameters or the setpoint temperatures. Empty log entries are indicated by "P-_"

4 Ready Delay Time

Description:	The amount of time that will elapse after all of the components have reached their setpoint temperature before the ready LED will turn on. The ready delay time only functions when the temperature of the reservoir, at the time the melter is turned on, is more than 27 °C (50 °F) from its setpoint temperature. The ready delay time begins when all components are within 3 °C (5 °F) of their respective setpoint temperature.
Value:	10 to 60 minutes
Resolution:	1 minute
Default Value:	15 minutes
Format:	Left display "rd." Right display, minutes or seconds remaining.
Use:	The ready delay allows the contents of the reservoir an additional amount of time to heat before pump turns on. NOTE: The time remaining on the ready delay is indicated in minutes in the right display at the end of every automatic scan cycle. When the delay time reaches 1 minute, the time remaining appears in seconds.

5 Service Interval Time

Description:	The number of heater-on hours that must elapse before the service LED turns on.
Value:	0 hours (disabled) to 8736 (one year)
Resolution:	1 hour
Default Value:	500 hours
Format:	—
Use:	Set the service interval time to signal a user-defined service check or maintenance event, such as changing the filter. The service LED will turn on after the pre-set time elapses. With the melter in the scan mode, press the Clear/Reset key to turn off the service LED and reset the time.

Standard *(contd)*

6 Service LED Heater Hours

(Noneditable)

Description:	A timer indicates how many more hours the heaters need to remain on before the service LED illuminates (service required).
Value:	0 hours (disabled) to 9999
Resolution:	1 hour
Default Value:	0
Format:	—
Use:	The service interval time (parameter 5) must be enabled before this parameter will work. NOTE: Heater hours accumulate whenever the heaters LED is illuminated.

7 Motor Off Delay

Description:	Determines the amount of time the motor will remain on after the switching device turns off.
Value:	0 to 360 seconds OR - - - (infinite)
Resolution:	seconds
Default Value:	0 seconds
Format:	—
Use:	This parameter functions only when a switching device (switched hand-held applicator hose, footswitch, etc.) is connected to the switch receptacle.

8 Automatic Pump On

Description:	Determines if the pump will turn on automatically when the melter is ready.
Value:	0 = disabled or 1 = enabled
Resolution:	—
Default Value:	1 (enabled)
Format:	—
Use:	If Automatic Pump On is disabled, you must press the pump key to turn the pump on. If Automatic Pump On is enabled, the pump will turn on automatically when the melter is ready. NOTE: If Automatic Pump On is disabled (0) while the pump is running, the pump will remain on until the pump key is pressed.

10 Enable or Disable the Melter Password

Description:	Activates or deactivates the melter password. When password protection is activated, component setpoint temperatures or melter operating parameters cannot be changed until a valid password is entered using parameter 0.
Value:	0 (disabled) 1 (enabled)
Resolution:	—
Default Value:	0
Format:	—
Use:	A password must first be created using parameter 11 before it can be enabled or disabled using parameter 10.

11 Create Password

Description:	A user-defined password that prevents unauthorized changes to operating parameters or setpoint temperatures.
Value:	0 to 9999
Resolution:	1
Default Value:	5000
Format:	—
Use:	Refer to Section 4, <i>Operation, Entering the Melter Password</i> . NOTE: When the password is created and enabled, parameter 10 will not appear again in the right display until the password is entered.

12 Change Hose 1 Output to Electric Applicator Activation

Description:	Changes the proportioned 240 VAC current that is provided to the hose 1 heater to a switched 240 VAC current that is used to activate a manifold-mounted electric applicator.
Value:	0 (disabled) 1 (enabled)
Resolution:	—
Default Value:	0 (disabled)
Format:	—
Use:	Use only when a Nordson manifold-mounted electric applicator is installed and a switching device is connected to the melter's switch receptacle. Refer to the electric applicator manual for information on mounting and using the applicator.

Standard *(contd)*

13

Change Hose 2 Output to Electric Applicator Activation

Description:	Changes the proportioned 240 VAC current that is provided to the hose 1 heater to a switched 240 VAC current that is used to activate a manifold-mounted electric applicator.
Value:	0 (disabled) 1 (enabled)
Resolution:	—
Default Value:	0 (disabled)
Format:	—
Use:	Use only when a Nordson manifold-mounted electric applicator is installed and a switching device is connected to the melter's switch receptacle. Refer to the electric applicator manual for information on mounting and using the applicator.

14

External Communications Lock-out

Description:	Used as a safety feature when performing maintenance on the melter. Prevents external control of the melter through standard or optional inputs/outputs or network communications (optional)
Value:	0 (disabled) or 1 (enabled)
Resolution:	—
Default Value:	0 (disabled)
Format:	—
Use:	Set parameter to 1 (enabled) before performing any maintenance on the melter. When enabled, all external control of the melter stops until the parameter is once again set to 0 (disabled).

Pressure Control

15 Pressure Setpoint

Description:	Used to set the percentage of maximum output pressure (from 0-100 percent).
Value:	0 to 100 (percent)
Resolution:	—
Default Value:	0 (disabled)
Format:	—
Use:	This parameter is available only when the optional analog input/output (I/O) board is installed on the melter. Refer to Section 7, <i>Parts</i> , for the I/O board kit part number. The pressure is displayed after the last applicator temperature: the left display shows a P (for pressure) and the right display shows the pressure reading.

16 Over Pressure Setpoint

Description:	If the pressure in the system exceeds the value of this setting, an over-pressure alarm will occur.
Value:	0 to 50 (percent) above the pressure setpoint (parameter 15)
Resolution:	—
Default Value:	0
Format:	—
Use:	This parameter is available only when the optional analog I/O board is installed on the melter. Refer to Section 7, <i>Parts</i> , for the I/O board kit part number.

17 Under Pressure Setpoint

Description:	If the pressure in the system drops below the value of this setting, an under-pressure alarm will occur.
Value:	0 to 50 (percent) below the pressure setpoint (parameter 15)
Resolution:	—
Default Value:	0
Format:	—
Use:	This parameter is available only when the optional analog I/O board is installed on the melter. Refer to Section 7, <i>Parts</i> , for the I/O board kit part number.

Temperature Control

20 Temperature Units

Description:	Sets the units for temperature display.
Value:	C (degrees Celsius) or F (degrees Fahrenheit)
Resolution:	1 degree
Default Value:	C
Format:	—
Use:	—

21 Over Temperature Delta

Description:	The number of degrees that the temperature of any component can increase over its assigned setpoint temperature before an over temperature fault (F3) will occur.
Value:	5 °C (10 °F) to 60 °C (110 °F)
Resolution:	1 °C 1 °F
Default Value:	15 °C (25 °F)
Format:	—
Use:	—

22 Under Temperature Delta

Description:	The number of degrees that the temperature of any component can decrease from its setpoint temperature before an under temperature fault (F2) occurs.
Value:	5 °C (10 °F) to 60 °C (110 °F)
Resolution:	1 °C 1 °F
Default Value:	25 °C (50 °F)
Format:	—
Use:	—

23 Standby Delta

Description:	The number of degrees by which all heated components will be decreased when the applicator is placed into the standby mode.
Value:	5 °C to 190 °C (10 °F to 350 °F)
Resolution:	1 °C 1 °F
Default Value:	50 °C (100 °F)
Format:	—
Use:	A standby delta should be selected that results in a balance between melter energy savings during periods of inactivity, the amount of time and energy required to bring the melter back up to setpoint temperature, and a temperature at which the hot melt can be held in the reservoir for extended periods of time without charring. Refer to Section 4, <i>Operation, Using Melter Function Keys</i> . NOTE: The standby delta does not affect the under temperature delta (parameter 22).

24 Automatic Standby Timeout

Description:	The amount of time that the melt plate can stay off (as controlled by the melt-on-demand function) before the melter is placed in standby. Automatic Standby Timeout protects the PUR adhesive from unnecessary heat exposure when the melter is not in use.
Value:	30 to 1440 minutes
Resolution:	1 minute
Default Value:	180 (minutes)
Format:	—
Use:	1. Change parameter 23 if required.

25 Automatic Heaters Off Time

Description:	The amount of time that must elapse after the automatic standby time elapses (parameter 24) before the heaters turn off.
Value:	0 to 1440 minutes (24 hours)
Resolution:	1 minute
Default Value:	0 (disabled)
Format:	—
Use:	Set parameter 24 (automatic standby timeout) to the desired value before setting parameter 25.

Temperature Control *(contd)*

26 Manual Standby Time

Description:	The amount of time that the melter will remain in the standby mode after the standby key is pressed.
Value:	0 to 180 minutes
Resolution:	1 minute
Default Value:	0
Format:	—
Use:	<p>Set the standby time when you want the operator to be able to place the melter into the standby mode for a limited period of time (break, lunch, etc.). When manual standby is enabled (value greater than 0 minutes), the standby LED blinks.</p> <p>Set the standby delta (parameter 23) to the desired value before setting parameter 26.</p> <p>NOTE: When a time value equal to or greater than 1 minute is entered, the standby LED will flash to indicate that the manual standby timer is counting down.</p>

27 Hose Standby Delta

Description:	The number of degrees by which all heated hoses will be decreased when the applicator is placed into the standby mode.
Value:	1 °C to 190 °C (1 °F to 350 °F)
Resolution:	1 °C 1 °F
Default Value:	0
Format:	—
Use:	<p>This parameter functions like parameter 23 except when it is set to 0, in which case it reverts to the setting for parameter 23.</p> <p>NOTE: The standby delta does not affect the under temperature delta (parameter 22).</p>

28 Applicator Standby Delta

Description:	The number of degrees by which all heated applicators will be decreased when the applicator is placed into the standby mode.
Value:	1 °C to 190 °C (1 °F to 350 °F)
Resolution:	1 °C 1 °F
Default Value:	0
Format:	—
Use:	<p>This parameter functions like parameter 23 except when it is set to 0, in which case it reverts to the setting for parameter 23.</p> <p>NOTE: The standby delta does not affect the under temperature delta (parameter 22).</p>

29 Internal Zone Temperature Offset

Description: The difference in the number of degrees by which the melter's internal zones will operate. If this parameter is used, the primary internal zone will operate at a lower temperature than the secondary internal zone as determined by the value of this parameter.

Value: 0 °C to -15 °C (0 °F to -30 °F)

Resolution: 1 °C
1 °F

Default Value: 0

Format: —

Use: Melter internal zones are designated as follows:
DuraBlue D10/D16: primary=reservoir; secondary=pump
DuraBlue D4L/D10L/D16L: primary=reservoir; secondary=pump
AltaBlue TT: primary=reservoir; secondary=pump
DuraBlue 25/50/100: primary=melt plate; secondary=reservoir
AltaBlue 15/30/50/100: primary=melt plate; secondary=reservoir
DuraDrum: primary=platen; secondary=pump
AltaPUR: 4 primary=reservoir; secondary=manifold;
tertiary=melt plate

Input Setup

30 Standard Input 1

Description:	Control options that determine the function of input 1.
Value:	0 – Input Disabled 1 – Standby On/Off 2 – Heaters On/Off 3 – Motor Enable/Disable 4 – Hose/Applicator 1 Enable/Disable 5 – Hose/Applicator 2 Enable/Disable 6 – Hose/Applicator 3 Enable/Disable 7 – Hose/Applicator 4 Enable/Disable 8 – Hose/Applicator 5 Enable/Disable 9 – Hose/Applicator 6 Enable/Disable 11 – Motor 2 Enable/Disable (DuraBlue D50 and D100 melters only) 13 – Automatic Fill Timer 1 14 – Automatic Fill Timer 2 (DuraBlue D50 and D100 melters only)
Resolution:	1
Default Value:	0
Format:	—
Use:	Multiple inputs can be set to the same input value. After one or more inputs that have the same input value are energized, the input functionality will not be considered inactive (off) until all of the inputs with the same input value are de-energized (multiple inputs set to the same input value are logical ORed.). NOTE: Parameter 78, <i>Automatic Fill Timer</i> , must be set to a value of 1 or greater in order to use option 13 or 14. Output option 6, <i>Alert</i> , can be used to signal when the Automatic Fill Timer expires.

31 Standard Input 2 (Noneditable)

Description:	Control option that allows the unit to function as a PUR melter.
Value:	20 – Hopper empty
Resolution:	—
Default Value:	20
Format:	—
Use:	Allows a PUR melter to identify when the hopper is empty.

32 Standard Input 3 (Noneditable)

Description:	Control option that allows the unit to function as a PUR melter.
Value:	19 – Melt demand
Resolution:	—
Default Value:	19
Format:	—
Use:	Allows a PUR melter to control the melt demand logic.

33 Standard Input 4

Description: Control options that determine the function of input 4.

Value: 0 – Input Disabled
1 – Standby On/Off
2 – Heaters On/Off
3 – Motor Enable/Disable
4 – Hose/Applicator 1 Enable/Disable
5 – Hose/Applicator 2 Enable/Disable
6 – Hose/Applicator 3 Enable/Disable
7 – Hose/Applicator 4 Enable/Disable
8 – Hose/Applicator 5 Enable/Disable
9 – Hose/Applicator 6 Enable/Disable
11 – Motor 2 Enable/Disable (DuraBlue D50 and D100 melters only)
13 – Automatic Fill Timer 1
14 – Automatic Fill Timer 2 (DuraBlue D50 and D100 melters only)

Resolution: 1

Default Value: 4

Format: —

Use: Multiple inputs can be set to the same input value. After one or more inputs that have the same input value are energized, the input functionality will not be considered inactive (off) until all of the inputs with the same input value are de-energized (multiple inputs set to the same input value are logical ORed.).

NOTE: Parameter 78, *Automatic Fill Timer*, must be set to a value of 1 or greater in order to use option 13 or 14. Output option 6, *Alert*, can be used to signal when the Automatic Fill Timer expires.

Input Setup *(contd)*

34 – 35 **Optional Inputs 5 and 6**

Description:	Control options that determine the function of two of the optional inputs provided when either the optional I/O expansion card (digital) or the analog I/O board is installed on the CPU board.
Value:	0 – Input Disabled 1 – Standby On/Off 2 – Heaters On/Off 3 – Motor Enable/Disable 4 – Hose/Applicator 1 Enable/Disable 5 – Hose/Applicator 2 Enable/Disable 6 – Hose/Applicator 3 Enable/Disable 7 – Hose/Applicator 4 Enable/Disable 8 – Hose/Applicator 5 Enable/Disable 9 – Hose/Applicator 6 Enable/Disable 11 – Motor 2 Enable/Disable (DuraBlue D50 and D100 melters only) 13 - Automatic Fill Timer 1 14 - Automatic Fill Timer 2 (DuraBlue D50 and D100 melters only)
Resolution:	1
Default Value:	0 (disabled)
Format:	—
Use:	Multiple inputs can be set to the same input value. After one or more inputs that have the same input value are energized, the input functionality will not be considered inactive (off) until all of the inputs with the same input value are de-energized (multiple inputs set to the same input value are logical ORed.). NOTE: Parameter 78, <i>Automatic Fill Timer</i> , must be set to a value of 1 or greater in order to use option 13 or 14. Output option 6, <i>Alert</i> , can be used to signal when the Automatic Fill Timer expires.

36 - 39 **Optional Inputs 7, 8, 9, and 10**

Description: Control options that determine the function of four of the optional inputs provided when the optional I/O expansion card (digital) is installed on the CPU board.

Value: 0 – Input Disabled
 1 – Standby On/Off
 2 – Heaters On/Off
 3 – Motor Enable/Disable
 4 – Hose/Applicator 1 Enable/Disable
 5 – Hose/Applicator 2 Enable/Disable
 6 – Hose/Applicator 3 Enable/Disable
 7 – Hose/Applicator 4 Enable/Disable
 8 – Hose/Applicator 5 Enable/Disable
 9 – Hose/Applicator 6 Enable/Disable
 11 – Motor 2 Enable/Disable (DuraBlue D50 and D100 melters only)
 13 - Automatic Fill Timer 1
 14 - Automatic Fill Timer 2 (DuraBlue D50 and D100 melters only)

Resolution: 1

Default Value: 0 (disabled)

Format: —

Use: Multiple inputs can be set to the same input value. After one or more inputs that have the same input value are energized, the input functionality will not be considered inactive (off) until all of the inputs with the same input value are de-energized (multiple inputs set to the same input value are logical ORed.).

NOTE: Parameter 78, *Automatic Fill Timer*, must be set to a value of 1 or greater in order to use option 13 or 14. Output option 6, *Alert*, can be used to signal when the Automatic Fill Timer expires.

Output Setup

40 - 42 Standard Outputs 1, 2, and 3

Description:	Determines the function of the output.
Value:	0 = Output Disabled 1 = Ready 2 = Ready and motor is on 3 = Fault 4 = Reservoir empty 5 = Service LED is on 6 = Alert (Potential fault)
Resolution:	1
Default Value:	Output 1 = 1 Output 2 = 3 Output 3 = 6
Format:	—
Use:	Refer to <i>Installing Melter Outputs</i> in Section 3, <i>Installation</i> , for information on setting up outputs. When control option 6, <i>Alert</i> is selected, the output is active whenever the melter enters the two minute fault monitoring period. If the potential fault condition clears before the end of the two minute period, the output signal ends. Refer to Section 4, <i>Operation, Monitor Melter Faults</i> , for information about fault monitoring.

43 Optional Output 4

Description:	Control options that determine the function of one of the optional outputs provided when either the optional I/O expansion card (digital) or the I/O analog board is installed on the CPU board.
Value:	0 = Output Disabled 1 = Ready 2 = Ready and motor is on 3 = Fault 4 = Reservoir empty 5 = Service LED is on 6 = Alert (Potential fault)
Resolution:	1
Default Value:	0 (all optional outputs)
Format:	—
Use:	Refer to the instruction sheet provided with the optional I/O expansion card or analog I/O board for information about wiring and setting up the optional outputs. When control option 6, <i>Alert</i> is selected, the output is active whenever the melter enters the two minute fault monitoring period. If the potential fault condition clears before the end of the two minute period, the output signal ends. Refer to Section 4, <i>Operation, Monitor Melter Faults</i> , for information about fault monitoring.

44 - 46 **Optional Outputs 5, 6, and 7**

Description:	Control options that determine the function of three of the optional outputs provided when the optional I/O expansion card (digital) is installed on the CPU board.
Value:	0 = Output Disabled 1 = Ready 2 = Ready and motor is on 3 = Fault 4 = Reservoir empty 5 = Service LED is on 6 = Alert (Potential fault)
Resolution:	1
Default Value:	0 (all optional outputs)
Format:	—
Use:	Refer to the instruction sheet provided with the optional I/O expansion card for information about wiring and setting up the optional outputs. When control option 6, <i>Alert</i> is selected, the output is active whenever the melter enters the two minute fault monitoring period. If the potential fault condition clears before the end of the two minute period, the output signal ends. Refer to Section 4, <i>Operation, Monitor Melter Faults</i> , for information about fault monitoring.

PUR Timer**49** **PUR Timer**

Description:	Control option that determines the amount of time that the melt plate can remain on before it is automatically shut off and an S1Cal warning is displayed.
Value:	10 to 120 minutes
Resolution:	1 minute
Default Value:	30 minutes
Format:	—
Use:	For most applications, the melt plate only needs to stay on for about 10 minutes to satisfy the need for adhesive in the reservoir. Accordingly, if the melt plate is on continuously for a considerably longer time period (such as the default value of 30 minutes), it is likely that adhesive has not been added and the heaters are on but not in operation or that the melt-on-demand adhesive sensor is out of calibration. Refer to <i>Calibrating the Level Sensors</i> in Section 5, <i>Maintenance</i> , if this situation occurs and the S1Cal warning is displayed.

Seven-Day Clock


Before setting up the clock, refer to *Using Melter Function Keys* in Section 4, *Operation*, to familiarize yourself with the function and use of the clock feature.

If you are unfamiliar with the procedure for accessing and editing operating parameters, refer to Section 3, *Installation, Setting Up the Melter*.

To set the clock

Refer to the examples on the next page.

1. Use parameter 50 to select the current day of the week.
2. Use parameter 51 to set the current time of day.
3. Create schedule 1 by:
 - a. Setting parameters 55 and 56 to the time of the day that the heaters should turn on and off.
 - b. Setting parameters 57 and 58 to the time of the day that the melter should enter and exit the standby mode.
4. Using parameters 60 through 68, create schedules 2 and 3 by repeating step 3.
5. Use parameters 71 through 77 to assign which of the four schedules should be used on each day of the week. Up to three schedules may be assigned each day (to support three work shifts). Each of the eight control options (0 to 7) that is available in parameters 71 through 77 assigns a different combination of the three schedules. Option 0 is used hold the melter in the state dictated by the last clock transition until the next clock transition occurs.
6. Press the **Clock** key.

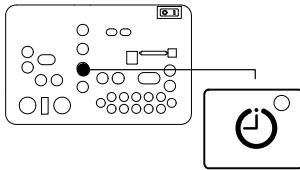

Seven-day clock key



In order for the clock to operate continuously throughout the week, a valid schedule must be assigned to every day of the week (parameters 71 through 77).

To prevent unintentional activation of the clock the default setting for parameters 71 through 77 is schedule 0, which has no time values assigned to it. With the default set to schedule 0, unintentionally pressing the clock key will have no effect on the melter.

Example 1

To turn the heaters on at 0600 and turn them off at 0015 every day of the week:

Par 55 = 0600
Par 56 = 0015
Par 60 = - - - -
Par 61 = - - - -
Par 71 through 77 = 1

Example 2

To turn the heaters on at 0700 and off at 1700 Monday through Friday, and turn the heaters off Saturday and Sunday:

Par 55 = 0700
Par 56 = 1700
Par 57 = - - - -
Par 58 = - - - -
Par 71 through 75 = 1
Par 76 and 77 = 0

Example 3

To turn the heaters on at 0600 each morning, go into standby for lunch at 1130, come out of standby after lunch at 1230, and turn the heaters off at 1600 at the end of the day, every day of the week:

Par 55 = 0600
Par 56 = 1600
Par 57 = 1130
Par 58 = 1230
Par 71 through 75 = 1
Par 71 and 77 = 1

Seven-Day Clock *(contd)*

50 Current Day

Description:	Used to set the current day of the week.
Value:	1 to 7 (1 = Monday, 2 = Tuesday, etc.)
Resolution:	1
Default Value:	—
Format:	—
Use:	Refer to Section 4, <i>Operation, Using Melter Function Keys</i> , for information about the use and affects of the seven-day clock feature.

51 Current Hour

Description:	Used to set the local time of the day.
Value:	0000 to 2359 (European time format)
Resolution:	1 minute
Default Value:	(Time set at factory)
Format:	<i>Hours, Hour: Minute, Minute</i>
Use:	This setting only needs to be made once for all daily schedules

55 Schedule 1 Heaters On

Description:	Used to set the time that the clock will turn on the heaters during schedule 1.
Value:	0000 to 2359, - - - -
Resolution:	1 minute
Default Value:	0600
Format:	<i>Hours, Hour: Minute, Minute</i>
Use:	Set the desired time for the heaters to turn on. To disable this parameter, set the parameter's value to "- - - -" by simultaneously pressing both of the right-display scroll keys.

56 Schedule 1 Heaters Off

Description:	Used to set the time that the clock will turn off the heaters during schedule 1.
Value:	0000 to 2359, - - - -
Resolution:	1 minute
Default Value:	1700
Format:	<i>Hours, Hour: Minute, Minute</i>
Use:	To disable this parameter, set the parameter's value to "- - - -" by simultaneously pressing both of the right-display scroll keys.

57 Schedule 1 Enter Standby

Description:	Used to set the time that the melter will enter the standby mode during schedule 1.
Value:	0000 to 2359, - - - -
Resolution:	1 minute
Default Value:	- - - -
Format:	<i>Hour, Hour: Minute, Minute</i>
Use:	Set the time that the applicator will enter the standby mode during schedule 1. To disable this parameter, set the parameter's value to "- - - -" by simultaneously pressing both of the right-display scroll keys. NOTE: Do not set an enter standby time that is outside of the time period defined by the schedule's heater on and off time. The melter cannot enter the standby mode when the heaters are off.

58 Schedule 1 Exit Standby

Description:	Used to set the time that the melter will exit the standby mode during schedule 1.
Value:	0000 to 2359, - - - -
Resolution:	1 minute
Default Value:	- - - -
Format:	<i>Hour, Hour: Minute, Minute</i>
Use:	Set the time that the applicator will exit the standby mode during schedule 1. To disable this parameter, set the parameter's value to "- - - -" by simultaneously pressing both of the right-display scroll keys. NOTE: Do not set an exit standby time that is outside of the time period defined by the schedule's heater on and off time. The melter cannot enter the standby mode when the heaters are off.

60 Schedule 2 Heaters On

Description:	Used to set the time that the clock will turn on the heaters during schedule 2.
Value:	0000 to 2359, - - - -
Resolution:	1 minute
Default Value:	- - - -
Format:	<i>Hours, Hour: Minute, Minute</i>
Use:	Set the desired time for the heaters to turn on. To disable this parameter, set the parameter's value to "- - - -" by simultaneously pressing both of the right-display scroll keys.

Seven-Day Clock *(contd)*

61 Schedule 2 Heaters Off

Description:	Used to set the time that the clock will turn off the heaters during schedule 2.
Value:	0000 to 2359, - - - -
Resolution:	1 e
Default Value:	- - - -
Format:	<i>Hours, Hour: Minute, Minute</i>
Use:	To disable this parameter, set the parameter's value to "- - - -" by simultaneously pressing both of the right-display scroll keys.

62 Schedule 2 Enter Standby

Description:	Used to set the time that the melter will enter the standby mode during schedule 2.
Value:	0000 to 2359, - - - -
Resolution:	1 minute
Default Value:	- - - -
Format:	<i>Hour, Hour: Minute, Minute</i>
Use:	<p>Set the time that the applicator will enter the standby mode during schedule 2.</p> <p>To disable this parameter, set the parameter's value to "- - - -" by simultaneously pressing both of the right-display scroll keys.</p> <p>NOTE: Do not set an enter standby time that is outside of the time period defined by the schedule's heater on and off time. The melter cannot enter the standby mode when the heaters are off.</p>

63 Schedule 2 Exit Standby

Description:	Used to set the time that the melter will exit the standby mode during schedule 2.
Value:	0000 to 2359, - - - -
Resolution:	1 minute
Default Value:	- - - -
Format:	<i>Hour, Hour: Minute, Minute</i>
Use:	<p>Set the time that the applicator will exit the standby mode during schedule 2.</p> <p>To disable this parameter, set the parameter's value to "- - - -" by simultaneously pressing both of the right-display scroll keys.</p> <p>NOTE: Do not set an exit standby time that is outside of the time period defined by the schedule's heater on and off time. The melter cannot enter the standby mode when the heaters are off.</p>

65 Schedule 3 Heaters On

Description:	Used to set the time that the clock will turn on the heaters during schedule 3.
Value:	0000 to 2359, - - - -
Resolution:	1 minute
Default Value:	- - - -
Format:	<i>Hours, Hour: Minute, Minute</i>
Use:	Set the desired time for the heaters to turn on. To disable this parameter, set the parameter's value to "- - - -" by simultaneously pressing both of the right-display scroll keys.

66 Schedule 3 Heaters Off

Description:	Used to set the time that the clock will turn off the heaters during schedule 3.
Value:	0000 to 2359, - - - -
Resolution:	1 minute
Default Value:	- - - -
Format:	<i>Hours, Hour: Minute, Minute</i>
Use:	To disable this parameter, set the parameter's value to "- - - -" by simultaneously pressing both of the right-display scroll keys.

67 Schedule 3 Enter Standby

Description:	Used to set the time that the melter will enter the standby mode during schedule 3.
Value:	0000 to 2359, - - - -
Resolution:	1 minute
Default Value:	- - - -
Format:	<i>Hour, Hour: Minute, Minute</i>
Use:	Set the time that the applicator will enter the standby mode during schedule 3. To disable this parameter, set the parameter's value to "- - - -" by simultaneously pressing both of the right-display scroll keys. NOTE: Do not set an enter standby time that is outside of the time period defined by the schedule's heater on and off time. The melter cannot enter the standby mode when the heaters are off.

Seven-Day Clock *(contd)*

68 Schedule 3 Exit Standby

Description:	Used to set the time that the melter will exit the standby mode during schedule 3.
Value:	0000 to 2359, - - - -
Resolution:	1 minute
Default Value:	- - - -
Format:	<i>Hour, Hour: Minute, Minute</i>
Use:	<p>Set the time that the applicator will exit the standby mode during schedule 3.</p> <p>To disable this parameter, set the parameter's value to "- - - -" by simultaneously pressing both of the right-display scroll keys.</p> <p>NOTE: Do not set an exit standby time that is outside of the time period defined by the schedule's heater on and off time. The melter cannot enter the standby mode when the heaters are off.</p>

71 Schedules for Monday

Description:	Used to select which schedule(s) should be used on Monday.
Value:	<p>0 – Remain at last clock transition</p> <p>1 – Use just schedule 1</p> <p>2 – Use just schedule 2</p> <p>3 – Use just schedule 3</p> <p>4 – Use schedule 1 and 2</p> <p>5 – Use schedule 2 and 3</p> <p>6 – Use schedule 1 and 3</p> <p>7 – Use schedule 1, 2, and 3</p>
Resolution:	1
Default Value:	0
Format:	—
Use:	<p>Selects the active schedule(s) for the day.</p> <p>NOTE: If the 0 schedule option is used, the heaters will not turn on again until the next scheduled heaters on time arrives.</p>

72 Schedules for Tuesday

Description: Used to select which schedule(s) should be used on Tuesday.

Value: 0 – Remain at last clock transition
1 – Use just schedule 1
2 – Use just schedule 2
3 – Use just schedule 3
4 – Use schedule 1 and 2
5 – Use schedule 2 and 3
6 – Use schedule 1 and 3
7 – Use schedule 1, 2, and 3

Resolution: 1

Default Value: 0

Format: —

Use: Selects the active schedule(s) for the day.

NOTE: If the 0 schedule option is used, the heaters will not turn on again until the next scheduled heaters on time arrives.

73 Schedules for Wednesday

Description: Used to select which schedule(s) should be used on Wednesday.

Value: 0 – Remain at last clock transition
1 – Use just schedule 1
2 – Use just schedule 2
3 – Use just schedule 3
4 – Use schedule 1 and 2
5 – Use schedule 2 and 3
6 – Use schedule 1 and 3
7 – Use schedule 1, 2, and 3

Resolution: 1

Default Value: 0

Format: —

Use: Selects the active schedule(s) for the day.

NOTE: If the 0 schedule option is used, the heaters will not turn on again until the next scheduled heaters on time arrives.

Seven-Day Clock *(contd)*

74 Schedules for Thursday

Description:	Used to select which schedule(s) should be used on Thursday.
Value:	0 – Remain at last clock transition 1 – Use just schedule 1 2 – Use just schedule 2 3 – Use just schedule 3 4 – Use schedule 1 and 2 5 – Use schedule 2 and 3 6 – Use schedule 1 and 3 7 – Use schedule 1, 2, and 3
Resolution:	1
Default Value:	0
Format:	—
Use:	Selects the active schedule(s) for the day. NOTE: If the 0 schedule option is used, the heaters will not turn on again until the next scheduled heaters on time arrives.

75 Schedules for Friday

Description:	Used to select which schedule(s) should be used on Friday.
Value:	0 – Remain at last clock transition 1 – Use just schedule 1 2 – Use just schedule 2 3 – Use just schedule 3 4 – Use schedule 1 and 2 5 – Use schedule 2 and 3 6 – Use schedule 1 and 3 7 – Use schedule 1, 2, and 3
Resolution:	1
Default Value:	0
Format:	—
Use:	Selects the active schedule(s) for the day. NOTE: If the 0 schedule option is used, the heaters will not turn on again until the next scheduled heaters on time arrives.

76 Schedules for Saturday

Description: Used to select which schedule(s) should be used on Saturday.

Value: 0 – Remain at last clock transition
1 – Use just schedule 1
2 – Use just schedule 2
3 – Use just schedule 3
4 – Use schedule 1 and 2
5 – Use schedule 2 and 3
6 – Use schedule 1 and 3
7 – Use schedule 1, 2, and 3

Resolution: 1

Default Value: 0

Format: —

Use: Selects the active schedule(s) for the day.

NOTE: If the 0 schedule option is used, the heaters will not turn on again until the next scheduled heaters on time arrives.

77 Schedules for Sunday

Description: Used to select which schedule(s) should be used on Sunday.

Value: 0 – Remain at last clock transition
1 – Use just schedule 1
2 – Use just schedule 2
3 – Use just schedule 3
4 – Use schedule 1 and 2
5 – Use schedule 2 and 3
6 – Use schedule 1 and 3
7 – Use schedule 1, 2, and 3

Resolution: 1

Default Value: 0

Format: —

Use: Selects the active schedule(s) for the day.

NOTE: If the 0 schedule option is used, the heaters will not turn on again until the next scheduled heaters on time arrives.

Automatic Fill Timer

78 Automatic Fill Timer

Description:	A count-down timer that can be associated with a switch connected to an input.
Value:	0 to 99 seconds
Resolution:	1
Default Value:	0 (Disabled)
Format:	—
Use:	Used in conjunction with input control option 13 or 14. Enable output control option 6, <i>Alert</i> , to send a signal when the timer expires.

PID Selection

80-87

PID Selection for Hose/Applicator Receptacles 1, 2, 3, and 4

Description:	Used to change the preset PID selections. Use parameter 80 to select the value for hose 1, parameter 81 to select the value for applicator 1, and so on, up to hose 4/applicator 4.
Value:	0 = Hose 1 = Standard applicator 2 = Large applicator 3 = Air heater
Resolution:	—
Default Value:	0 or 1 depending on the channel type (hose or applicator)
Format:	—
Use:	Consult your Nordson representative before changing PID settings.

88 - 91

PID Selection for Hose/Applicator Receptacles 5, 6, 7, and 8 (DuraBlue D25, D50, and D100 melters only)

Description:	Used to change the preset PID selections. Use parameter 88 to select the value for hose 5, parameter 89 to select the value for applicator 5, and so on, up to hose 8/applicator 8.
Value:	0 = Hose 1 = Standard applicator 2 = Large applicator 3 = Air heater
Resolution:	—
Default Value:	0 or 1 depending on the channel type (hose or applicator)
Format:	—
Use:	Consult your Nordson representative before changing PID settings.

AltaPur™ Slug Melter

Customer Product Manual

P/N 1126381_01

AltaPur™ Slug Melter

Customer Product Manual

P/N 1126381_01

AltaPur™ Slug Melter

Customer Product Manual

P/N 1126381_01

AltaPur™ Slug Melter

Customer Product Manual

P/N 1126381_01

AltaPur™ Slug Melter

Customer Product Manual

P/N 1126381_01

AltaPur™ Slug Melter

Customer Product Manual

P/N 1126381_01

AltaPur™ Slug Melter

Customer Product Manual

P/N 1126381_01

AltaPur™ Slug Melter

Customer Product Manual

P/N 1126381_01

AltaPur™ Slug Melter

Customer Product Manual

P/N 1126381_01

AltaPur™ Slug Melter

Customer Product Manual

P/N 1126381_01

AltaPur™ Slug Melter

Customer Product Manual

P/N 1126381_01

AltaPur™ Slug Melter

Customer Product Manual

P/N 1126381_01

AltaPur™ Slug Melter

Customer Product Manual

P/N 1126381_01

AltaPur™ Slug Melter

Customer Product Manual

P/N 1126381_01

EC Declaration of Conformity

for Adhesive and Sealant Application Equipment
conforming to European Council Directives



PRODUCTS:

AltaBlue™ Melters, Models 15, 30, 50, 100
AltaBlue™ TT Melters, Models A4, A10, A16
AltaPail™ Melters
Cobalt™ GR Series Bulk Material Unloaders
DuraBlue® Melters
EZ™ Adhesive Melters, Models 20 and 45
FoamMelt® FM-200 Melter
Freedom™ Hot Melt Adhesive System
Fulfill® Retrofit Kit Fill System
Pro-Meter® VDK Dispensing System*
AltaPUR™ Melters

Mesa™ Melters
MiniPUR™ and MiniPUR™ Plus Melters
ProBlue® Melters, Models P4, P7, P10, P15, P30 and P50
ProBlue® Fulfill®, Models FF4, FF7, FF10
ProBlue Liberty™ Models L7 and L14
PURBlue™ Melters
Series 3000V Melters
SureFoam™ Foam Dispensing System
EZ Drum™ Melters
Low Pressure Molding Melters

Model Number _____

Serial Number _____

APPLICABLE DIRECTIVES:

Machinery Directive: 2006/42/EC
Electromagnetic Compatibility Directive: 2014/30/EU

STANDARDS USED TO VERIFY COMPLIANCE:


EN ISO 12100: 2010 EN 60204-1: 2006
EN ISO 13732-1: 2008 EN 61000-6-2: 2005
EN 55011: 2009 (Class A, Group 1 for industrial environments.
Use in other environments may pose potential difficulty ensuring
electromagnetic compatibility due to conducted as well as
radiated disturbances.)

* = 13732-1: 2008 does not apply

PRINCIPLES:

This product has been manufactured according to good engineering practice.

The product specified conforms to the directives and standards described above, and fulfills the essential requirements and safety objectives outlined within.


Gregory P. Merk, Senior Vice President
Adhesives Dispensing Systems

Date: 05 October 2017

Technical File Contact:

Dieter Ziesmer
Nordson Engineering GmbH
Lilienthalstrasse 6
21337 Lueneburg
GERMANY



